

5. How to disassemble

* CAUTIONS

1. To avoid damage to the product, follow the disassembly method in the Service Manual.
2. As some Semiconductor devices are very sensitive to static, ensure that all procedures are adhered to when handling ESD's.



- (1) Pull out 2 COVER-SCREWS by using a pincette.



- (2) Pull out COVER-BATTERY unscrew 3 pieces.



- (3) Open the COVER-USB, like upper picture Widen the spece between CABINET-TOP and CABINET-BOTTOM.



- (4) like upper picture, widen the space CABINET-TOP and DECO-SIDE R.



- (5) Disassemble the CABINET-TOP ASSY from SET.



(6) Disassemble DECO-SIDE L,R and COVER-USB.



(7) Draw out the USB-JACK from the hole of CABINET-BOTTOM.



(8) Maintain PCB in parallel to CABINET-BOTTOM, Pull out PHONE from the hole of CABINET-BOTTOM.



(9) This picture is PCB's disassembled look.



(10) Let's disassemble CABINET-TOP ASSY



(11) unscrew 4 pieces, disassemble PCB-FRONT
After, You can disassemble CUSHION-VOL
KNOB-MODE, KNOB-VOL, KNOB-PLAY, easi