Applicable Country & Regions:

All Regions

Product Service Manual – Level 3

Service Manual for BenQ: Projector/MS500, MX501 <9H.J5277.000, 9H.J5377.000>



Version: 00a Date:2011/03/31


Notice:


For RO to input specific "Legal Requirement" in specific NS regarding to responsibility and liability statements.

Please check BenQ's eSupport web site, http://esupport.benq.com, to ensure that you have the most recent version of this manual.


First Edition (Mar 2011)
© Copyright BenQ Corporation 2007. All Right Reserved.

Schematics—Main board:

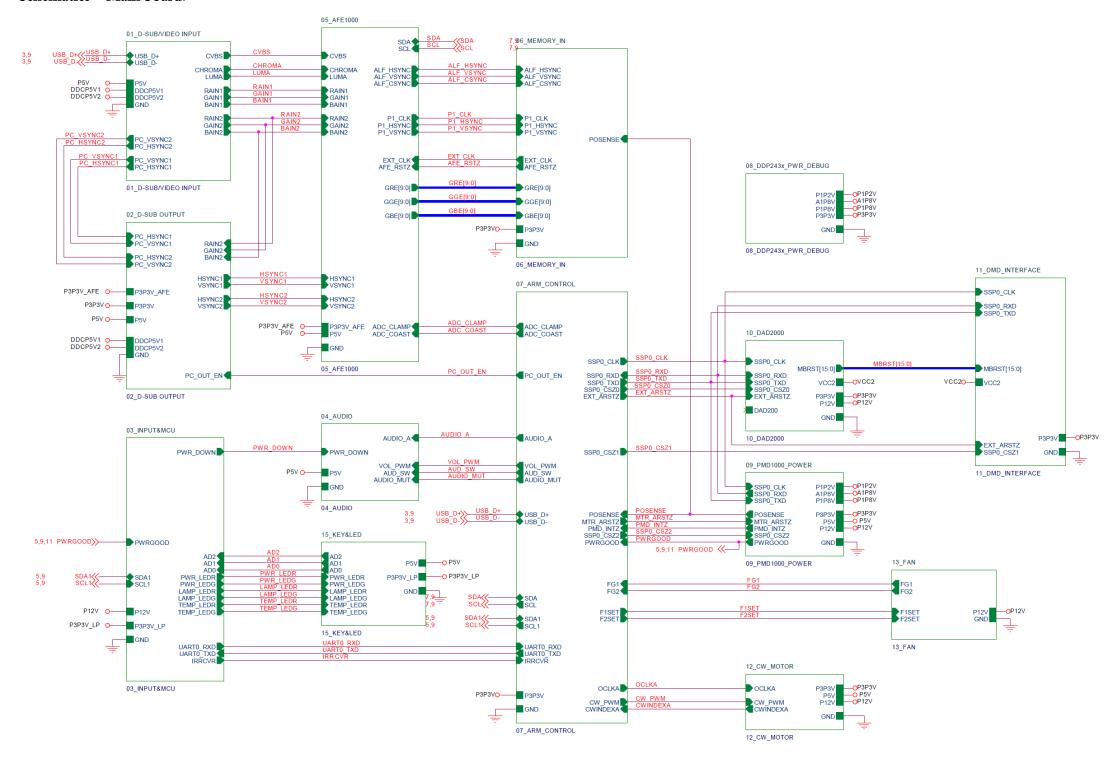


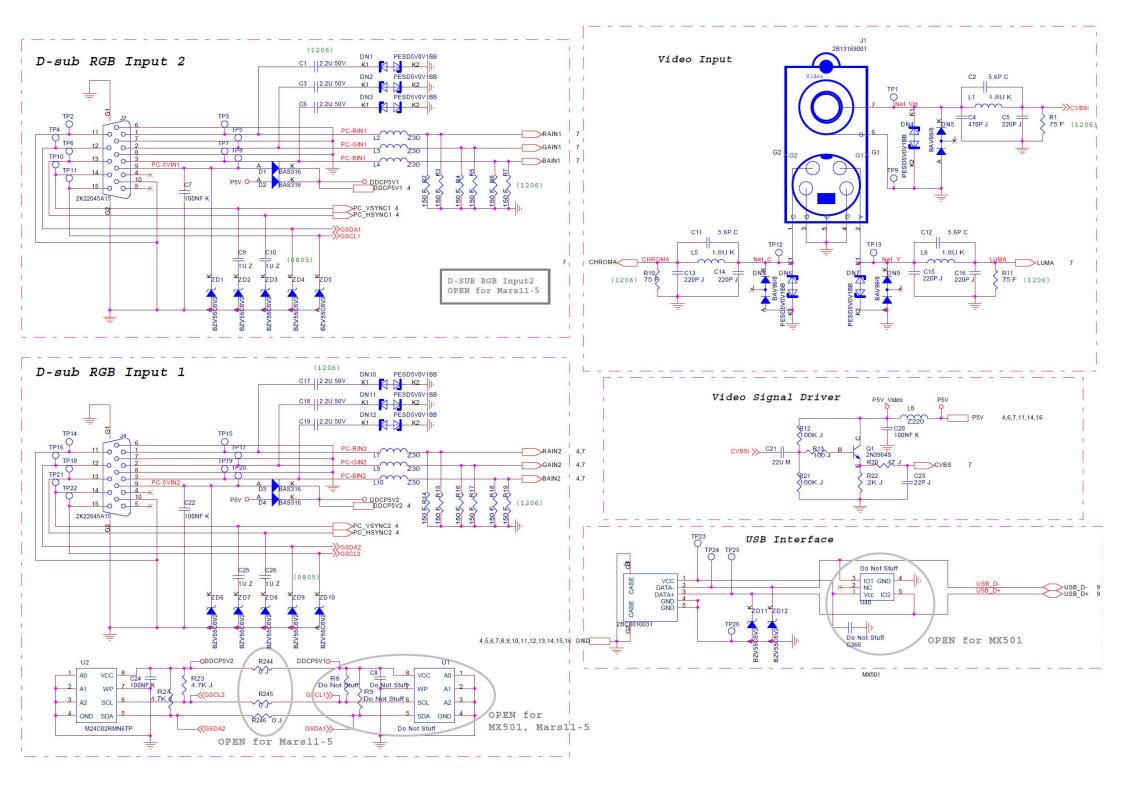


H1,V1 Buffer

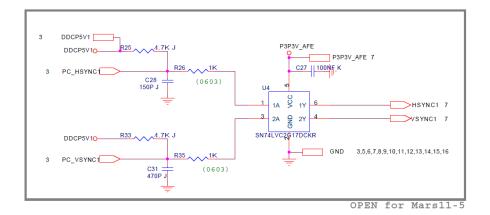



H2, V2 Buffer

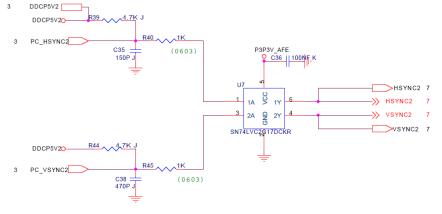

D-sub RGB Output

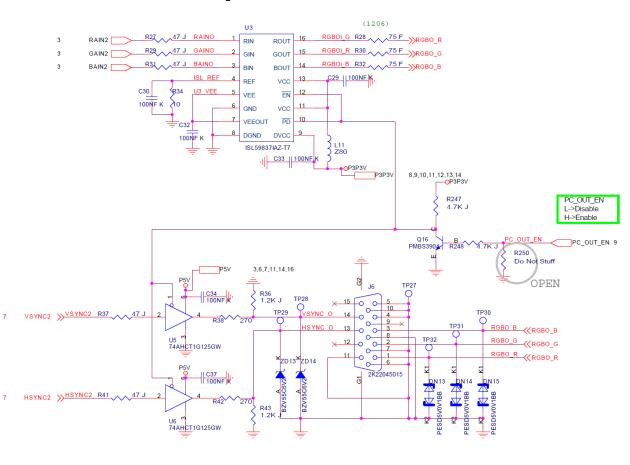

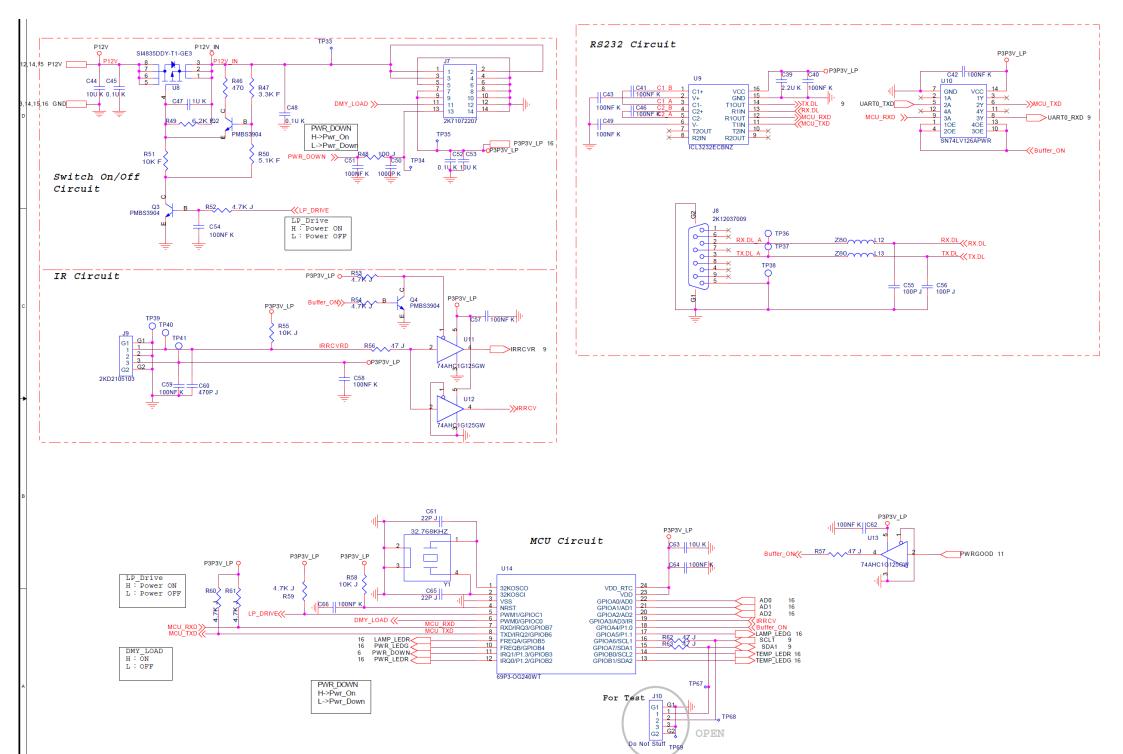


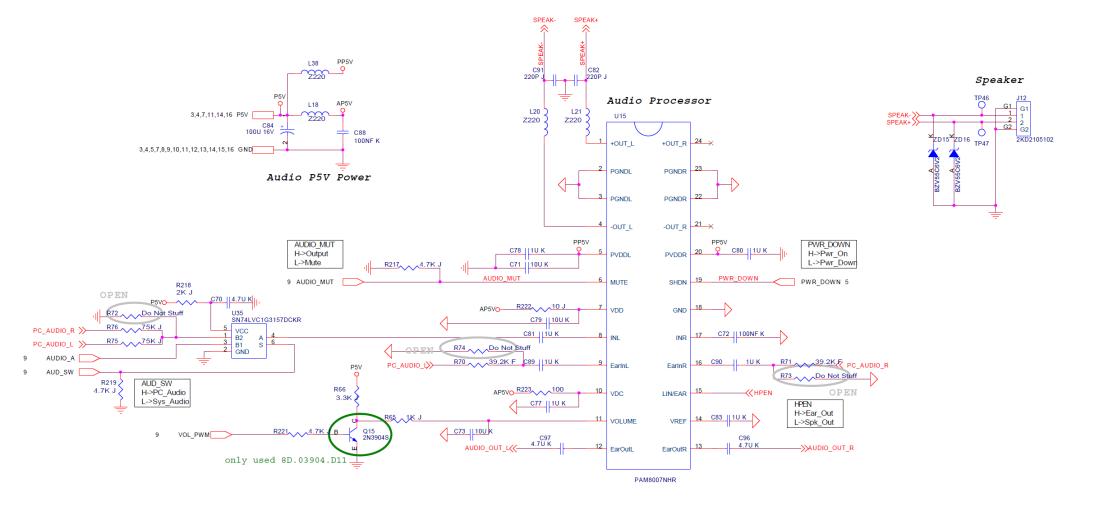



3,4,5,7,8,9,10,11,12,13,14,15,16 GND L37 Z80


3,4,5,7,8,9,10,11,12,13,14,15,16 GND L39 Speaker_GND


AUDIO GND

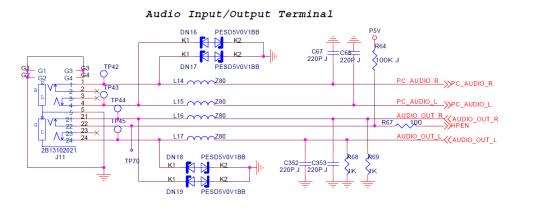


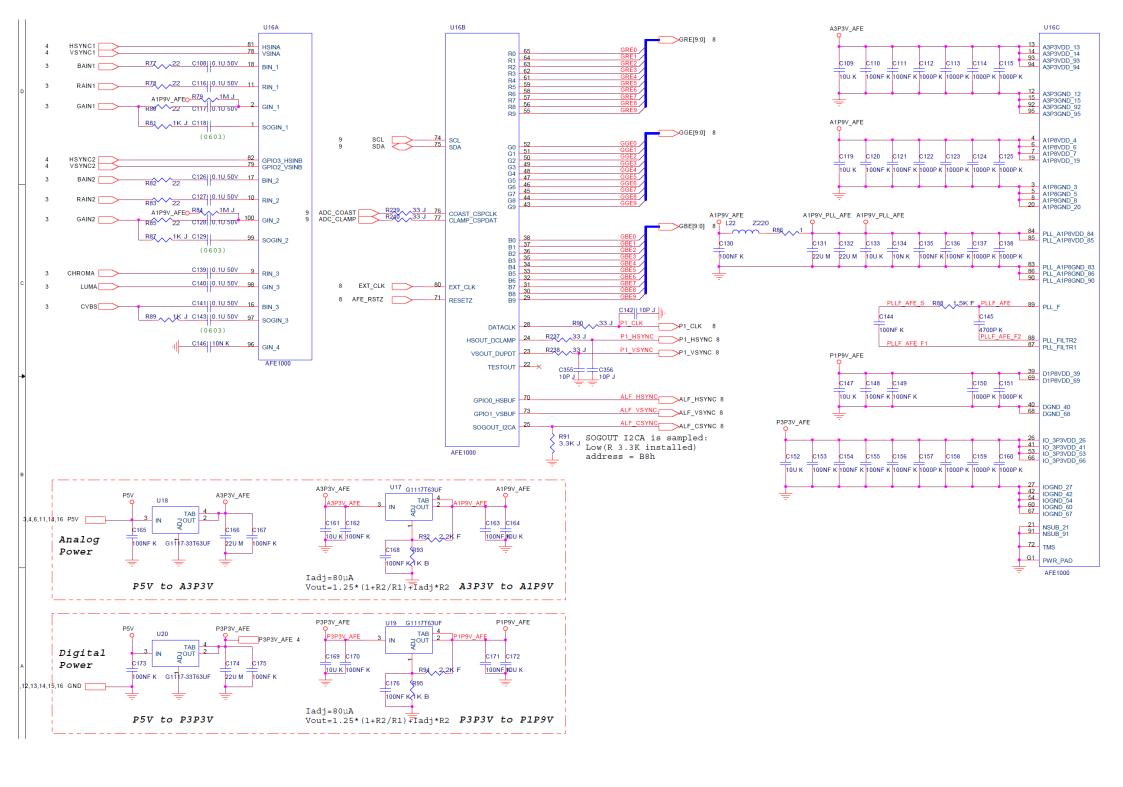


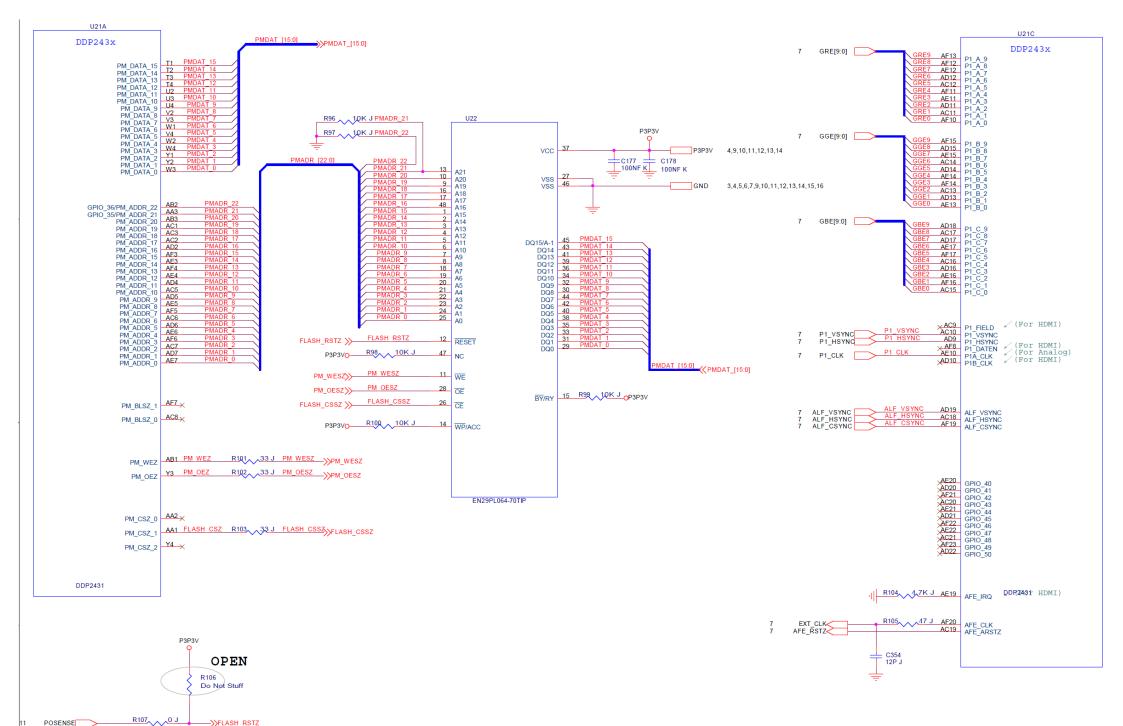


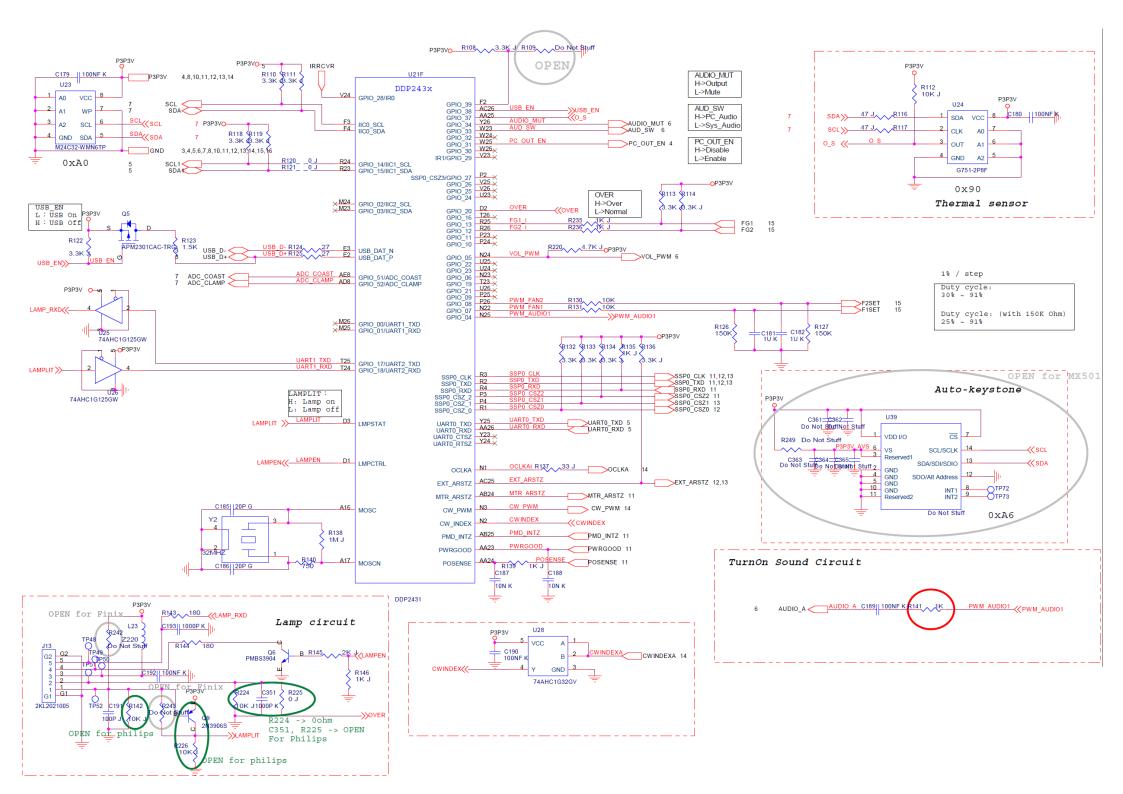


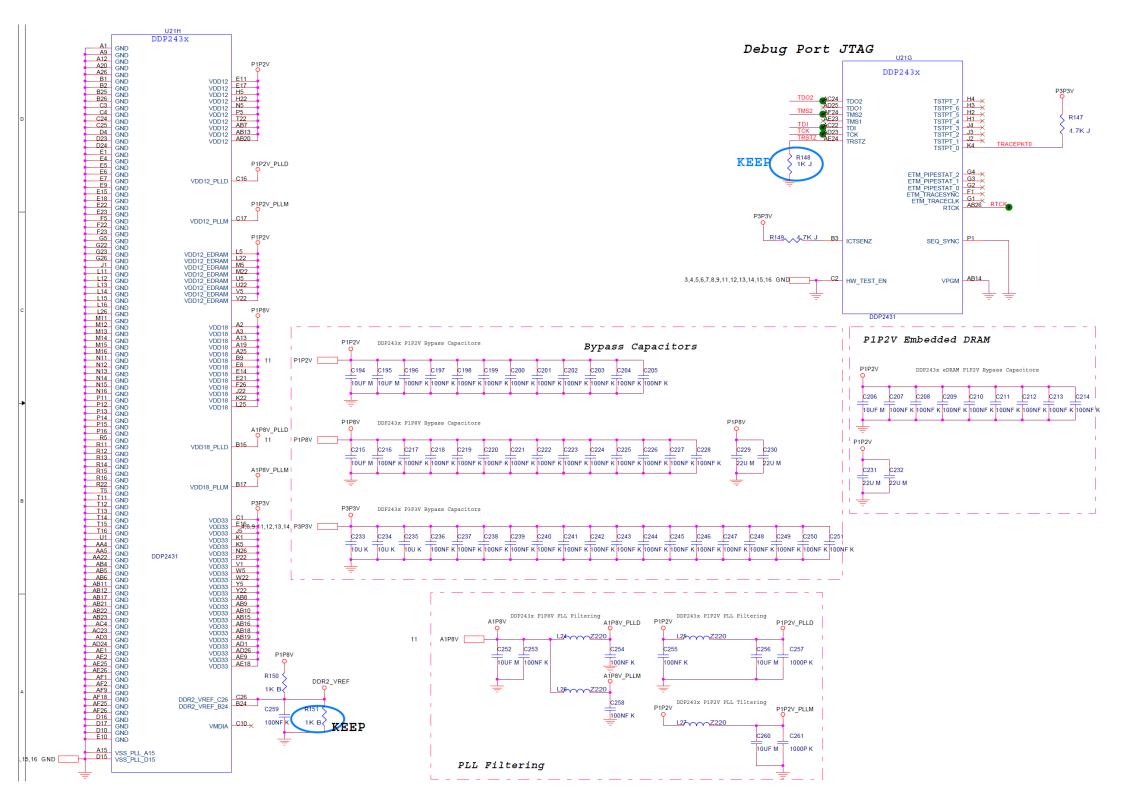


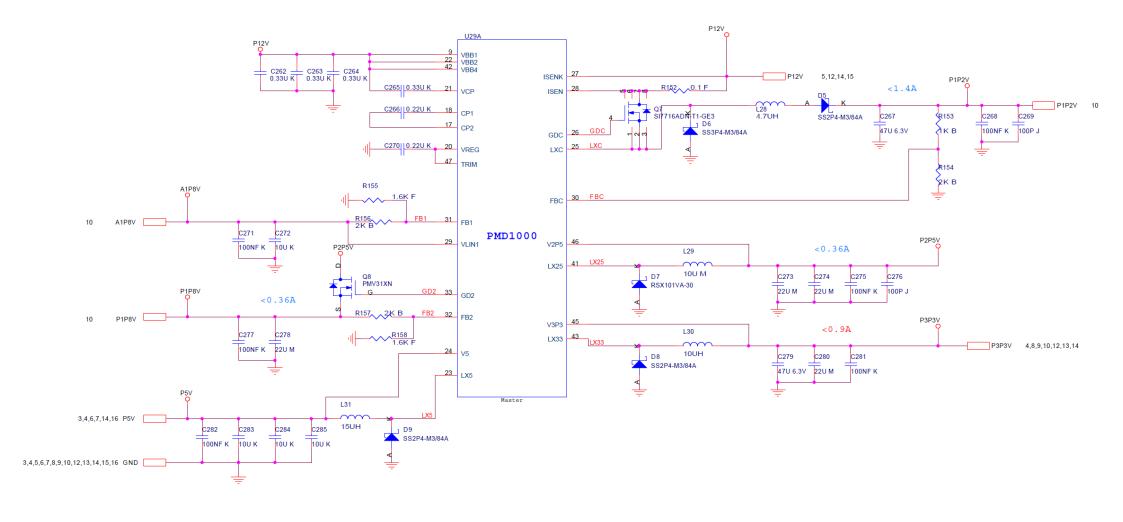


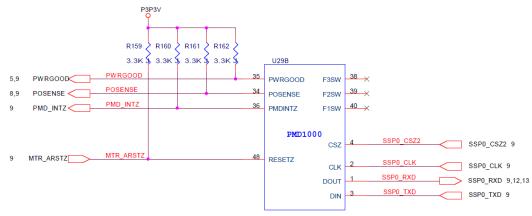


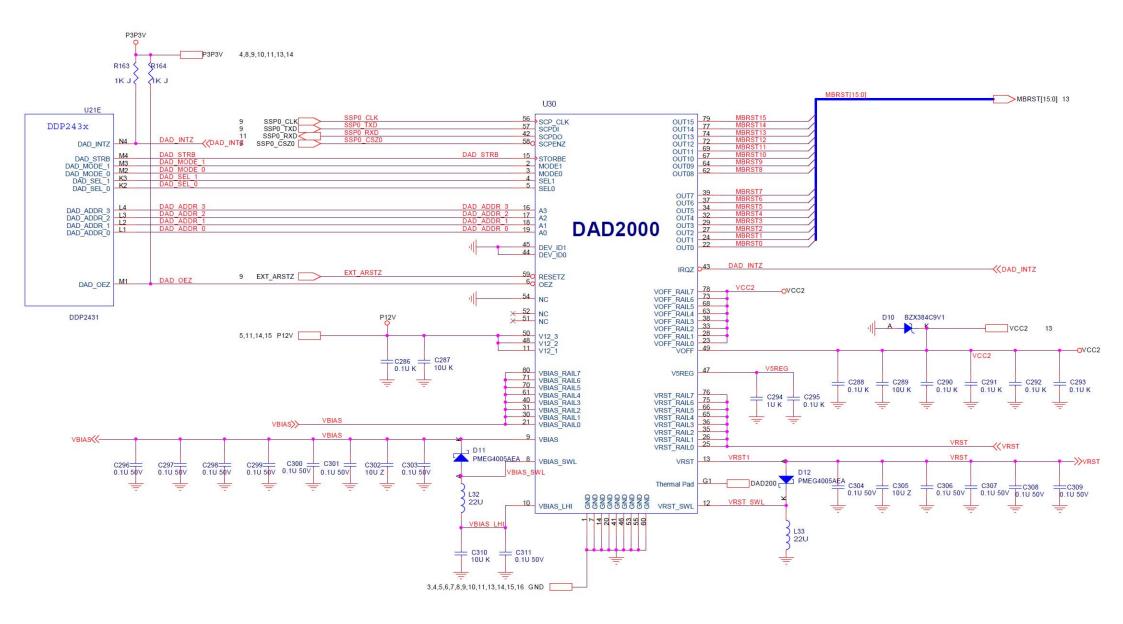

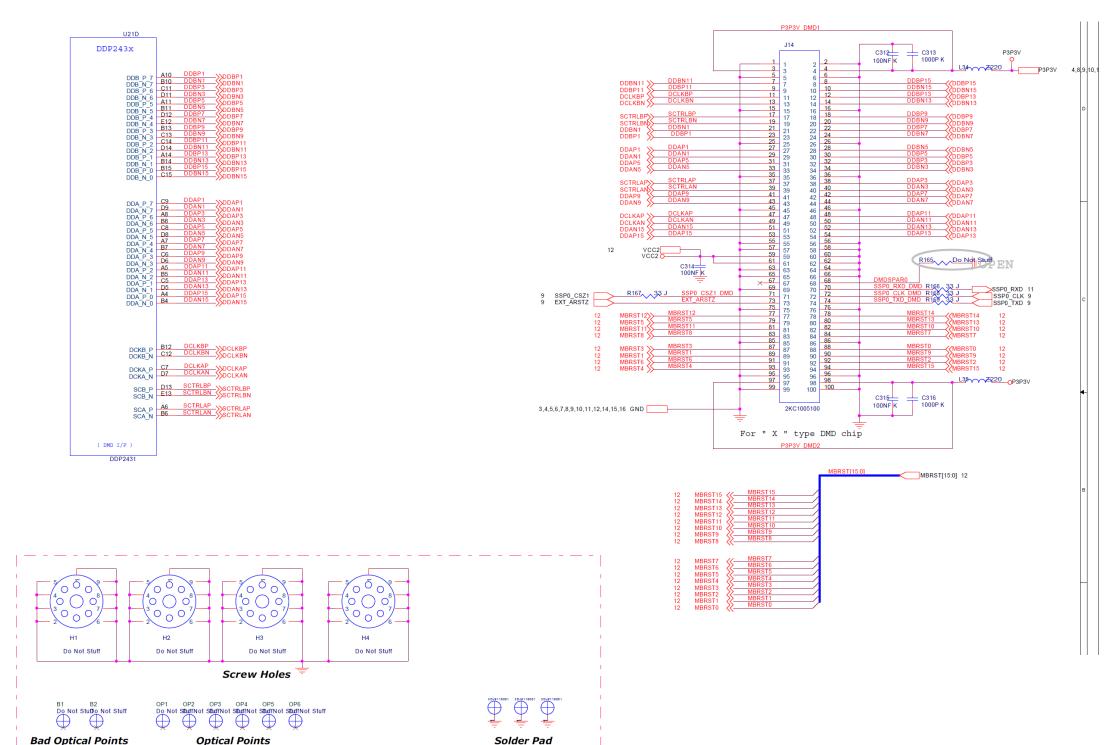

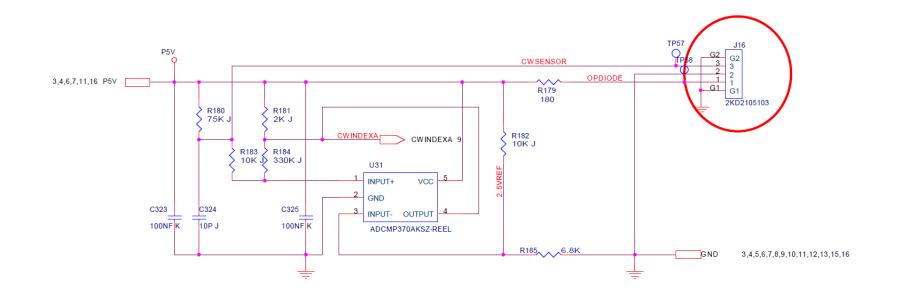


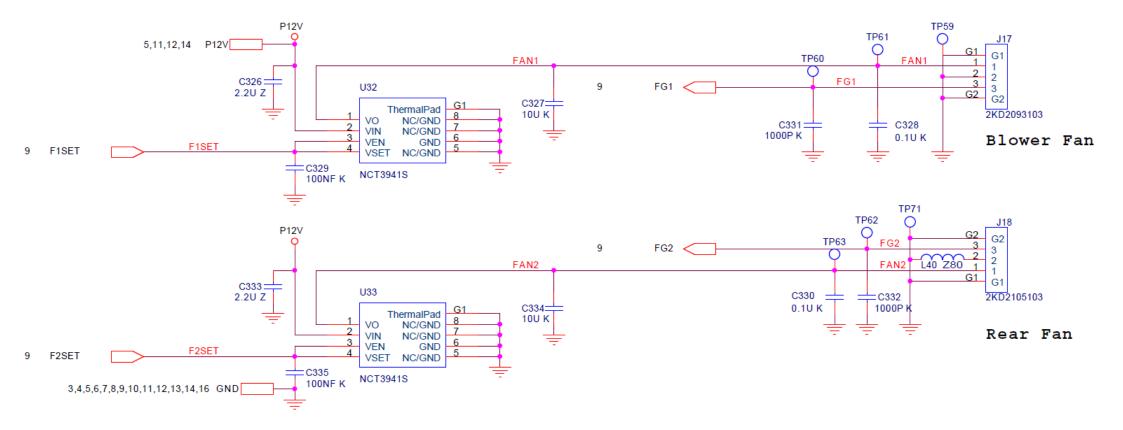


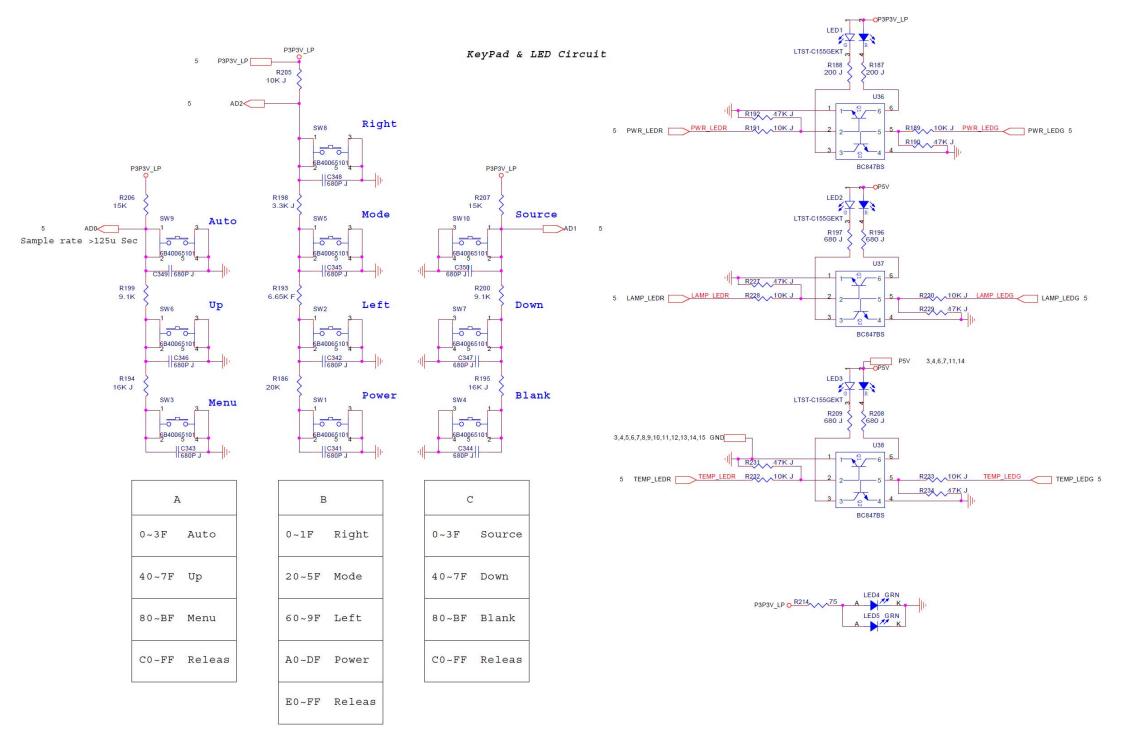


Base on Full Scale is equal to Vcc


Power board:

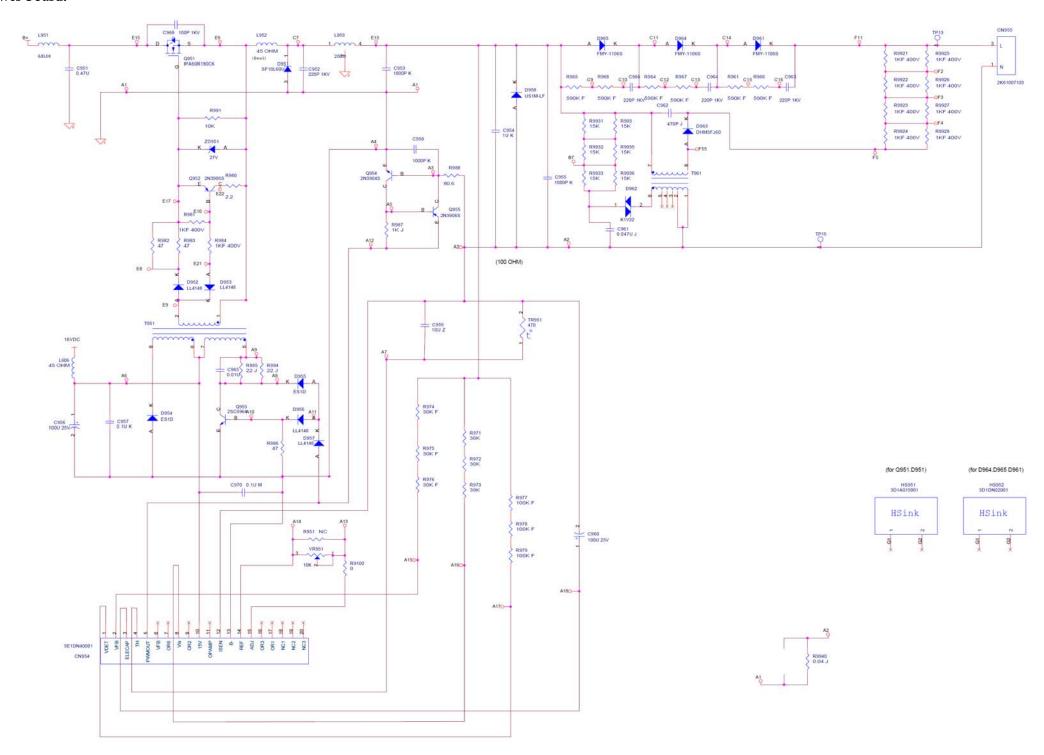

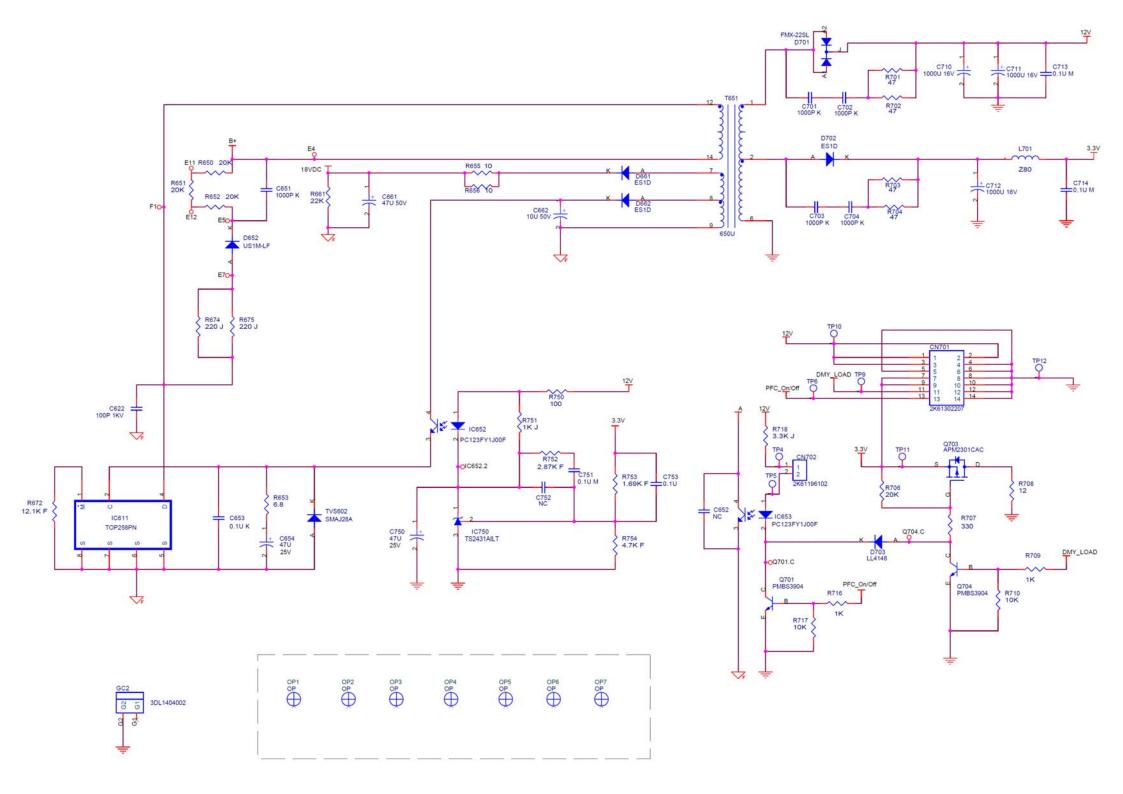


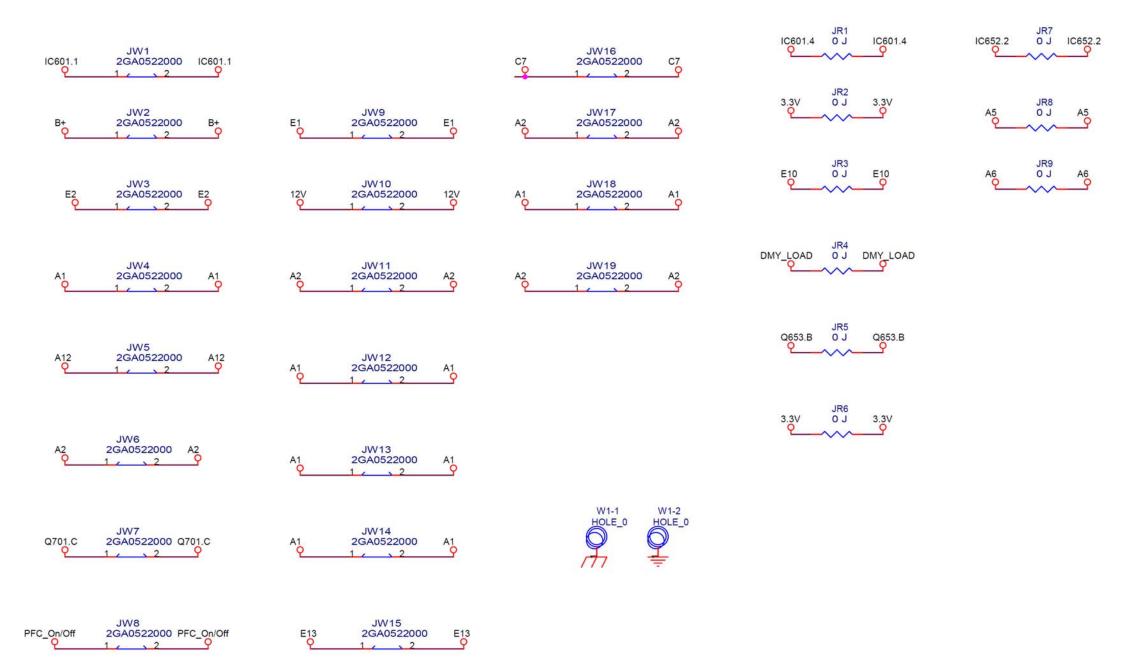




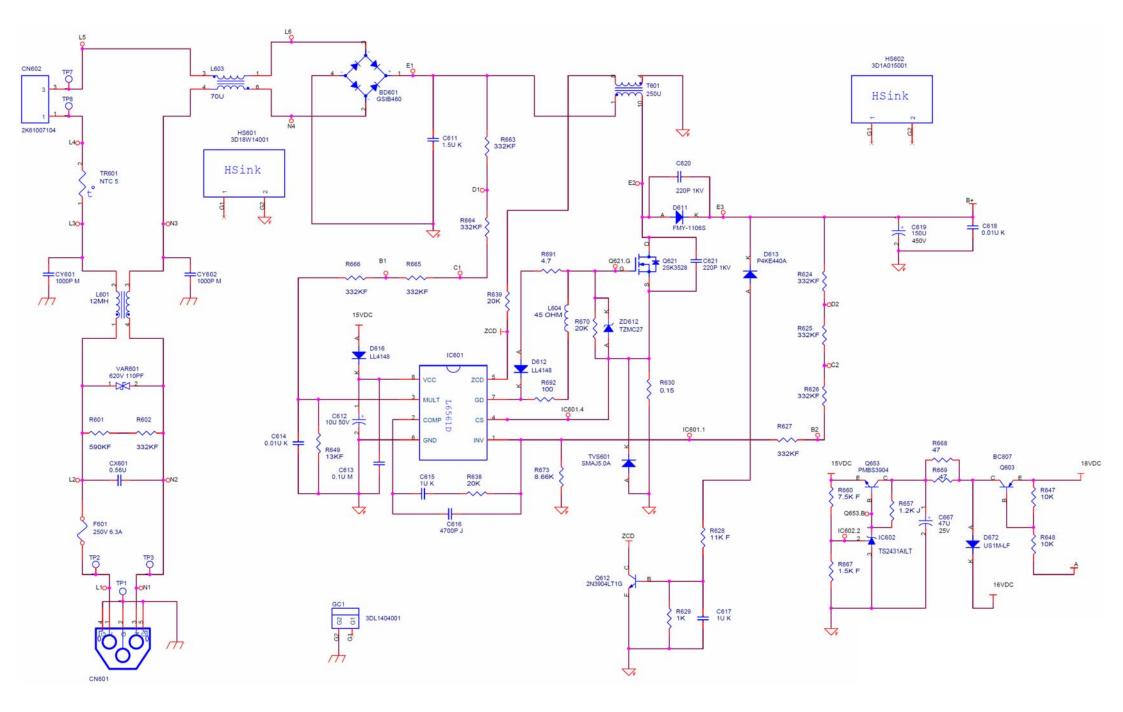

PCB Artwork: Main Board

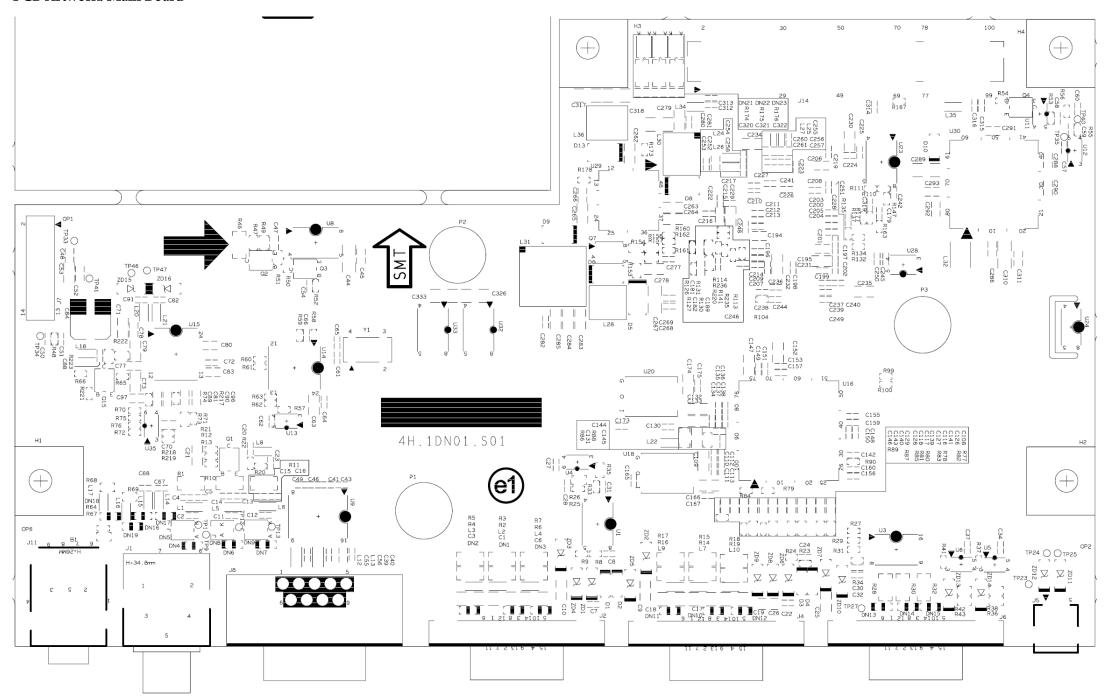

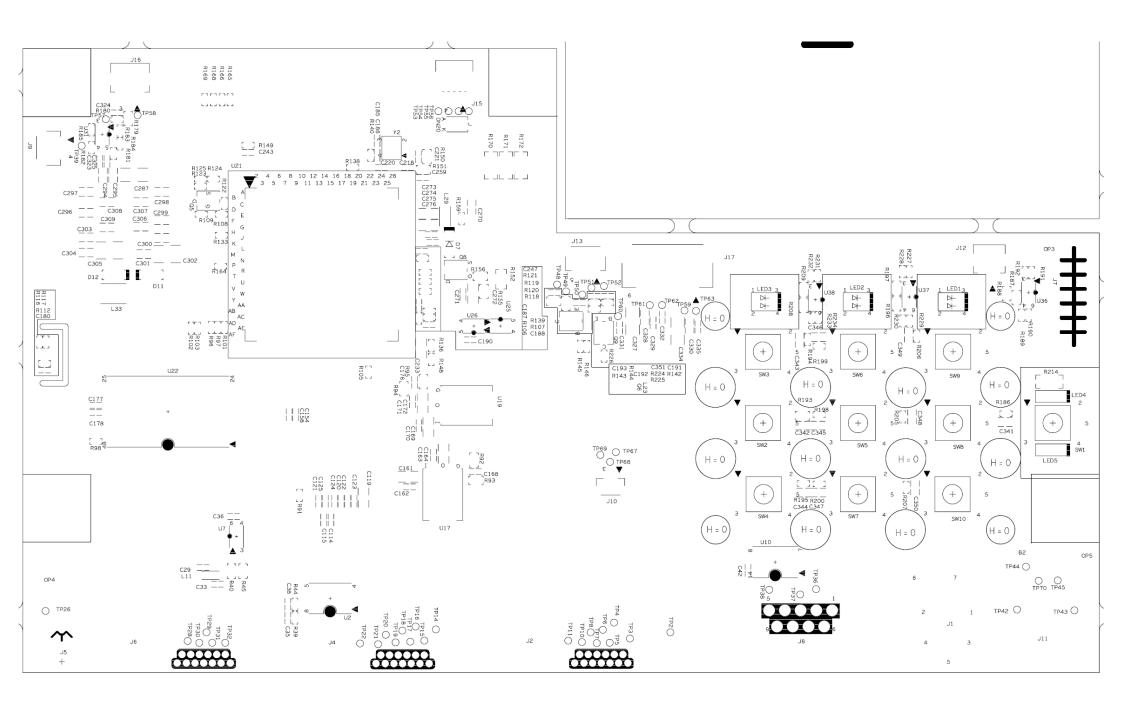

Power Board

