

COLOR MONITOR SERVICE MANUAL

CHASSIS NO.: LM72A

MODEL: **FLATRON**L1742P(L1742P-*FT.A***QPN)

FLATRONL1942P(L1942P-*FT.A***QPN)

() **Same model for Service

CAUTION

BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.



*To apply the MSTAR Chip.

CONTENTS

SPECIFICATIONS2	SERVICE OSD	.17
PRECAUTIONS 3	TROUBLESHOOTING GUIDE	18
TIMING CHART	WIRING DIAGRAM	24
DISASSEIVIDLY 0	EXPLODED VIEW	
BLOCK DIAGRAM12		
DISCRIPTION OF BLOCK DIAGRAM14	REPLACEMENT PARTS LIST	.27
ADJUSTMENT 16	SCHEMATIC DIAGRAM	32

SPECIFICATIONS

1. LCD CHARACTERISTICS

Type : TFT Color LCD Module
Active Display Area : 17 inch - L1742P
: 19 inch - L1942P

Pixel Pitch : 0.264 (H) x 0.264 (V) - L1742P : 0.294 (H) x 0.294 (V) - L1942P

Color Depth : 8bits, 16.7M colors

Size : 358.5 (H) x 296.5 (V) x 16.0(D) - **L1742P**

: 396 (H) x 324 (V) x 15.5(D) - L1942P

Electrical Interface : LVDS

Surface Treatment : Hard-coating(3H), Anti-Glare
Operating Mode : Normally White, Transmissive mode

Backlight Unit : 4-CCFL

2. OPTICAL CHARACTERISTICS

2-1. Viewing Angle by Contrast Ratio ≥ 10

Left: -60° min., -70°(Typ) Right : +60° min., +70°(Typ) Top:+60° min., +75°(Typ) Bottom: -50° min., -65°(Typ)

2-2. Luminance : 230(min), 300(Typ) (Full White pattern, 0.70V) -6500K

: 150(min) (Full White pattern, 0.70V) -9300K

75%(min)

2-3. Contrast Ratio : 8000:1 (DFC)

3. SIGNAL (Refer to the Timing Chart)

3-1. Sync Signal

• Type : Separate Sync, Digital, SOG

3-2. Video Input Signal

1) Type : R, G, B Analog 2) Voltage Level : $0\sim0.71~V$ a) Color 0, 0 : 0~Vp-pb) Color 7, 0 : 0.467Vp-pc) Color 15, 0 : 0.714Vp-p3) Input Impedance : 75Ω

3-3. Operating Frequency

Horizontal : 30 ~ 83kHz Vertical : 56 ~ 75Hz

4. Max. Resolution

D-sub Analog : 1280 x 1024@75Hz Digital : 1280 x 1024@60Hz

5. POWER SUPPLY

5-1. Power: AC 100~240V, 50/60Hz, 0.6A

5-2. Power Consumption

MODE	H/V SYNC	VIDEO	POWER CONSUMPTION	LED COLOR
POWER ON (NORMAL)	ON/ON	ACTIVE	less than 30 W -L1742P	BLUE
POWER ON (NORWAL)			less than 34 W -L1942P	or Flicker
STAND-BY	OFF/ON	OFF	less than 1 W	Flicker
SUSPEND	ON/OFF	OFF	less than 1 W	Flicker
DPMS OFF	OFF/OFF	OFF	less than 1 W	Flicker
POWER S/W Off	-	-	less than 1 W	OFF

6. ENVIRONMENT

6-1. Operating Temperature: 10°C~35°C (50°F~95°F)

(Ambient)

6-2. Relative Humidity : 10%~80% (Non-condensing) 6-3. MTBF : 50,000 HRS with 90% Confidence

Lamp Life : 50,000 Hours(Min)

7. DIMENSIONS (with TILT/SWIVEL)

L1742P

Width : 369.6 mm (14.55") Depth : 241.6 mm (9.51")

Height : 408.3 mm(16.07")~518.3 mm (20.41")

L1942P

Width : 406.3 mm (16.00") Depth : 241.6 mm (9.51")

Height : 422.7 mm (16.64")~532.7 mm(20.97")

8. WEIGHT (with TILT/SWIVEL)

L1742P

Net. Weight : 3.83 kg (8.51 lbs) Gross Weight : 5.37 kg (11.93lbs)

L1942P

Net. Weight : 4.23 kg (9.40 lbs) Gross Weight : 5.94 kg (13.20lbs)

PRECAUTION

WARNING FOR THE SAFETY-RELATED COMPONENT.

- There are some special components used in LCD monitor that are important for safety. These parts are marked on the schematic diagram and the replacement parts list. It is essential that these critical parts should be replaced with the manufacturer's specified parts to prevent electric shock, fire or other hazard.
- Do not modify original design without obtaining written permission from manufacturer or you will void the original parts and labor guarantee.

TAKE CARE DURING HANDLING THE LCD MODULE WITH BACKLIGHT UNIT.

- Must mount the module using mounting holes arranged in four corners.
- Do not press on the panel, edge of the frame strongly or electric shock as this will result in damage to the screen.
- Do not scratch or press on the panel with any sharp objects, such as pencil or pen as this may result in damage to the panel.
- Protect the module from the ESD as it may damage the electronic circuit (C-MOS).
- Make certain that treatment person's body are grounded through wrist band.
- Do not leave the module in high temperature and in areas of high humidity for a long time.
- The module not be exposed to the direct sunlight.
- Avoid contact with water as it may a short circuit within the module.
- If the surface of panel become dirty, please wipe it off with a softmaterial. (Cleaning with a dirty or rough cloth may damage the panel.)

A CAUTION


Please use only a plastic screwdriver to protect yourself from shock hazard during service operation.

↑ WARNING

BE CAREFUL ELECTRIC SHOCK!

- If you want to replace with the new backlight (CCFL) or inverter circuit, must disconnect the AC adapter because high voltage appears at inverter circuit about 650Vrms.
- Handle with care wires or connectors of the inverter circuit. If the wires are pressed cause short and may burn or take fire.

Leakage Current Hot Check Circuit

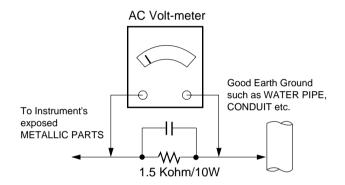

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the SAFETY PRECAUTIONS on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

- Always unplug the receiver AC power cord from the AC power source before:
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver. CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
 - d. Discharging the picture tube anode.
- 2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.
 - Do not test high voltage by "drawing an arc".
- 3. Discharge the picture tube anode only by (a) first connecting one end of an insulated clip lead to the degaussing or kine aquadag grounding system shield at the point where the picture tube socket ground lead is connected, and then (b) touch the other end of the insulated clip lead to the picture tube anode button, using an insulating handle to avoid personal contact with high voltage.
- Do not spray chemicals on or near this receiver or any of its assemblies.
- 5. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)
 - CAUTION: This is a flammable mixture.
 - Unless specified otherwise in this service manual, lubrication of contacts in not required.
- 6. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
- Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- 8. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
 - Always remove the test receiver ground lead last.

- 9. Use with this receiver only the test fixtures specified in this service manual.
 - CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

- 1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.
- 2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- 3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
- 4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
- Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
- 6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
- Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
 - CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
- 8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

- 1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500°F to 600°F.
- 2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
- 3. Keep the soldering iron tip clean and well tinned.
- 4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25cm) brush with a metal handle.
 - Do not use freon-propelled spray-on cleaners.
- 5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature.
 - (500°F to 600°F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
 - **CAUTION:** Work quickly to avoid overheating the circuitboard printed foil.
- 6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500°F to 600°F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
 - **CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

- Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
- 2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

- 1. Carefully insert the replacement IC in the circuit board.
- Carefully bend each IC lead against the circuit foil pad and solder it.
- 3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor Removal/Replacement

- 1. Remove the defective transistor by clipping its leads as close as possible to the component body.
- 2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
- 3. Bend into a "U" shape the replacement transistor leads.
- 4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device Removal/Replacement

- Heat and remove all solder from around the transistor leads.
- 2. Remove the heat sink mounting screw (if so equipped).
- Carefully remove the transistor from the heat sink of the circuit board.
- 4. Insert new transistor in the circuit board.
- 5. Solder each transistor lead, and clip off excess lead.
- 6. Replace heat sink.

Diode Removal/Replacement

- 1. Remove defective diode by clipping its leads as close as possible to diode body.
- Bend the two remaining leads perpendicular y to the circuit board.
- Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
- 4. Securely crimp each connection and solder it.
- 5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor Removal/Replacement

- Clip each fuse or resistor lead at top of the circuit board hollow stake.
- 2. Securely crimp the leads of replacement component around notch at stake top.
- 3. Solder the connections.
 - **CAUTION:** Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

- 1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
- carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
- Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
- 4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections


Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

- Remove the defective copper pattern with a sharp knife
 - Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
- 2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
- Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side.

Carefully crimp and solder the connections.

CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

TIMING CHART

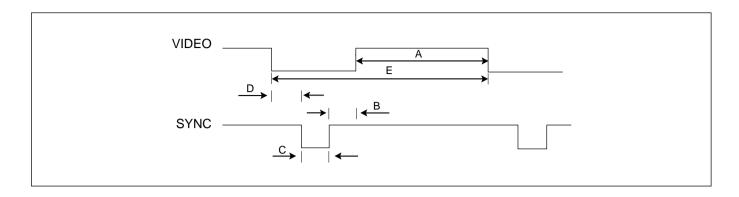

MODE	H/V	Sync Polarity	Dot Clock	Frequency	Total Period (E)	Video Active Time (A)	Sync Duration (D)	Front Porch (C)	Blanking Time (B)	Resolution
1	H(Pixels)	+ 2	25.175	31.469	800	640	16	96	48	640 x 350
	V(Lines)	-		70.09	449	350	37	2	60	
2	H(Pixels)	-	28.321	31.468	900	720	18	108	54	720 X 400
	V(Lines)	+		70.08	449	400	12	2	35	
3	H(Pixels)	-	25.175	31.469	800	640	16	96	48	640 x 480
	V(Lines)	-		59.94	525	480	10	2	33	
4	H(Pixels)	-	31.5	37.5	840	640	16	64	120	640 x 480
	V(Lines)	-		75	500	480	1	3	16	
5	H(Pixels)	+	40.0	37.879	1056	800	40	128	88	800 x 600
	V(Lines)	+		60.317	628	600	1	4	23	
6	H(Pixels)	+	49.5	46.875	1056	800	16	80	160	800 x 600
	V(Lines)	+		75.0	625	600	1	3	21	
7	H(Pixels)	+/-	57.283	49.725	1152	832	32	64	224	832 x 624
	V(Lines)	+/-		74.55	667	624	1	3	39	
8	H(Pixels)	-	65.0	48.363	1344	1024	24	136	160	1024 x 768
	V(Lines)	-		60.0	806	768	3	6	29	
9	H(Pixels)	-	78.75	60.123	1312	1024	16	96	176	1024 x 768
	V(Lines)	-		75.029	800	768	1	3	28	
10	H(Pixels)	+/-	100.0	68.681	1456	1152	32	128	144	1152 x 870
	V(Lines)	+/-		75.062	915	870	3	3	39	
11	H(Pixels)	+/-	92.978	61.805	1504	1152	18	134	200	1152 x 900
	V(Lines)	+/-		65.96	937	900	2	4	31	
12	H(Pixels)	+	108.0	63.981	1688	1280	48	112	248	1280 x 1024
	V(Lines)	+		60.02	1066	1024	1	3	38	
13	H(Pixels)	+ 135.0	135.0	79.976	1688	1280	16	144	248	1280 x 1024
	V(Lines)	+		75.035	1066	1024	1	3	38	

DISASSEMBLY-Set

1



Soft pad on the table.

#2



Place the monitor face down on the cushion or soft cloth.

#3



1.Remove the 4 serews. 2.Disassembly Stand.



4



- 1.Pull the front cover upward2.Then,let the all latches are separated.3.Put the front face down.



Disassemble back cove.


DISASSEMBLY-Stand

1-1



Push the two latches on the bottom to the inside. (Reference the #1-2)

1-2

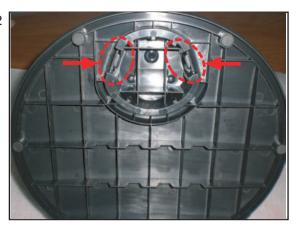


2




Separate stand body form the stand base .

BLOCK DIAGRAM

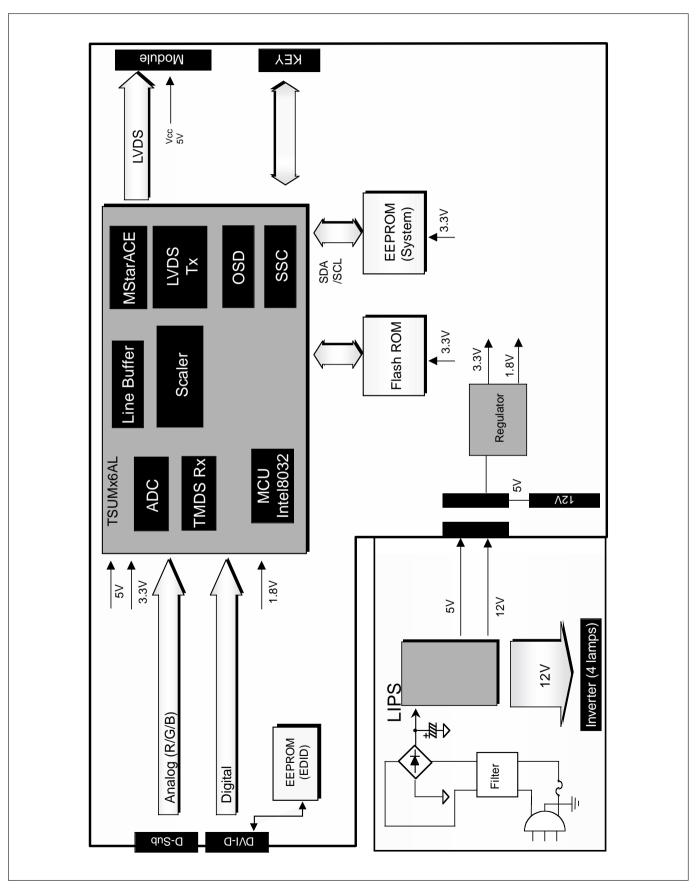

BLOCK DIAGRAM-POWER

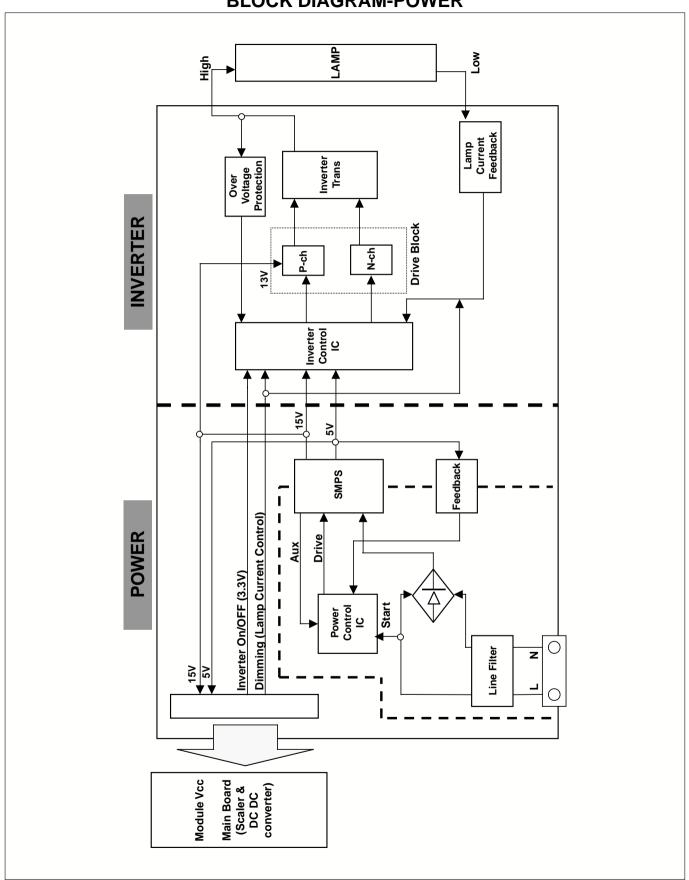

DESCRIPTION OF BLOCK DIAGRAM

1. Video Controller Part.

This part amplifies the level of video signal for the digital conversion and converts from the analog video signal to the digital video signal using a pixel clock.

The pixel clock for each mode is generated by the PLL.

The range of the pixel clock is from 25MHz to 135MHz.

This part consists of the Scaler, ADC convertor, TMDS receiver and LVDS transmitter.

The Scaler gets the video signal converted analog to digital, interpolates input to 1280 X 1024 resolution signal and outputs 8-bit R, G, B signal to transmitter.

2. Power Part.

This part consists of the one 3.3V, and one 1.8V regulators to convert power which is provided 5V in Power board. 12V is provided for inverter, 5V is provided for LCD panel.

Also, 5V is converted 3.3V and 1.8V by regulator. Converted power is provided for IC in the main board.

The inverter converts from DC12V to AC 700Vrms and operates back-light lamps of module.


3. MICOM Part.

This part is include video controller part. And this part consists of EEPROM IC which stores control data, Reset IC and the Micom.

The Micom distinguishes polarity and frequency of the H/V sync are supplied from signal cable.

The controlled data of each modes is stored in EEPROM.

LIPS Board Block Diagram

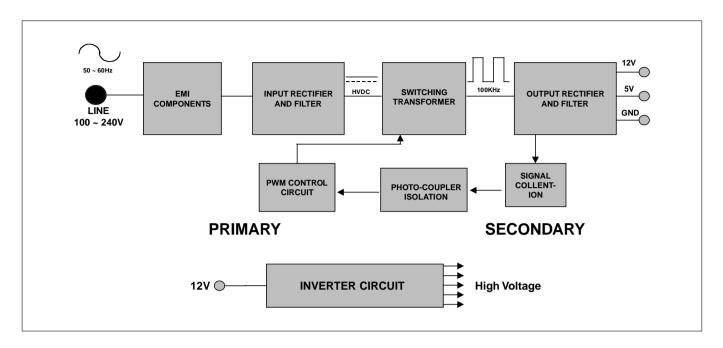

Operation description LIPS

1. EMI components.

This part contains of EMI components to comply with global marketing EMI standards like FCC,VCCI CISPR, the circuit included a line-filter, across line capacitor and of course the primary protection fuse.

2. Input rectifier and filter.

This part function is for transfer the input AC voltage to a DC voltage through a bridge rectifier and a bulk capacitor.

3. Energy Transfer.

This part function is for transfer the primary energy to secondary through a power transformer.

4. Output rectifier and filter.

This part function is to make a pulse width modulation control and to provide the driver signal to power switch, to adjust the duty cycle during different AC input and output loading condition to achieve the dc output stabilized, and also the over power protection is also monitor by this part.

5. Photo-Coupler isolation.

This part function is to feed back the DC output changing status through a photo transistor to primary controller to achieve the stabilized DC output voltage.

6. Signal collection.

This part function is to collect the any change from the DC output and feed back to the primary through photo transistor.

ADJUSTMENT


Windows EDID V1.0 User Manual

Operating System: MS Windows 98, 2000, XP Port Setup: Windows 98 => Don't need setup

Windows 2000, XP => Need to Port Setup.

This program is available to LCD Monitor only.

- 1. Port Setup
 - a) Copy "UserPort.sys" file to "c:\WINNT\system32\drivers" folder
 - b) Run Userport.exe

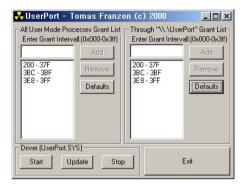


- c) Remove all default number
- d) Add 300-3FF




- e) Click Start button.
- f) Click Exit button.

- 2. EDID Read & Write
 - 1) Run WinEDID.exe

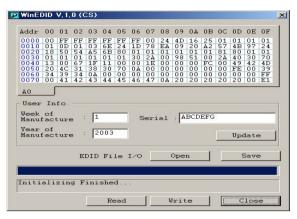

- 2) Edit Week of Manufacture, Year of Manufacture, Serial Number
 - a) Input User Info Data
 - b) Click "Update" button
 - c) Click "Write" button

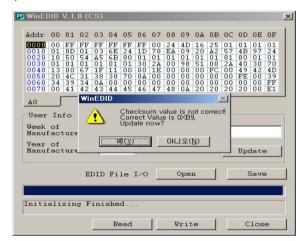

SERVICE OSD

- 1) Turn off the power switch at the front side of the display.
- 2) Wait for about 5 seconds and press MENU, POWER switch with 1 second interval.
- 3) The SVC OSD menu contains additional menus that the User OSD menu as described below.
- a) Auto Color: W/B balance and Automatically sets the gain and offset value.
- b) NVRAM INIT: EEPROM initialize.(24C08)
- c) CLEAR ETI: To initialize using time.
- d) AGING: Select Aging mode(on/off).
- e) R/G/B-9300K: Allows you to set the R/G/B-9300K value manually.
- f) R/G/B-6500K: Allows you to set the R/G/B-6500K value manually.
- g) R/G/B-Offset : Allows you to set the R/G/B-Offset value manually.(Analog Only)
- h) R/G/B-Gain : Allows you to set the R/G/B-Gain value manually.(Analog Only)
- i) MODULE: To select applied module.


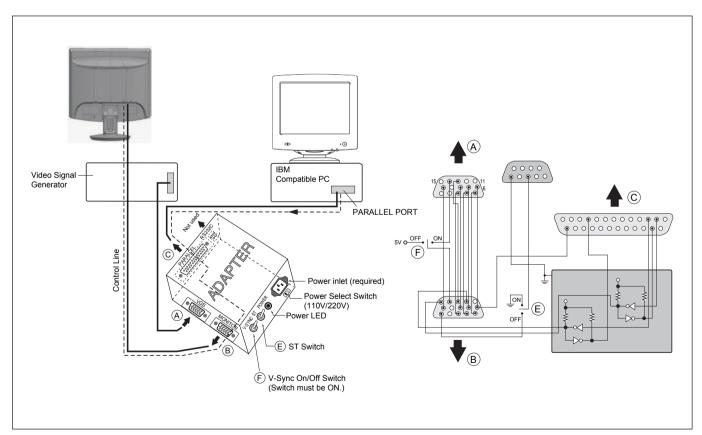



Figure 1. Cable Connection

TROUBLESHOOTING GUIDE


1. NO POWER

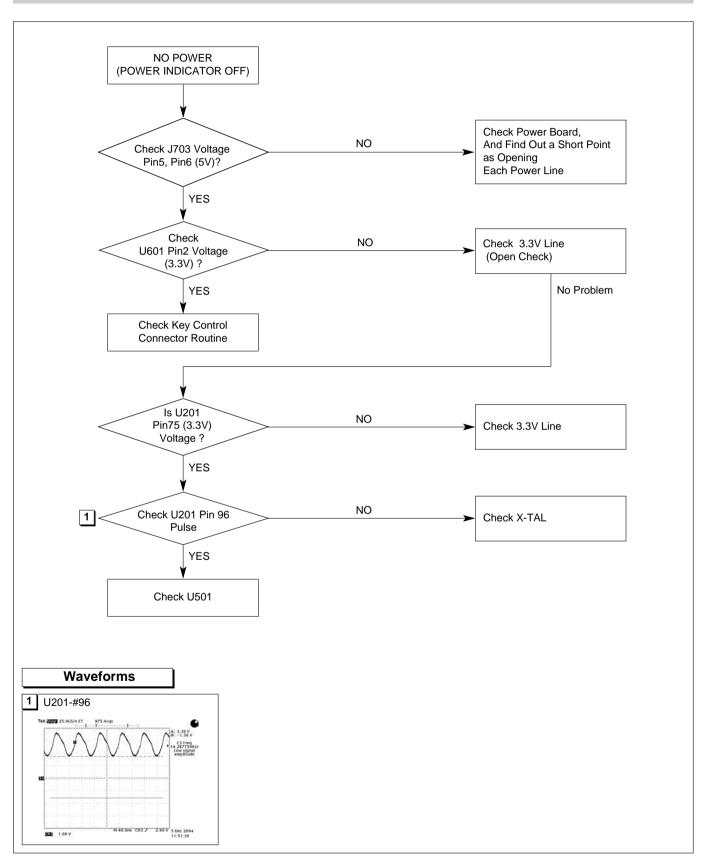


2. NO RASTER (OSD IS NOT DISPLAYED) - LIPS

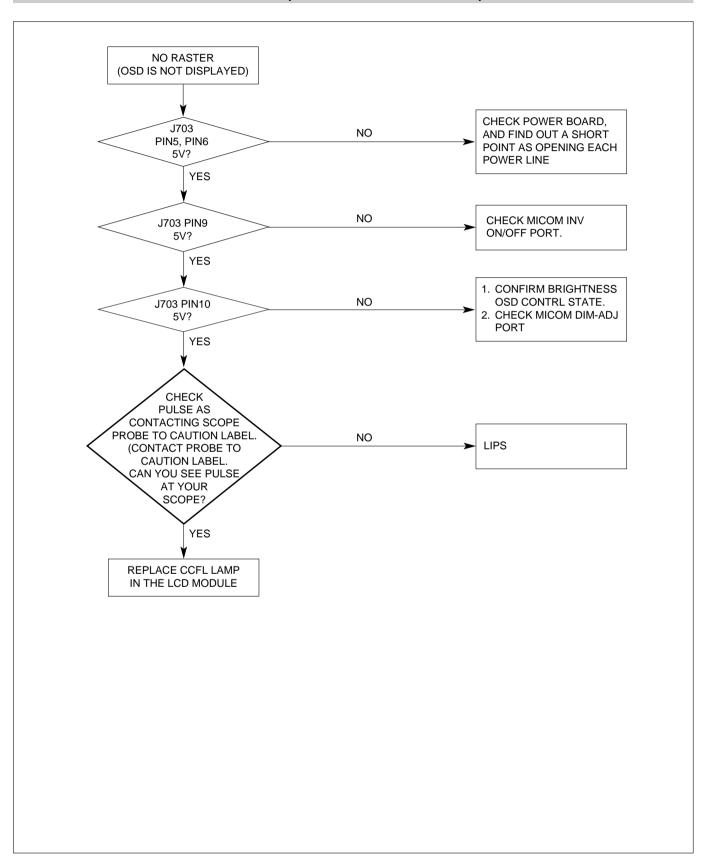


3. NO RASTER (OSD IS NOT DISPLAYED) - MSTAR

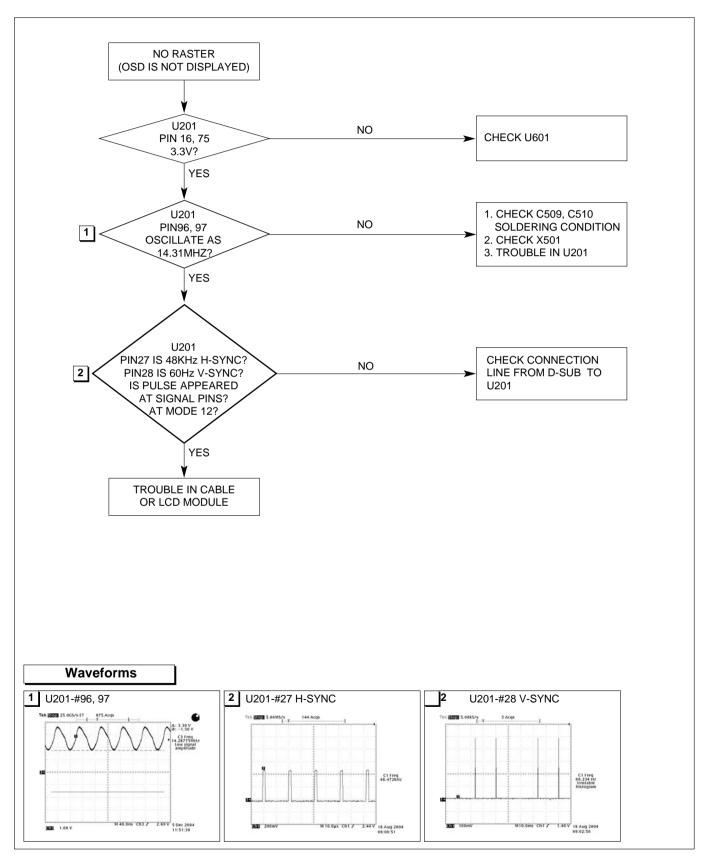


4. TROUBLE IN DPM

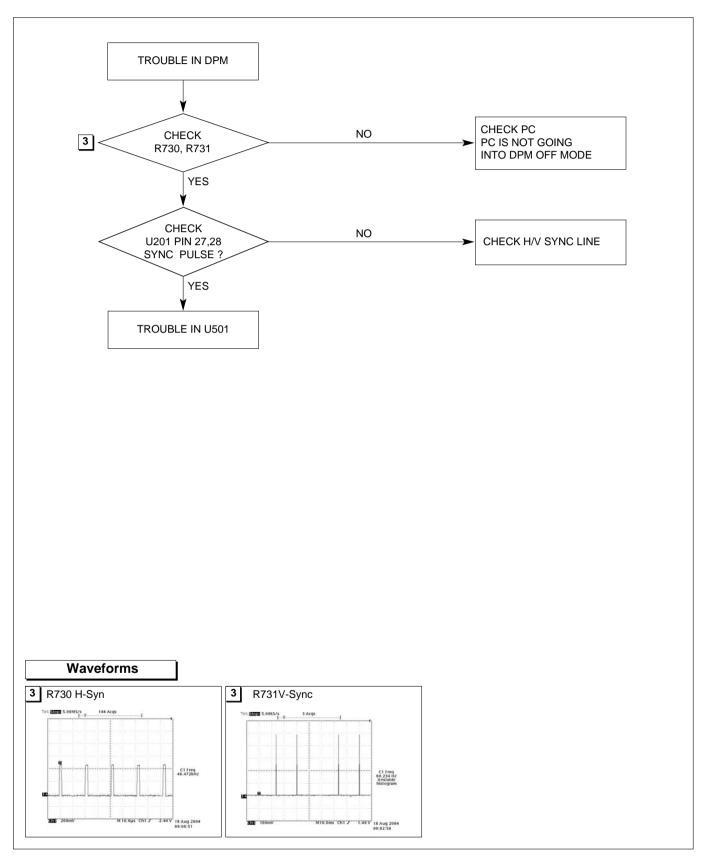


5. POWER

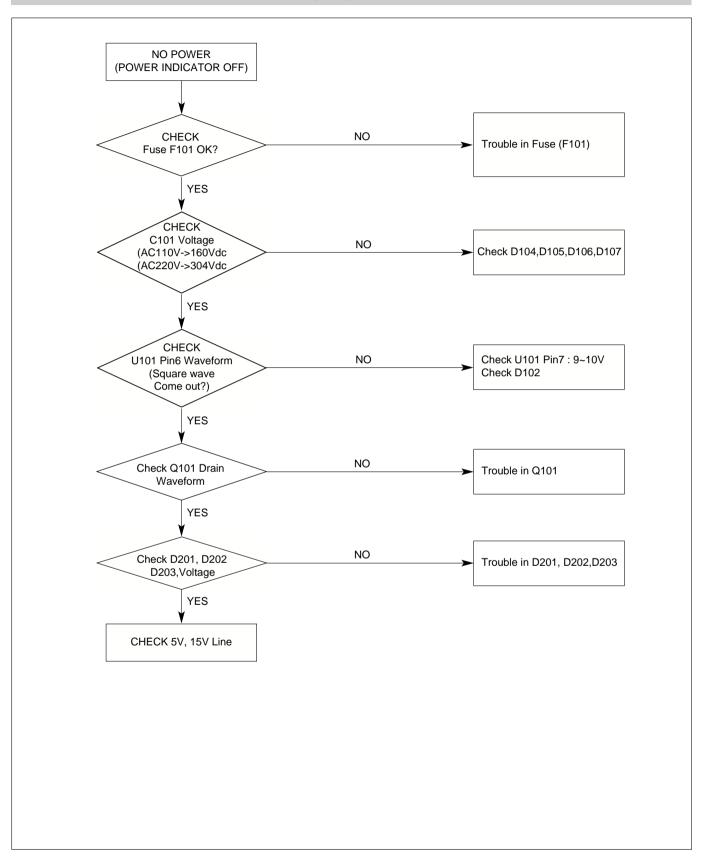

6. Raster

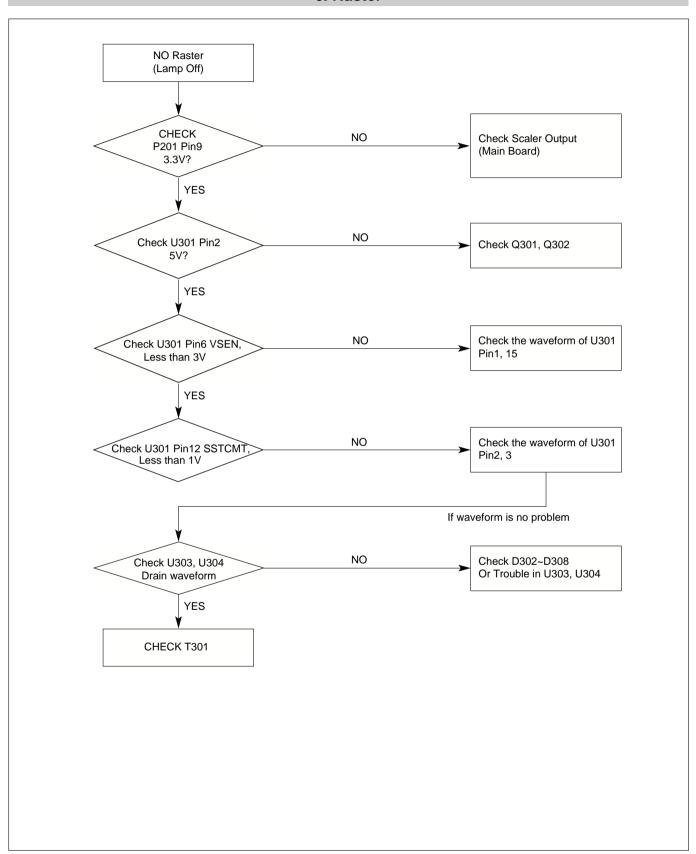

WIRING DIAGRAM

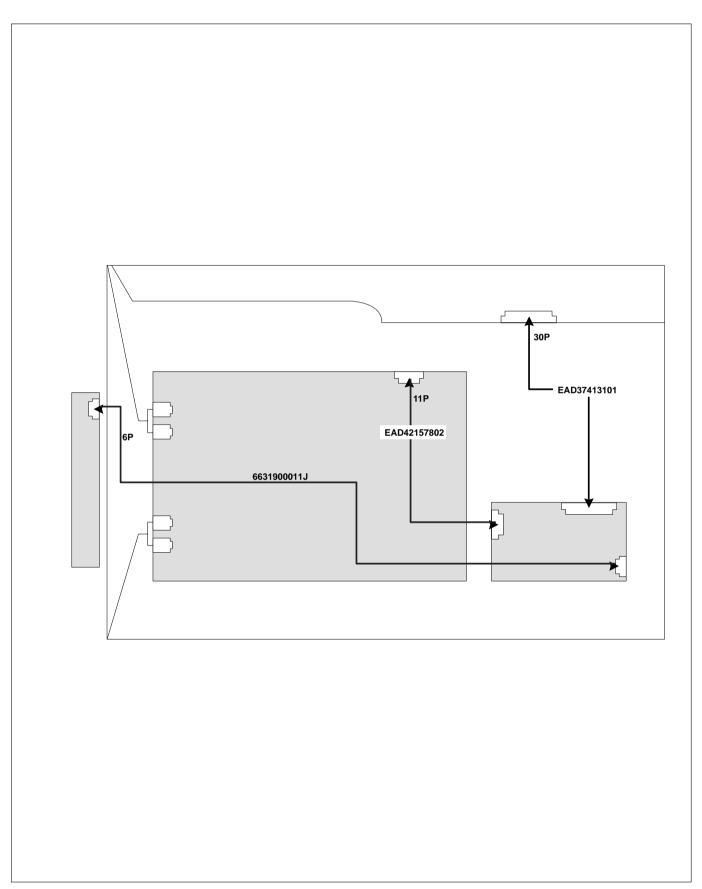


EXPLODED VIEW

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by 1 in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

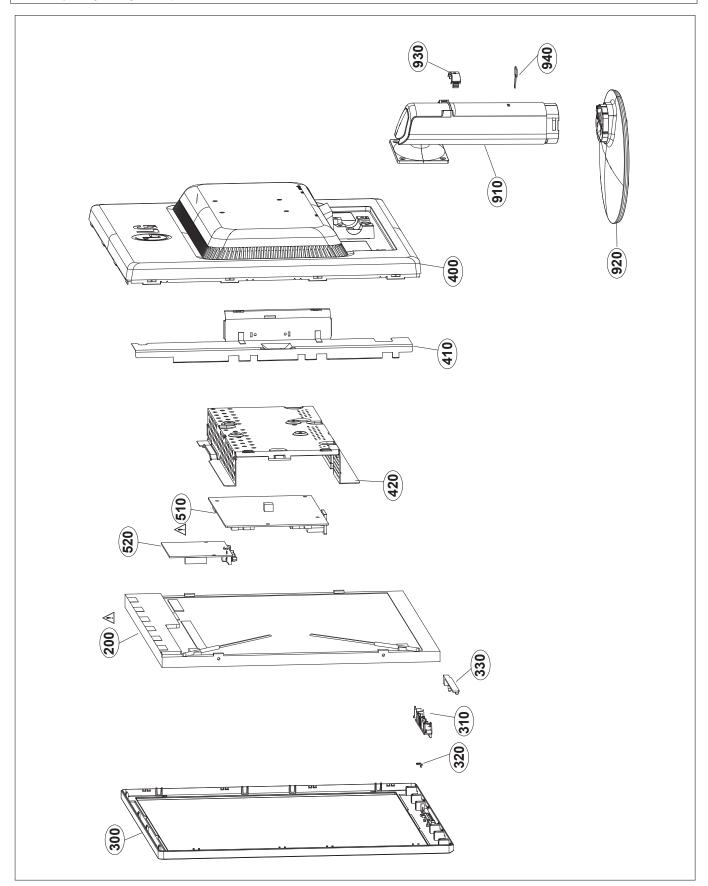


EXPLODED VIEW PARTS LIST


No.	Part No.	Description
200	6304FNE006A	SVA170SX01TB DRIVER 17INCH 1280X1024 300CD COLOR 72% 4/3 700:1 - NEC CORPORATION.
	EAJ44187001	LM170E03-TLG1 SXGA 17.0INCH 1280X1024 300CD COLOR 72% 4/3 1000:1 P5, Gumi, ZBD, 5ms, 170(H)/160(V), TLI T-con, Lusem(Source),GIP(Gate)Diffuser*1+Prism*1
	EAJ44187601	LM190E08-TLG1 SXGA 19.0INCH 1280X1024 300CD COLOR 72% 4/3 1000:1 P4, Gumi, ZBD, 5ms, 170(H)/160(V), TLI T-con, Lusem(Source),GIP(Gate)Diffuser*1+Prism
MBH42876401		MOLD HIPS L1742 HIPS L1742 Cabinet
300	MBH42876201	MOLD HIPS L1942 HIPS L1942 Cabinet
310	MEY42882101	Control button MOLD ABS HF-350 MAIN 5 Lx42 Lx42 BLACK
320	MFB42881801	Led Lens MOLD PC LG LENS Lx42 Lx42 Lens
330	EBR37001507	CONTROL T.T LM72A BAIKAL ? 19-INCH BLUE RD 42 SERIAL
400	MCK42876810	Back cover MOLD HIPS LPL DUAL TILT
400	MCK42876501	Back cover MOLD HIPS LPL DUAL TILT
410	MDQ42883102	Lamp shield PRESS SBHG 0.6mm L1742 SBHG L1742 Lamp shield 0.6mm
410	MDQ42883001	Lamp shield PRESS SBHG 0.6mm L1942 SBHG L1942 Lamp shield 0.6mm
420	MDQ41956328	Rear shield L1742、L1942, rear shield dual, with forming, without spring
510	EAY41830902	AIP-0172 FREE W1942S/T LCD Lienchang - LIEN CHANG CO. LTD.
520	EBR36999511	MAIN T.T LM72A BAIKAL II MSTAR DUAL RD -
010	AAN52377605	STAND L1742P LM57D STAND BODY ASSY, 110mm Height Stand NEC Module
910	AAN52377601	Stand Body Assembly BASE L1942P/Wx42P LM57D STAND BODY ASSY, 110mm Height Stand
920	AAN52427401	Stand Base Assembly BASE L1942P/Wx42P LM57D STAND BASE ASSY, 110mm Height Stand
930	MEG42848901	Holder MOLD NYLON 66 CABLE Cable Holder
940	MFG34448601	Locker PRESS STEEL STS pi 1.5 ACCESORY NON NON new height stand PIN FIX

SCHEMATIC DIAGRAM


1. SCALER

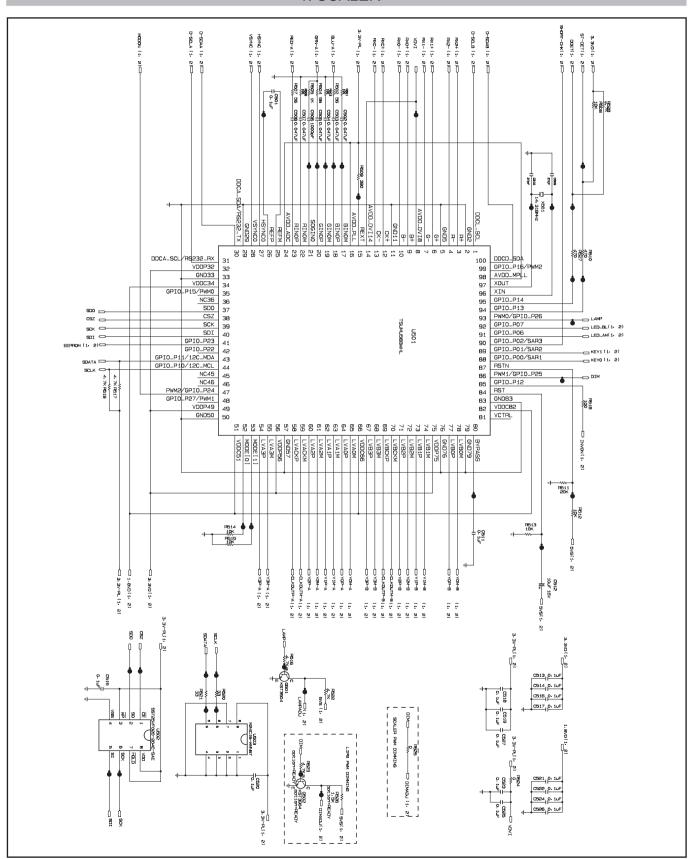


2. POWER & WAFER

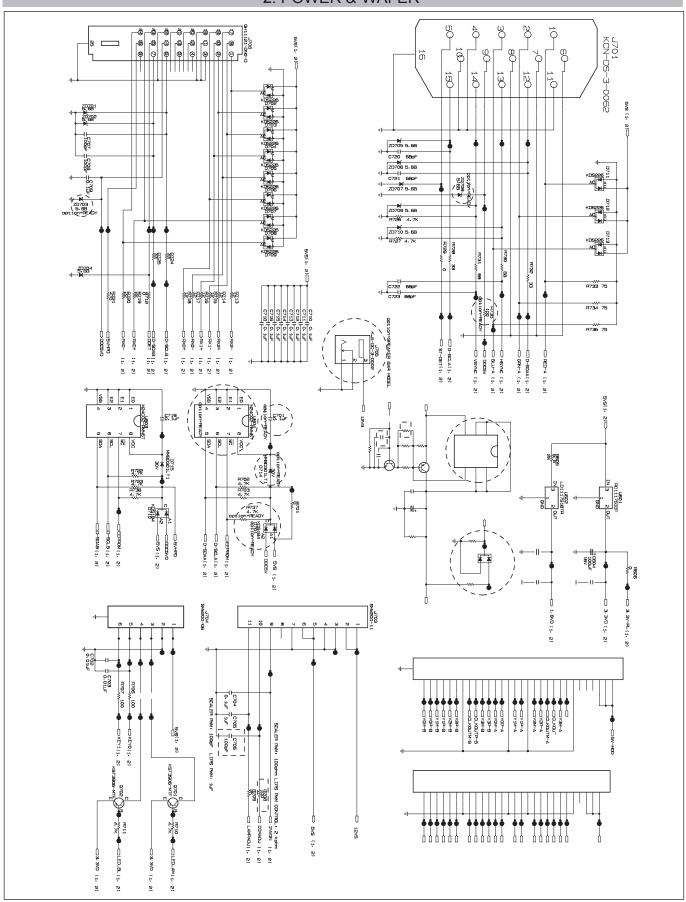

3. INVERTER

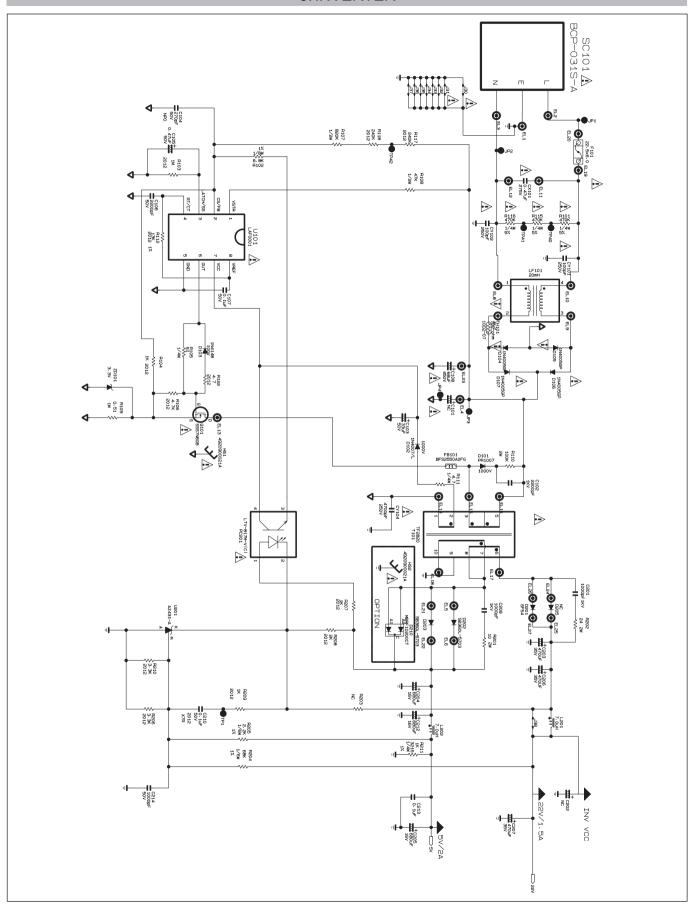

4. POWER

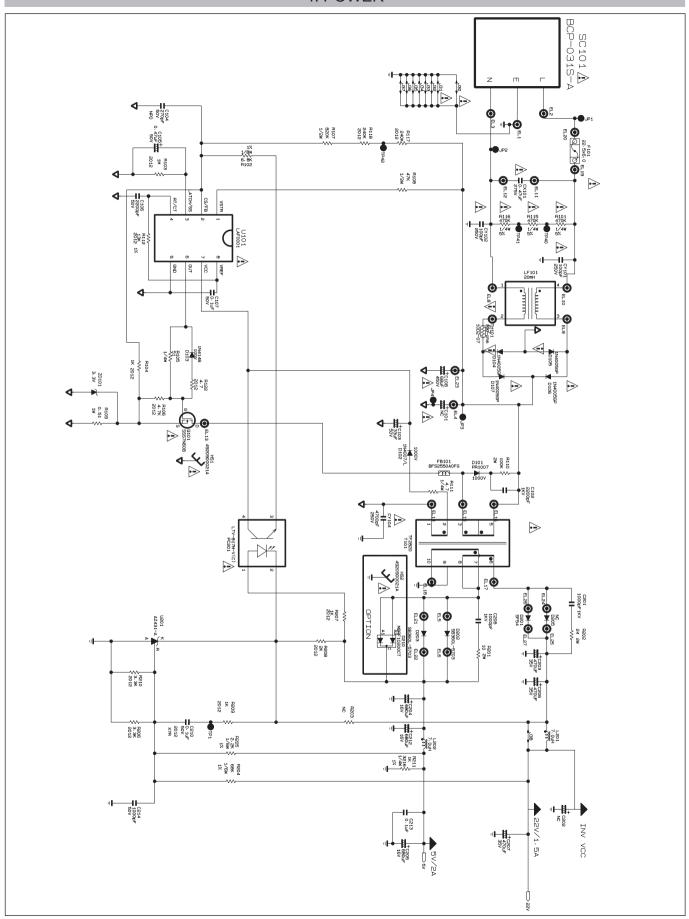



JUN. 2008 P/NO : MFL40349711 Printed in China