
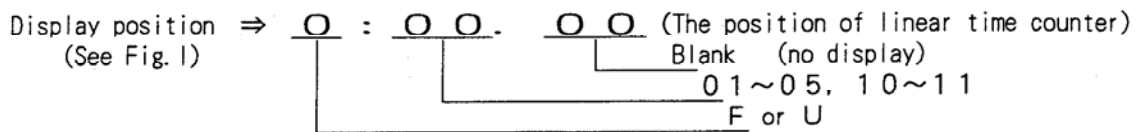


SERVICE MODE 3

- ① When undesirable conditions occurred, you can see what kind of error occurred by turning on the Service Mode 3. (The error code is displayed on E.V.F again, even power is turned power off. using the Lithium battery.)
 When you turn on Service Mode 3, the Error Code is displayed on the E.V.F. Also, the CAMERA LED is flashed according to Error code.

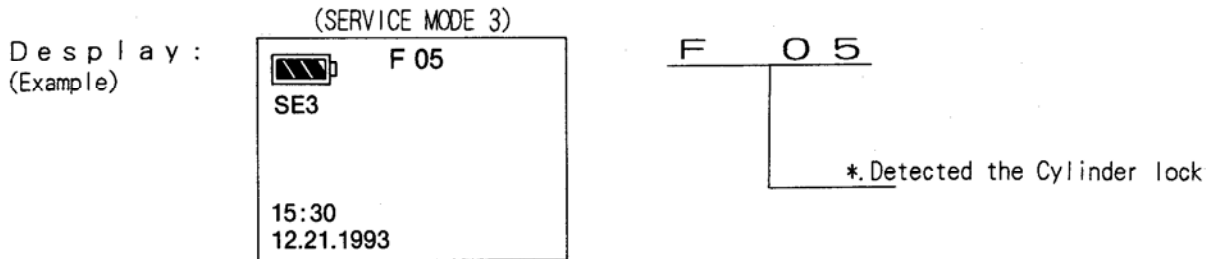

Display position ⇒ CAMERA LED (See Fig. J)

DISPLAY	CONDITION	The Power off timing
F 0 1	T - REEL LOCK	After 1 minute flashing the LED
F 0 2	S - REEL LOCK	
F 0 3	UNLOADING LOCK	
F 0 4	LOADING LOCK	
F 0 5	CYLINDER LOCK	
F 5 1	FOCUS MOTOR LOCK	-----
F 5 2	ZOOM MOTOR LOCK	-----
U 1 0	DEW DETECTION	After 15 seconds flashing the LED
U 1 1	HEAD CLOGGING	Not turning off

Figure I Error Code

Lock Condition	Power LED Flashing Timing
T - REEL LOCK	T=2.56 sec
S - REEL LOCK	0.16 sec
UNLOADING LOCK	
LOADING LOCK	
CYLINDER LOCK	
OTHERS (U10 & U11)	Power LED is flashed at 1 Hz timing

Fig. J LED Flashing Timing