

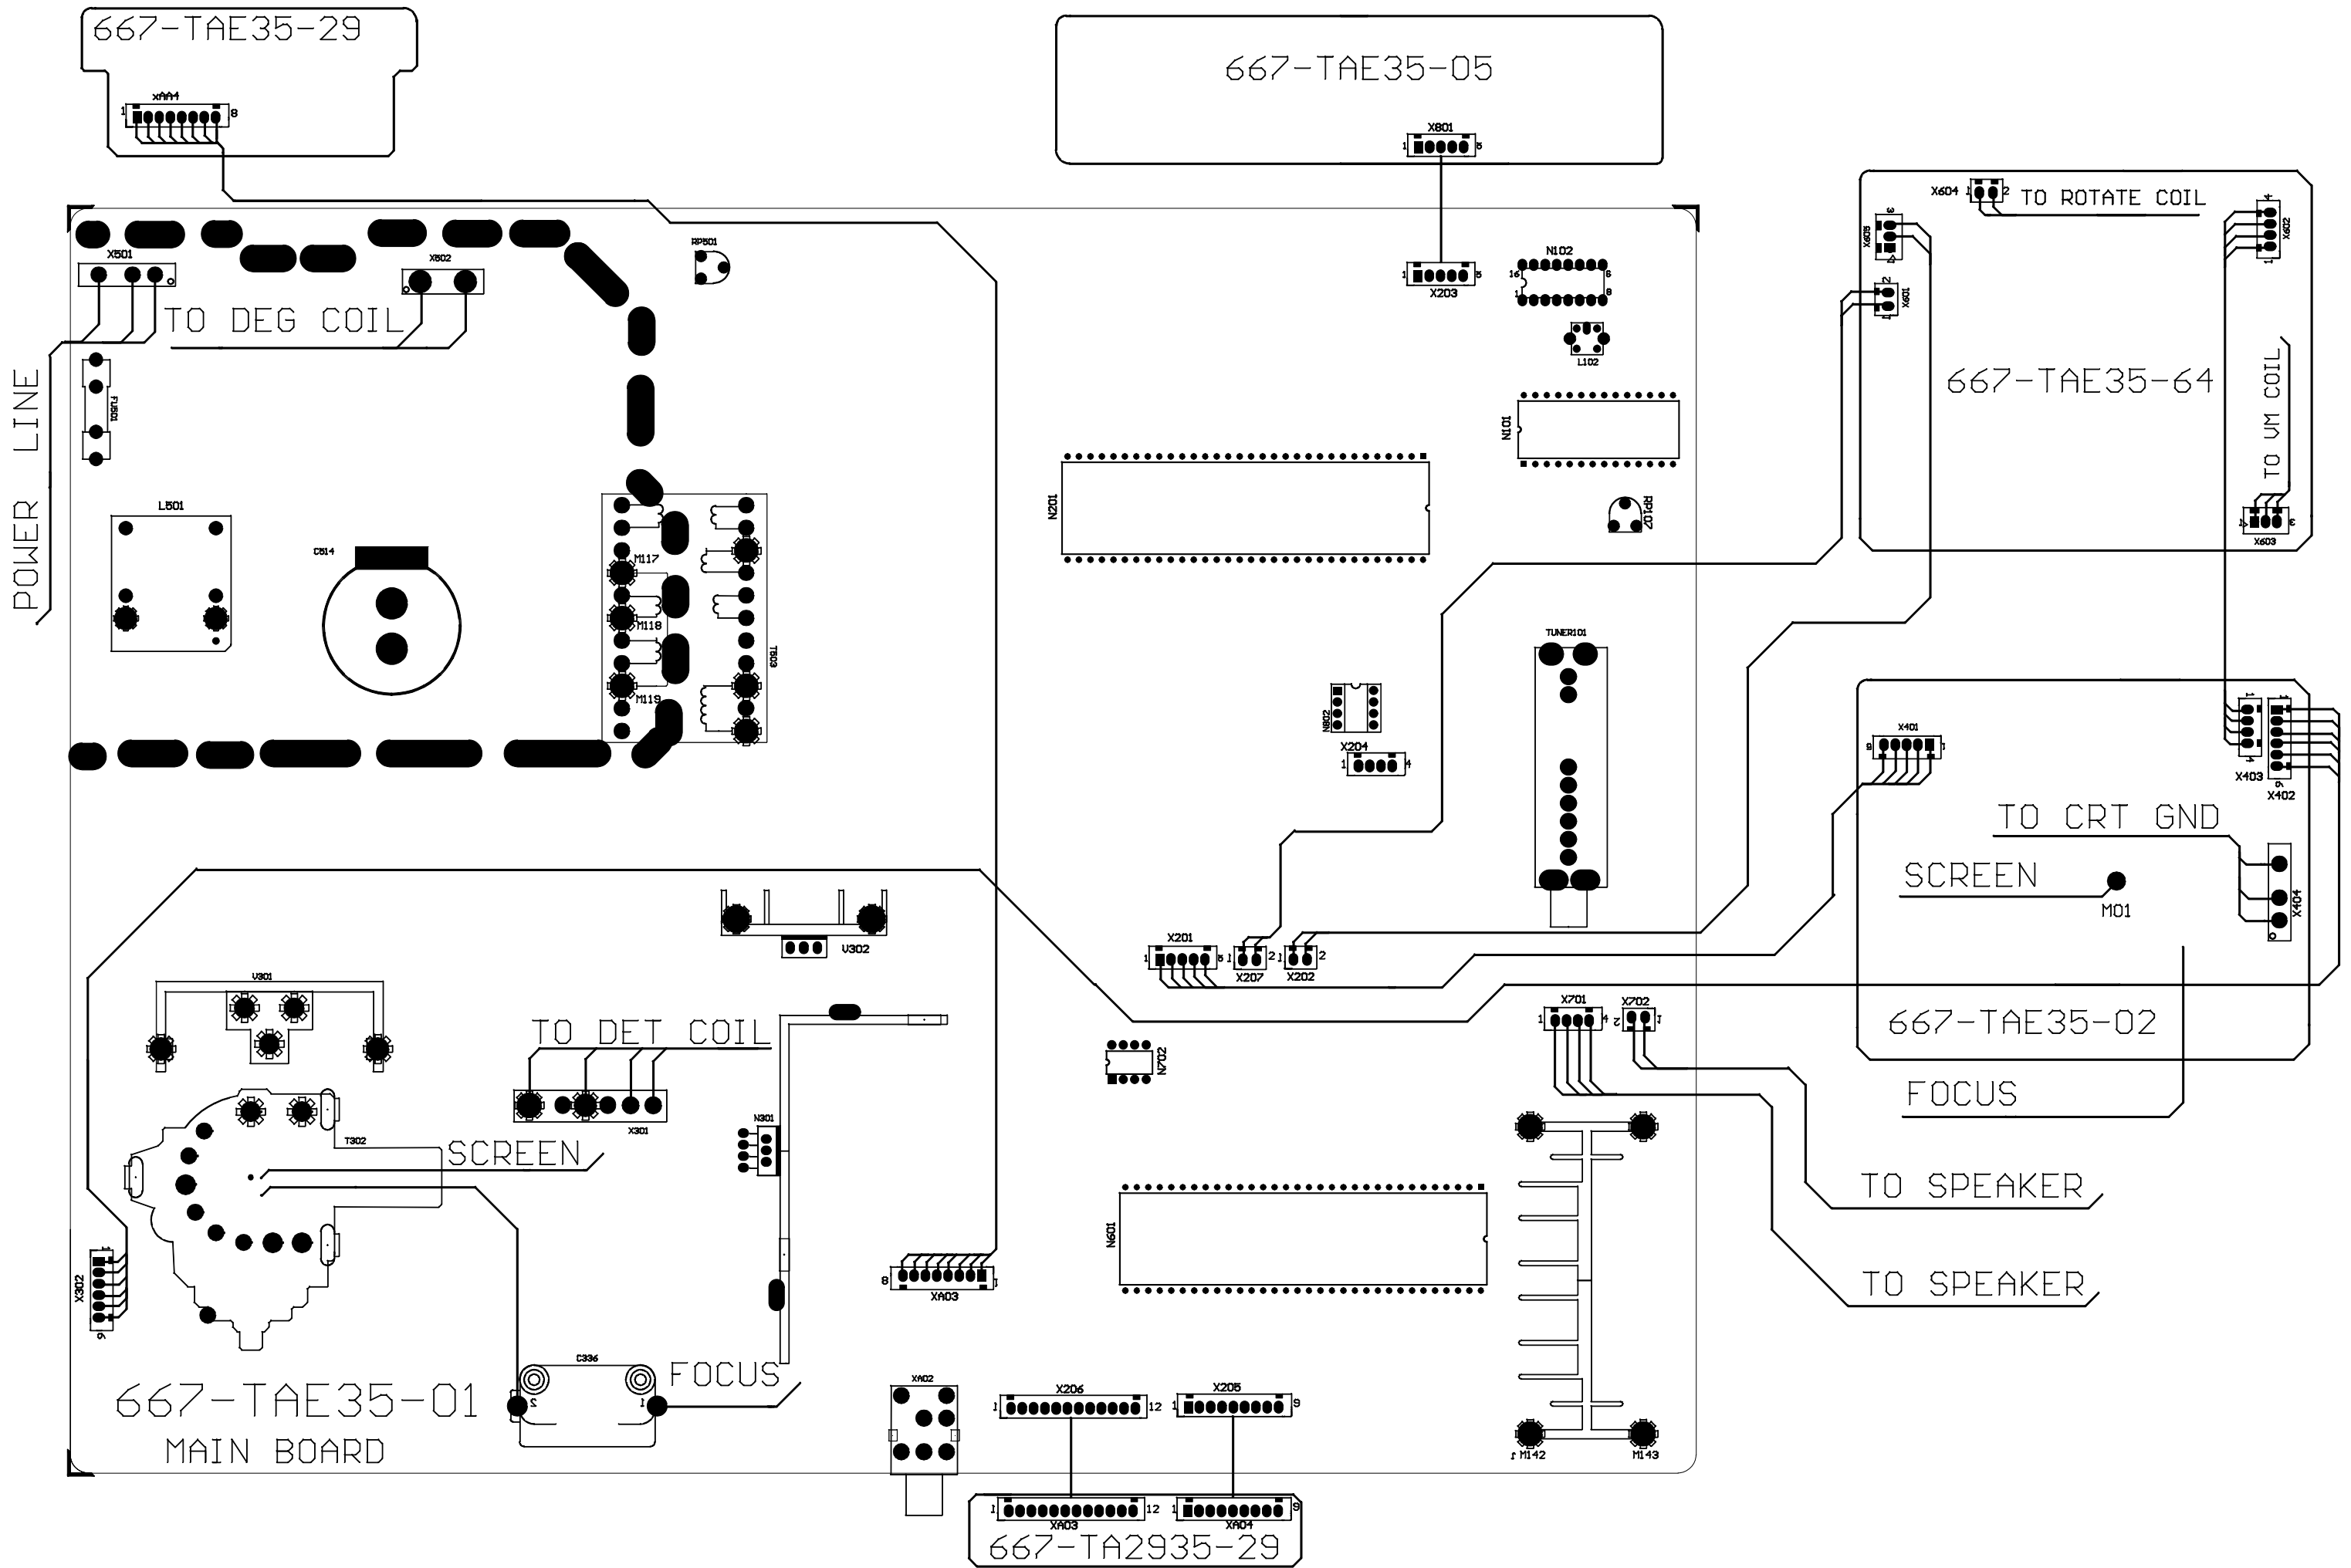 


Factory Alignment Methods

- 1 Push composed keys  -- / --- →  enter factory menu.
- 2 There are totally three pages of factory menu. Turn the page by pushing “MENU”, Move the items by CH+/CH- key, Adjust the value by VOL+/VOL-. After adjustment, push “OK” for save.
- 3 The method to quit factory menu: Under the item VCT in SERVICE XOCECO-50 Hz, push EXIT: OK



1.2. Chip Architecture

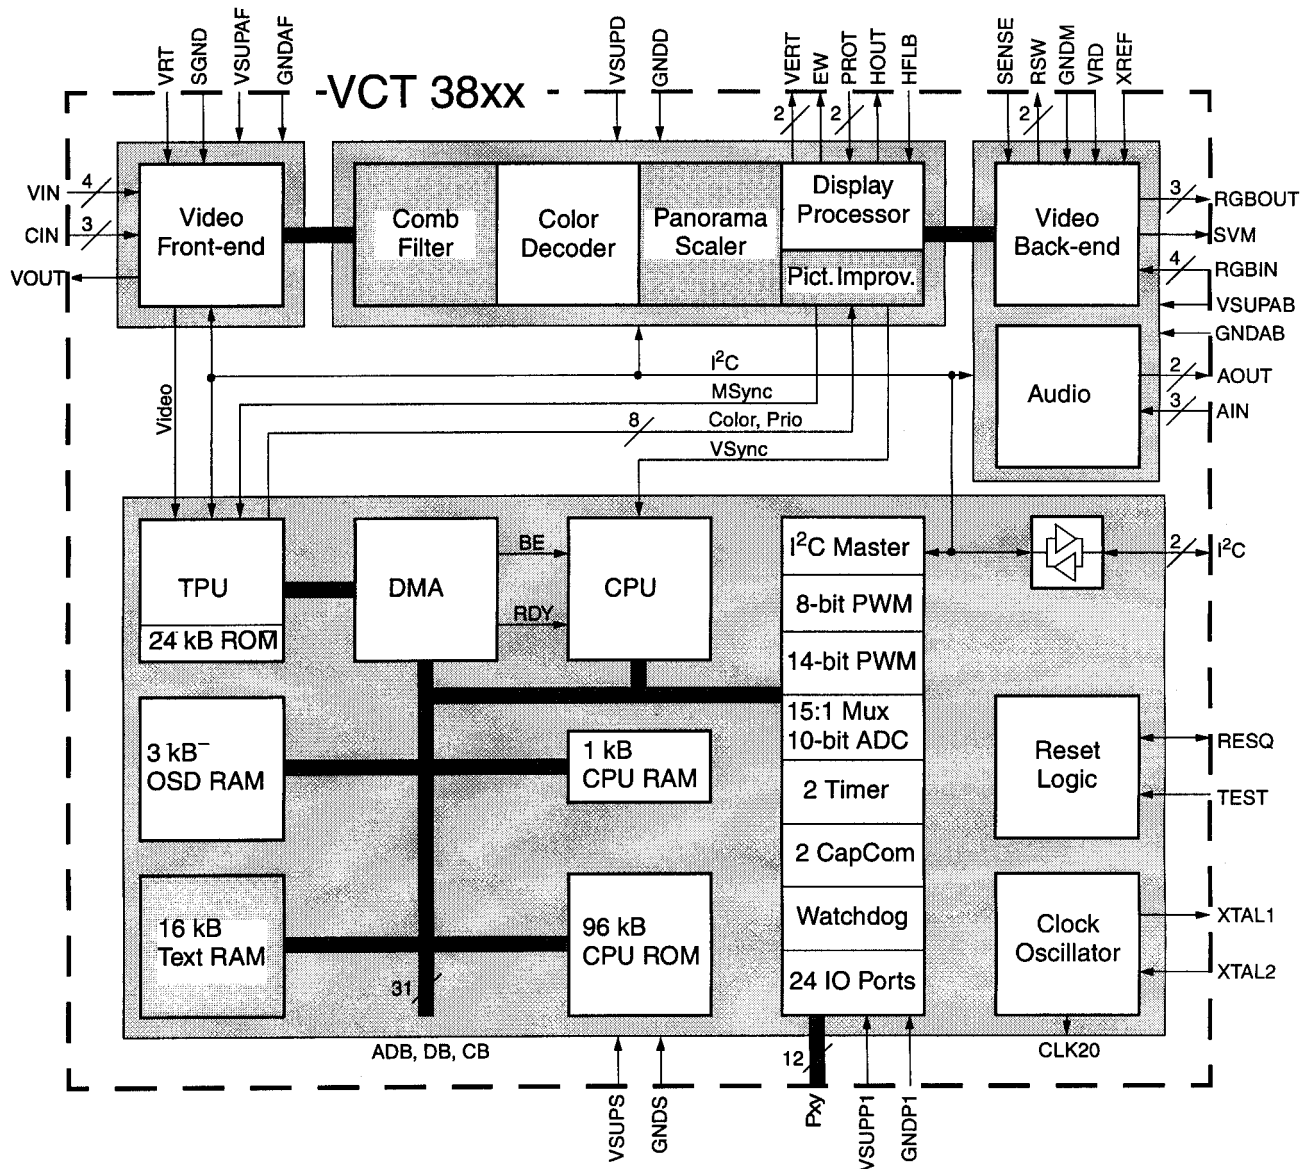 


Fig. 1-2: Block diagram of the VCT 38xxA (shaded blocks are optional)

2. Functional Description

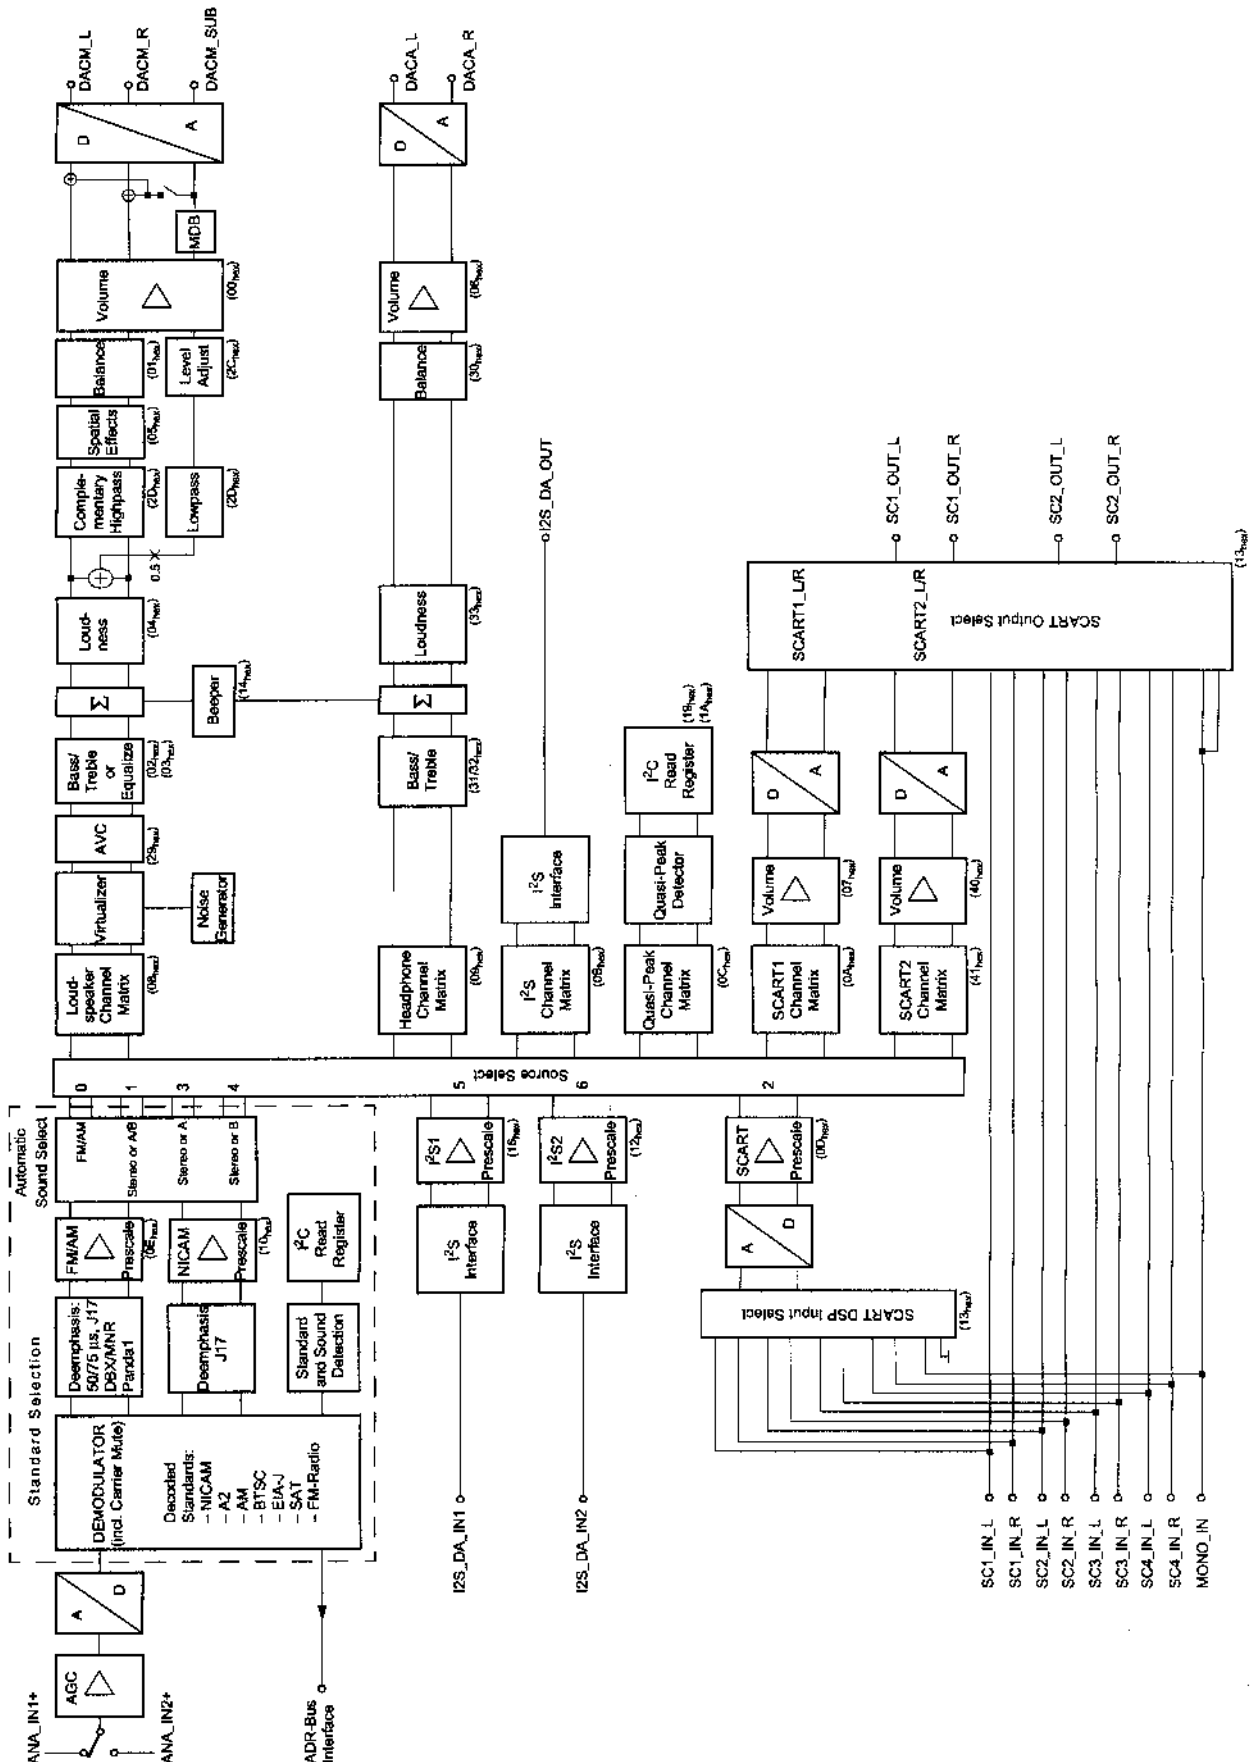 
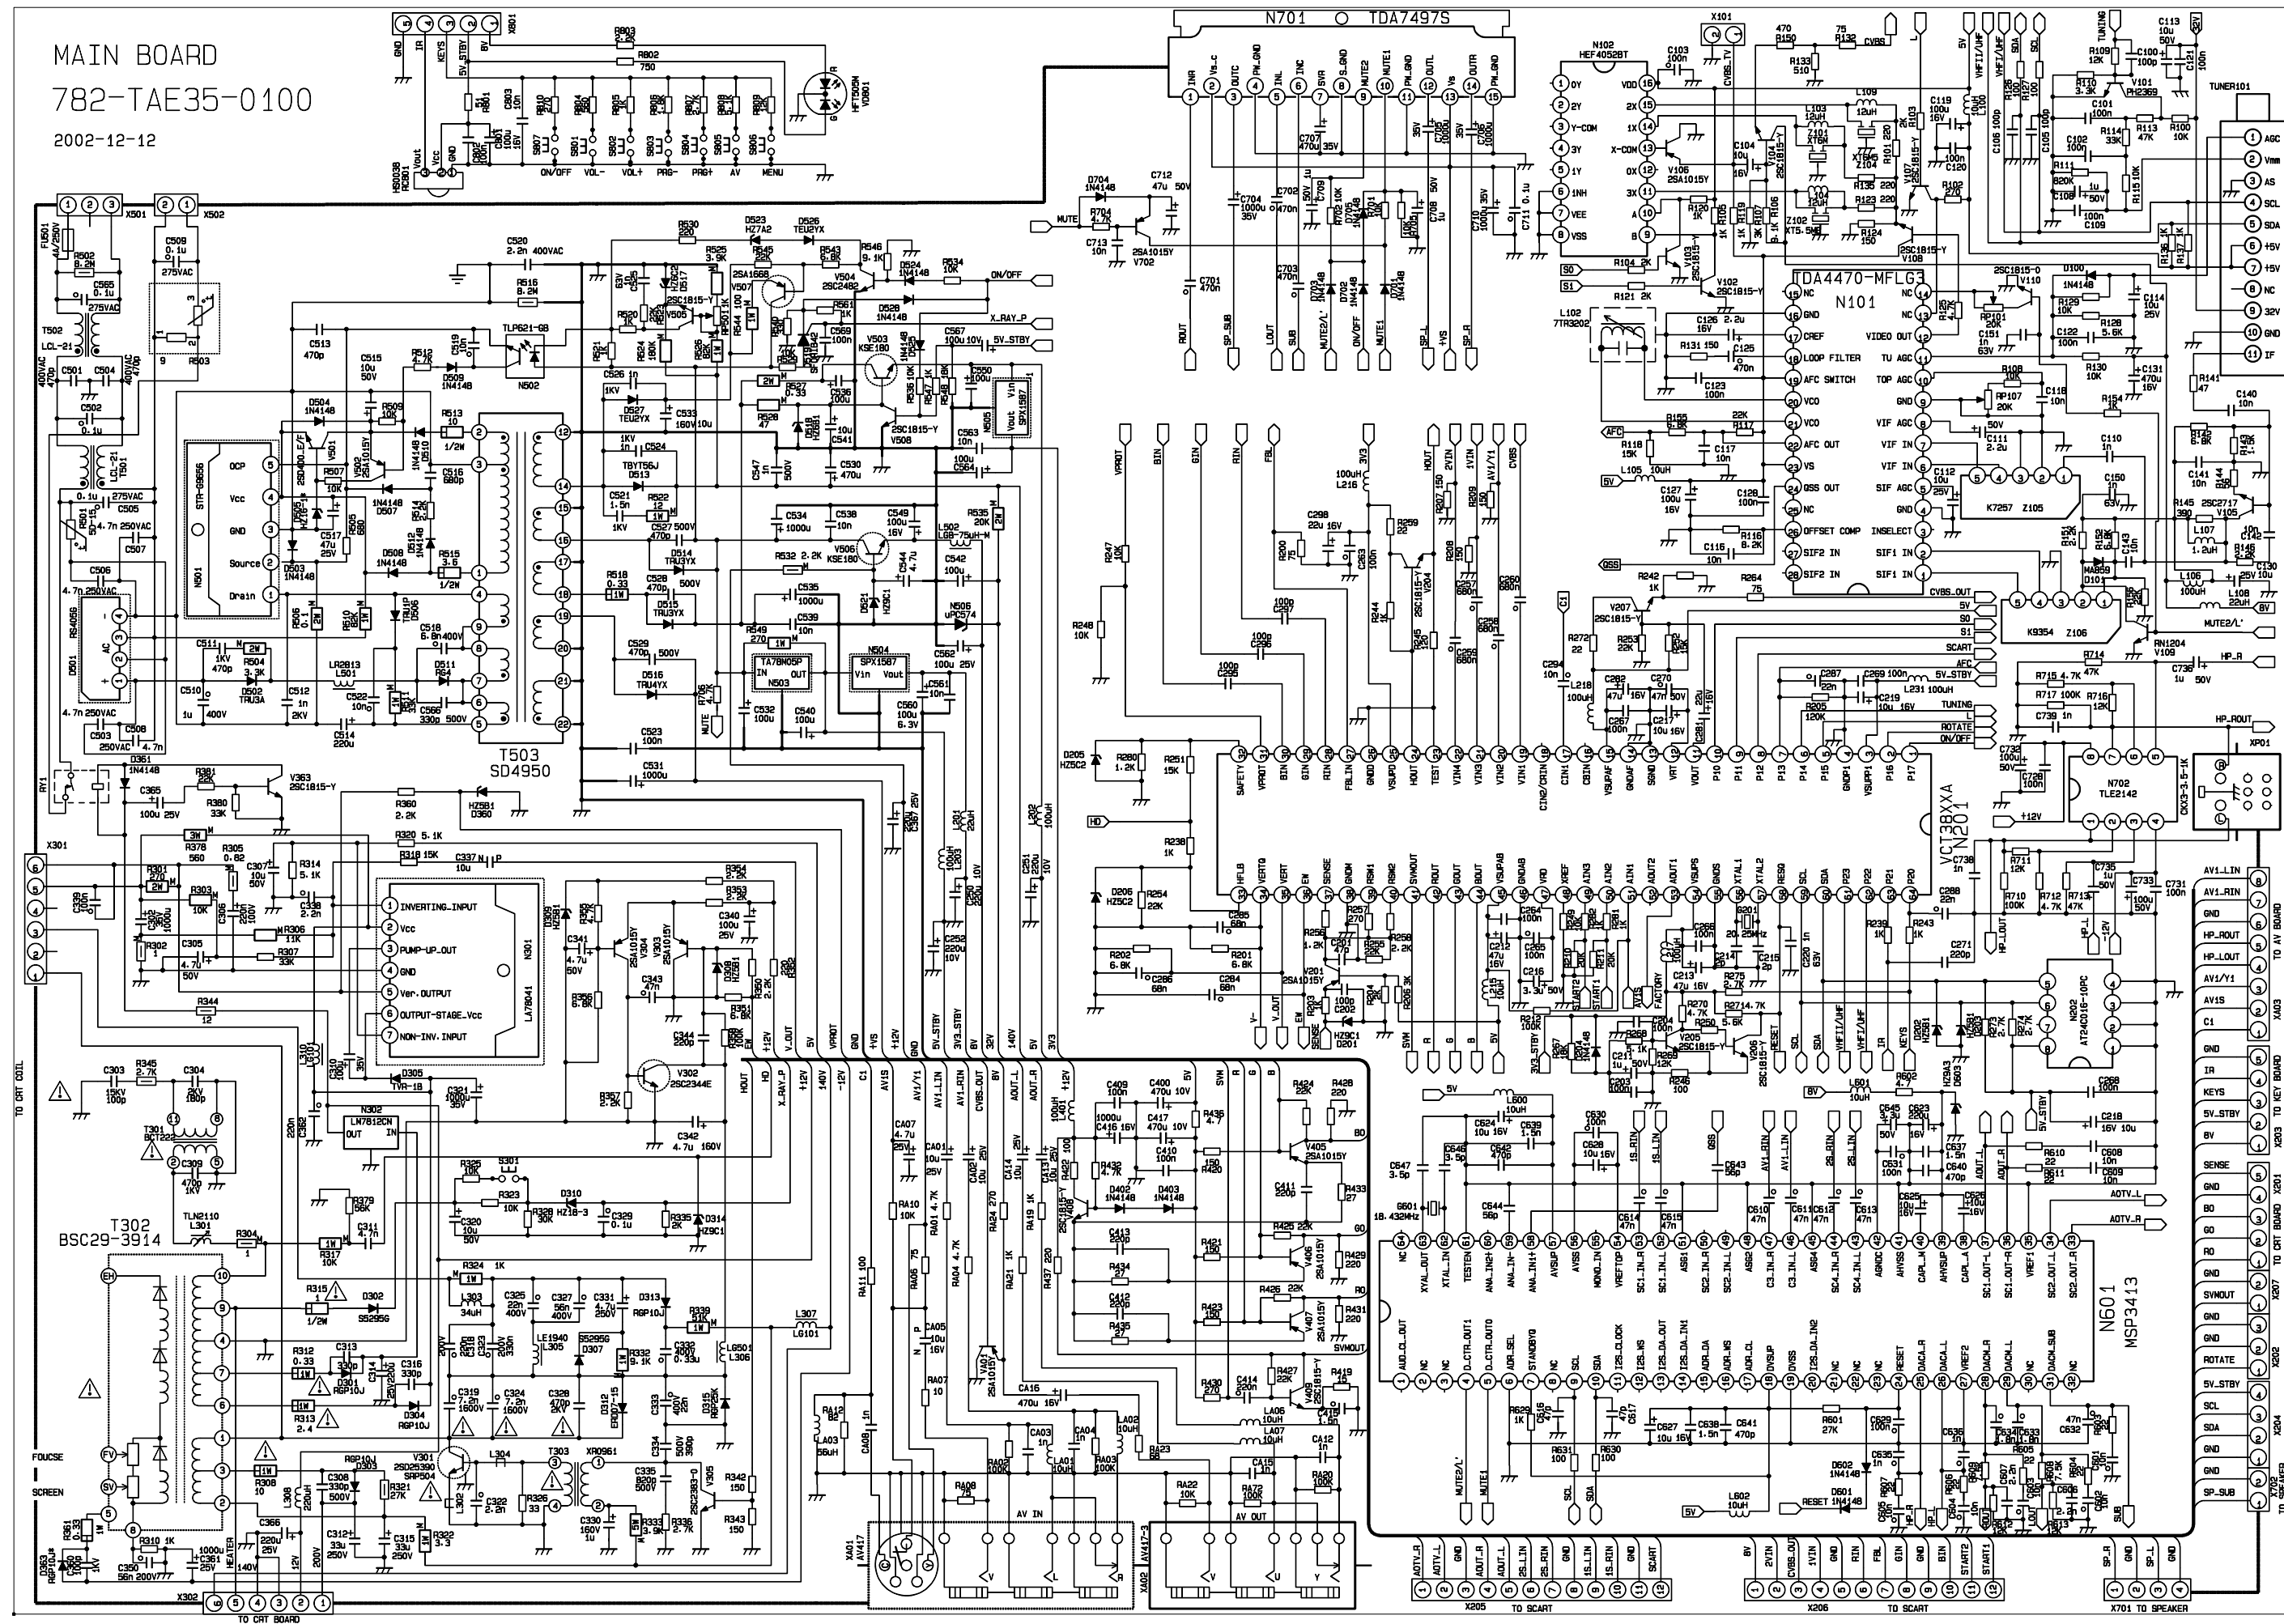
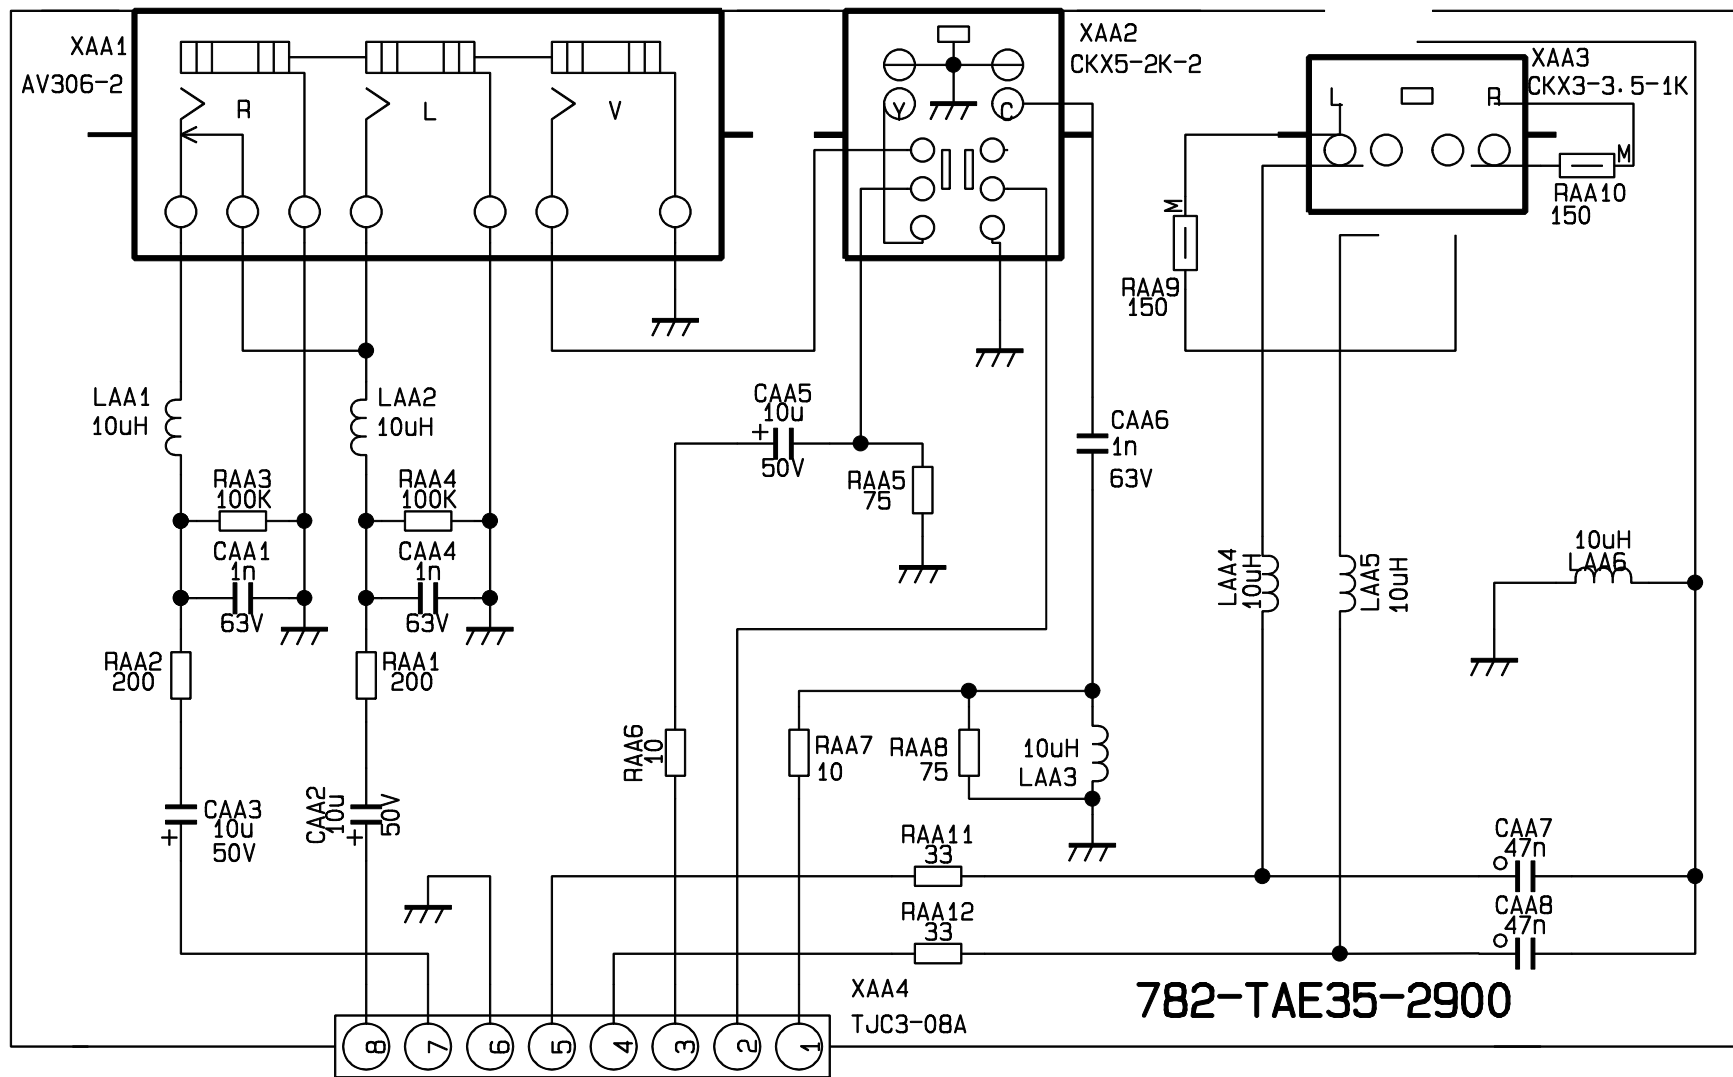
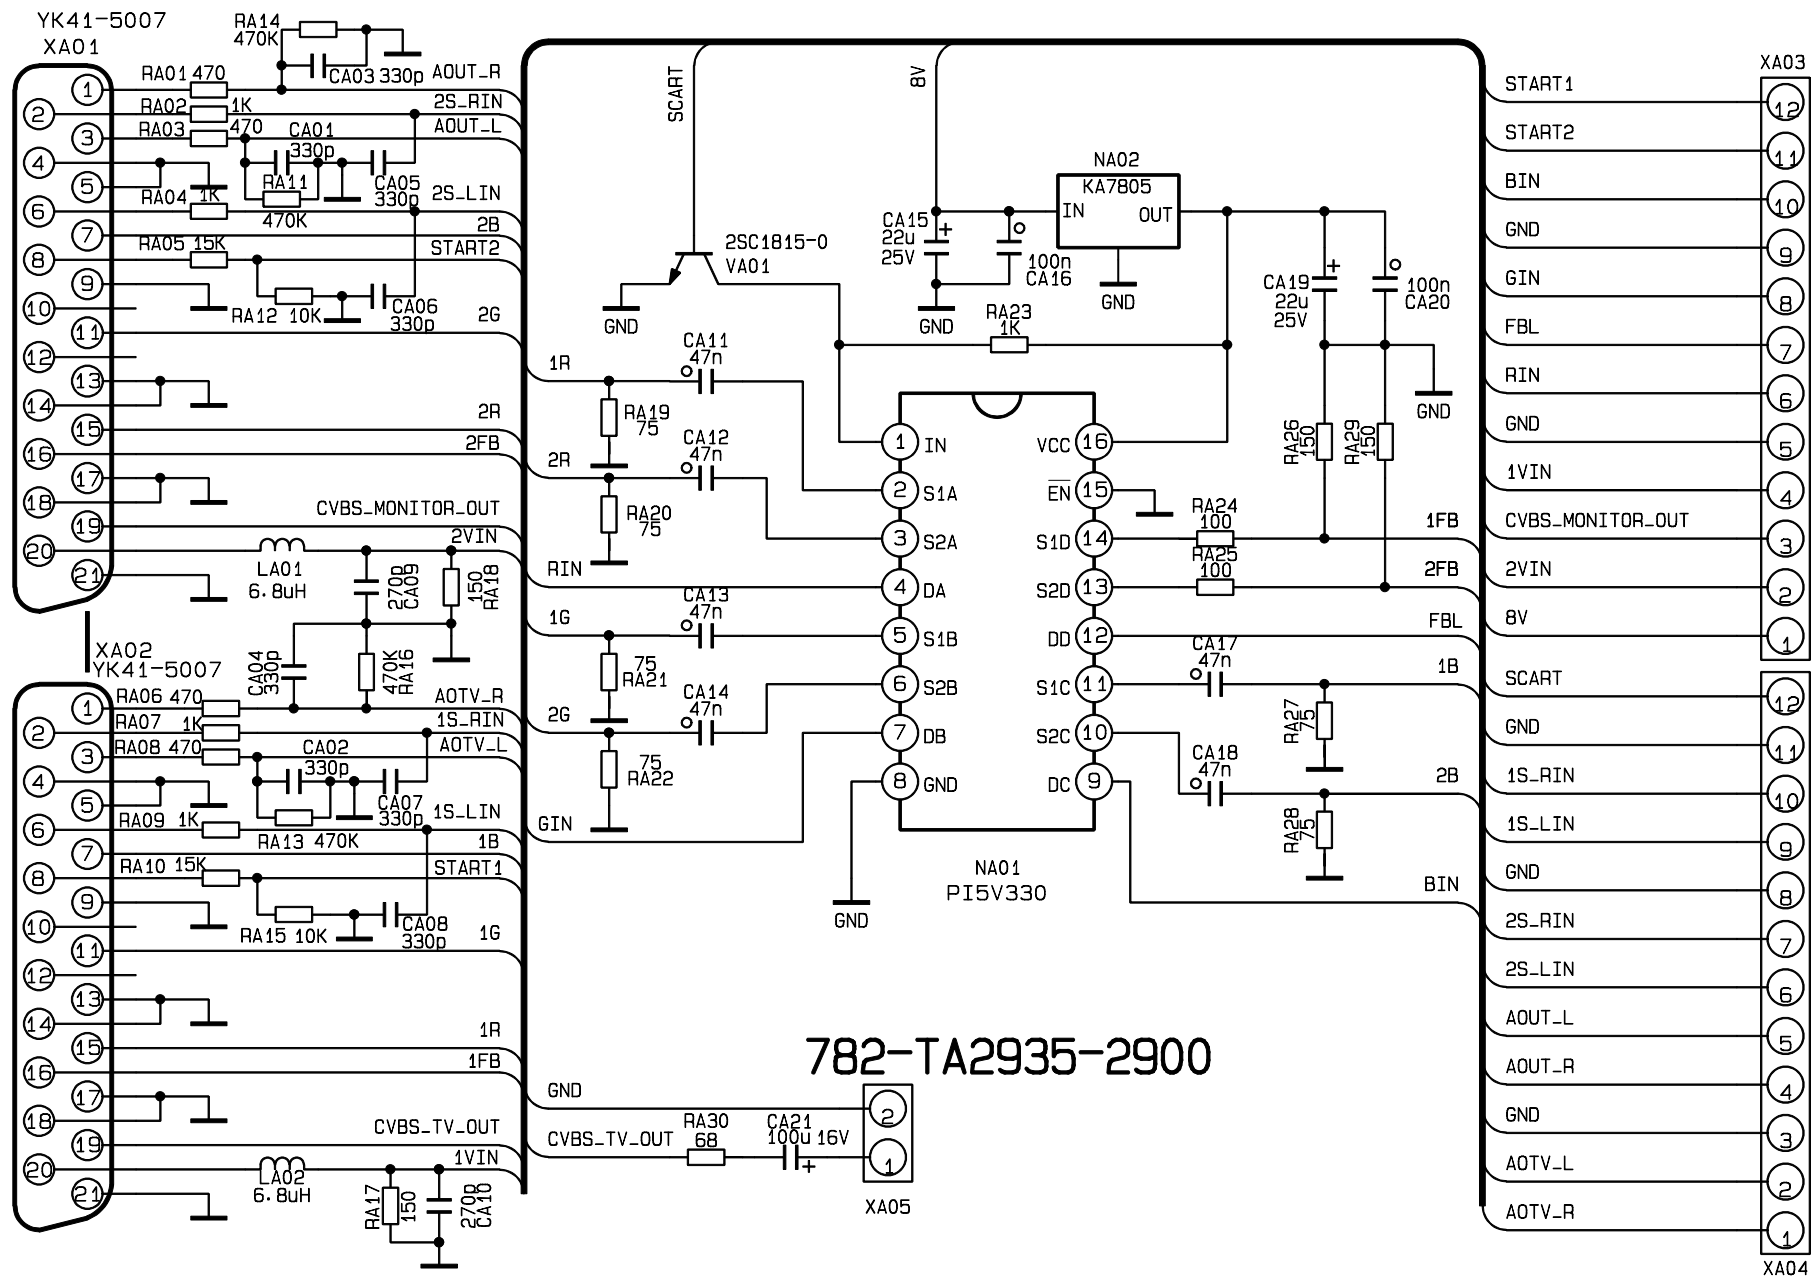


Fig. 2-1: Signal flow block diagram of the MSP 34x1G (input and output names correspond to pin names)

6







782-TAE35-0200

