

| | | | | | | | | | | | | | | | | | | | | |
|---------|--------|------|-----|------|-----|-----|------|-----|-----|-----|------|-----|------|-----|-----|-----|-----|-----|-----|-----|
| Ref No. | IC2201 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | | | | | | | | | | | | | | | |
| CD PLAY | 12.4 | 3.5 | 0 | 1.0 | 3.5 | | | | | | | | | | | | | | | |
| STOP | 12.8 | 2.6 | 0 | 1.0 | 3.5 | | | | | | | | | | | | | | | |
| Ref No. | IC2202 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | | | | | | | | | | | | | | | |
| CD PLAY | 12.4 | 6.2 | 0 | 1.0 | 3.5 | | | | | | | | | | | | | | | |
| STOP | 12.8 | 6.0 | 0 | 1.0 | 3.5 | | | | | | | | | | | | | | | |
| Ref No. | IC2203 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | | | | | | | | | | | | | | | | | |
| CD PLAY | 6.1 | 0 | 5.0 | | | | | | | | | | | | | | | | | |
| STOP | 6.1 | 0 | 5.0 | | | | | | | | | | | | | | | | | |
| Ref No. | IC2204 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | | | | | | | | | | | | | | | | | |
| CD PLAY | 6.1 | 0 | 5.0 | | | | | | | | | | | | | | | | | |
| STOP | 6.1 | 0 | 5.0 | | | | | | | | | | | | | | | | | |
| Ref No. | IC2205 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | | | | | | | | | | | | | | |
| CD PLAY | 2.4 | 5.0 | 1.2 | 1.0 | 0 | 1.2 | | | | | | | | | | | | | | |
| STOP | 2.4 | 5.0 | 1.2 | 1.0 | 0 | 1.2 | | | | | | | | | | | | | | |
| Ref No. | IC6001 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 4.7 | 4.7 | 0 | 0 | 4.6 | 0 | 0 | 0 | 0 | 0 | 0 | 4.6 | 2.4 | 0 | 2.3 | 4.7 | 4.7 | 5.1 | 2.6 | 0 |
| STOP | 4.7 | 4.6 | 0 | 0 | 4.6 | 0 | 0 | 0 | 0 | 0 | 0 | 4.6 | 2.3 | 0 | 2.3 | 4.8 | 4.8 | 5.3 | 2.7 | 0 |
| Ref No. | IC6001 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 4.6 | 0 | 0 | 0 | 0 | 0 | 0.3 | 4.7 | 4.7 | 4.7 | 4.7 | 0 | 0 | 0 | 0 | 3.5 | 2.8 | 3.0 | 4.6 | 0 |
| STOP | 4.6 | 0 | 0 | 0 | 0 | 0 | 0.3 | 4.6 | 4.6 | 4.7 | 4.7 | 0 | 0 | 0 | 0 | 3.2 | 2.6 | 3.0 | 4.8 | 0 |
| Ref No. | IC6001 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| CD PLAY | 0 | 0 | 0 | 3.6 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 0 | 0 | 0 | 0 |
| STOP | 0 | 0 | 0 | 3.7 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 4.5 | 4.5 | 4.6 | 4.5 | 4.5 | 0 | 0 | 0 | 0 |
| Ref No. | IC6001 | | | | | | | | | | | | | | | | | | | |
| MODE | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |
| CD PLAY | 0 | 4.7 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 4.3 | 0 | 4.7 | 0 | 4.6 | 0 | 0 | 0 | 4.7 | 0 |
| STOP | 0 | 4.6 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 4.3 | 0 | 4.6 | 0 | 4.6 | 4.7 | 4.7 | 0 | 0 | 0 |
| Ref No. | IC6001 | | | | | | | | | | | | | | | | | | | |
| MODE | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
| CD PLAY | 0 | 0 | 0 | 0 | 3.4 | 2.6 | 4.7 | 1.5 | 0 | 4.3 | 4.7 | 1.5 | 2.3 | 0 | 0.3 | 0 | 4.7 | 4.7 | 4.7 | 3.0 |
| STOP | 0 | 0 | 0 | 0 | 3.2 | 0.8 | 4.6 | 1.8 | 4.7 | 1.1 | 4.7 | 0 | 2.3 | 0 | 0.3 | 0 | 4.7 | 4.7 | 4.6 | 3.0 |
| Ref No. | IC6003 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | | | | | | |
| CD PLAY | 0 | 4.7 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | | | | | | | |
| STOP | 0 | 4.7 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | | | | | | | |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.2 | 0.1 | 0.2 | 0.1 | 0.2 | 0.1 | 0.1 | 0.1 |
| STOP | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 0.1 | 0.1 | 0.1 | 0.1 | 0.2 | 0.1 | 0.2 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -5.9 | 2.2 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| STOP | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -5.9 | 2.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| CD PLAY | 0.1 | -6.0 | 6.1 | 0 | 0 | 0 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| STOP | 0.1 | -6.0 | 6.1 | 0.1 | 0 | 0 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |
| CD PLAY | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| STOP | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| Ref No. | IC7101 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | | | | |
| CD PLAY | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -6.7 | 0.1 | 4.6 | 4.6 | 4.6 | 0.1 | 0.1 | 0.1 | 0.1 | 5.2 | | | | |
| STOP | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -6.7 | 0.1 | 4.6 | 4.6 | 4.7 | 0.1 | 0.1 | 0.1 | 0.1 | 5.2 | | | | |
| Ref No. | IC7102 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | | | | | |
| CD PLAY | 0.1 | 0.1 | 0.1 | 6.8 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -6.7 | 0.1 | 0.1 | 0.1 | | | | | | |
| STOP | 0.1 | 0.1 | 0.1 | 6.2 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -6.7 | 0.1 | 0.1 | 0.1 | | | | | | |
| Ref No. | IC7103 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | | | | | |
| CD PLAY | 0.1 | 0.1 | 0.1 | 6.8 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -6.7 | 0.1 | 0.1 | 0.1 | | | | | | |
| STOP | 0.1 | 0.1 | 0.1 | 6.8 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | -6.7 | 0.1 | 0.1 | 0.1 | | | | | | |
| Ref No. | IC7201 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | | | | | | |
| CD PLAY | 0.1 | 0.1 | 0.1 | -6.8 | 0.1 | 0.1 | 0.1 | 6.8 | | | | | | | | | | | | |
| STOP | 0.1 | 0.1 | 0.1 | -6.8 | 0.1 | 0.1 | 0.1 | 6.8 | | | | | | | | | | | | |
| Ref No. | IC7202 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | | | | | | |
| CD PLAY | 0.1 | 0.1 | 0.1 | -6.8 | 0.1 | 0.1 | 0.1 | 6.8 | | | | | | | | | | | | |
| STOP | 0.1 | 0.1 | 0.1 | -6.8 | 0.1 | 0.1 | 0.1 | 6.8 | | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | | | | | |
|-----------------|--------|------|------|-----|--------|------|------|-----|--------|-------|------|------|--------|------|------|------|--------|-------|-------|--|
| Ref No. MODE | Q2001 | | | | Q2002 | | | | Q2003 | | | | Q2004 | | | | Q2005 | | | |
| | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 9.2 | 12.0 | 9.8 | | 0 | 4.7 | -3.0 | | 6.8 | 12.0 | 7.4 | | 12.4 | 11.7 | 12.3 | | 12.4 | 9.3 | 11.8 | |
| STOP | 9.1 | 12.9 | 9.7 | | 0 | 4.6 | -3.0 | | 6.9 | 12.9 | 7.4 | | 13.5 | 12.8 | 13.5 | | 13.5 | 9.3 | 12.9 | |
| Ref No. MODE | Q2006 | | | | Q2101 | | | | Q2102 | | | | Q2103 | | | | Q2104 | | | |
| | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 8.6 | 11.8 | 9.2 | | 0 | -7.4 | -0.6 | | -6.8 | -11.0 | -7.4 | | 4.9 | 9.1 | 5.5 | | -27.9 | -32.3 | -28.5 | |
| STOP | 8.6 | 12.8 | 9.2 | | 0 | -7.4 | -0.6 | | -6.8 | -11.7 | -7.4 | | 4.9 | 9.3 | 5.5 | | -27.9 | -34.0 | -28.5 | |
| Ref No. MODE | Q2201 | | | | Q2202 | | | | Q2203 | | | | Q2204 | | | | Q6001 | | | |
| | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 12.4 | -3.0 | 12.3 | | 12.4 | 11.7 | 12.4 | | 12.4 | 9.3 | 11.8 | | 8.6 | 11.7 | 9.2 | | 2.0 | 2.0 | 4.6 | |
| STOP | 13.5 | -3.0 | 13.5 | | 13.5 | 12.9 | 13.5 | | 13.4 | 9.3 | 12.9 | | 8.6 | 12.8 | 9.1 | | 2.1 | 2.1 | 4.6 | |
| Ref No. MODE | Q6002 | | | | Q6004 | | | | Q7101 | | | | | | | | | | | |
| | E | C | B | | E | C | B | | 1 | 2 | 3 | 4 | 5 | 6 | | | | | | |
| CD PLAY | 0 | 5.5 | 0 | | 0 | 4.9 | 0 | | 0.1 | 0.8 | 0.1 | 0.1 | 0.8 | 0.1 | | | | | | |
| STOP | 0 | 5.5 | 0 | | 0 | 4.9 | 0 | | 0.1 | 0.7 | 0.1 | 0.1 | 0.7 | 0.1 | | | | | | |
| Ref No. MODE | Q7102 | | | | Q7201 | | | | Q7202 | | | | | | | | | | | |
| | E | C | B | | 1 | 2 | 3 | 4 | 5 | 6 | | 1 | 2 | 3 | 4 | 5 | 6 | | | |
| CD PLAY | 0.1 | 0.1 | 0.8 | | 0.1 | -4.5 | 0.1 | 0.1 | -4.5 | 0.1 | | 0.1 | -4.5 | 0.1 | 0.1 | -4.5 | 0.1 | | | |
| STOP | 0.1 | 0.1 | 0.7 | | 0.1 | 0.7 | 0.1 | 0.1 | 0.7 | 0.1 | | 0.1 | 0.7 | 0.1 | 0.7 | 0.7 | 0.1 | | | |
| Ref No. MODE | Q7203 | | | | Q7204 | | | | | | | | | | | | | | | |
| | 1 | 2 | 3 | 4 | 5 | 6 | | 1 | 2 | 3 | 4 | 5 | 6 | | | | | | | |
| CD PLAY | 0.1 | -4.5 | 0.1 | 0.1 | -4.5 | 0.1 | | 0.1 | -4.5 | 0.1 | 0.1 | -4.5 | 0.1 | | | | | | | |
| STOP | 0.1 | -4.5 | 0.1 | 0.1 | -4.5 | 0.1 | | 0.1 | 0.7 | 0.1 | 0.1 | 0.7 | 0.1 | | | | | | | |
| Ref No. MODE | Q7303 | | | | Q7304 | | | | Q7305 | | | | Q7306 | | | | | | | |
| | E | C | B | | E | C | B | | E | C | B | | E | C | B | | | | | |
| CD PLAY | 0.1 | 6.0 | 0.2 | | 0.1 | 6.0 | 0.2 | | 0.1 | 6.0 | 0.1 | | 0.1 | 6.0 | 0 | | | | | |
| STOP | 0.1 | 6.5 | 0.1 | | 0.1 | 6.5 | 0.1 | | 0.1 | 6.5 | 0 | | 0.1 | 6.5 | 0 | | | | | |
| Ref No. MODE | Q7401 | | | | Q7501 | | | | Q7502 | | | | | | | | | | | |
| | 1 | 2 | 3 | 4 | 5 | 6 | | E | C | B | | E | C | B | | | | | | |
| CD PLAY | 0.1 | -4.5 | 0.1 | 0.1 | -4.5 | 0.1 | | 0.1 | 8.5 | 0 | | 0.1 | 8.5 | 0 | | | | | | |
| STOP | 0.1 | 0.7 | 0.1 | 0.1 | 0.7 | 0.1 | | 0.1 | 9.0 | 0 | | 0.1 | 9.0 | 0 | | | | | | |
| Ref No. MODE | QR6006 | | | | QR7101 | | | | QR7102 | | | | QR7201 | | | | QR7202 | | | |
| | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 0 | 4.7 | 0 | | 1.7 | 1.7 | 0.1 | | 2.1 | 1.7 | 0.1 | | 0 | 4.5 | 0.1 | | 0 | -4.5 | 0.1 | |
| STOP | 0 | 4.6 | 0 | | 1.7 | 1.7 | 0.1 | | 2.1 | 2.0 | 0.1 | | 2.2 | 2.1 | 0.1 | | 0 | 2.1 | 0.1 | |
| Ref No. MODE | QR7203 | | | | QR7204 | | | | QR7205 | | | | QR7301 | | | | QR7305 | | | |
| | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 0 | -4.5 | 0.1 | | 0 | -4.5 | 0.1 | | 0 | -4.5 | 0.1 | | 0.1 | 6.0 | 0 | | 0.1 | 6.0 | 0 | |
| STOP | 1.8 | 1.8 | 0.1 | | 0 | -4.5 | 0.1 | | 0 | 1.8 | 0.1 | | 0.1 | 6.5 | 0 | | 0.1 | 6.5 | 0 | |
| Ref No. MODE | QR7401 | | | | QR7903 | | | | | | | | | | | | | | | |
| | E | C | B | | E | C | B | | | | | | | | | | | | | |
| CD PLAY | 0 | -4.5 | 0.1 | | 0 | 0 | 4.5 | | | | | | | | | | | | | |
| STOP | 2.5 | 2.4 | 0.1 | | 0 | 0 | 0 | | | | | | | | | | | | | |