

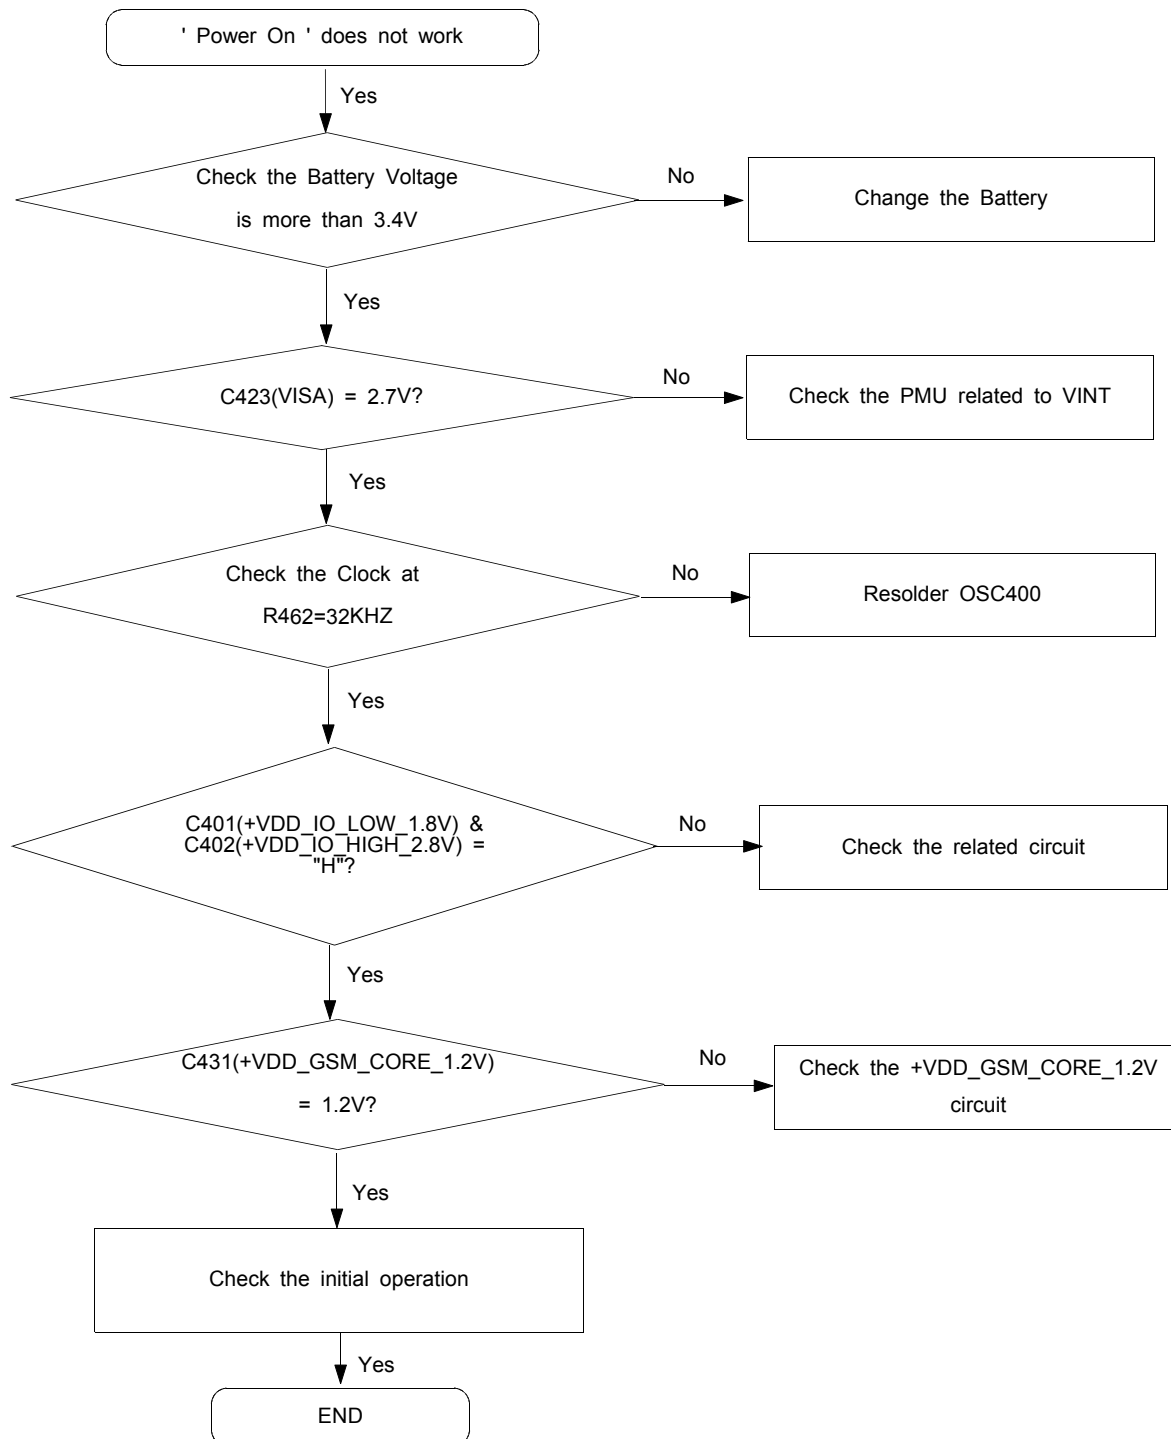



10. Flow Chart of Troubleshooting



10-1. Power On

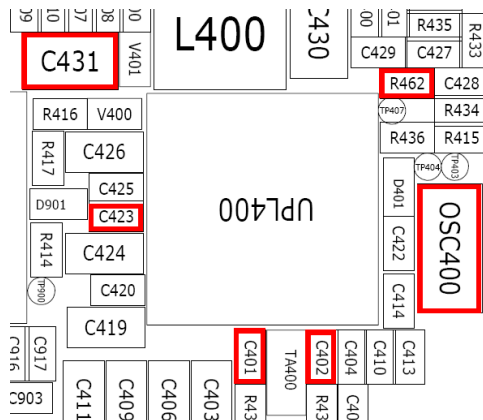

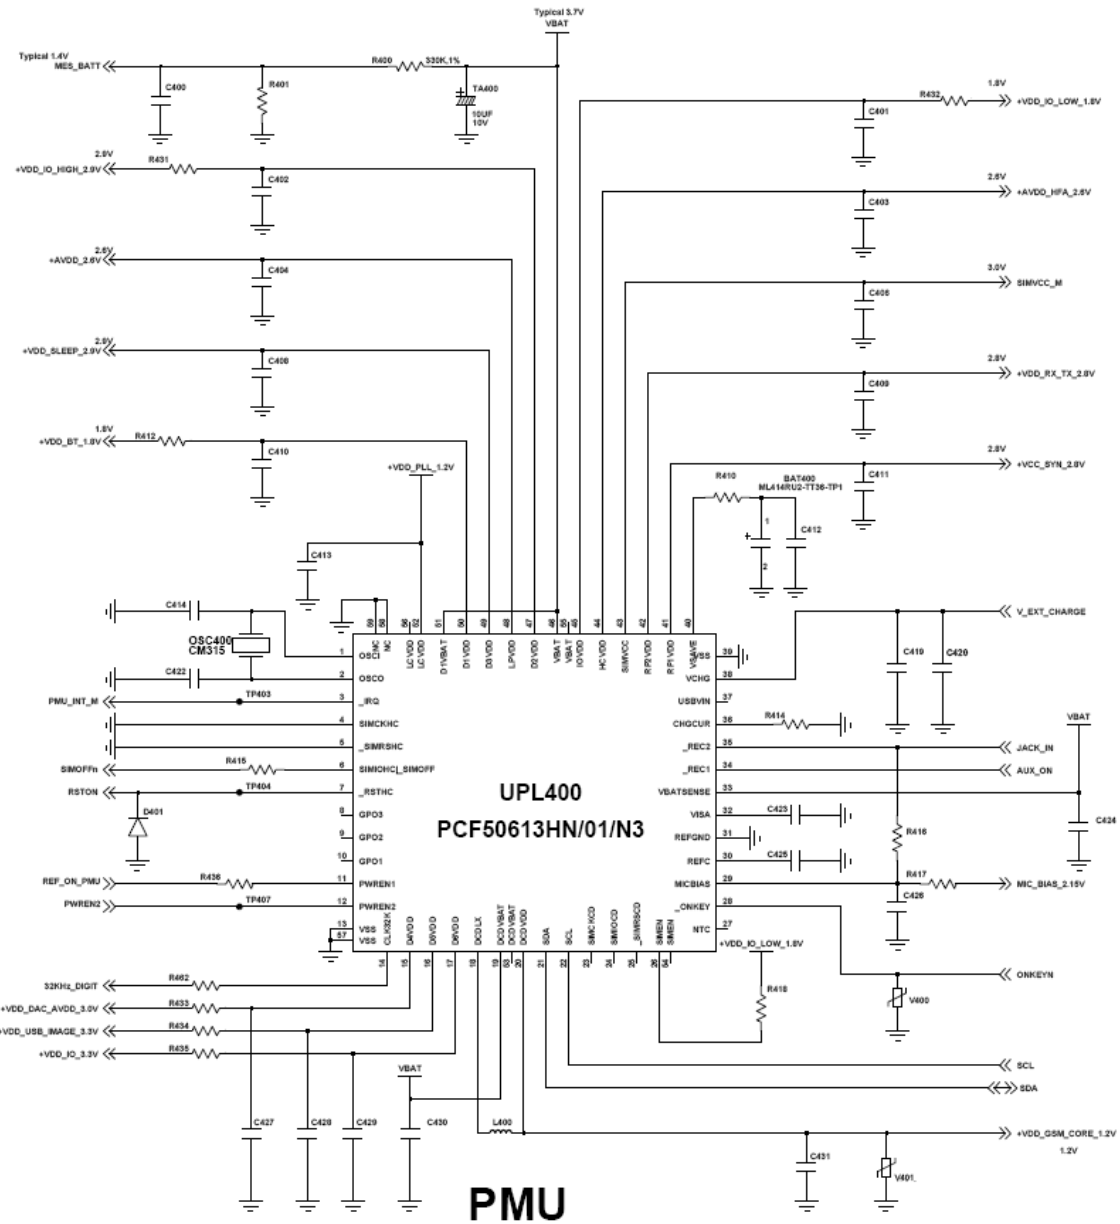




10-2. Initial

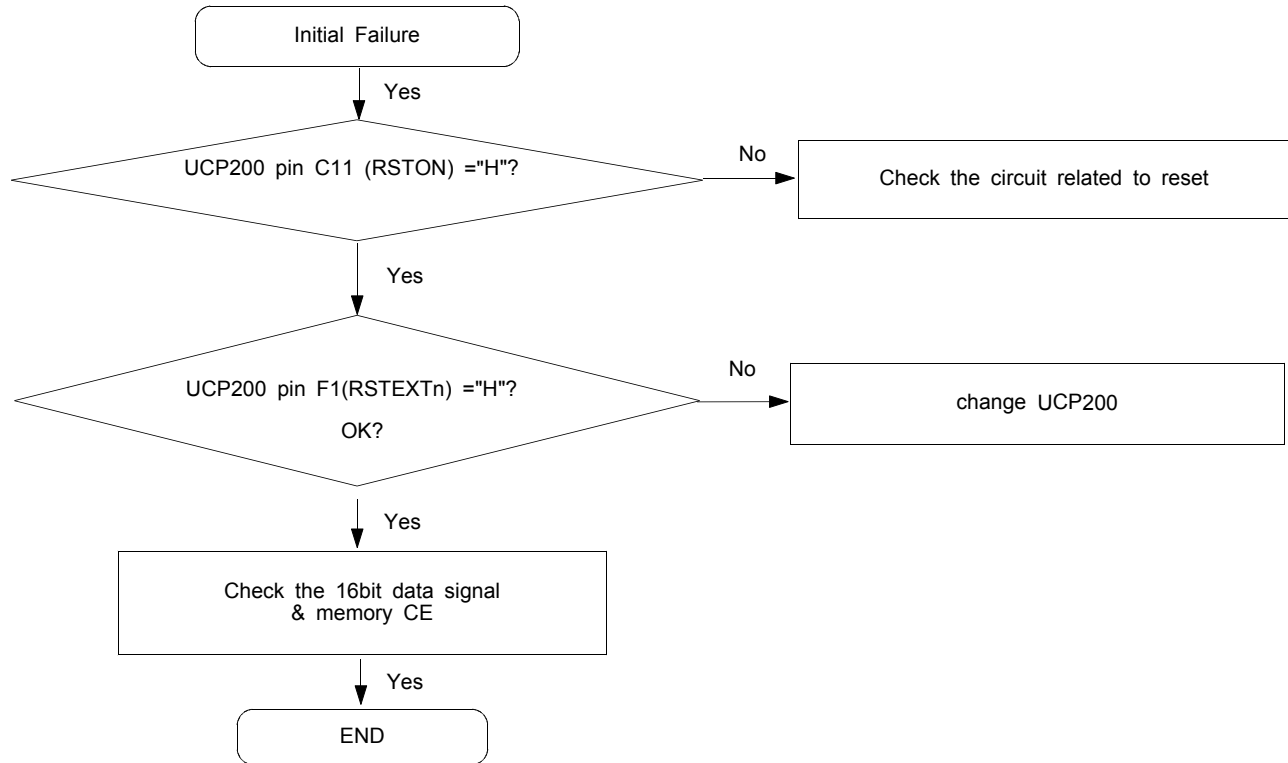

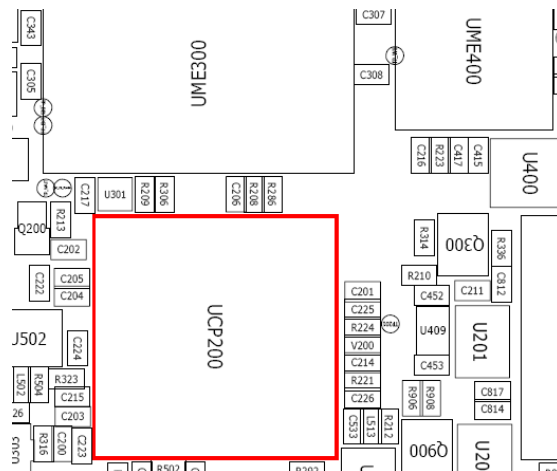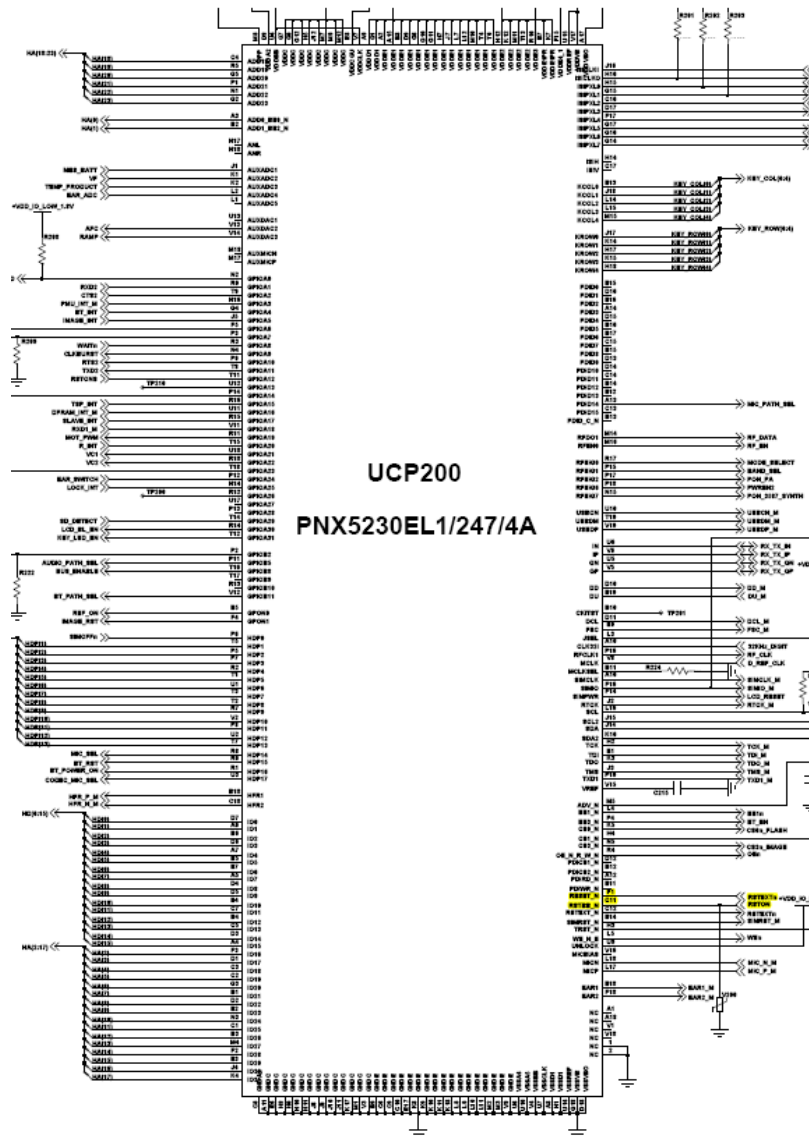


10-3. Charging Part

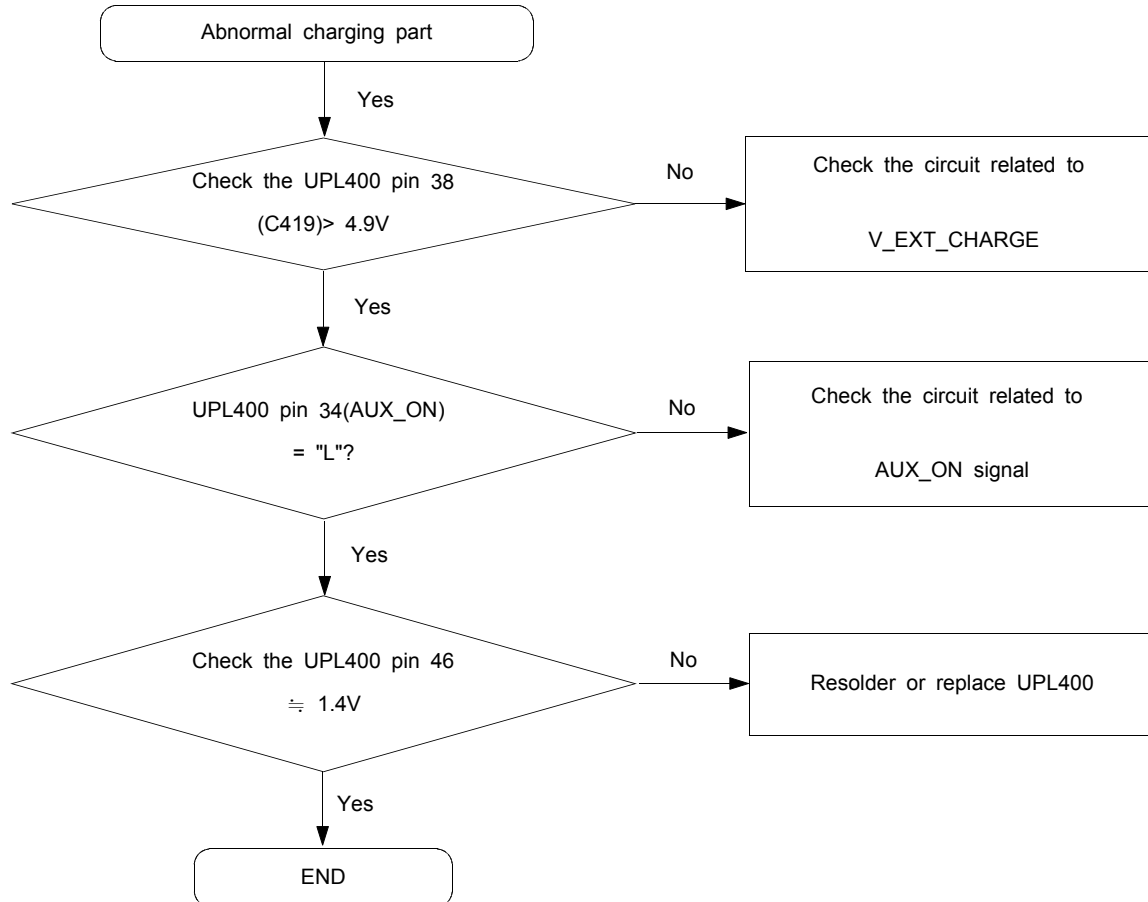


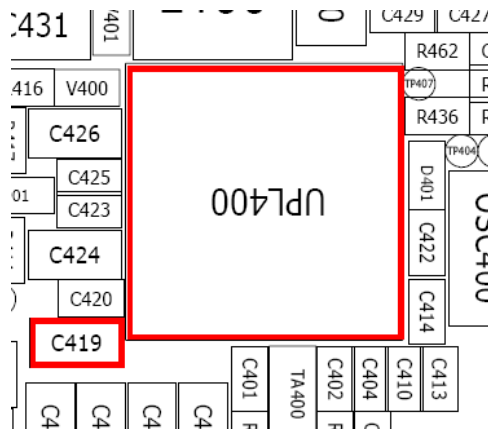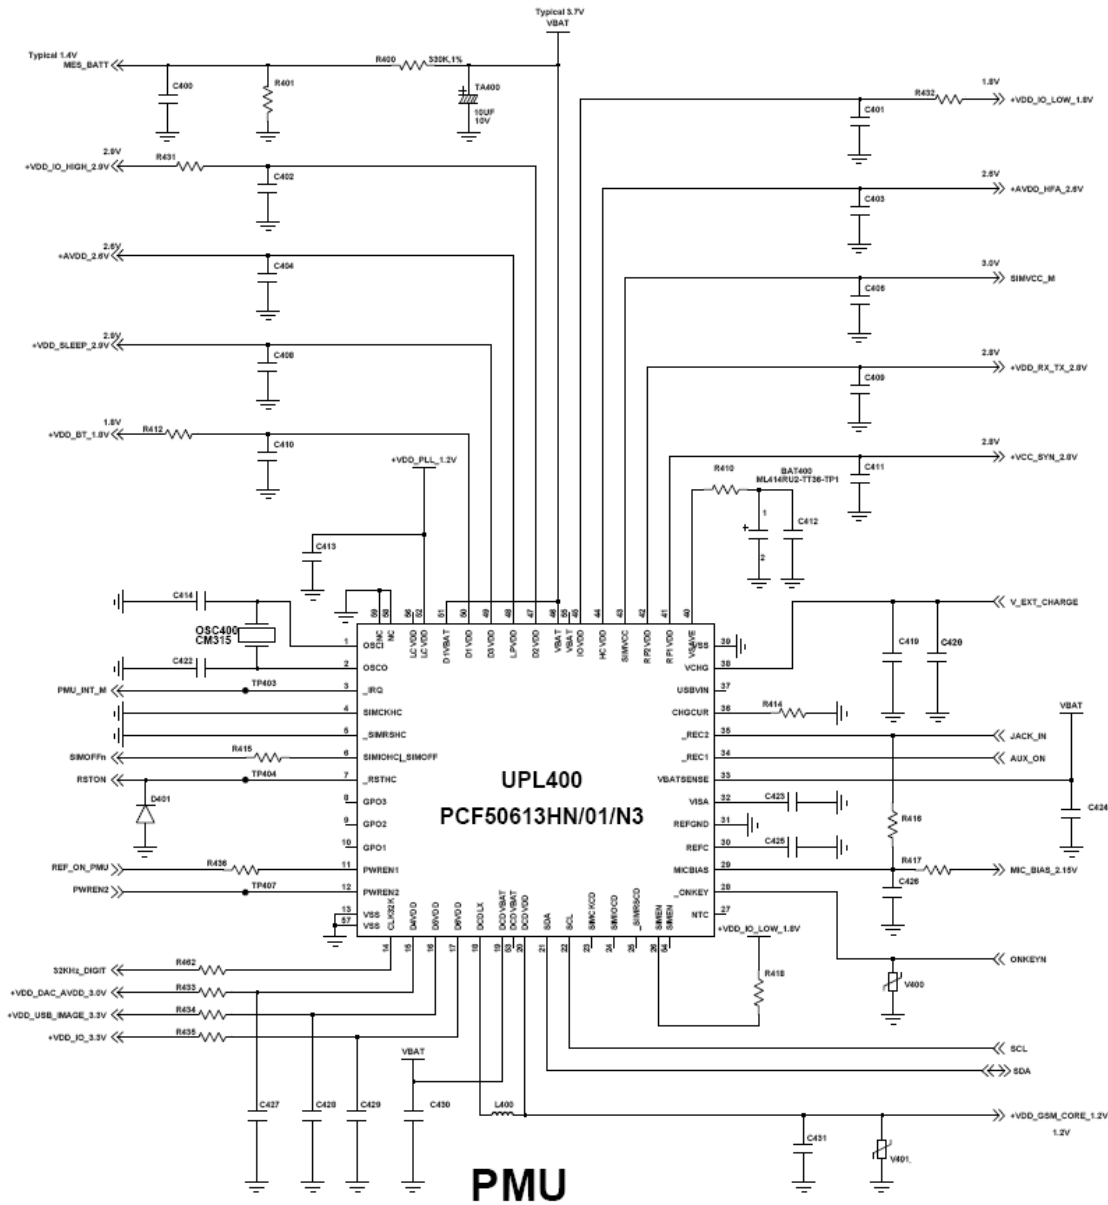


10-4. Sim Part


1)Master


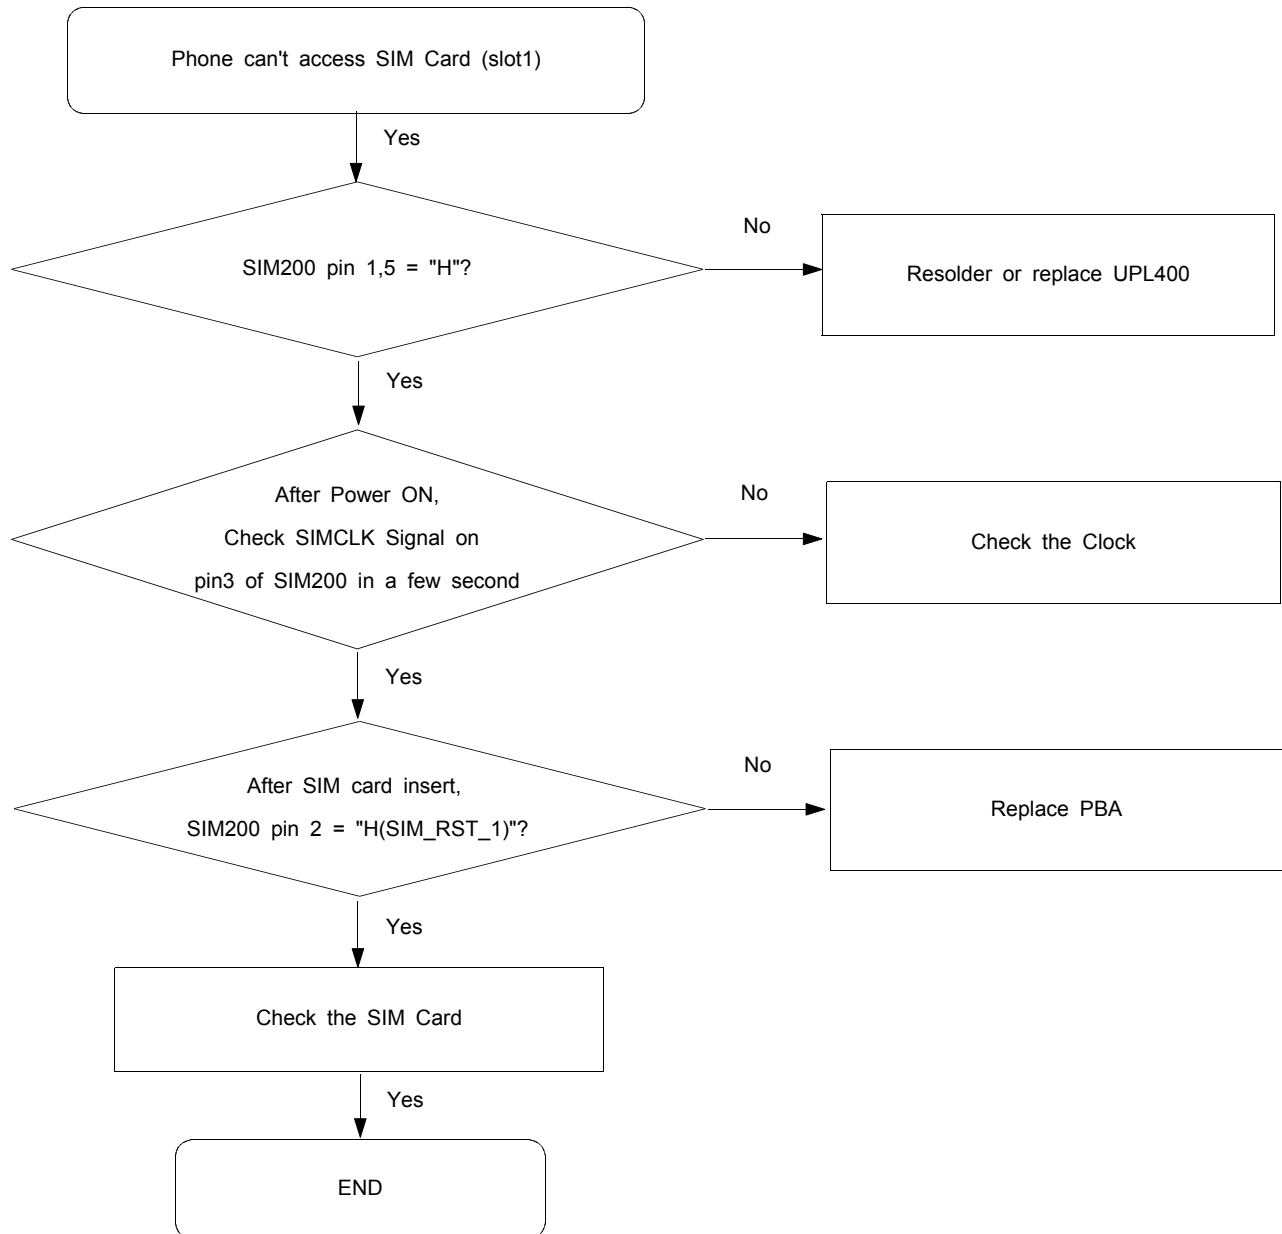


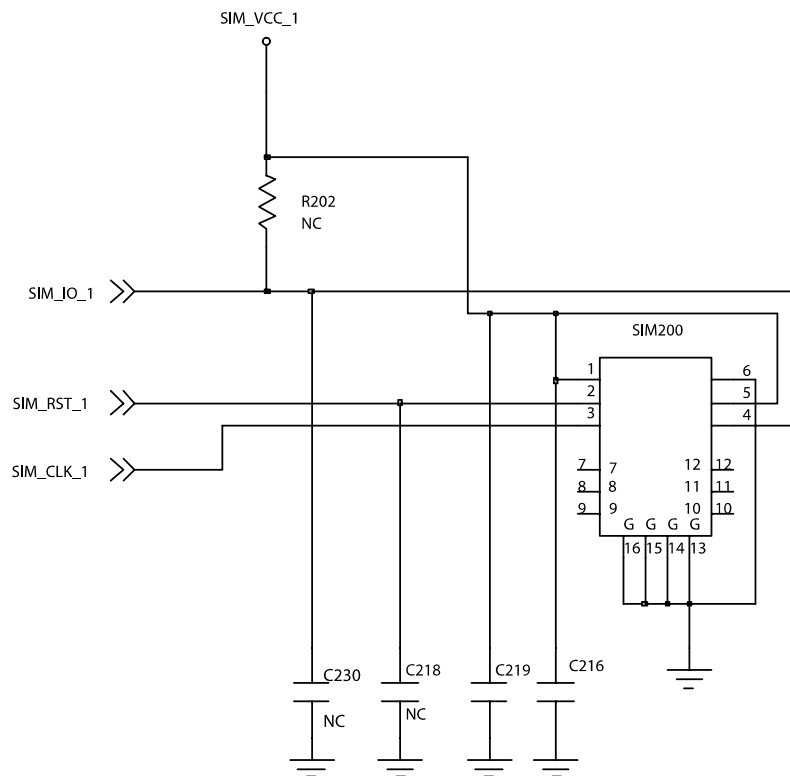


SIM1 [MASTER]

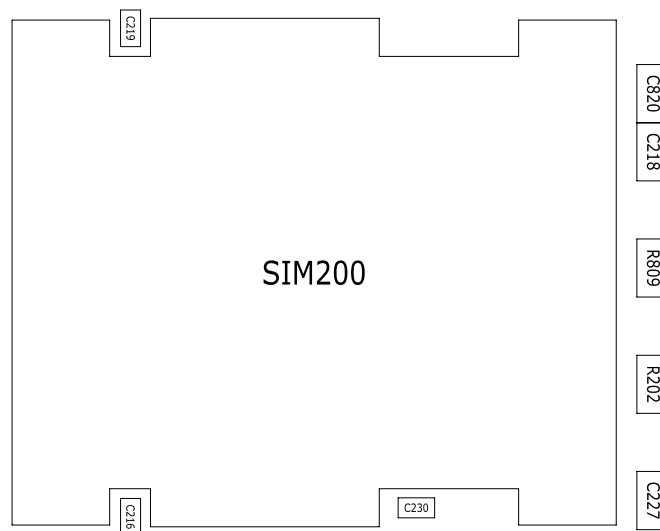


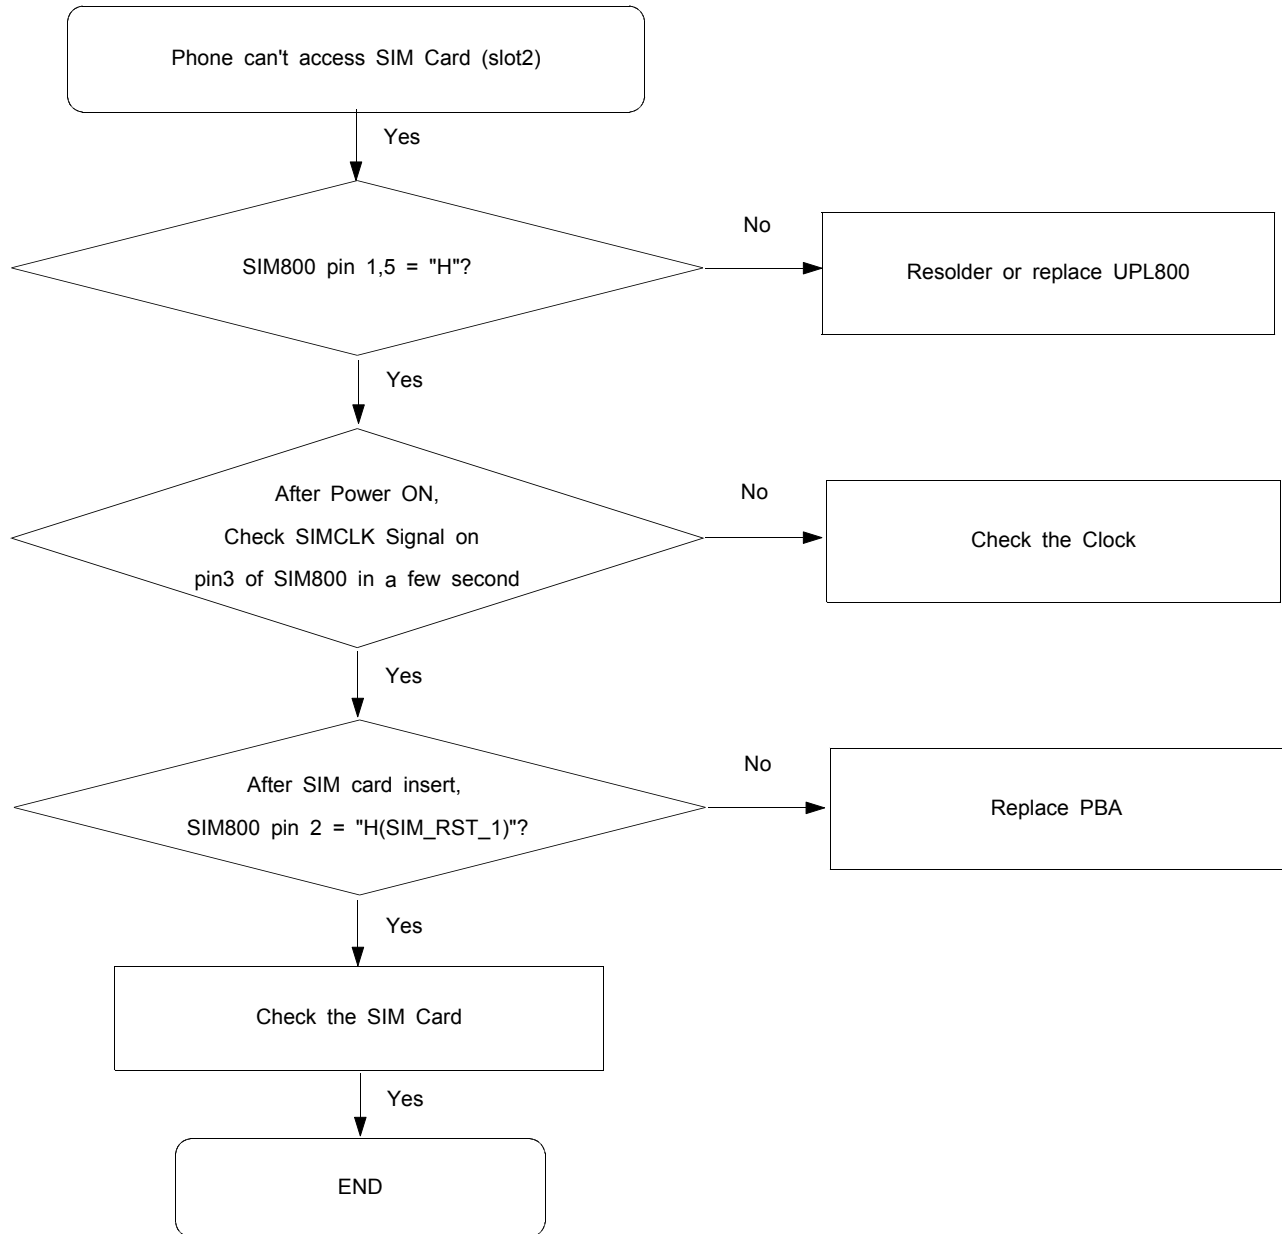2)Slave

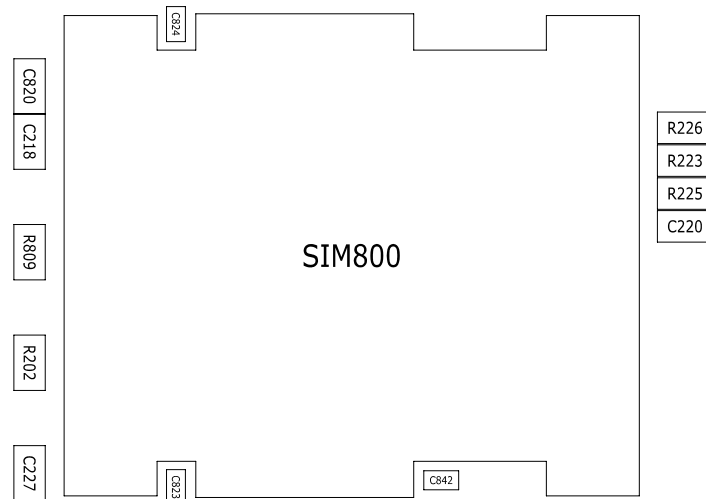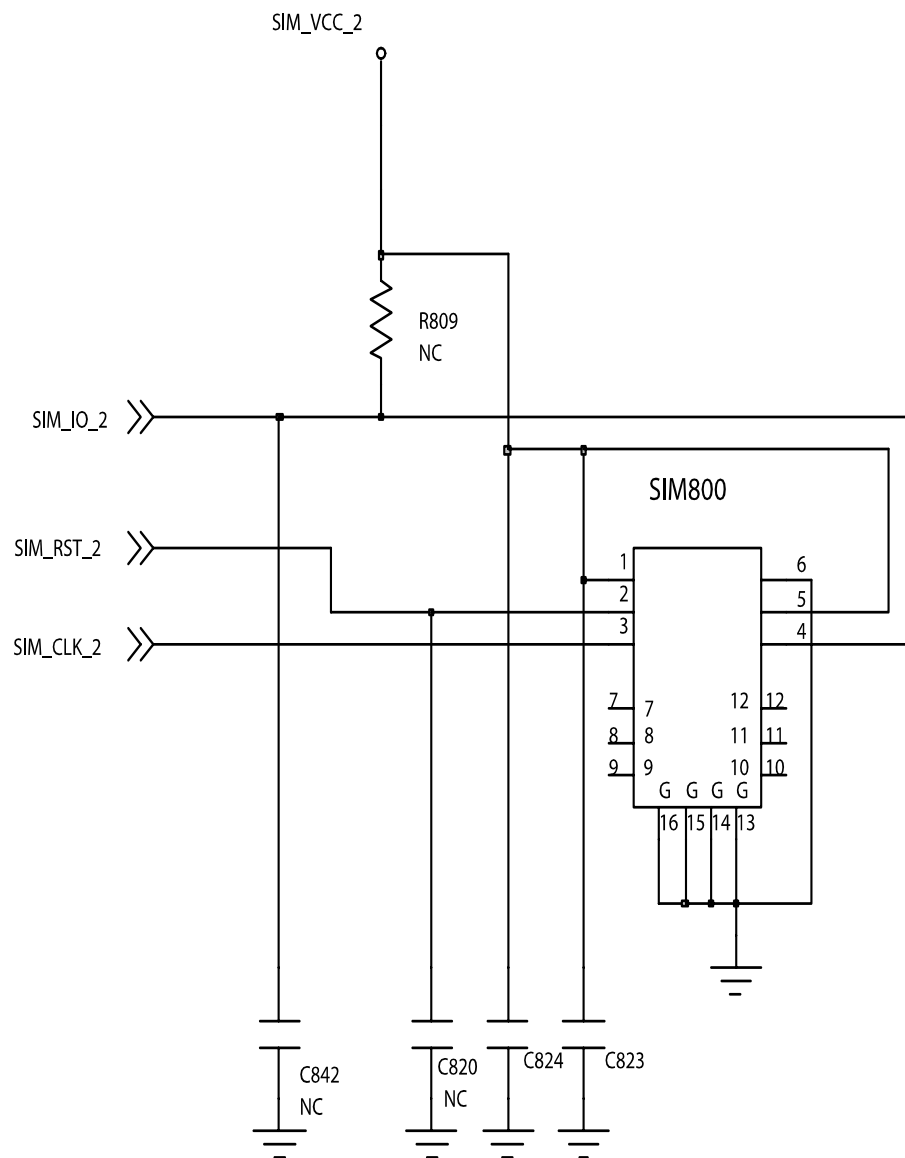




10-5. Microphone Part

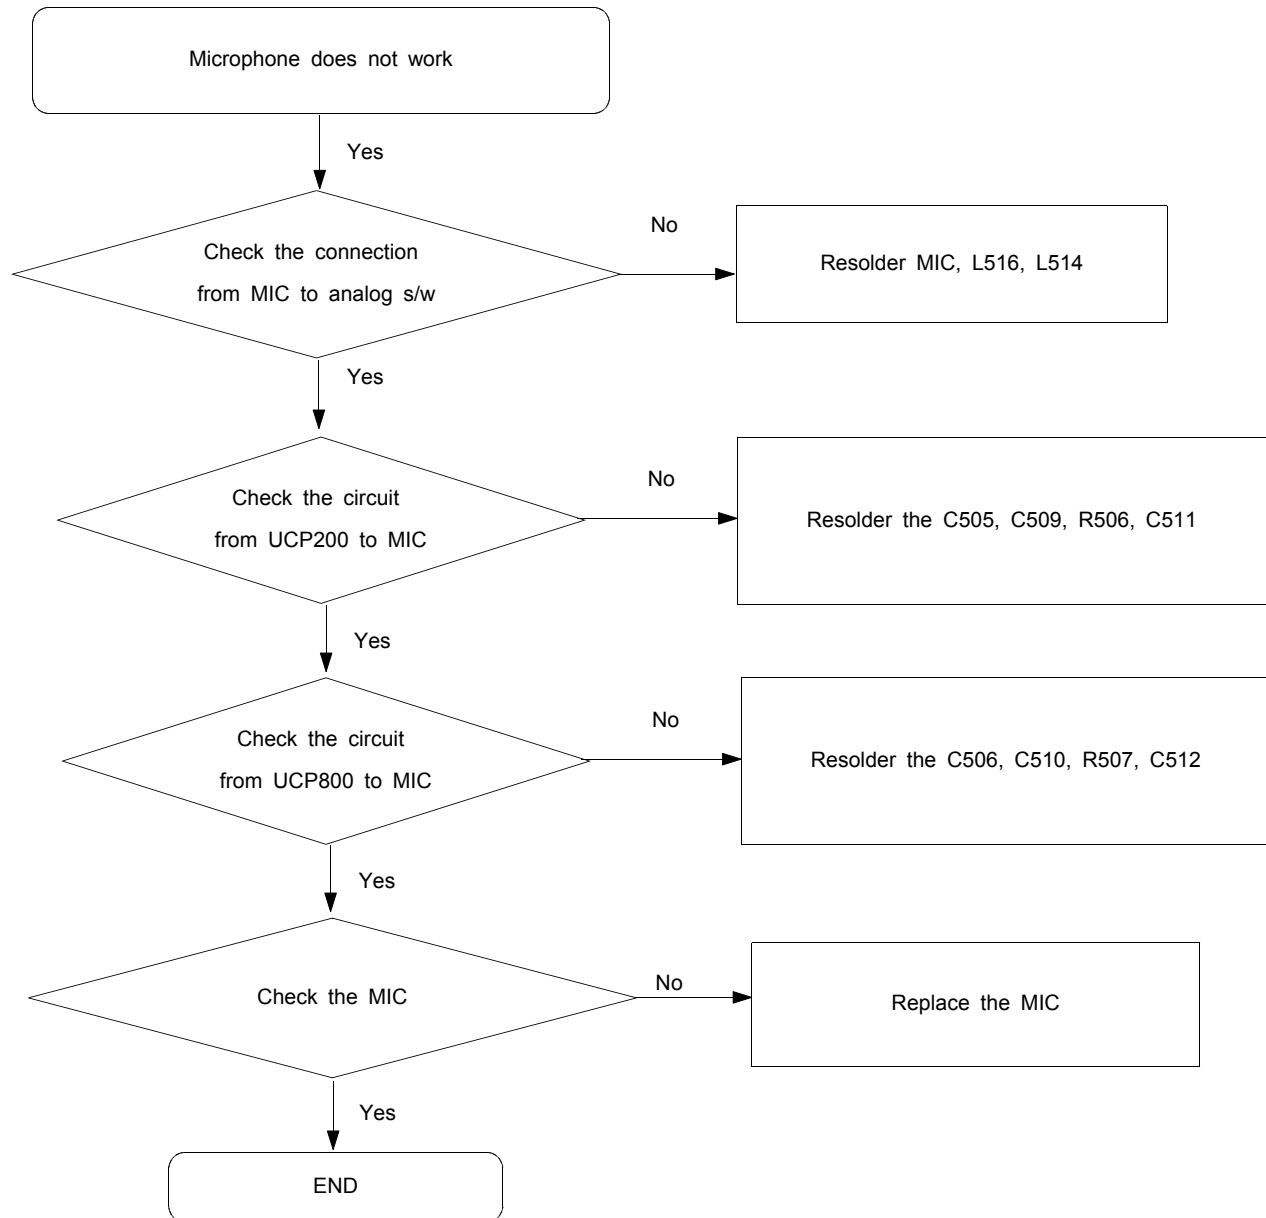

 


10-6. Speaker Part(Melody)

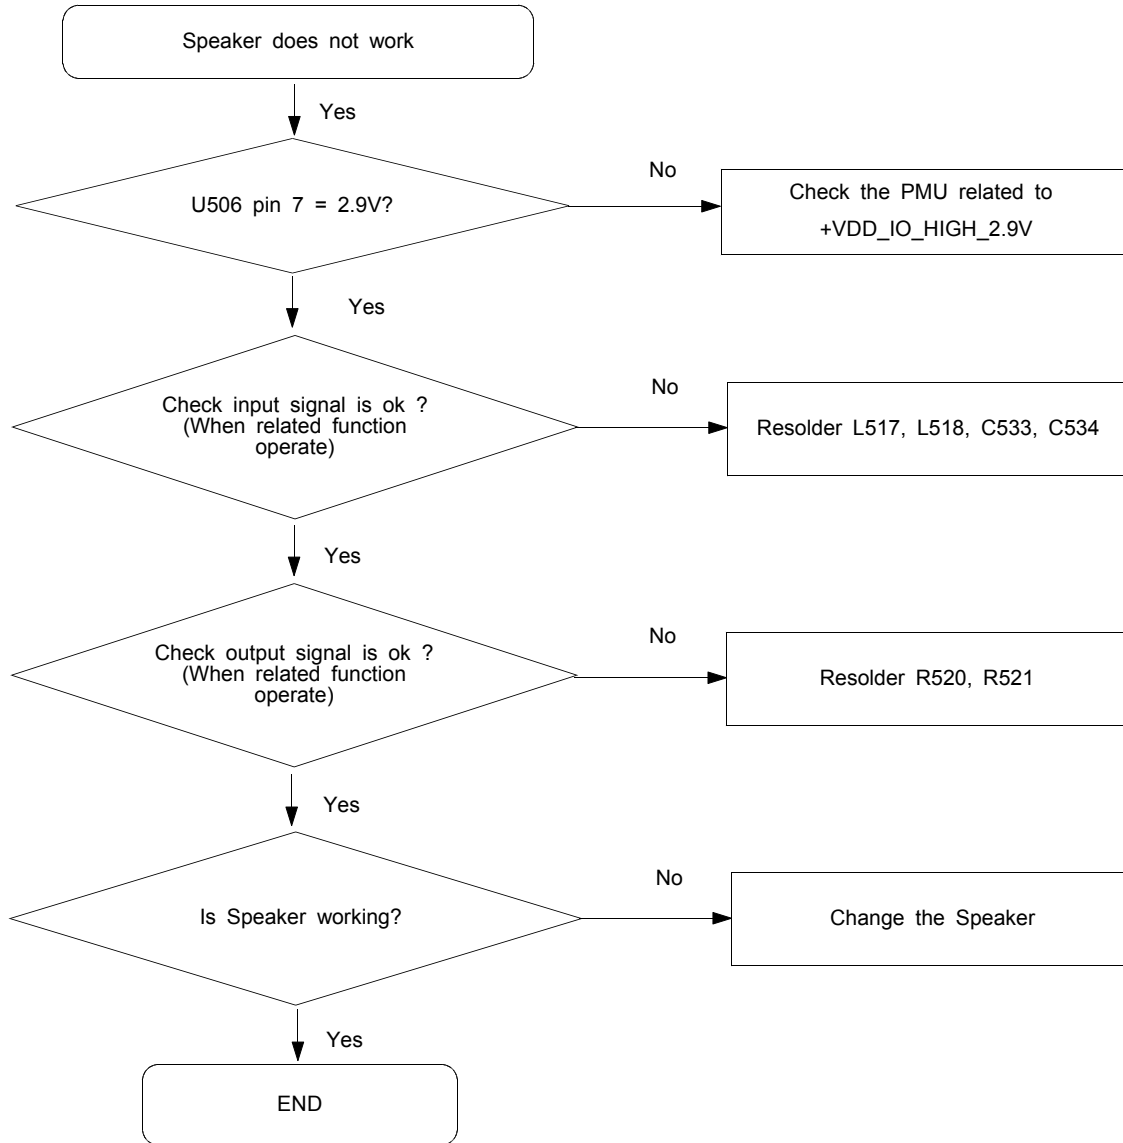


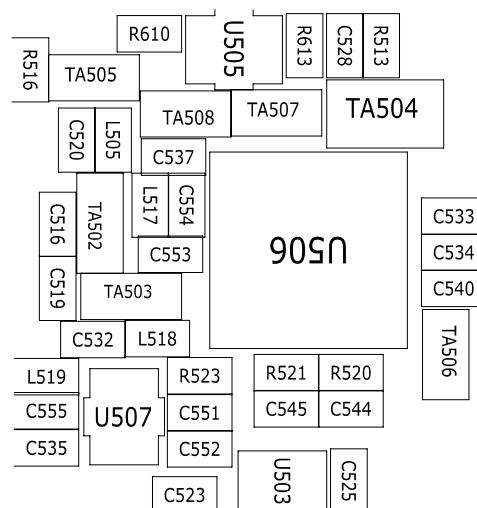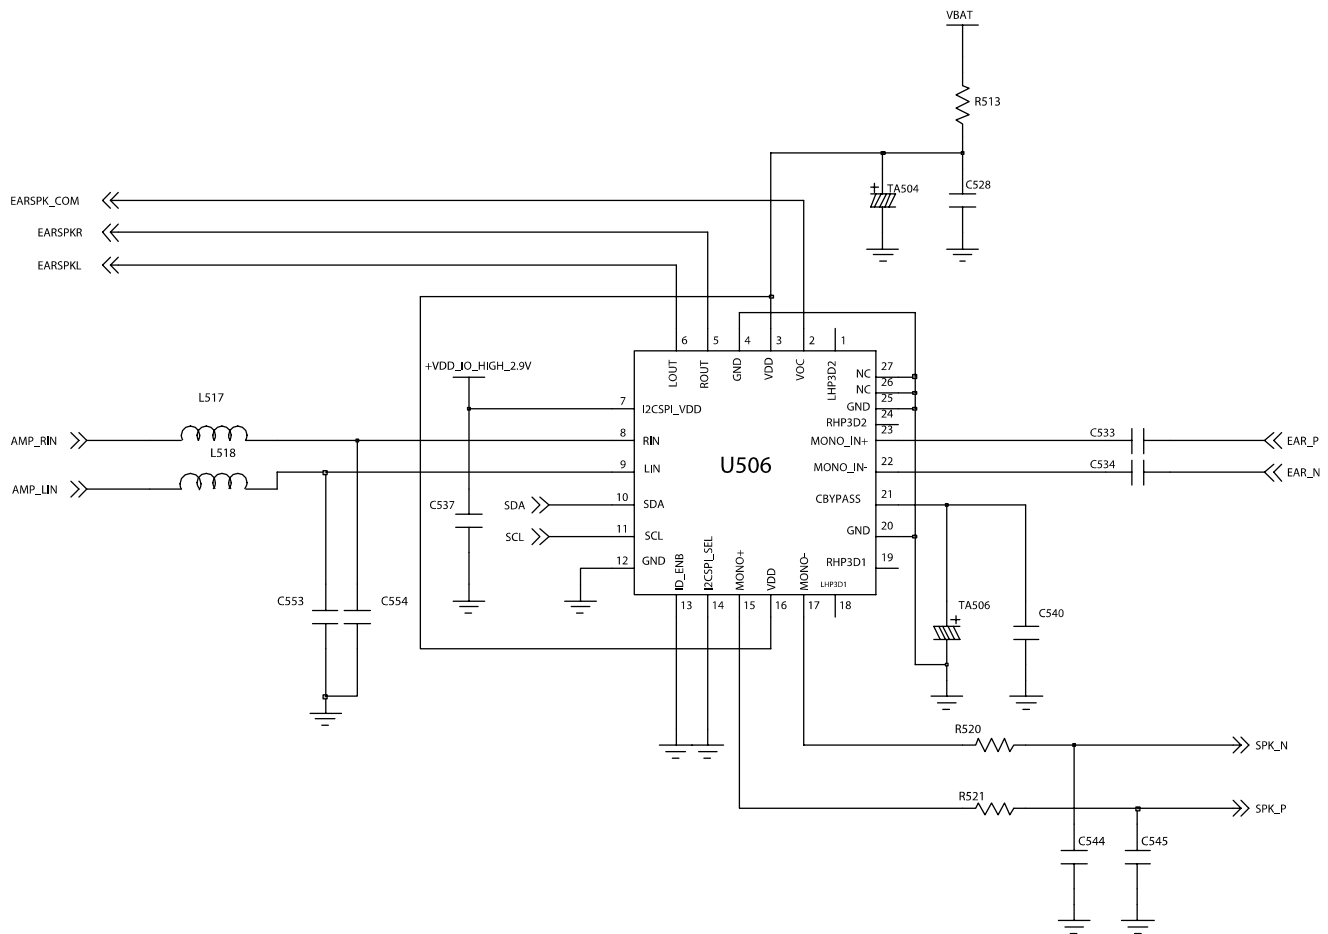


10-7. Key Data Input


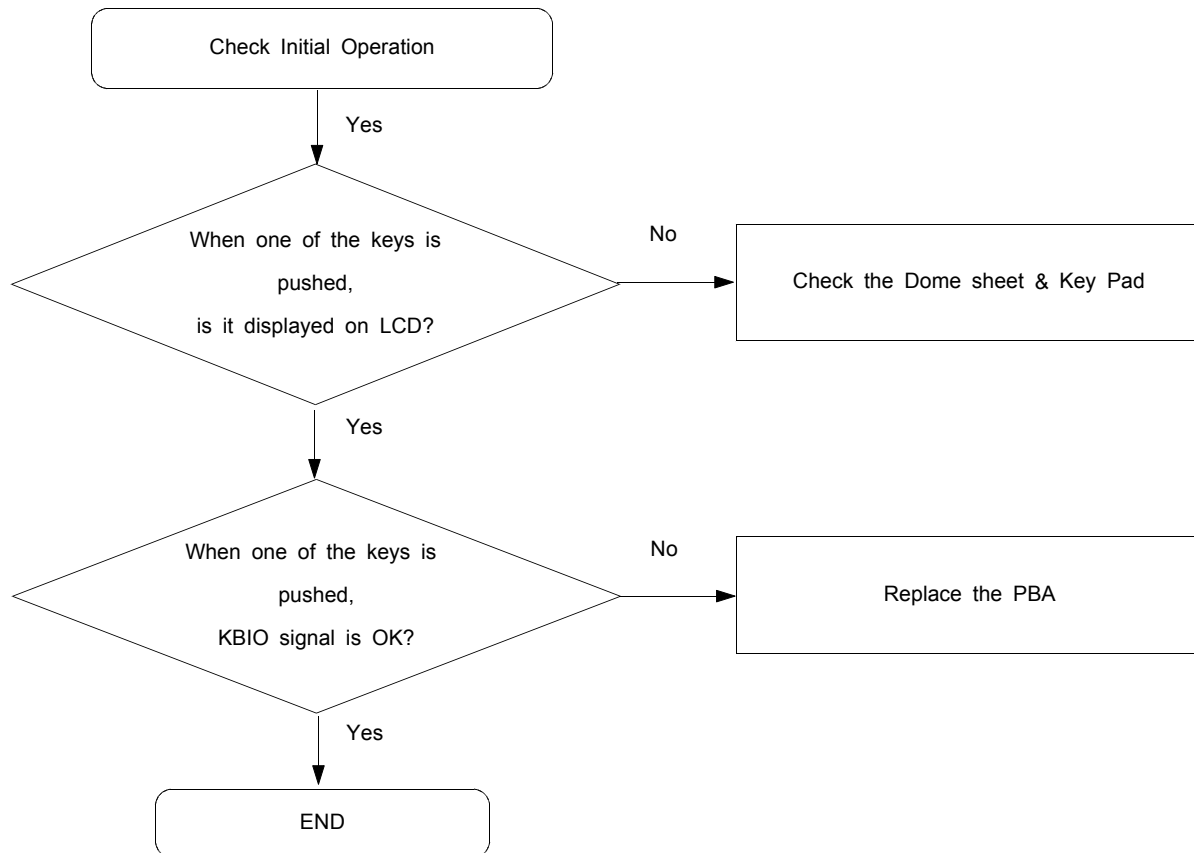


10-8. Receiver Part

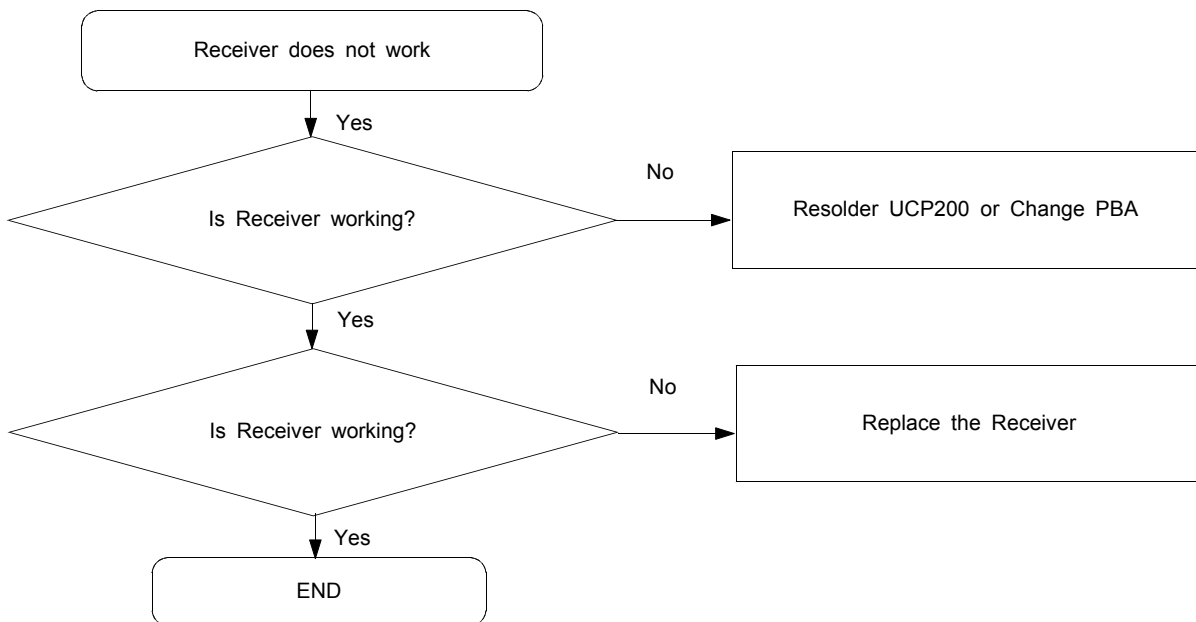


10-9. Back Light (for Color Main LCD)

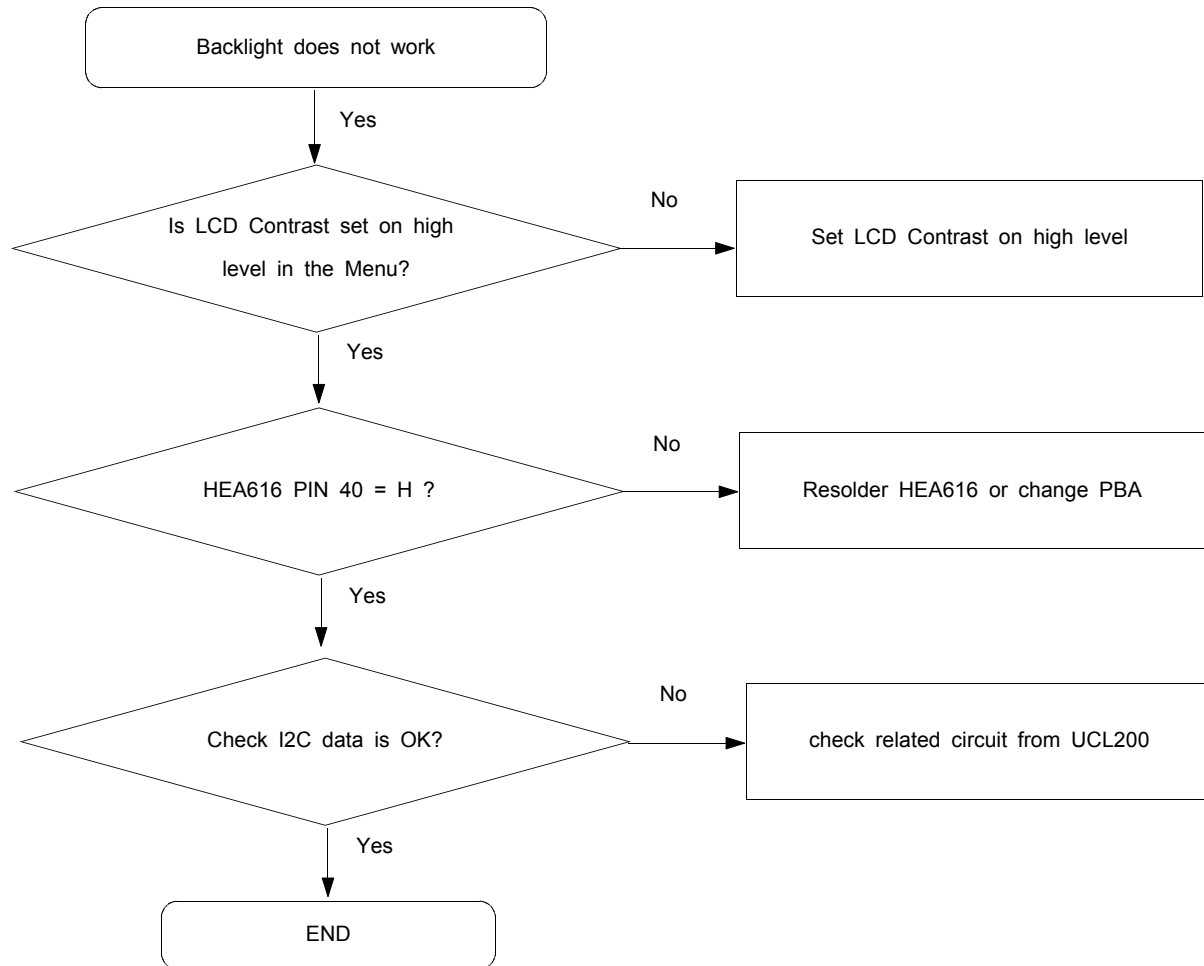


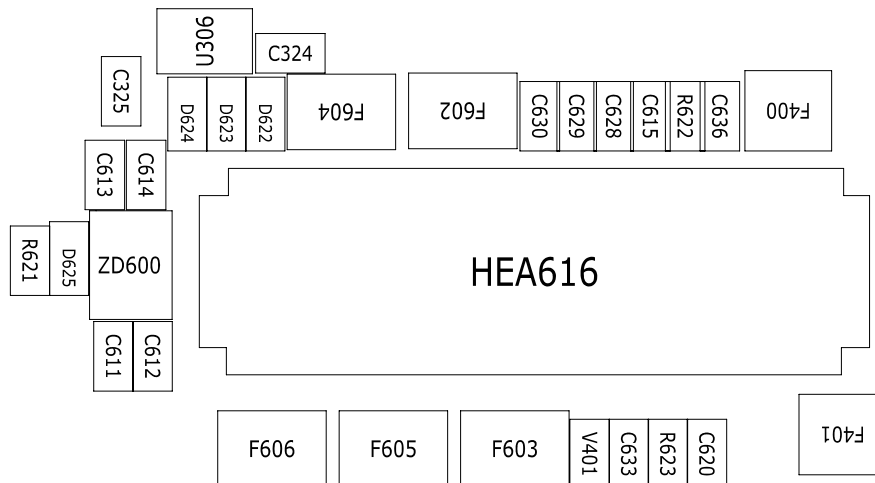
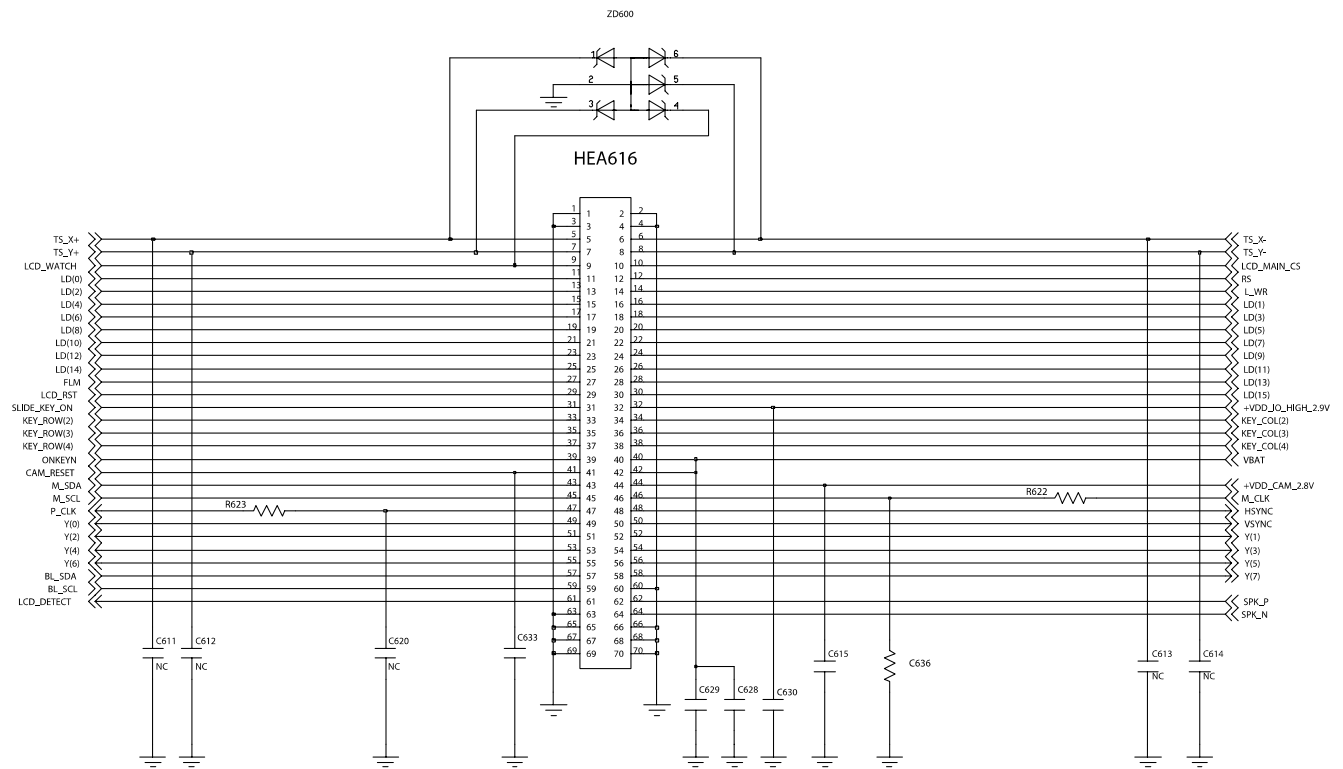



10-10. Key Back Light

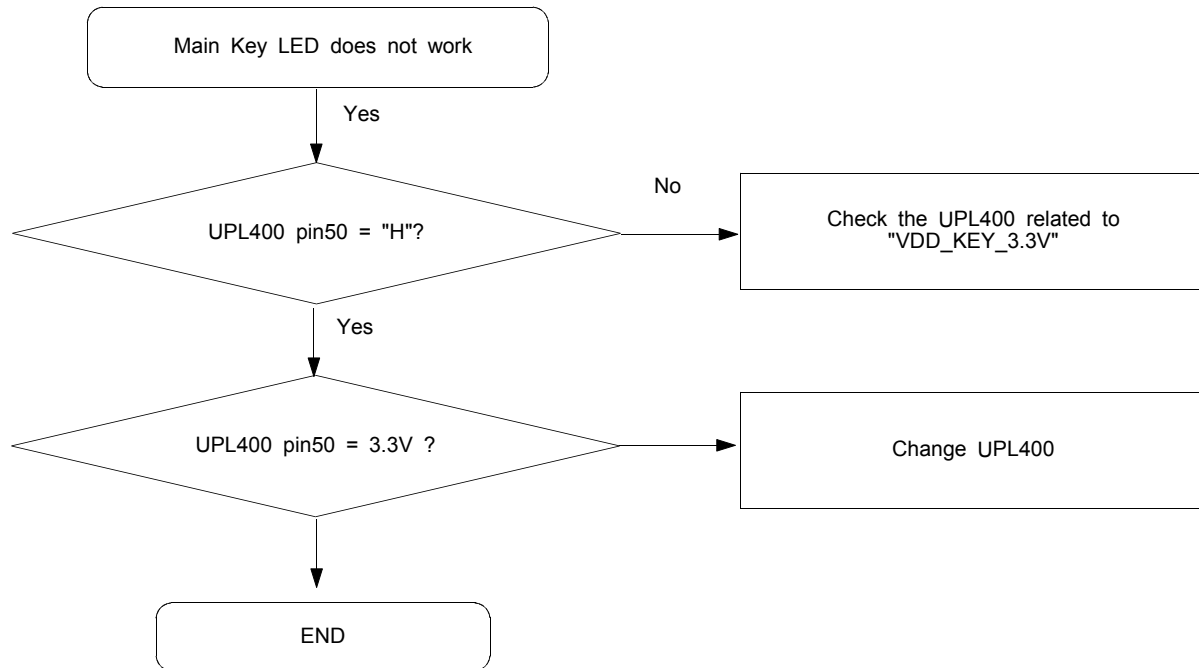


10-11. Camera part

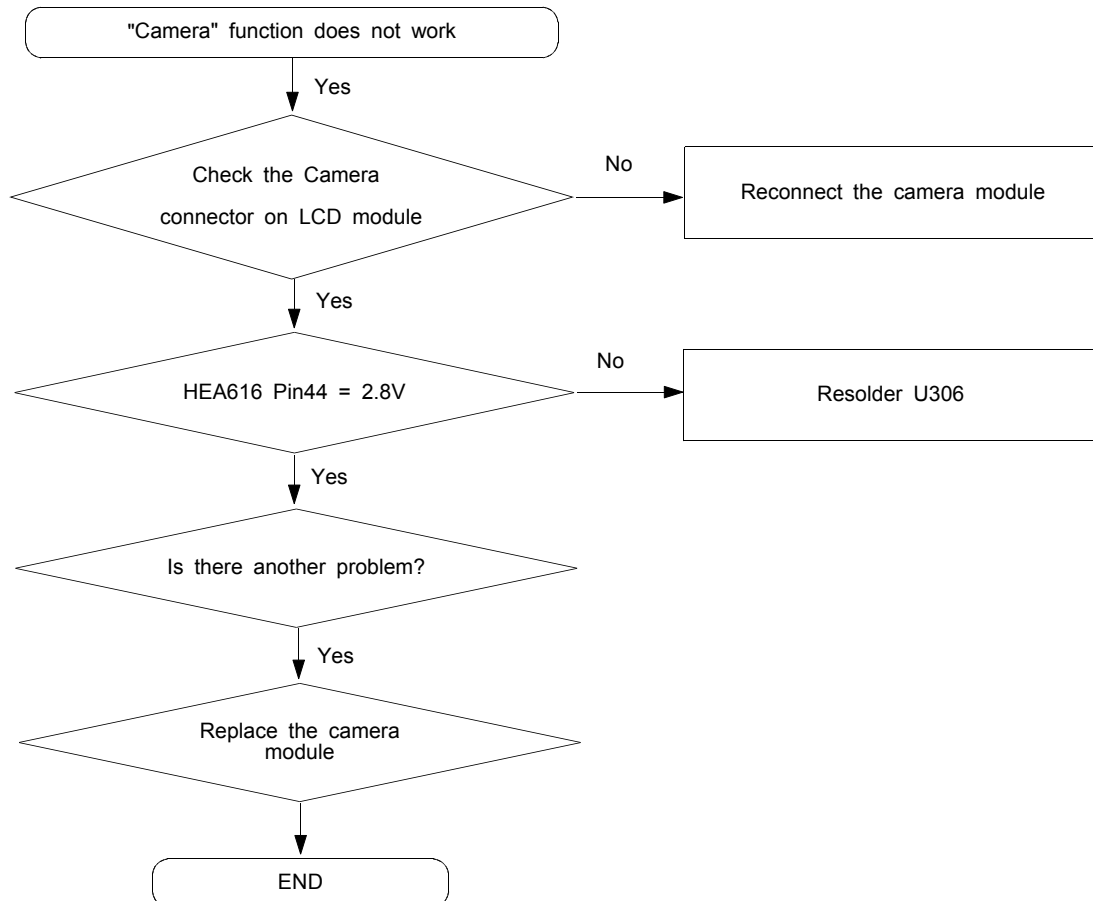

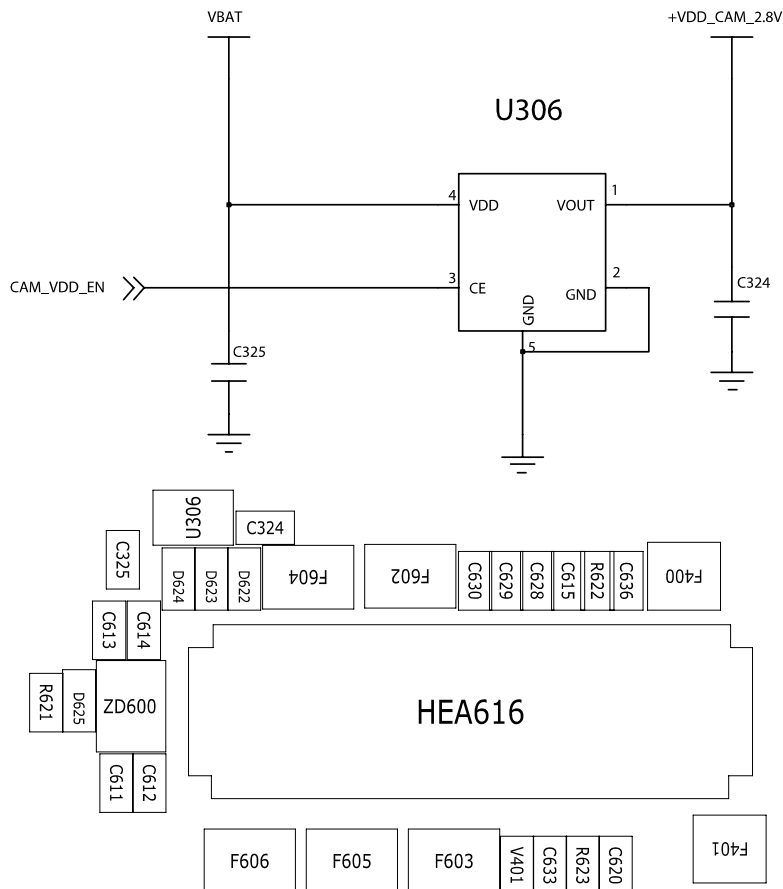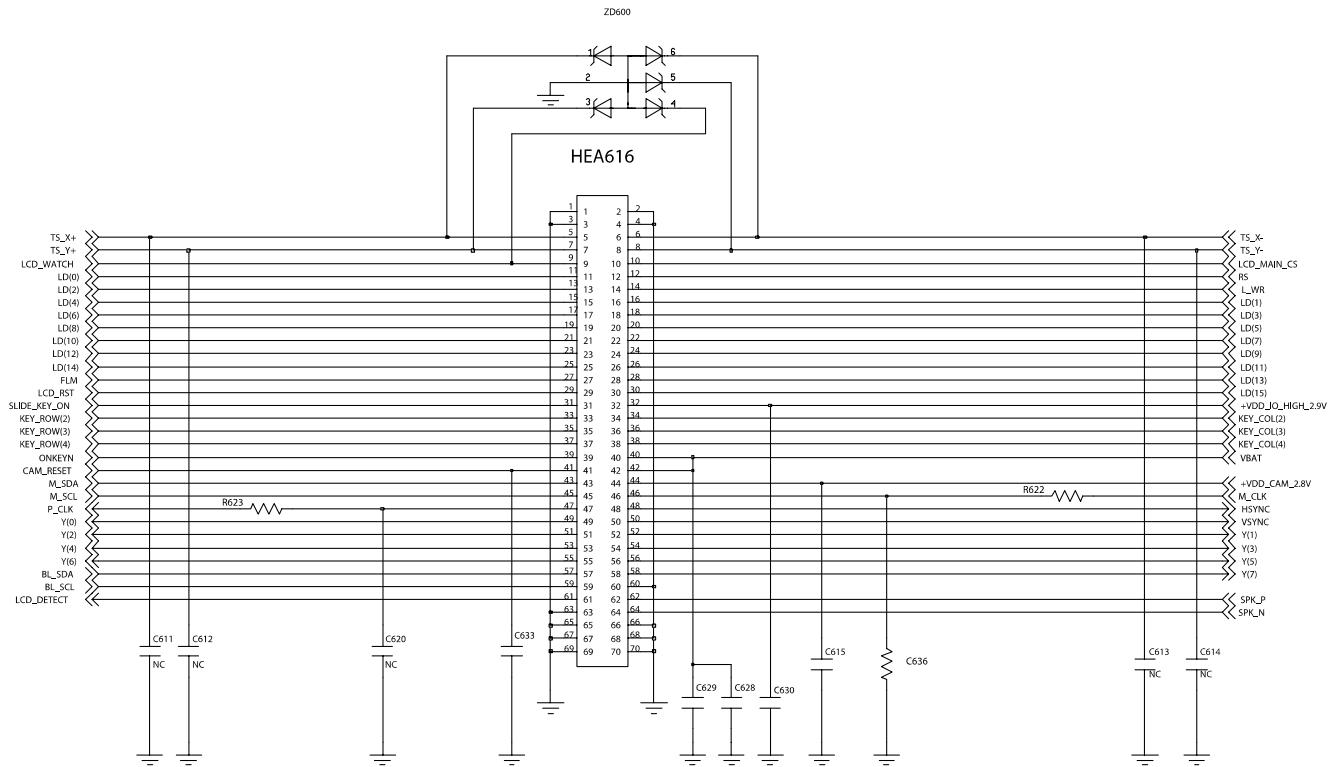

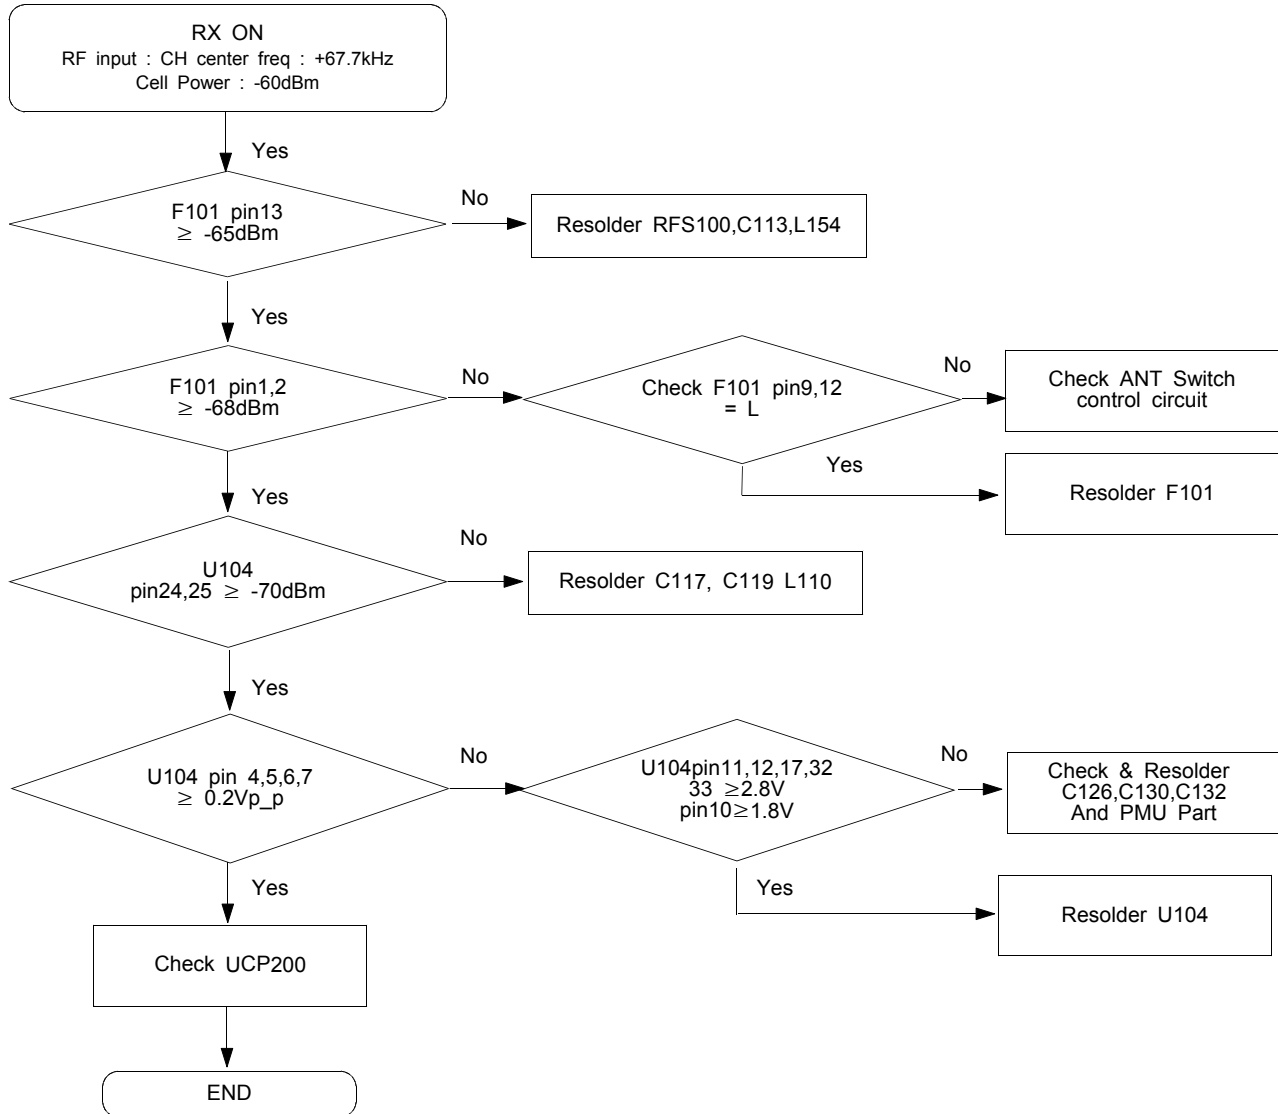
10-12. GSM Receiver**1) Master**


2)Slave

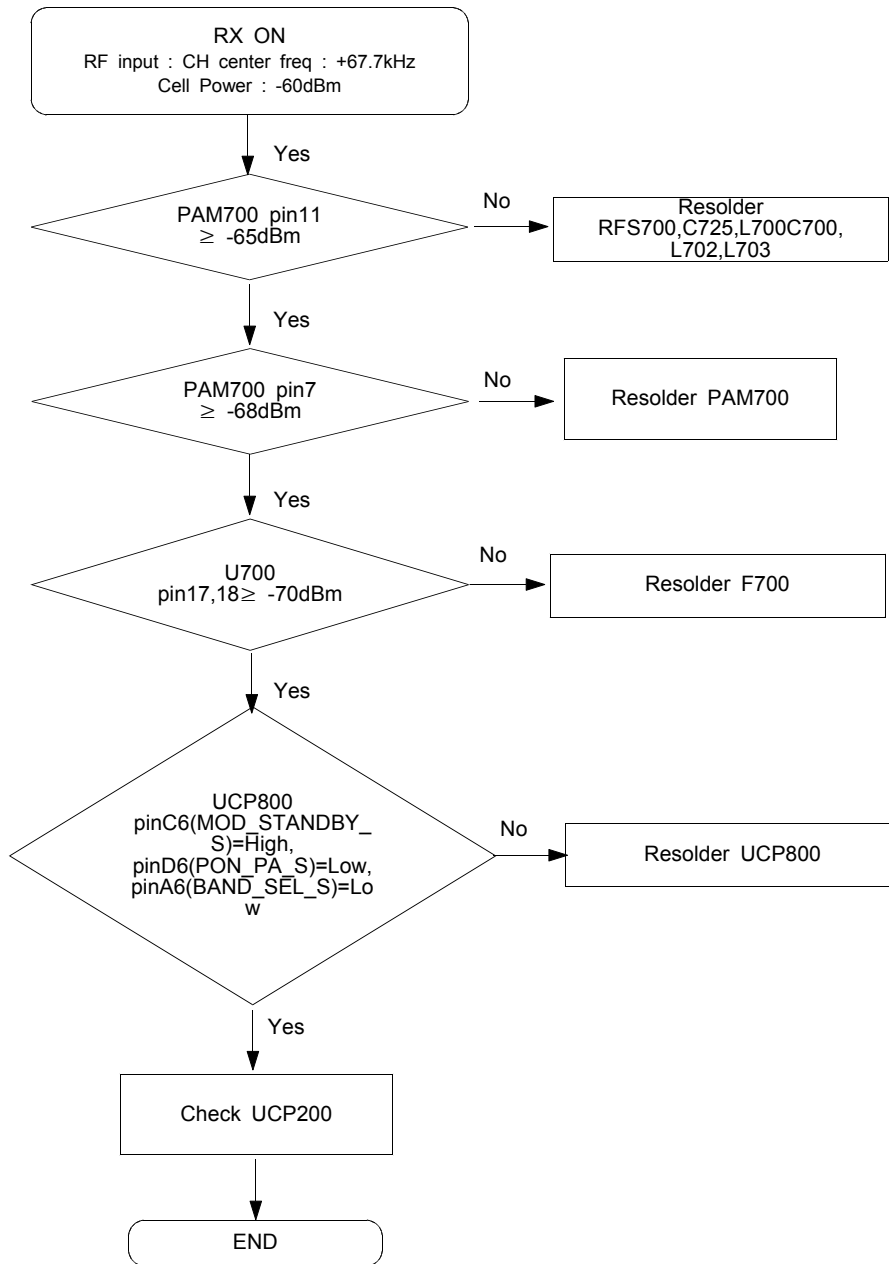



10-13. GSM Transmitter


1) Master

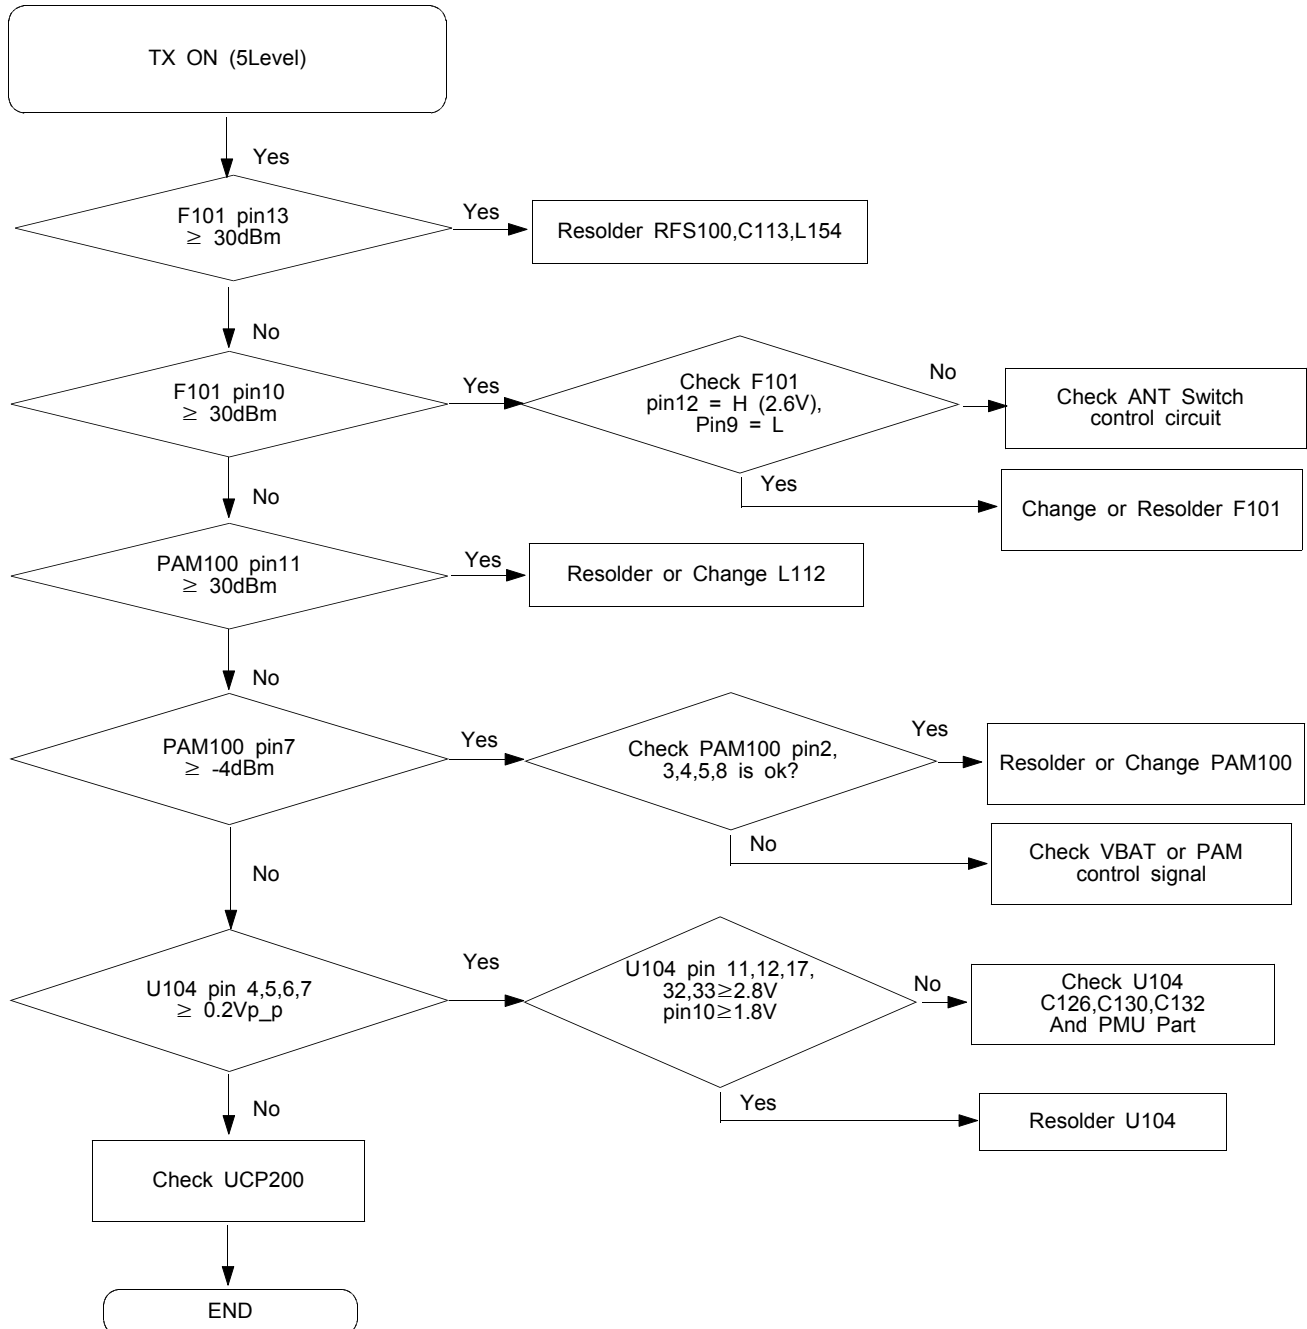


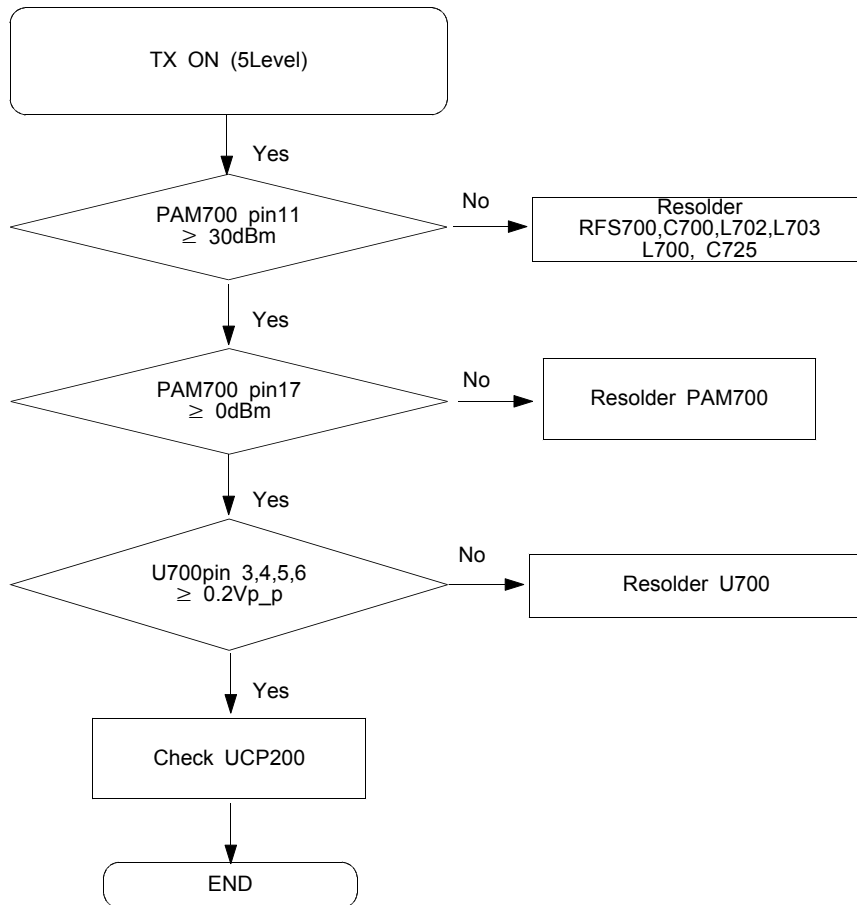
2)Slave

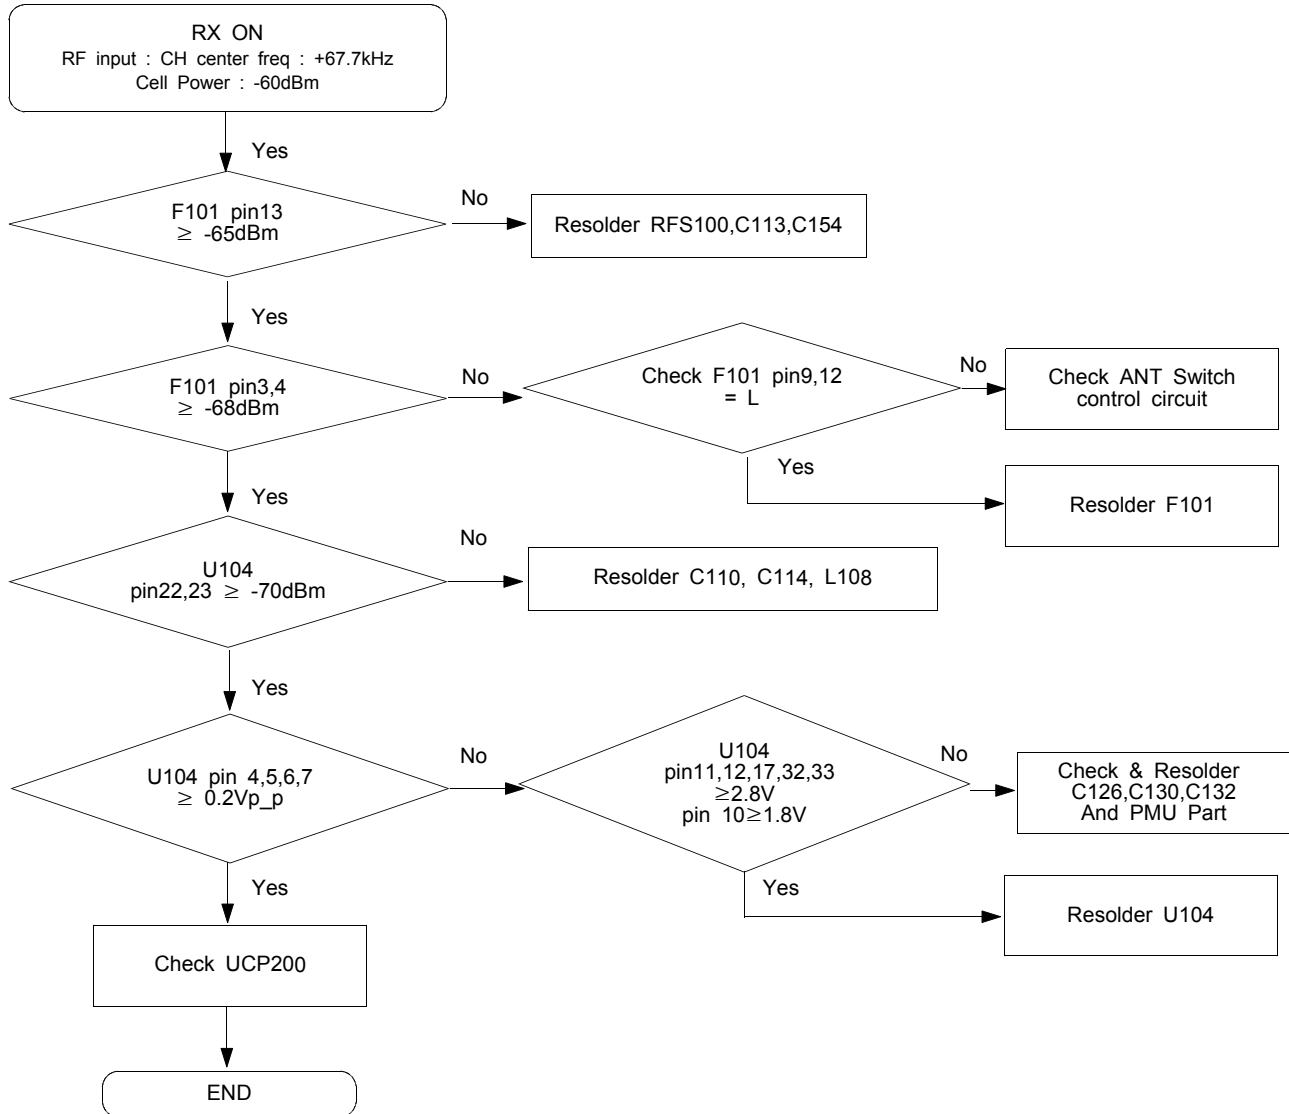10-14. DCS Receiver**1)Master**

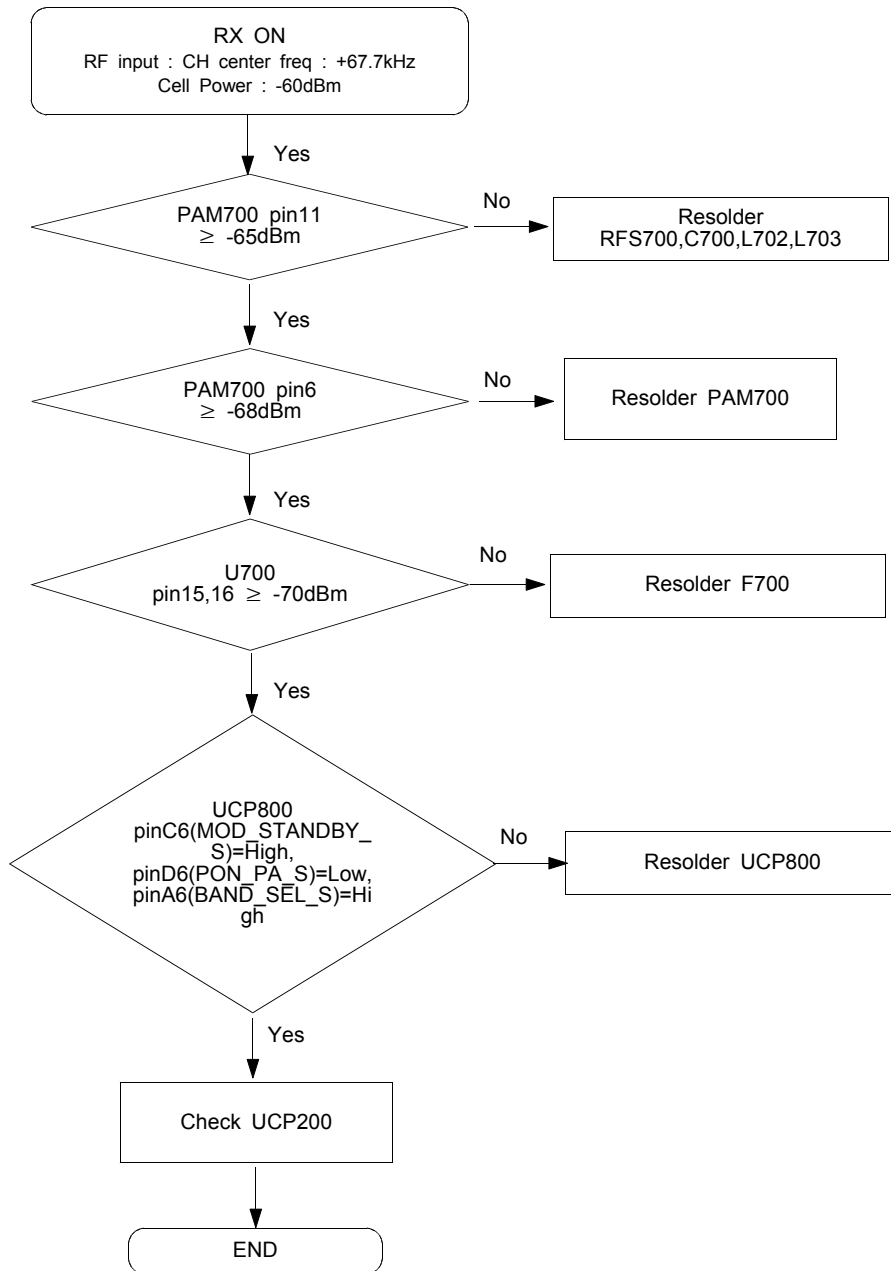
2)Slave

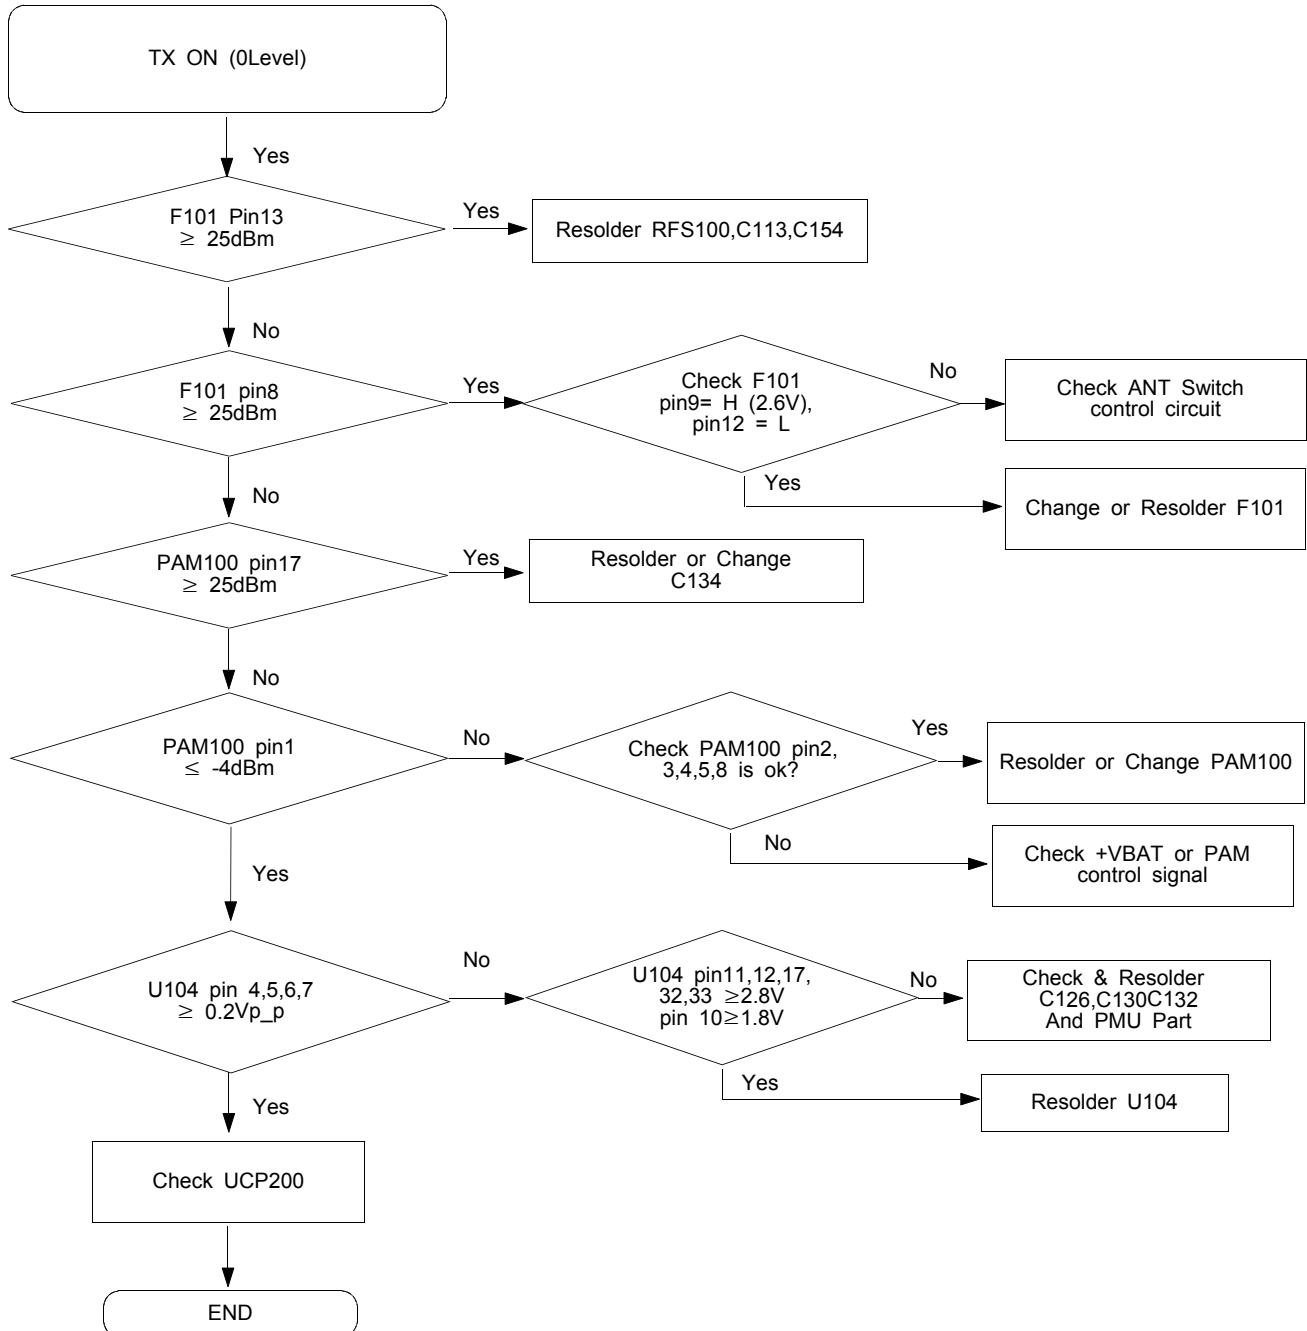
10-15. DCS Transmitter**1) Master**


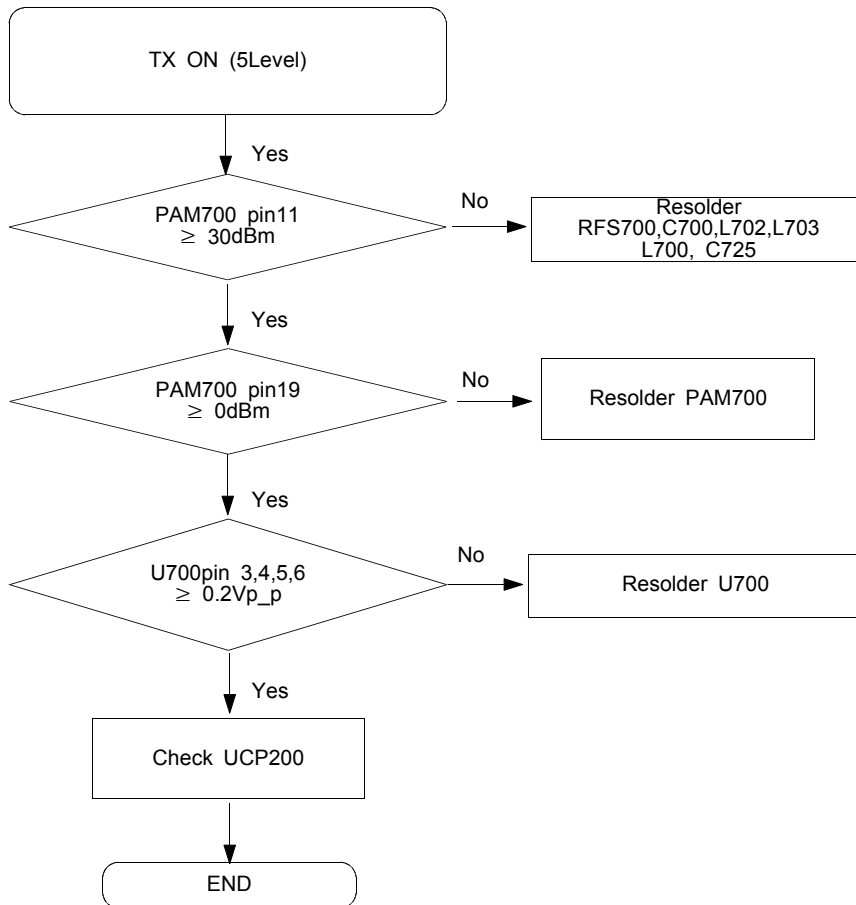
2)Slave

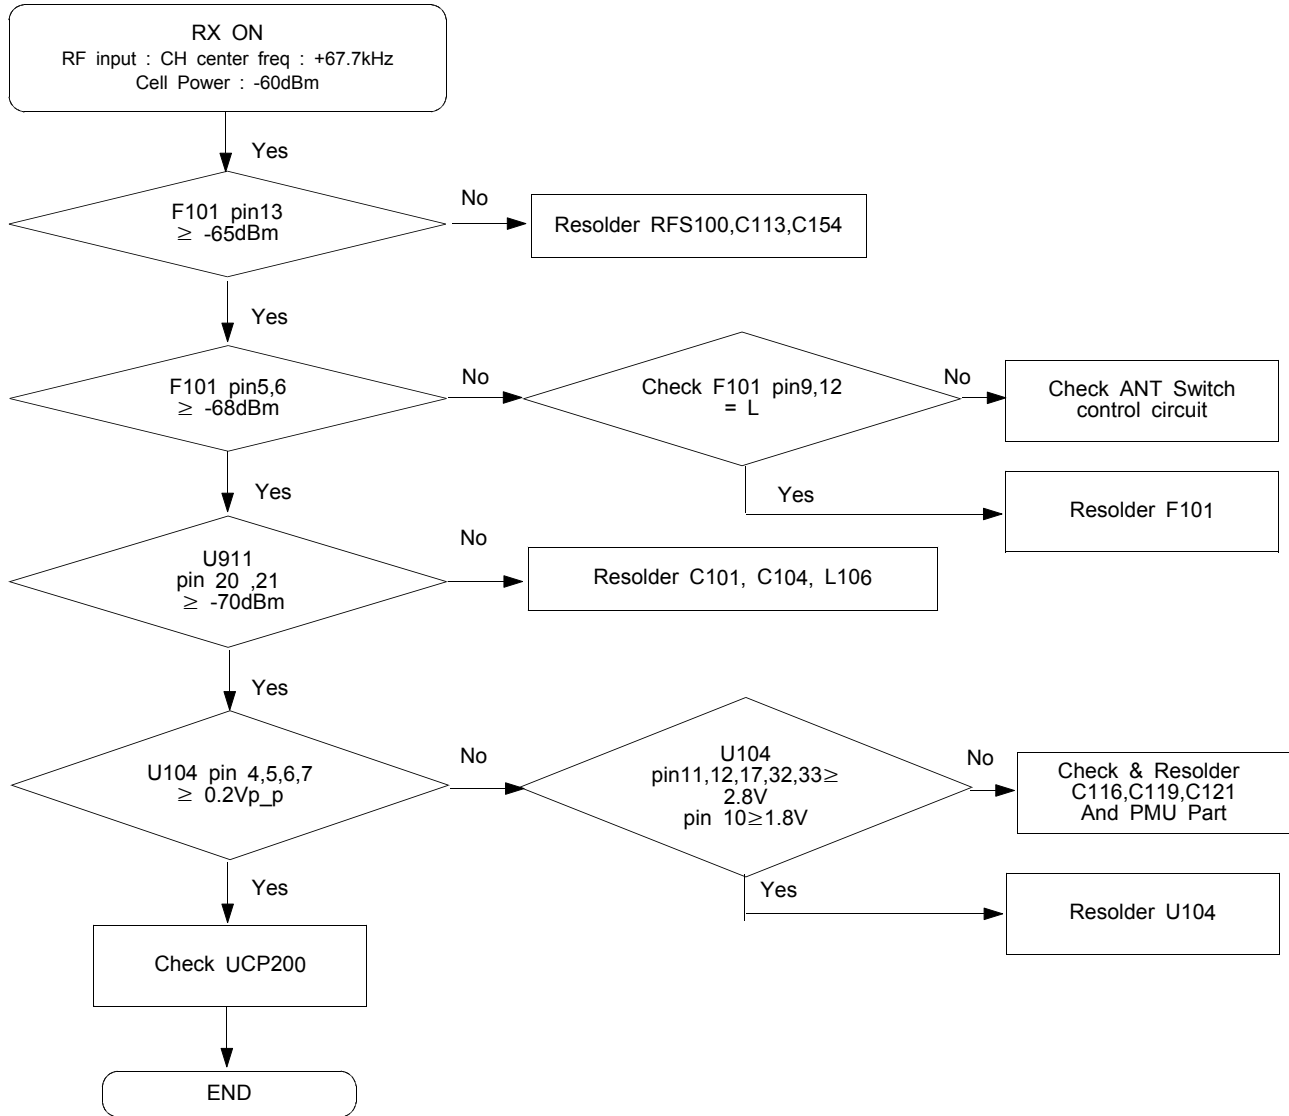10-16. PCS Receiver


10-17. PCS Transmitter

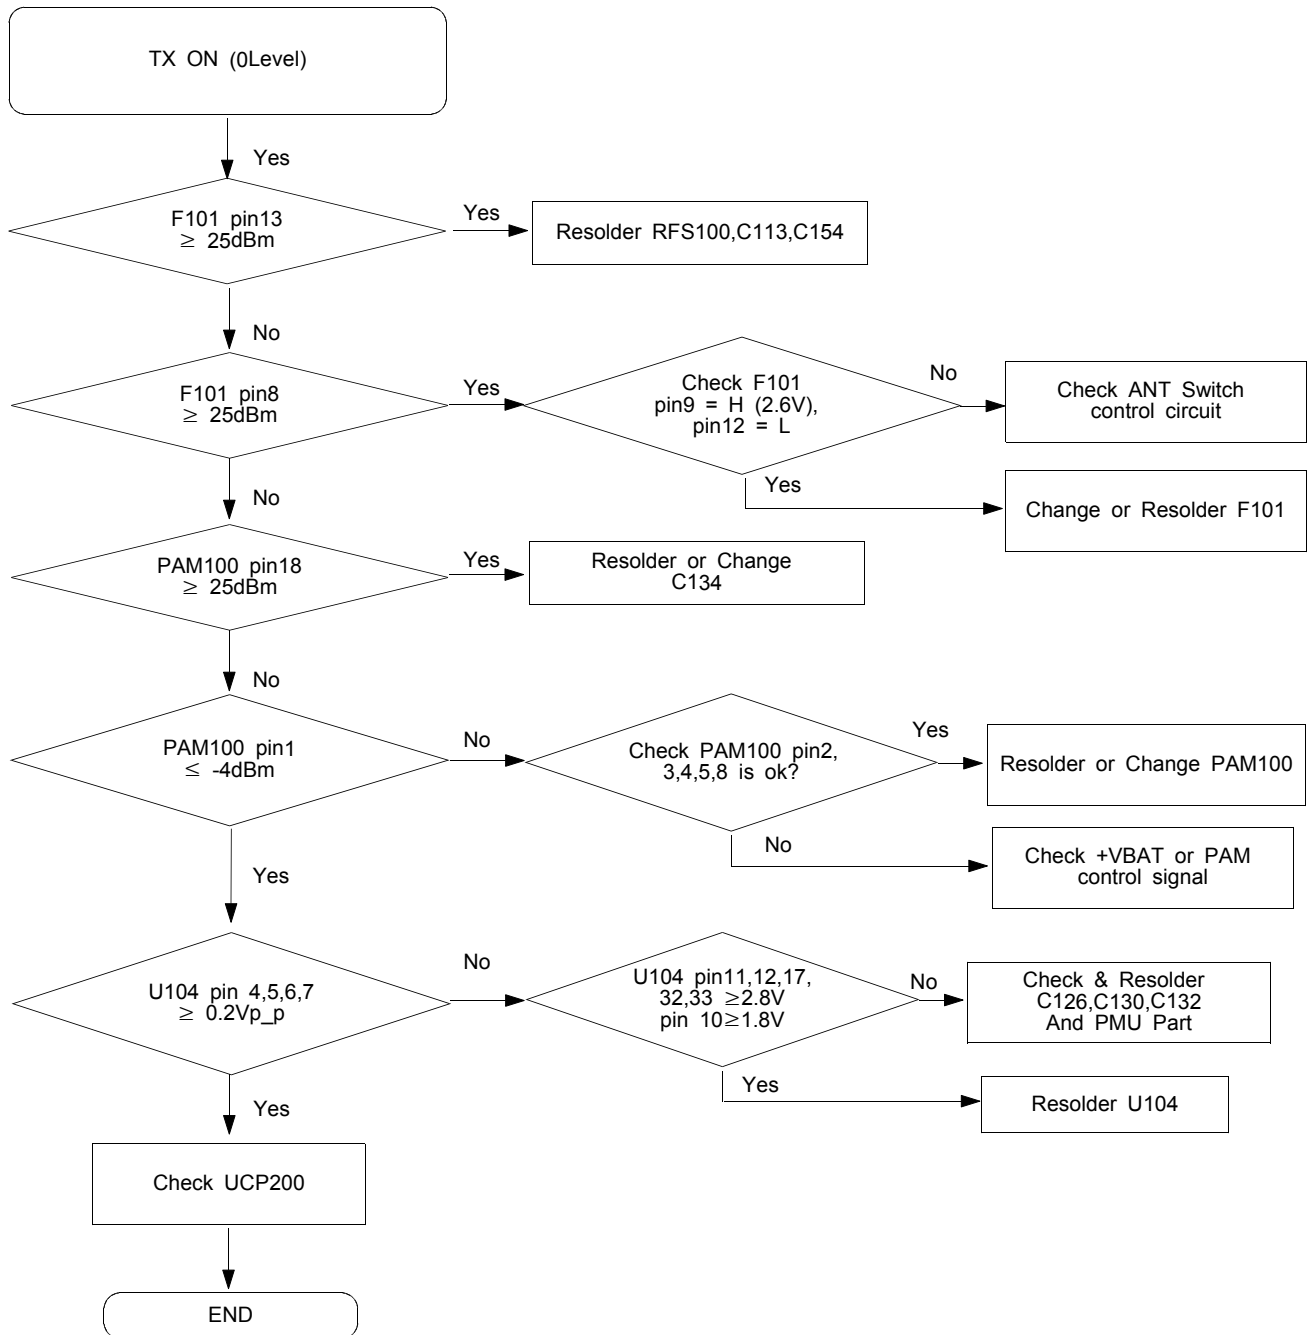


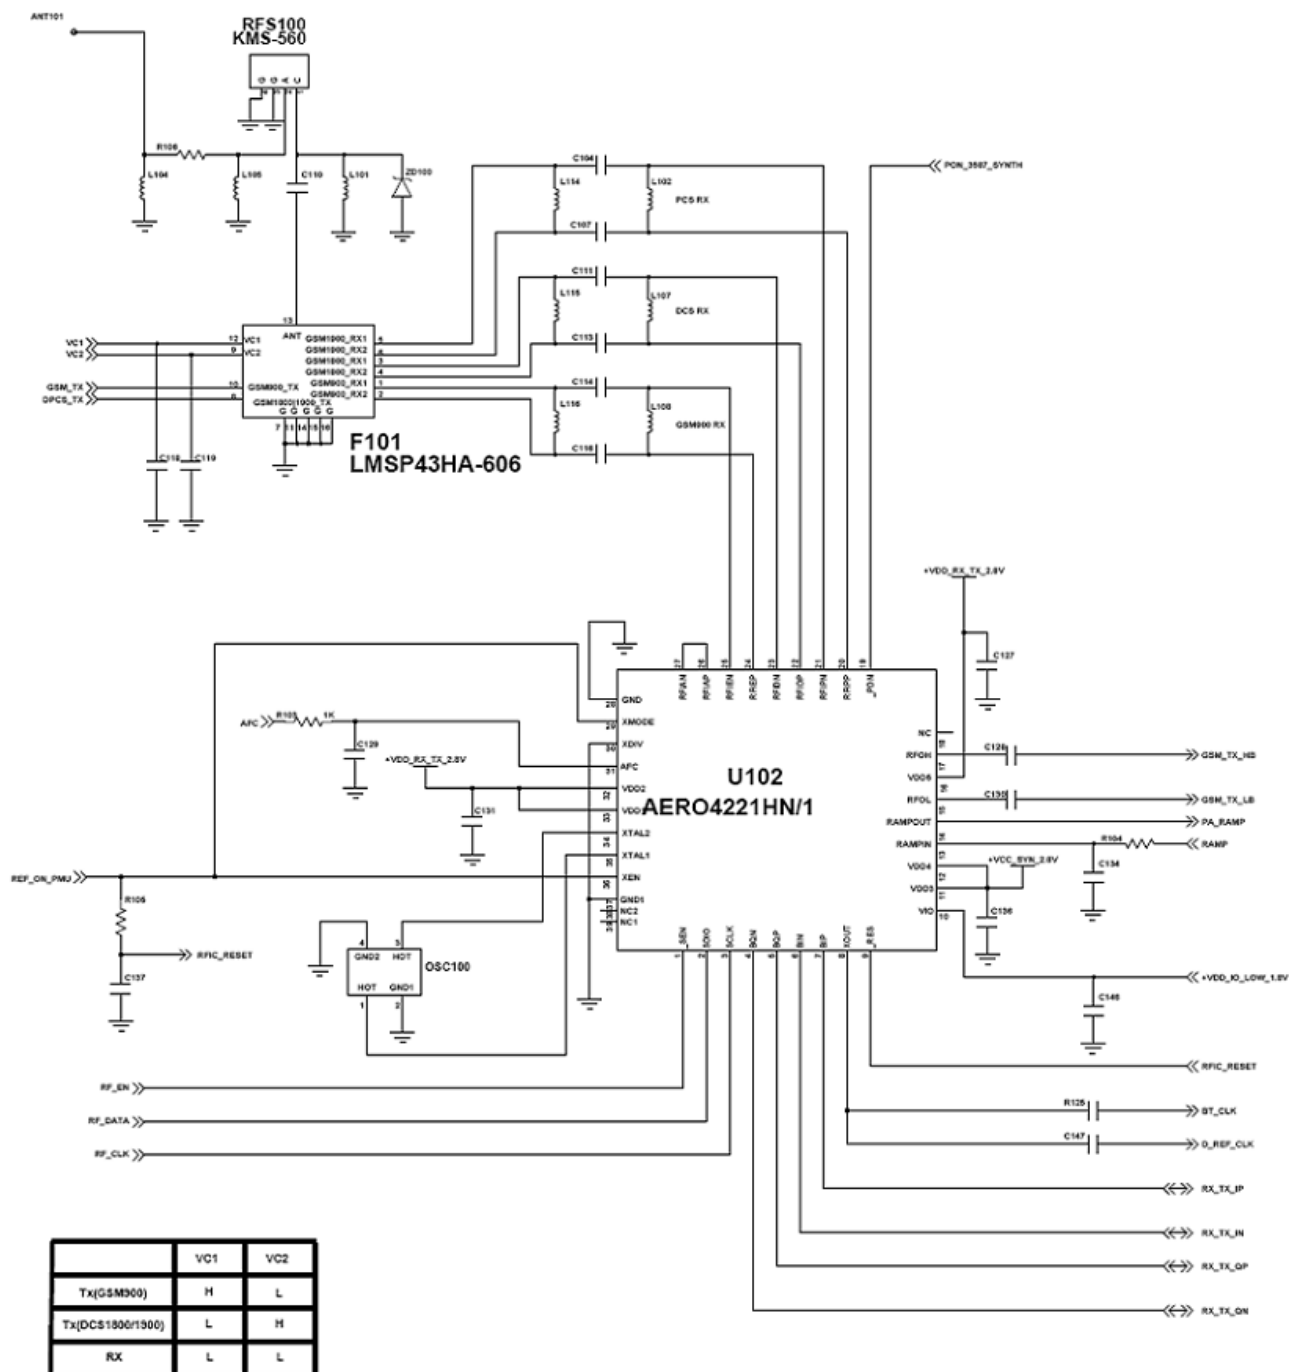

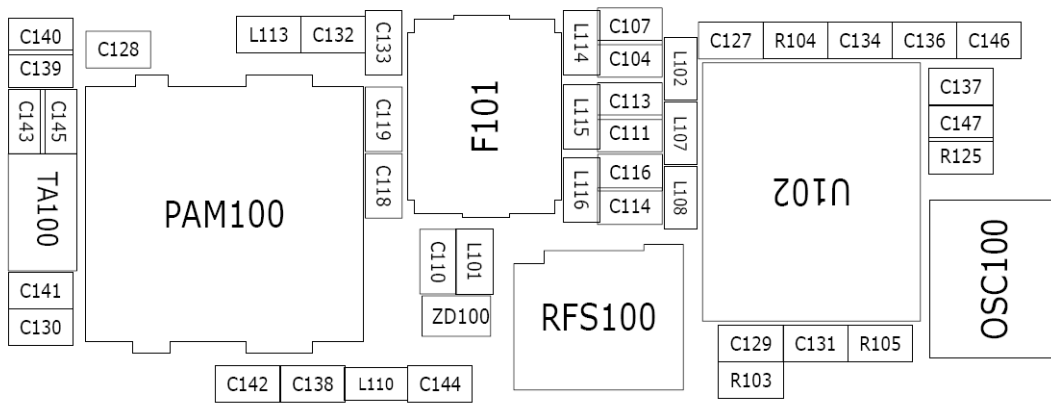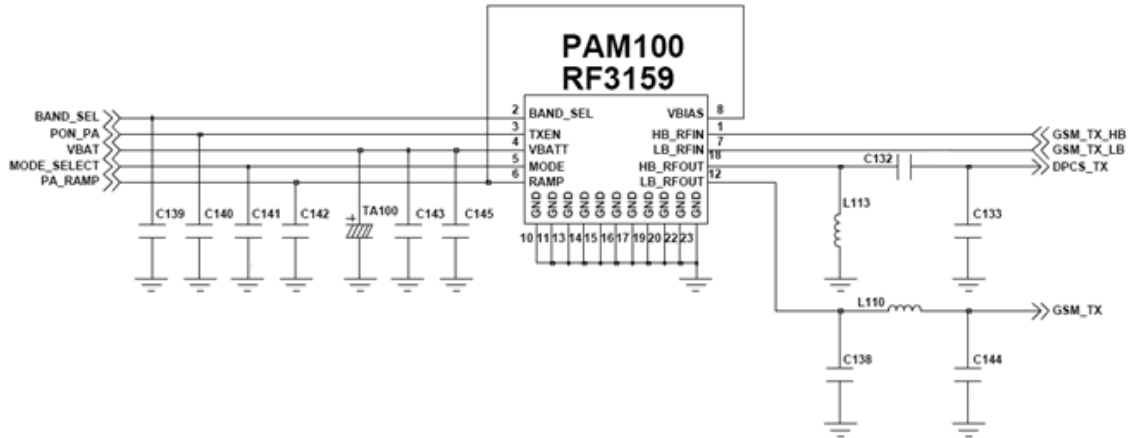



[Slave]

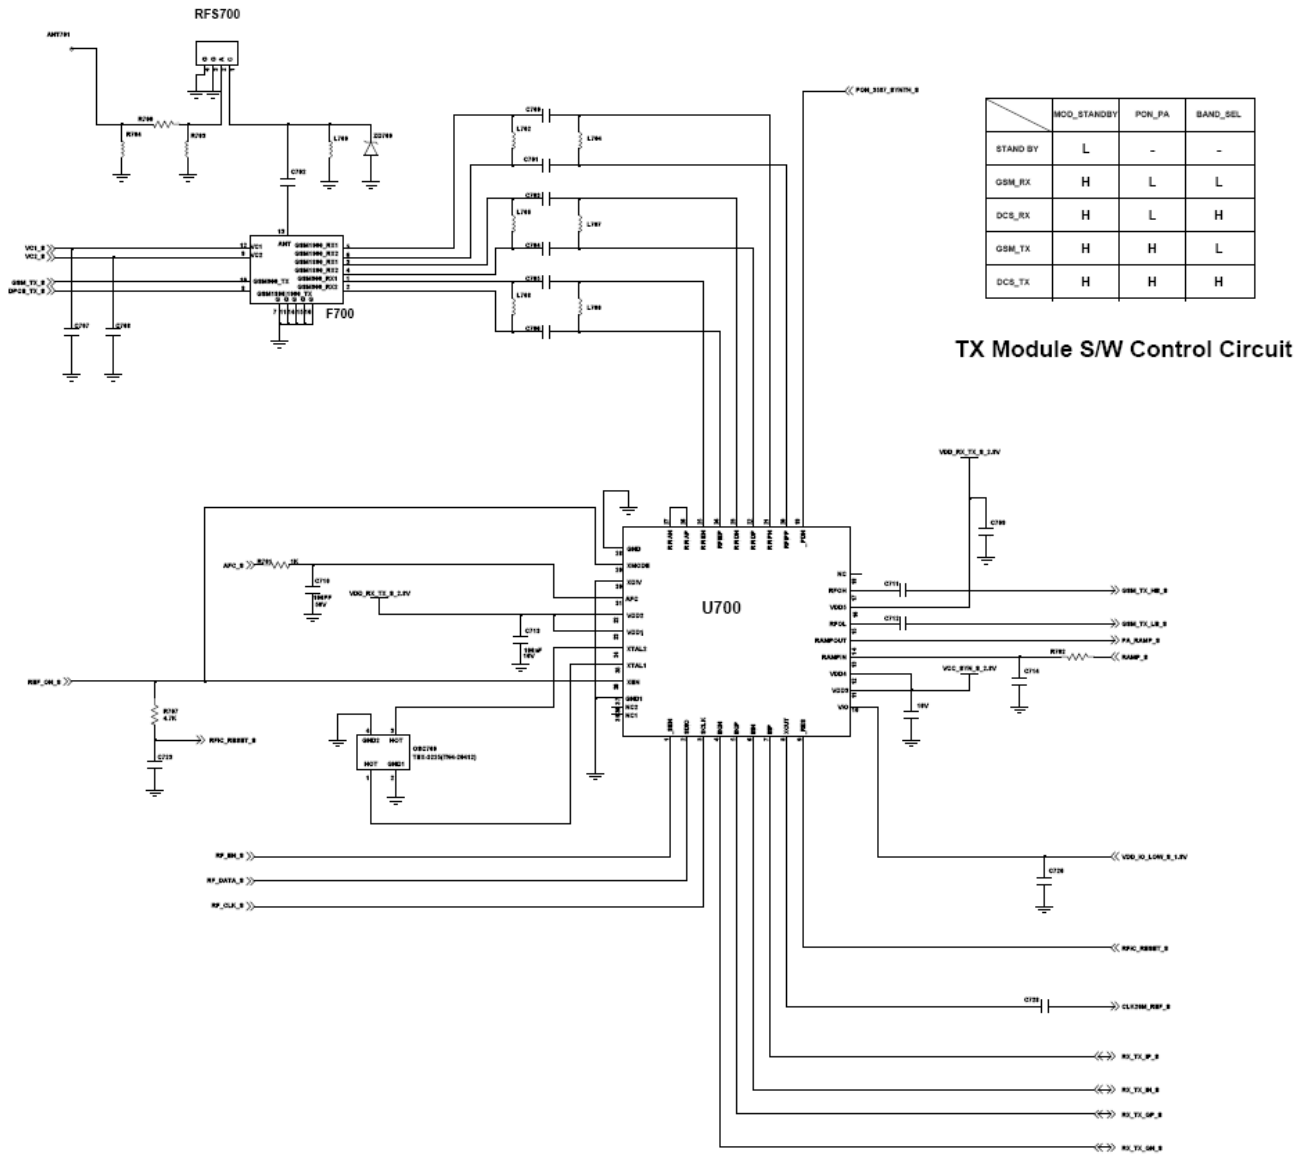


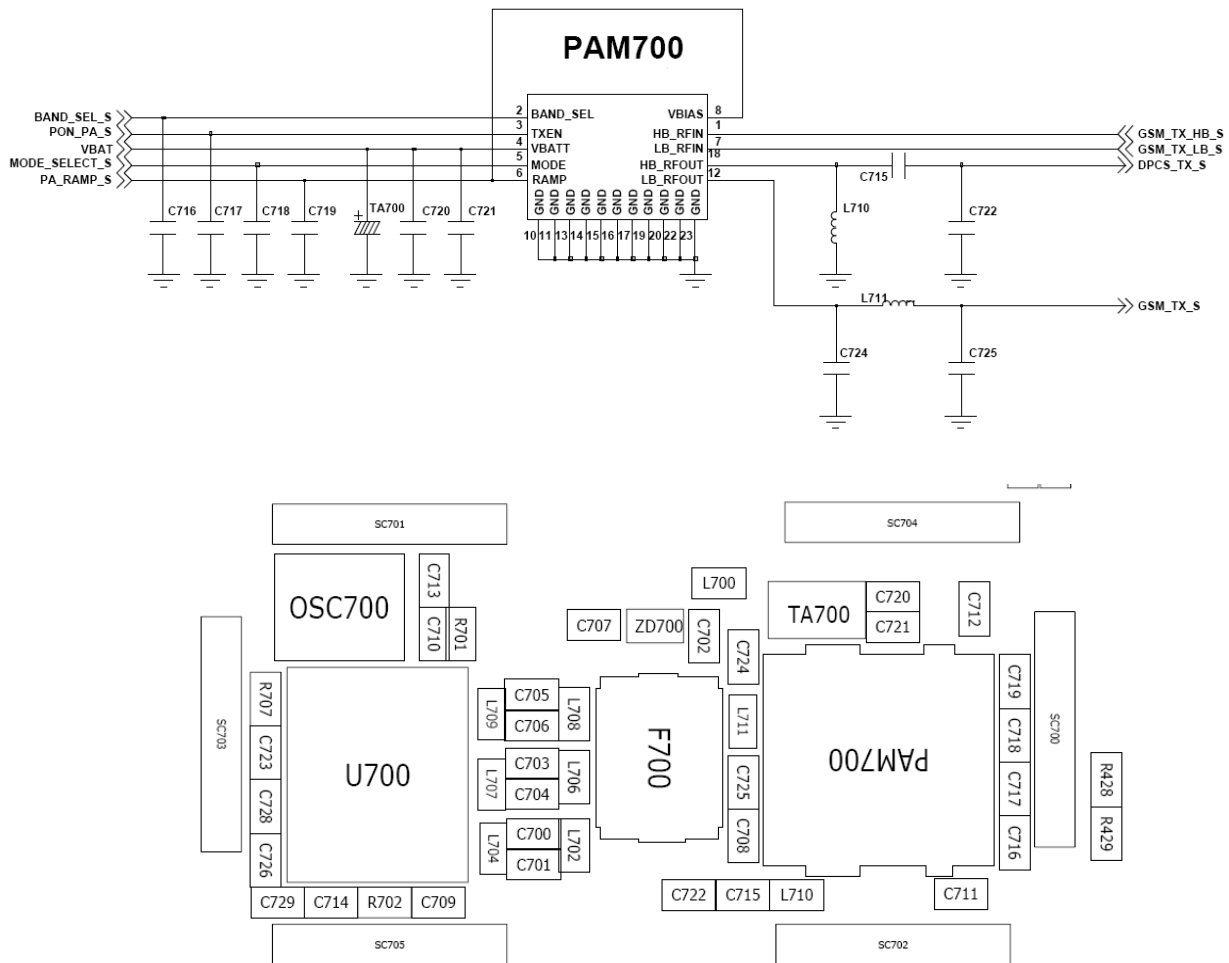

10-18. Bluetooth part

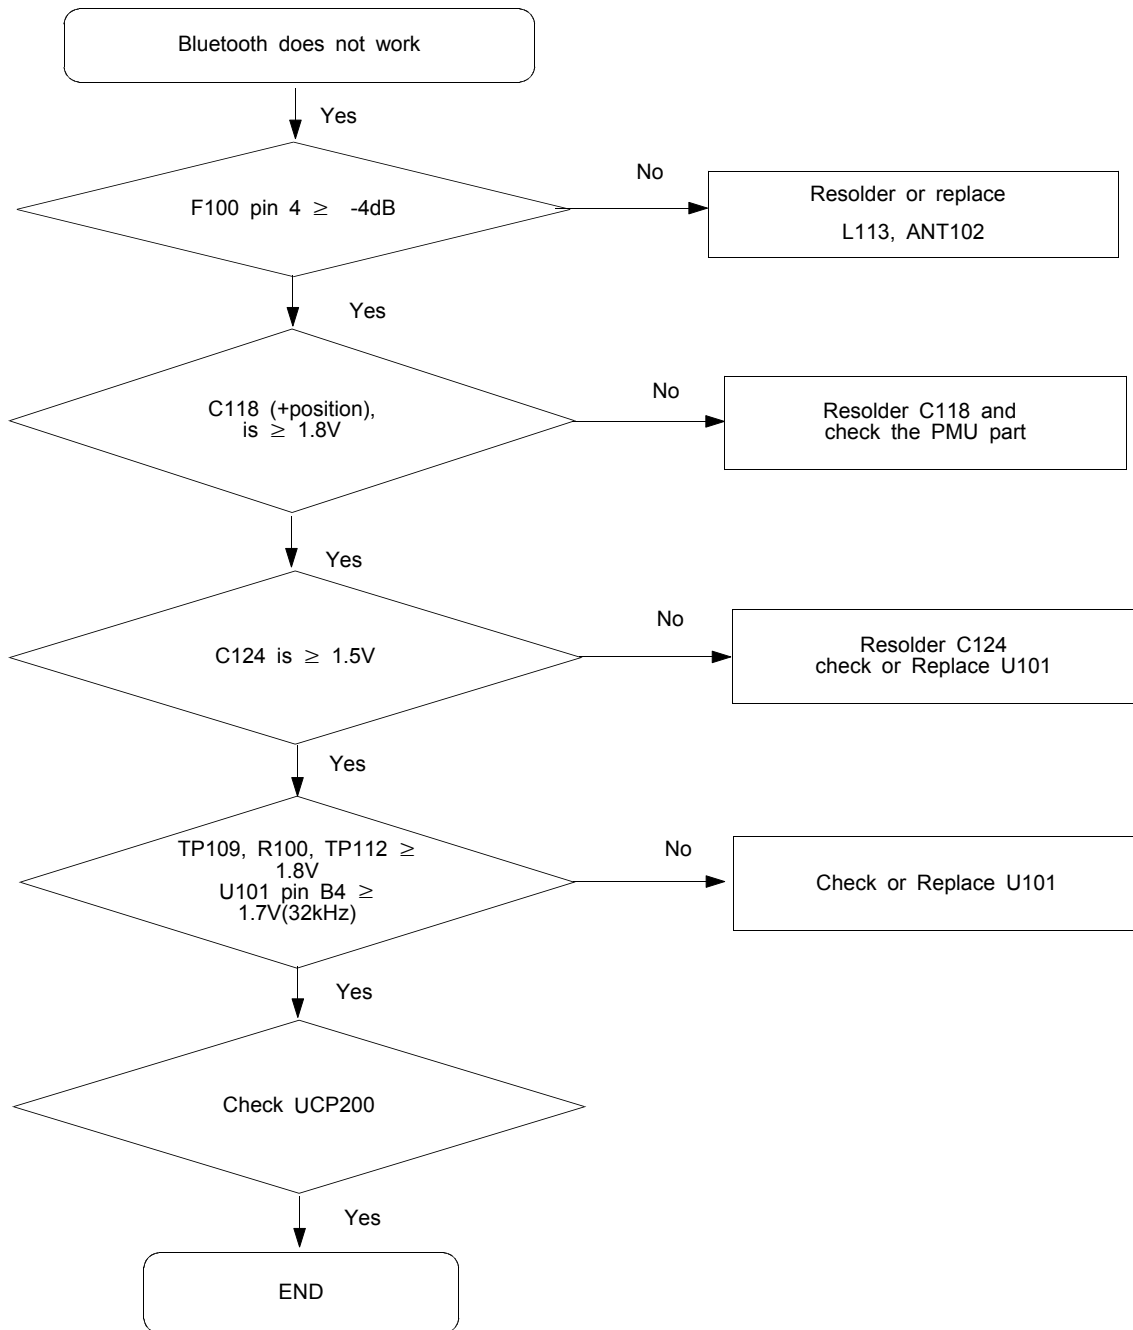

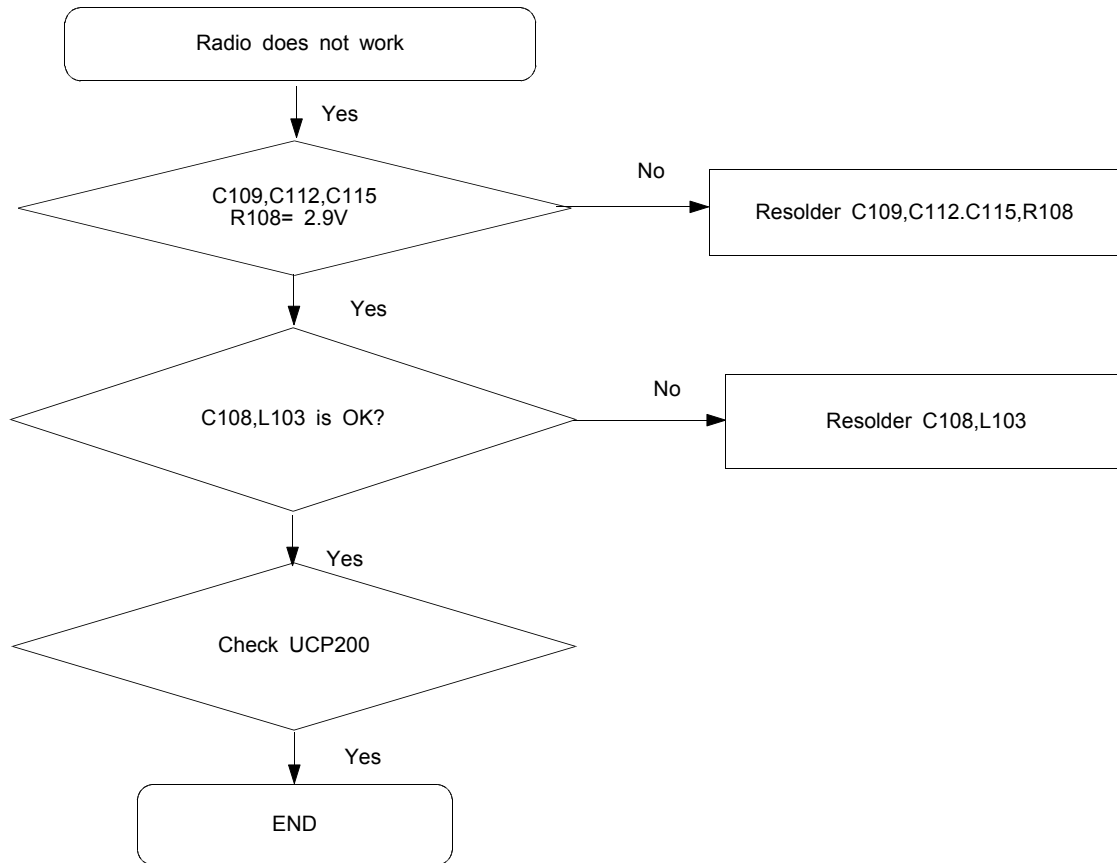10-19. FM Radio part

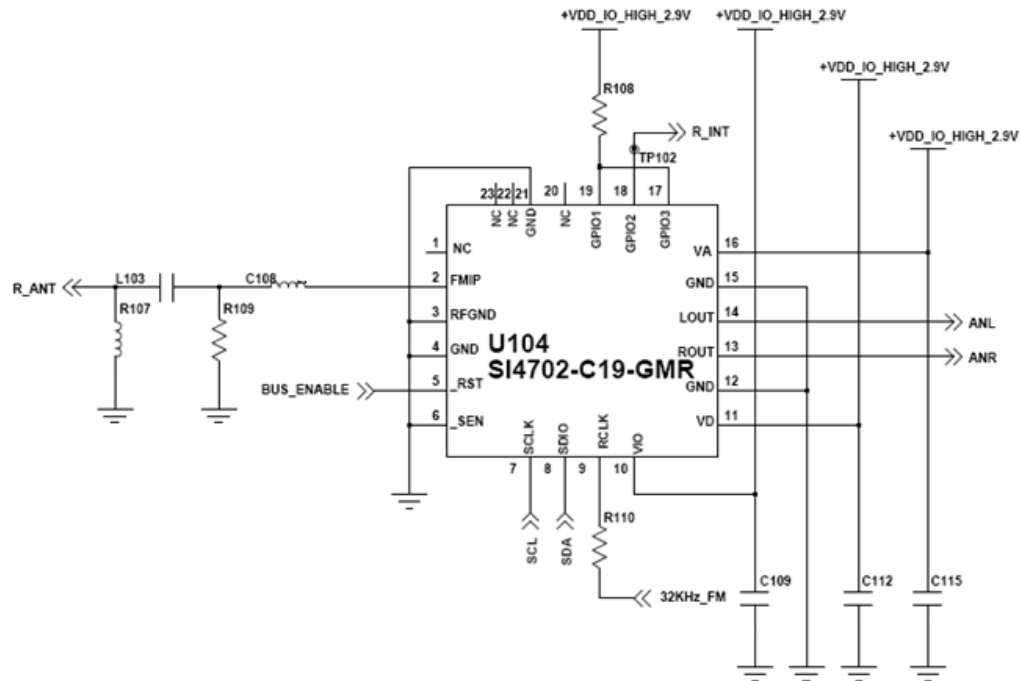

FM RADIO

