


# GB

## PROGRAMME CHART

- A. Programme selector
- B. Time display
- C. "Start delay" button
- D. "Variable spin" button
- E. "Start/Pause" button
- F. Programme sequence indicator



- G. "Reset" button
- H. "Door open" indication

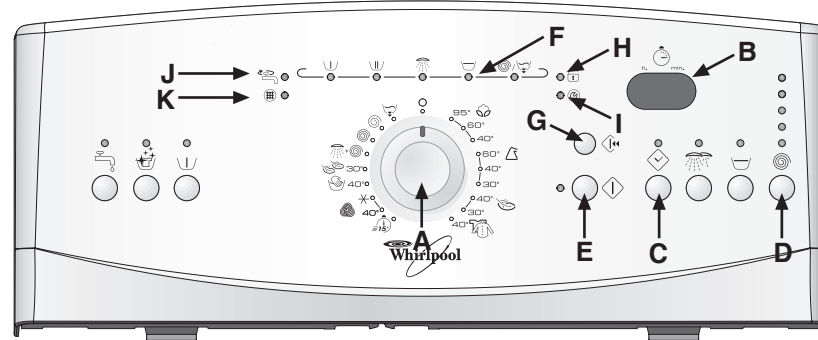

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- I. "Service" indication
- J. "Water tap closed" indication
- K. "Clean pump" indication

- 1) Do not use liquid detergent for main wash if you have activated prewash option.
- 2) Do not use liquid detergent.
- 3) For improved garment care, spin speed is restricted in these programmes.

| Programme                           | Care Labels        | Max. Load<br>kg | Type of wash / Notes<br><i>- for temperature selection, respect the manufacturer's recommendations on the care label</i>  | Detergents and Additives |                   |          |           | Special options |          |                 |                 |            | Max. Spin Speed<br>rpm |                    |
|-------------------------------------|--------------------|-----------------|---|--------------------------|-------------------|----------|-----------|-----------------|----------|-----------------|-----------------|------------|------------------------|--------------------|
|                                     |                    |                 |   | Pre-wash                 | Main Wash         | Softener | Cold wash | Clean+          | Pre-wash | Start delay     | Intensive rinse | Rinse Hold |                        | Variable spin      |
| <b>Cotton</b><br>40 - 60 - 95°C     | <br>40 - 60 - 95°C | <br><br>        | 5.0<br>Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.<br><i>For washing heavily soiled laundry, the "Prewash" option can be selected.</i> | *                        | Yes <sup>1)</sup> | *        | *         | *               | *        | * <sup>2)</sup> | *               | *          | *                      | max.               |
| <b>Synthetics</b><br>30 - 40 - 60°C | <br>30 - 40 - 60°C | <br><br><br>    | 3.0<br>Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).   | *                        | Yes <sup>1)</sup> | *        | *         | *               | *        | * <sup>2)</sup> | *               | *          | *                      | 1000 <sup>3)</sup> |
| <b>Delicates</b><br>30 - 40°C       | <br>30 - 40°C      | <br>            | 1.5<br>Curtains and delicate clothing, dresses, skirts, shirts and blouses.   | *                        | Yes <sup>1)</sup> | *        | *         | -               | *        | * <sup>2)</sup> | -               | *          | *                      | 1000 <sup>3)</sup> |
| <b>Daily Mixed</b><br>40°C          | <br>40°C           | <br>            | 3.0<br>Slightly to normally soiled textiles made of cotton and/or synthetics.   | -                        | Yes               | *        | *         | -               | -        | * <sup>2)</sup> | *               | *          | *                      | max.               |
| <b>Quick wash 15'</b><br>30°C       | <br>30°C           |                 | 3.0<br>Refreshes briefly worn outer clothing made of cotton, artificial fibers and blends with cotton.  | -                        | Yes               | *        | *         | -               | -        | * <sup>2)</sup> | -               | *          | *                      | max.               |
| <b>Wool</b><br>Cold - 40°C          | <br>* - 40°C       |                 | 1.0<br>Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.  | -                        | Yes               | *        | *         | -               | -        | * <sup>2)</sup> | -               | *          | *                      | 1000 <sup>3)</sup> |
| <b>Handwash</b><br>40°C             | <br>40°C           |                 | 1.0<br>Textiles made of linen, silk, wool and viscose marked as "handwashable".<br><i>A very gentle spin is used in this programme.</i>   | -                        | Yes               | *        | *         | -               | -        | * <sup>2)</sup> | -               | *          | *                      | 400 <sup>3)</sup>  |
| <b>Lingerie</b><br>30°C             | <br>30°C           | <br>            | 1.0<br>This cycle is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended).  | -                        | Yes               | *        | *         | -               | -        | * <sup>2)</sup> | -               | *          | *                      | 400 <sup>3)</sup>  |
| Rinse & Spin                        |                    | -               | 5.0<br><i>Same as the last rinse and the final spin in the "Cotton" programme.</i>  | -                        | -                 | *        | -         | -               | -        | *               | *               | *          | *                      | max.               |
| Spin                                |                    | -               | 5.0<br><i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>  | -                        | -                 | -        | -         | -               | -        | *               | -               | -          | *                      | max.               |
| Gentle Spin                         |                    | -               | 1.0<br><i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>   | -                        | -                 | -        | -         | -               | -        | *               | -               | -          | *                      | 1000 <sup>3)</sup> |
| Drain                               |                    | -               | -<br><i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>   | -                        | -                 | -        | -         | -               | -        | *               | -               | -          | -                      | -                  |

**N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.**

Yes = dosing required / \* = optional

Whirlpool is a registered trademark of Whirlpool USA.

**5019 312 10737**

## CONSUMPTION DATA

| Programme      | Temperature (°C) | Load (kg) | Water (l) | Energy (kWh) | Approx. Programme Duration*** (hours : minutes) |
|----------------|------------------|-----------|-----------|--------------|---|
| Cotton         | 95               | 5.0       | 50*       | 1.70         | 2:05  |
| Cotton**       | 60               | 5.0       | 45        | 0.85         | 2:30  |
| Cotton         | 40               | 5.0       | 55        | 0.55         | 2:00  |
| Synthetics     | 60               | 3.0       | 54*       | 0.90         | 1:40  |
| Synthetics     | 40               | 3.0       | 48        | 0.55         | 1:25  |
| Delicates      | 40               | 1.5       | 50        | 0.55         | 0:45  |
| Daily Mixed    | 40               | 3.0       | 40        | 0.45         | 1:00  |
| Quick wash 15' | 30               | 3.0       | 30        | 0.15         | 0:15  |
| Wool           | 40               | 1.0       | 55        | 0.55         | 0:45  |
| Handwash       | 40               | 1.0       | 40        | 0.40         | 0:35  |
| Lingerie       | 30               | 1.0       | 40        | 0.30         | 0:31  |






Prewash cycle increases programme duration by approximately 20 min. Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\* Reference Programme for Energy Label.

\*\*\* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

## PREPARATION OF THE WASH CYCLE

- Load the machine, close the drum doors and check that they are properly locked.
- Add detergent and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
  - Programme with pre and main wash 
  - Main wash programme without prewash 
  - Fabric softeners and conditioners 
  - Stain remover agents 
  - Anti-scale agents (if necessary) 
- Close the lid.
- Turn the **programme selector** to the desired programme and temperature. The time display shows the duration of the chosen programme (in hours and minutes), and the lamp next to the **"Start/Pause"** button flashes. The indication lamp of the predefined spin speed lights up.

## SELECT THE DESIRED OPTION(S)

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

### "Cold wash" button

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30°C on the care label.
- **Selectable only on the lowest temperature step of each programme.**

### "Clean+" button

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.

- Selectable for programmes "Cotton" and "Synthetics"; choose temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- Prolongs the programme by approx. 10 to 15 minutes.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 20 min.

### "Intensive Rinse" button

- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with skin allergies.

### "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the "Synthetics", "Daily Mixed" and "Delicates" programmes.
- It is useful if you want to postpone spinning to a later time, or if you want to drain out only.
- If you select "Rinse Hold", do not leave items to soak for too long.
- As soon as the appliance stops in the rinse hold, the "Rinse hold" lamp of the sequence indicator lights up and the lamp next to the **"Start/Pause"** button flashes.

## Terminate the "Rinse Hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

## "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

## START DELAY

The "Start delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.

- Select programme, spin speed and options.
- Press the "Start Delay" button several times to select a delay time by 1 to 23 hours.
- Start the programme (see "Programme Start"). The indication lamp over the "Start delay" button lights up and goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and is replaced by the remaining time.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

## To cancel the "Start delay"

### ..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset"** button.

### ..after having pressed the "Start/Pause" button:

- Press the "Reset" button for at least 3 second. The start delay indicator light goes off.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

- **Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your "Instructions for Use"; if the fault persists, contact our After Sales Service.

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indications still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use ("Removing the Filter").

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.
- Turn the programme selector to the "Off/O" position.
  - Close the water tap.
  - Open lid and drum and unload the machine.
  - Leave the lid open for some time to allow the interior of the machine to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the **"Start/Pause"** button to pause the programme. The light flashes.
- Select the new programme, any options and another spin speed if you want.
- Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end. Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.