





# OPERATING INSTRUCTIONS IN BRIEF

## The remote control

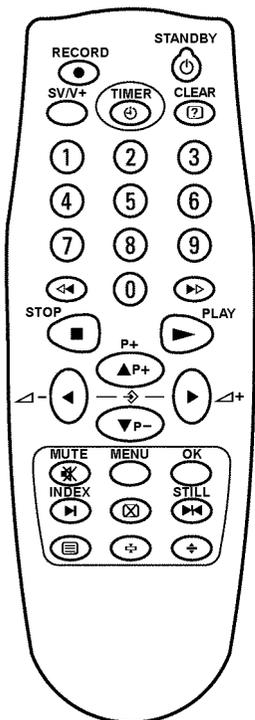


- RECORD Record
  - STANDBY Standby
  - SV/V+ 'SHOWVIEW' programming
  - TIMER TIMER programming on the set
  - CLEAR Reset/clear
  - 0-9 Digit buttons 0-9
  - STOP Pause/Stop
  - PLAY Playback
  - Menu left
  - Menu right
  - Volume control
  - menu Up
  - menu Down
  - P +/- Programme number Plus/Minus
  - MUTE Mute sound
  - MENU Call menu
  - OK Confirm button
  - INDEX Index search
  - STILL Still picture
- The following buttons are only available for some sets:
- CLEAR TELETEXT concealed information
  - TELETEXT off (temporarily)
  - TELETEXT on/off
  - TELETEXT page stop
  - TELETEXT enlarged print

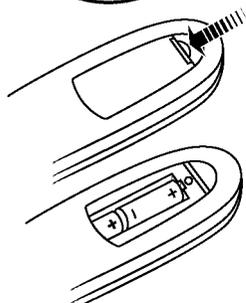

## Front of the set

- Standby
- Programme number Plus/Minus
- Volume control
- Record
- Rewind/Reverse scanning
- Pause/Stop
- Playback
- Forward wind/ Forward scanning
- Cassette eject
- Headphones socket

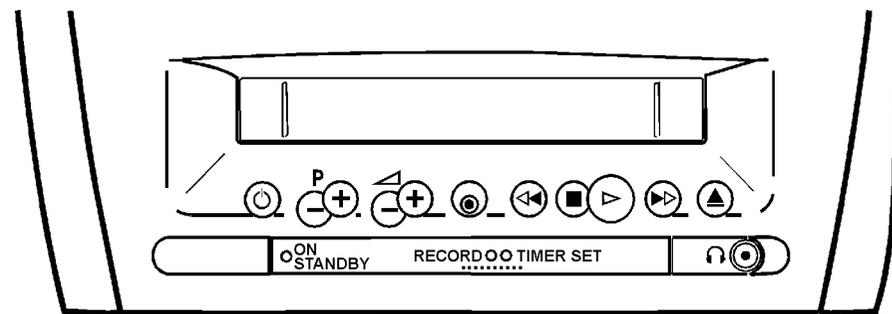



---

## Programming with 'SHOWVIEW'

---

All the information required for programming is encoded in the 'SHOWVIEW' code.

- 1 Press the button on the remote control.
- 2 Enter the entire 'SHOWVIEW code'. This code (up to 9 digits) is found next to the start time of a TV programme in your TV guide.  
If you entered an incorrect code number, clear it with the button.
- 3 If you want to repeat programming at daily or weekly intervals, select the required settings in the 'DAILY/WEEKLY' line.  
'Daily' programming can only be used for recordings to be made from Mondays to Fridays inclusive.
- 4 After confirming the corresponding data appears on the TV screen.

**Note:** If you use SHOWVIEW for the first time, the 'PROGRAMME NR.' line appears when you enter the SHOWVIEW code. Enter the required programme number for this channel.

DATE	DW	PR	START	END	VS
01		01	17:15	18:45	

- 5 Confirm with the button.

The data has been stored in a TIMER block.

Please ensure that you loaded a cassette without erase protection.

- 6 Press the button.

---

## How to enter, check or clear a TIMER-block manually

---

- 1 Press the button.
- 2 Select a free TIMER block or the TIMER block you want to check or clear.
- 3 **Clear:** Press the button.
- 4 **Enter/Check:** Press the or button to switch between 'DATE' (date), 'DW' (daily, weekly), 'PR' (programme number), 'START' (start time) and 'END' (end time).  
Press the and the or the buttons to change the data.
- 5 To end programming, press the button.
- 6 Press the button.

---

## Selecting a TV channel

---

Select the required TV channel (= programme number) with the button or the buttons on the remote control.

The selected programme number (e.g.: 'P 01') appears in the upper right corner of the TV screen.

---

## Volume control

---

You can control the volume level with the button.

If you want to mute the sound temporarily (e.g.: during a telephone call), press the button on the remote control. When you press it again, the sound returns at the same volume level.

---

## Picture control

---

You can control brightness, contrast, sharpness and colour here.

- 1 Press the button.
- 2 Select and confirm the line 'PICTURE'.
- 3 Select and confirm the TV screen setting.

\* In addition, you can adjust the tint for the playback of cassettes in the NTSC standard.

# OPERATING INSTRUCTIONS PHILIPS 14PV182/58

**Congratulations** on the purchase of one of the most sophisticated and simple-to-use television/video recorders combinations (TV combi) on the market. With this TV combi you can record and play VHS-standard cassettes.



Please take the time to read this operating manual before using your TV combi.

## Safety instructions and other notes

- **Danger: high voltage!** Do not open the set. The set does not contain any components that can be repaired by the customer. When the appliance is connected to the power supply there are some components that are constantly operational. To switch off the set completely you must disconnect it from the power supply.
- Note that this power pack is designed for a power supply of 220-240V/50Hz.
- Ensure that air can circulate freely through the ventilation slots on the set.
- Ensure that no objects or liquids enter the set. If liquid is spilt into it, disconnect the set immediately from the power supply and call the After-sales Service for advice.
- The set should not be used immediately after transportation from a cold to a hot area or vice versa, or in conditions of extreme humidity.  
After unpacking the set, it should be allowed to acclimatize for at least three hours before installation.
- These operating instructions have been printed on nonpolluting paper.
- Deposit old batteries at the relevant collection points.
- Please make use of the facilities available in your country for disposing of the packaging of the set in a way that helps to protect the environment.
- This electronic equipment contains many materials that can be recycled. Please inquire about the possibilities for recycling your old set.
- SHOWVIEW is a trademark of Gemstar Development Corporation. The SHOWVIEW system is manufactured under licence from Gemstar Development Corporation.


Contents	Page
<b>1. INSTALLATION</b> .....	<b>2</b>
Connecting additional equipment .....	2
Emergency interrupt .....	2
User guide .....	2
Making standard settings .....	3
Setting the clock and date .....	3
<b>2. PLAY BACK</b> .....	<b>4</b>
Continuous playback .....	4
<b>3. RECORD</b> .....	<b>5</b>
Programming with 'SHOWVIEW' .....	6
<b>4. SPECIAL FEATURES</b> .....	<b>7</b>
On Screen Display (OSD) .....	7
Sleep function (switch off) .....	7
Switch set on function .....	7
Child lock .....	8
Before you call an engineer .....	9



# SHOWVIEW

# 1. INSTALLATION

## Connecting the cables

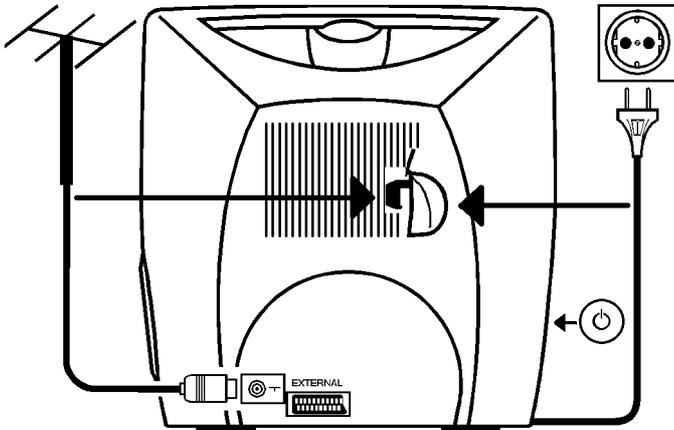

- 1 Insert the aerial plug into the  socket.

If you use the auxiliary aerial supplied, push the aerial into the mounting on the back panel until it snaps into place. Pull out the telescopic rod(s) as far as required. Tilt and rotate the aerial until you have got the best picture quality.


- 2 Insert the plug of the mains cable into the wall socket.
- 3 Switch the set on. The power switch  is located on the left side panel of the set.

## Important notes for operation

- We advise you, from now on, to switch the set to standby using the  button on the front of the set or on the remote control.
- When the set is in the standby mode, a small red lamp on the left of the front of the set will be alight.
- You can switch on with the  button, the  buttons or by inserting a cassette.
- **Attention:** When you use the power switch  on the side panel, you have **completely** switched off the set from the mains power supply. No programmed recordings will then be made. The red lamp on the left of the front of the set will not be alight. After a few hours, the date and clock settings will be lost.
- **Attention:** Before you switch off the appliance with the power switch , remove the tape by pressing the  button.
- Keep your TV Combi connected to the mains and the power switch in 'on' position at all times to ensure that programmed recordings can be made and that the television functions normally. The power consumption required is low.
- Back-up power supply: TV channel storage - typically 1 year, Clock/Timer - typically 7 hours.

## Connecting additional equipment

You can also connect additional equipment to the  socket, for instance, a decoder satellite receiver or camcorder.

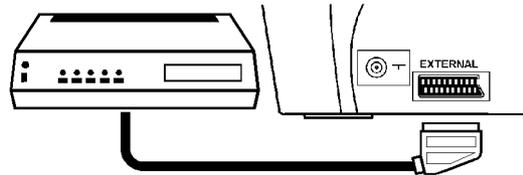


## Emergency interrupt

Both the set and the remote control have an 'Emergency interrupt' button. You can use the  button to interrupt any function.

Whenever you have operating problems you can simply interrupt the function and start again.

You can practise operating your set without any worries. No matter which buttons you press, you cannot damage it.

## User guide

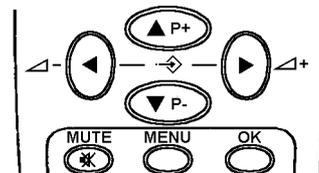

With OSD (On Screen Display) the corresponding functions appear on the TV-screen. The most important button-functions are displayed at the bottom of the screen. Throughout this instruction manual, use the following buttons for the functions 'Call up', 'Select', 'Enter'/'Adjust', 'Confirm' and 'Exit':

- **Call up:** Use the  button.
- **Select:** Select a line with the  or  button. Use the  buttons or the  or  menu button to select within a line.
- **Enter/Alter:** With the  or  or with the  button.
- **Confirm:** With the  button.
- **Exit:** With the .

## Making standard settings


- 1 To start, press the **STOP** button. Press the **◀** button and the **▶** button simultaneously.



- 2 Select the required display language in the 'LANGUAGE' line.
- 3 Select your country in the 'COUNTRY' line.

## Setting the clock and date


- 1 To start, press the **STOP** button.
- 2 Press the **MENU** button.
- 3 Select and confirm the line 'FEATURES'.
- 4 Select and confirm the line 'SET CLOCK'.

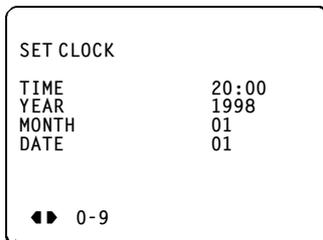

- 5 Enter the time, year, month and date.

## Automatic Channel Search

- 1 Switch on with the **STOP** button. Press the **◀** button and the **▶** button simultaneously.
- 2 Select and confirm the line 'AUTO STORE'.  
The 'Automatic Channel Search' function starts.

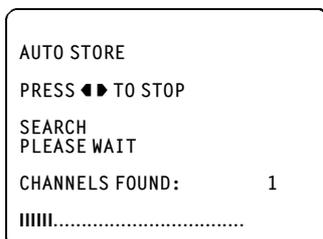

- 3 Wait until all TV channels have been stored.  
All TV channels will be stored from programme number 69 downward.

How you can search for a TV channel manually, you can read in chapter 4 'SPECIAL FEATURES' in the section 'Manual channel search'.

### Note:


\* If the 'Automatic channel search' function is activated, any previously programmed TIMER blocks will be cleared.

You can store up to 69 TV channels.

UK

## Allocating channel numbers

- 1 Switch on with the **STOP** button. Press the **◀** button and the **▶** button simultaneously.
- 2 Select and confirm the line 'SORT'.

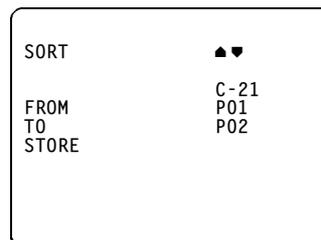

- 3 On the TV screen, in the line 'FROM', select the TV channel to which you want to allocate a programme number, e.g.: 'P 01'.
- 4 In the line 'TO', select the required programme number, e.g.: 'P 02'.
- 5 Select and confirm the line 'STORE'.  
The allocated TV channels will be exchanged.
- 6 Repeat steps 3 to 5 until you have allocated a programme number to all the required TV channels.  
To finish, press the **MENU** button twice.

## 2. PLAY BACK

---

- 1 Insert a cassette into the cassette slot.
- 2 Press the **▶PLAY** play back button.
- 3 **Picture search:** Now press the **<<◀** (rewind) or **▶▶** (wind) button once or several times.
- 4 **Interrupt:** Press the **STOP■** button.
- 5 **Wind:** Stop the tape and press the **<<◀** (rewind) or the **▶▶** (wind) button.
- 6 **Eject:** Press the **▲** button on the set.

**Note:** Some functions switch off automatically after a while (e.g.: Pause, Still Picture, Scanning). This helps to protect the cassette and prevent unnecessary power consumption.

\* With this set you can play back cassettes that have been recorded on another TV combi in the NTSC standard.

\* If you load a cassette with erase protection, the TV combi starts the play back automatically.

\* The picture quality is affected during scanning. The sound is switched off.

\* Remove the cassette before transporting the TV Combi.

---

### Still picture

---

- 1 Press the **STILL▶◀** button. You see a still picture. Interference stripes will appear. Each time you press the **STILL▶◀** button again the picture will move on one step.

---

### Continuous playback

---

- 1 Press the **MENU** button.
- 2 Select and confirm the 'SPECIAL' line.
- 3 Select the 'REPEAT PLAY' line. Switch on the continuous playback.
- 4 Press the **MENU** button.
- 5 Start the continuous playback with the **▶PLAY** playback button.
- 6 If you want to cancel the function, stop the continuous playback in the 'REPEAT PLAY' line.

---

### Tape position/Index search

---

**Tape position:** If you press the **OK** button the tape position will be shown in the display during Wind, Rewind, Record, Play back and Pause/Stop.

**Index search:** Every time you start to record, the tape is marked with a code mark.

- 1 Press the **INDEX▶** button. Press the **▶▶** button to select the next code mark or the **<<◀** button for the previous code mark.
- 2 Once the TV Combi finds the code mark or unrecorded area it will automatically switch to play back.

**Note:** When you press any tape transport button (e.g.: the **<<◀** or **▶▶** button) this search function will be stopped.

\* You cannot use this function with recordings made on another video recorder that does not have this function.

---

### Eliminating picture interference

---

- 1 During playback press the **MENU** button.
- 2 Select and confirm the 'SPECIAL' line.
- 3 Select the 'TRACKING' line.
- 4 Press the **<◀** or **▶▶** button until the playback quality is at its best.
- 5 Press the **MENU** button. This setting will remain until you remove the cassette.
- 6 **Cleaning function:** Press the **MENU** button.
- 7 Select and confirm the 'SPECIAL' line.
- 8 Select the 'CLEANING' line.
- 9 Press the **OK** button. A blue screen appears for a few seconds.
- 10 Wait until the blue screen disappears and press the **MENU** button.

**Note:**

\* Some hired cassettes may have a poor picture/sound quality. This is not a fault in your set.

## 3. RECORD

---

- 1 Insert a cassette.
- 2 Use the **P +/-** button to select the programme number from which you wish to record, e.g.: 'P 01'.
- 3 Press the **RECORD ●** button.
- 4 Use the **STOP ■** button to stop the recording.
- 5 If, whilst recording, you want to switch off the TV screen, press the **STANDBY ⏻** button **once**. To switch the TV screen on again, press the **P +/-** button.

---

### Important notes for recoding

---

- **OTR:** If you do not want to record to the end of the cassette, press the **RECORD ●** button again. The display shows at what time the recording will stop. With the **◀** or the **▶** button you can change the end time of the recording in 30 minute intervals. If you wish to cancel the end time, press the **CLEAR (?)** button. The recording goes on uninterruptedly. (This does not effect the recording.)
- Programme number 'E1' is provided for recording from external sources (via the **EXTERNAL** scart socket).
- **Erase protection:** So that you don't accidentally delete an important recording, you can remove the special tab (erase protection) on the narrow side of the cassette with a screwdriver or slide the special tab to the left. Later, if you no longer want the cassette to be erase protected, you can seal the gap again with adhesive tape or slide the special tab to the right.
- **Auto-assembling:** You can use the auto-assembling function to join individual recordings without any major picture disturbance between the recordings. Search for the correct position on the tape and then stop the playback by pressing the **STOP ■** button. 'PAUSE' appears in the display. Now start recording as usual by pressing the **RECORD ●** button.

---

### Programme a recording

---

The set needs the following information for every programmed recording:

- \* the date on which the recording is to be made
- \* the programme number for the TV channel
- \* the start and end time of the recording
- \* VPS on or off

The set stores all the information mentioned above in what is known as a **TIMER** block. It can store 6 **TIMER** blocks for up to one month in advance.

UK

---

### 'VPS' (Video Programming System)

---

With **VPS**, the TV station controls the start and the duration of a programmed recording. This means that the video recorder switches itself on and off at the **right time** even if a TV programme you have programmed begins earlier or finishes later than expected.

Usually the start time is the **same** as the **VPS** time. If, however, a different **VPS** time code is given, e.g.: '20.15 (VPS 20.14)', you have to enter '20.14' (the **VPS** time) exactly to the minute.

If you are not using **VPS**, the 'VPS' indication must be off.


---

## Programming with 'SHOWVIEW'

---


All the information required for programming is encoded in the 'SHOWVIEW' code.

- 1 Press the **SV/V+** button on the remote control.
- 2 Enter the entire 'SHOWVIEW code'. This code (up to 9 digits) is found next to the start time of a TV programme in your TV guide.  
If you entered an incorrect code number, clear it with the **CLEAR(?)** button.

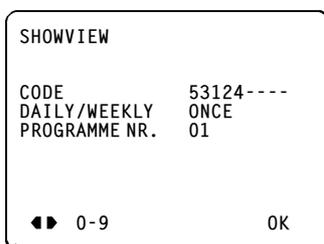

- 3 If you want to repeat programming at daily or weekly intervals, select the required setting in the 'DAILY/WEEKLY' line.  
'Daily' programming can only be used for recordings to be made from Mondays to Fridays inclusive.
- 4 After the confirmation the corresponding data appear on the TV screen.

**Note:** If you use SHOWVIEW for the first time, the 'PROGRAMME NR.' line appears when you enter the SHOWVIEW code. Enter the required programme number for this TV channel.

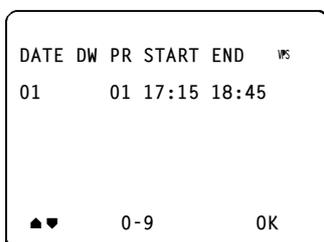

- 5 Confirm with the **OK** button.

The data has been stored in a TIMER block.  
Please ensure that you loaded a cassette without erase protection.

- 6 Press the **STANDBY** button.

---

## How to enter, check or clear a TIMER block manually

---

- 1 Press the **TIMER** button.
- 2 Select a free TIMER block or the TIMER block you want to check or clear.
- 3 **Clear:** Press the **CLEAR(?)** button.
- 4 **Enter/Check:** Press the **◀** or **▶** button to switch between 'DATE' (date), 'DW' (daily, weekly), 'PR' (programme number), 'START' (start time) and 'END' (end time).  
Press the **▲** and the **▼**, or the **0-9** buttons to change the data.
- 5 To end programming, press the **MENU** button.
- 6 Press the **STANDBY** button.

---

## Important notes for programmed recordings

---


- If the message 'PLEASE PRESS STOP' or 'PLEASE PRESS STANDBY' appears on the TV screen, press the **STOP** or the **STANDBY** button.  
A TIMER recording will function only, if the set isn't used for other video recorder functions (e.g.: playback).
- The TIMER lamp on the front of the set lights up when one or more of the TIMER blocks are occupied.
- If the end of the cassette is reached during a recording, the video recorder automatically ejects the cassette. The set switches off after a few minutes.
- If you forget to load a cassette, 'NO CASSETTE CANNOT RECORD' will appear.
- If you inserted a cassette with erase protection when you want to start a recording, the cassette will be ejected.
- If 'CODE ERROR' appears on the TV screen, you entered an incorrect code number or the incorrect date. Repeat the entry or end with the **STANDBY** button.  
With 'Daily' programming, the first recording must take place within a week.
- If 'DAILY ERROR' appears on the TV screen, the date was incorrectly entered. 'Daily' programming can only be used for recordings to be made from Mondays to Fridays inclusive.

## 4. SPECIAL FEATURES

### On Screen Display (OSD)

You can switch OSD on or off.

- 1 Press the **MENU** button.
- 2 Select and confirm the 'FEATURES' line.

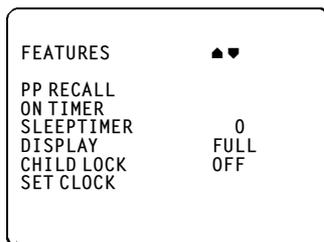

- 3 Select the 'DISPLAY' line.
- 4 Select one of the options indicated.  
'FULL': OSD appears for a few seconds each time an operating mode is selected and then disappears.  
'OFF': OSD is switched off.  
'PROG': only the programm number appears.  
'COUNT': only the counter appears.
- 5 Confirm it with the **MENU** button.

**Note:** With the **OK** button you can superimpose the actual operating mode on the TV screen.

### Personal Preset

You can make your personal picture and volume settings here. You can call up this setting and it will be used automatically when you switch the set on.

- 1 select your personal setting. (see chapter 'The TV set functions'). Press the **◀** button and the **▶** button simultaneously.
- 2 Select and confirm the 'PP STORE' line.
- 3 To end press the **MENU** button. The personal setting has been stored.
- 4 **Calling up your Preset:** Press the **MENU** button.

- 5 Select and confirm the 'FEATURES' line.
- 6 Select and confirm the 'PP RECALL' line.
- 7 Press the **MENU** button. The set will use this setting.

### Sleep function (switch off)

You can programme your set to switch off after a predetermined period.

- 1 Press the **MENU** button.
- 2 Select and confirm the 'FEATURES' line.
- 3 Select 'SLEEPTIMER' line.
- 4 With the **◀** or the **▶** button you can determine the minutes left until switch off in 15 minutes intervals. When you set the time to '0' with the **CLEAR** button the sleep function is switched off.
- 5 Press the **MENU** button.

### Switch set on function

You can programme your set to switch on at a predetermined time.

- 1 Press the **MENU** button.
- 2 Select and confirm the 'FEATURES' line.
- 3 Select and confirm the 'ON TIMER' line.
- 4 Determine the time you wish the set to switch on.
- 5 Select the 'WAKE UP' line and switch the 'on-timer' on or off.
- 6 Press the **MENU** button.



---

## Child lock

---

- 1 Press the  button.
- 2 Select and confirm the 'FEATURES' line.
- 3 Select the 'CHILD LOCK' line.
- 4 Switch the child lock on or off.
- 5 Press the  button.

**Note:** If a button is pressed with the childlock 'on', 'CHILD LOCK' appears for a few seconds in the display.  
\* Programmed recordings are made despite the child lock and cannot be interrupted.


---

## Manual channel search

---

In certain cases the Automatic Channel Search may not be able to find all of the TV channels (e.g.: coded TV channels). You can then use this manual method to set the channels.

- 1 Switch on the set with the  button. Press the  button and the  button simultaneously.
- 2 Select and confirm the 'MANUAL STORE' line.

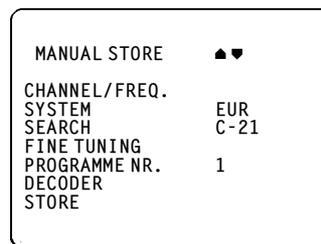

- 3 Select the 'SEARCH' line.
- 4 Press the  button as often as necessary, until you have found the right TV channel.

**Note:**

\* If you want to allocate a decoder, switch the decoder function on or off with the  or  button in the 'DECODER' line.

\* If you want to change the automatic channel setting, select the 'FINE TUNING' line.  
With the  or  button you can vary the automatic TV channel setting.

**Important:** This re-tuning is only necessary and useful in **special cases**, e.g.: when there are stripes on the picture with cable-TV systems.

- 5 In the 'PROGRAMME NR.' line use the  button to select the required programme number, e.g.: 'P 01'.
- 6 Select and confirm the 'STORE' line.
- 7 If you want to search for further TV channels, start again at step 4.  
To finish, press the  button twice.

---

## Before you call an engineer

---

If, contrary to expectation, you experience any difficulty in operating this TV Combi, please call the **customer service** in your country.

You will find the telephone numbers in the enclosed guarantee leaflet.

### The set does not respond to any button being pressed:

- No power supply.
- Technical disturbance: disconnect from the mains for 30 seconds, then re-connect.
- The power switch on the side panel is switched off.
- Child lock is active.

### Cassette jammed:

- Don't use force. Pull out the mains plug for a moment.

### Remote control does not operate:

- Remote control wasn't pointed at the set.
- Batteries are exhausted.

### No playback on TV Combi:

- No recording on the cassette.

### No TV reception:

- The aerial is not connected.
- No TV channels have been stored.

### Poor playback from TV combi:

- Cassette badly worn or of poor quality.
- Use the 'TRACKING' function.

### No recording possible:

- TV channel not stored or wrongly selected.
- Cassette with erase protection has been loaded.

### Programmed recording does not function:

- TIMER not set properly.
- Time data wrongly programmed.
- A cassette with erase protection has been loaded.
- VPS switched on but 'VPS time' wrong. Check aerial.

This product complies with the requirements of the Directive 73/23/EEC + 89/336/EEC + 93/68/EEC.

<b>TYPE</b>	<b>14PV182/58</b>
<b>VNxx</b>	<b>SER.NR.....</b>







3103 166 20311  
8135/003



**14PV182/58**

12

