 


SPEAKER

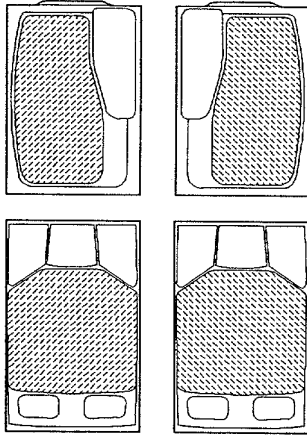

SPEAKER

• TYPE: English, Japanese

• This Service manual contains below models.

SX-SLM6	SX-CR321	SX-C300	SX-R210	SX-Z24	SX-Z240	SX-FZ2600
SX-SL300	SX-CR421	SX-C400	SX-R220	SX-Z26	SX-Z260	SX-FZ2700
SX-SL600	SX-CR423		SX-R230	SX-Z27	SX-Z270	SX-FZ3400
SX-SLAP1MK3			SX-R240		SX-Z280	
SX-SL800			SX-R250		SX-Z290	
			SX-R260			

SX-Z2890	SX-AZ2800	SX-ANV900	SX-NV200	SX-FNV500	SX-NAV70
SX-Z3250	SX-AZ3450	SX-ANV8000	SX-NV210	SX-FNV700	SX-NAV80
SX-Z4400			SX-NV300	SX-FNV800	SX-NAV90
SX-Z7400			SX-NV2000		SX-NAV700
SX-Z9400			SX-NV2100		SX-NAV800
			SX-NV3000		SX-NAV900
			SX-NV3001		

SX-N340	SX-NAVH8	SX-ANH9	SX-NK21	SX-NM9	SX-FNH8	SX-FNF7
SX-N410G	SX-NAVH9	SX-ANH90	SX-FNK23	SX-NM820		SX-FNF77
SX-N3200	SX-NAVH80					
SX-N3150	SX-NAVH90					

• SX-CR model's structures are as follows ;

SX-CR321	SX-CR421	SX-CR423
SX-C300	SX-C400	SX-C400
SX-R210	SX-R210	SX-R230

 
• This SPEAKER service manual is updated, so replace the previous SPEAKER service manual with this manual.

SX-ANV900 / ANV8000<900YJ, 900YL, 8000YU, 900Y, 900YJST, 900YST, 900YA, 900YJ3, 900YJ7>

SPEAKER DISASSEMBLY INSTRUCTIONS

矢印の位置にマイナスドライバーを差し込んで、パネルをはずして、各々のスピーカー・ユニットのビスを取り、スピーカー・ユニットをはずしてください。

Insert a flat - bladed screwdriver into the position indicated by the arrows and remove the panel.
Remove the screws of each speaker unit and then remove the speaker units.

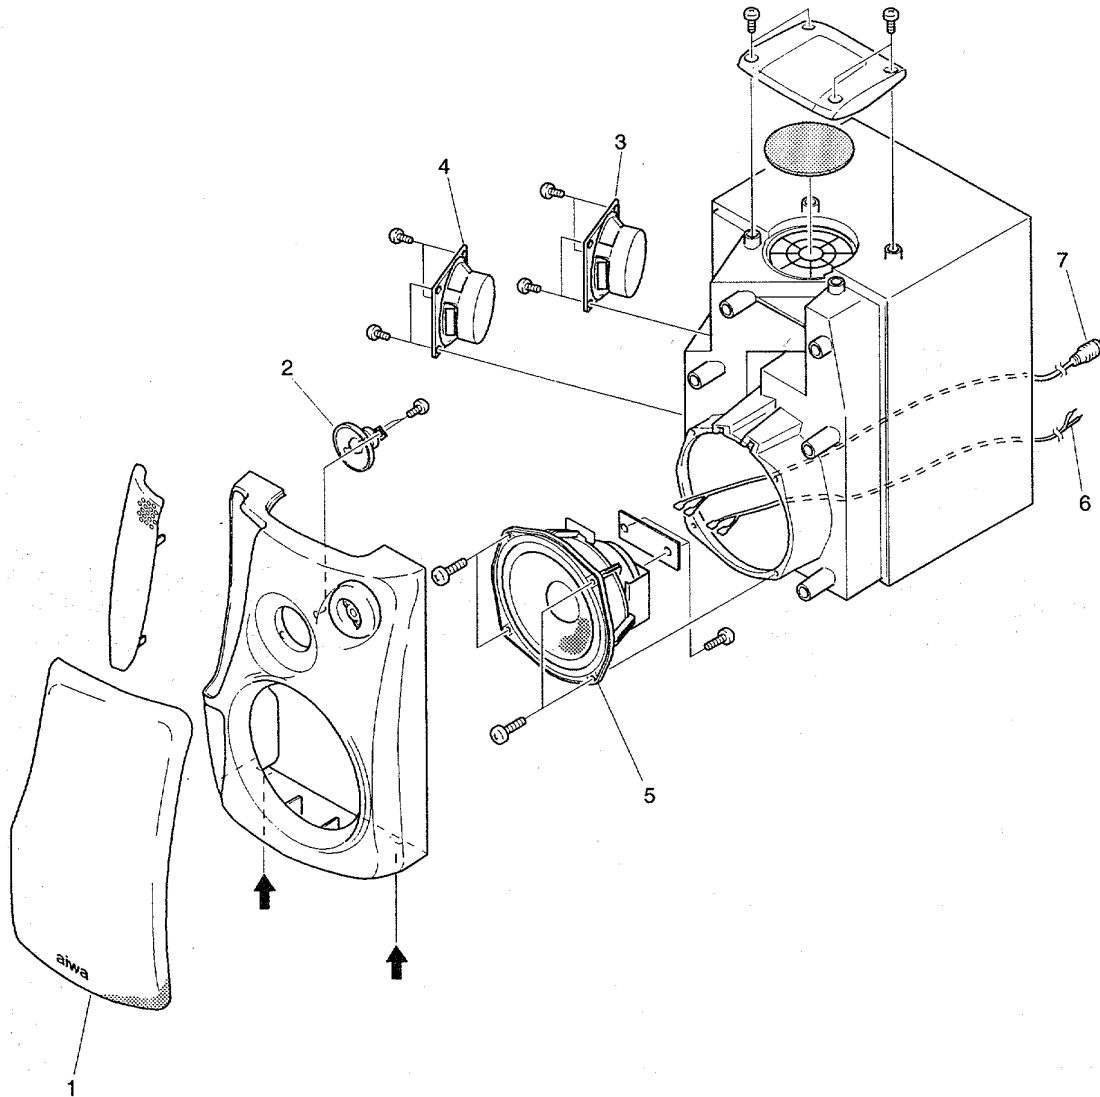

SPEAKER PARTS LIST


If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS4-010-019		GRILL FRAME L ASSY	9	83-NS5-613-019		SPEAKER CORD ASSY
2	86-NS4-009-019		GRILL FRAME R ASSY	10	85-NS6-611-019		SPEAKER CORD Y/B
3	86-NS4-001-019		PANEL, FR L				
4	86-NS4-002-019		PANEL, FR R				
5	86-NS4-608-019		SPKR T 50<EXCEPT 8000YU>				
6	86-NS4-604-019		SPKR M 80<EXCEPT 8000YU>				
7	86-NS4-606-019		SPKR F 80<EXCEPT 8000YU>				
8	86-NS4-602-019		SPKR W 140 H<900YJ, 900YL, 900YJST, 900YJ>				
8	86-NS4-612-019		SPKR W 140 L<8000YU>				
8	86-NS4-610-019		SPKR W 140 M<900Y, 900YST, 900YA>				

SX-FNV800<YJ, YL, Y, YJST, YABNL, YABN, YJSTCC, YJ3, YST, YJ7BNL, YJ7STL, YSTN> SPEAKER DISASSEMBLY INSTRUCTIONS

矢印の位置にマイナスドライバーを差し込んで、パネルをはずして、各々のスピーカー・ユニットのビスを取り、スピーカー・ユニットをはずしてください。

 Insert a flat - bladed screwdriver into the position indicated by the arrows and remove the panel.
Remove the screws of each speaker unit and then remove the speaker units.

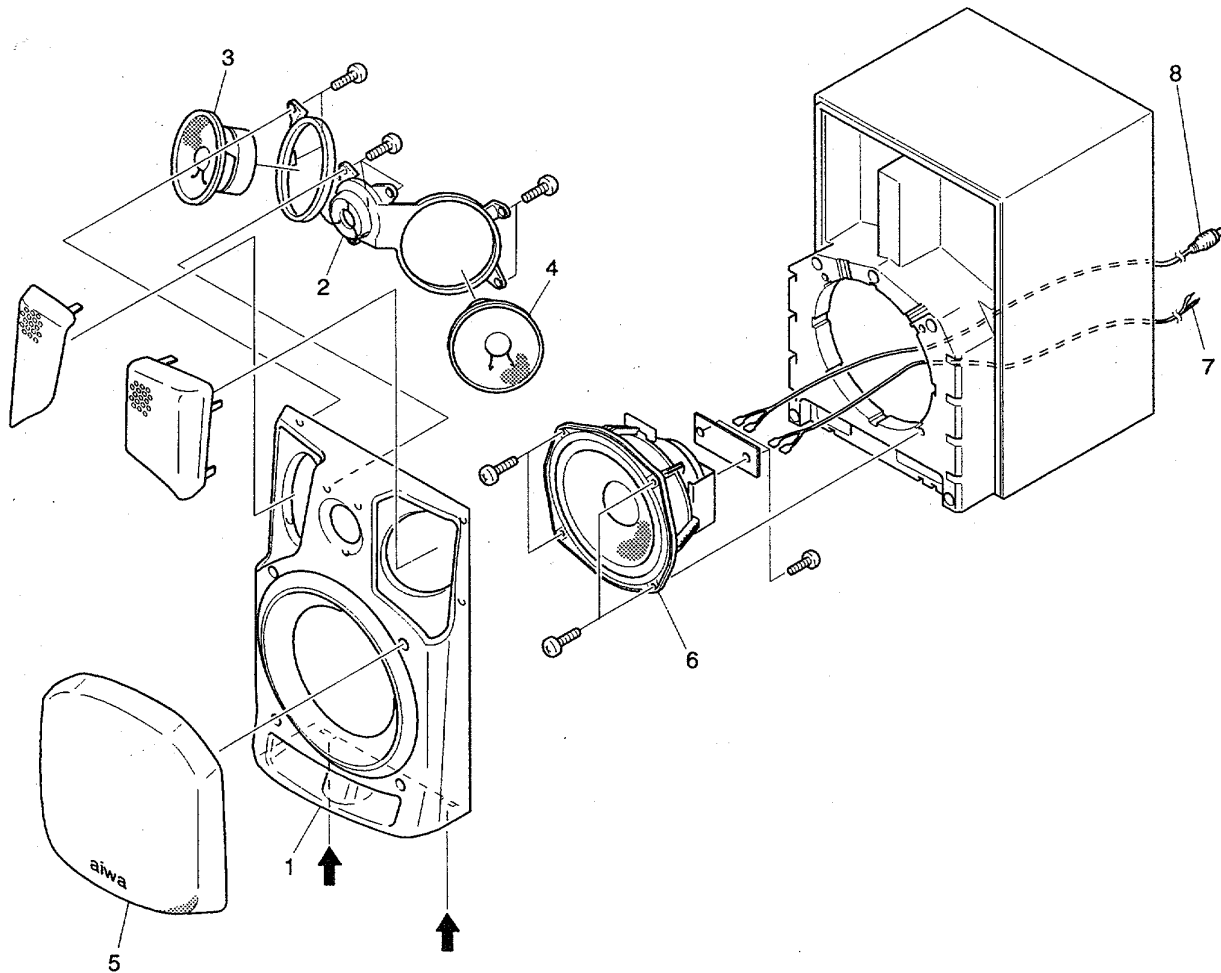

SPEAKER PARTS LIST


If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS5-001-019		PANEL FR<EXCEPT YJST, YJSTCC, YST, YJ7STL, YSTN>
1	86-NS5-027-019		PANEL FR ST<YJST, YJSTCC, YST, YJ7STL, YSTN>
2	86-NS5-028-019		HLD R SQ ASSY
3	86-NS5-604-019		SPEAKER TWEETER
4	86-NS5-606-019		SPEAKER
5	86-NS5-007-019		GRILL FRAME ASSY
6	86-NS5-602-019		SPEAKER WOOFER<EXCEPT YABNL, YST>
6	86-NS6-602-019		SPEAKER WOOFER<YABNL, YST>
7	83-NS5-613-019		SPEAKER CORD ASSY
8	85-NS6-611-019		SPEAKER CORD Y/B

SX-FNV500 / FNV700 / FNK23<500YL, 700Y, 700YJ, FNK23YJST> SPEAKER DISASSEMBLY INSTRUCTIONS

矢印の位置にマイナスドライバーを差し込んで、パネルをはずして、各々のスピーカー・ユニットのビスを取り、スピーカー・ユニットをはずしてください。

 Insert a flat - bladed screwdriver into the position indicated by the arrows and remove the panel.
Remove the screws of each speaker unit and then remove the speaker units.

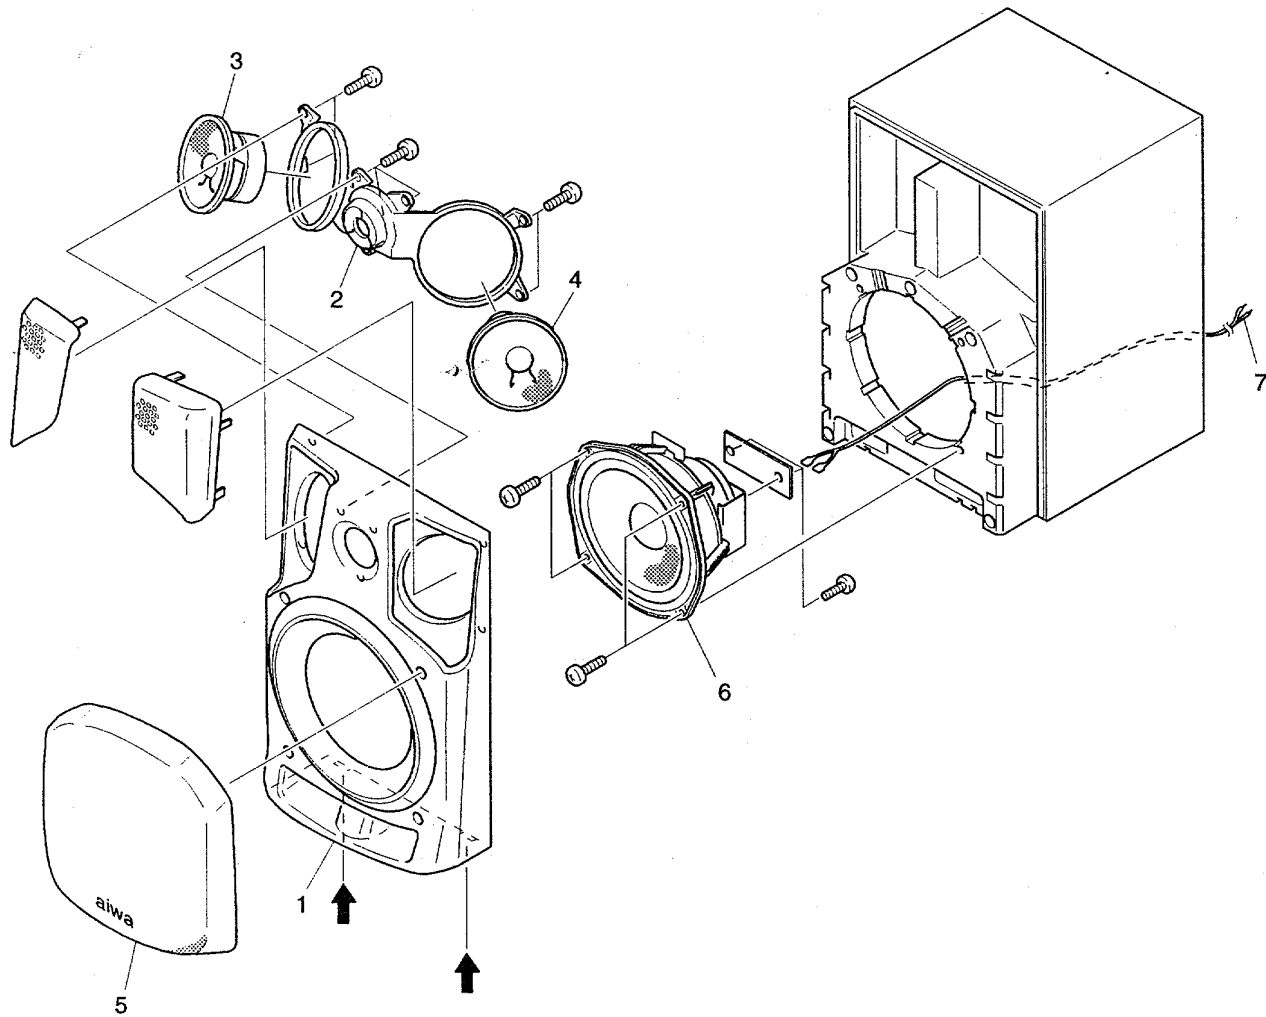

SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS5-001-019		PANEL FR
2	86-NS5-028-019		HLDR SQ ASSY
3	86-NS5-604-019		SPEAKER TWEETER
4	86-NS5-606-019		SPEAKER
5	86-NS5-007-019		GRILL FRAME ASSY
6	86-NS5-608-019		SPEAKER WOOFER<700YJ, 500YL>
6	86-NS6-602-019		SPEAKER WOOFER<700Y, FNK23YJST>
7	85-NS6-611-019		SPEAKER CORD Y/B

SPEAKER DISASSEMBLY INSTRUCTIONS

NOTE : Refer this disassembly instructions when servicing models for SX-FZ3400, SX-Z3250, SX-NV300/ NV3000/NV3001, SX-NAV70/NAV700, SX-NAV90/NAV900 and SX-NAV80/NAV800.

矢印の位置にマイナスドライバーを差し込んで、パネルをはずして、各々のスピーカー・ユニットのビスを取り、スピーカー・ユニットをはずしてください。

 Insert a flat - bladed screwdriver into the position indicated by the arrows and remove the panel.
Remove the screws of each speaker unit and then remove the speaker units.

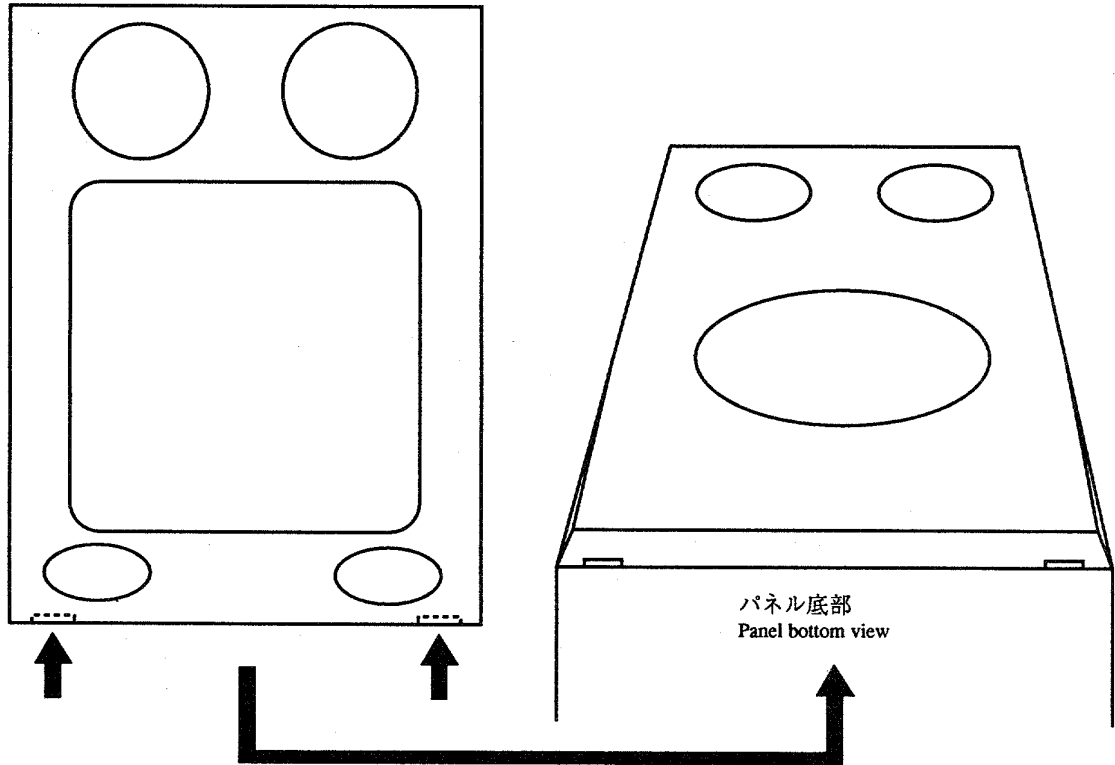

SX-FZ3400<YJ, YL> SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-VS2-004-010		PANEL FR
2	86-VS2-006-010		ADAPTOR ASSY
3	86-VS2-601-010		SPEAKER WOOFER
4	83-NS5-608-010		SPEAKER MID H
5	83-NS5-610-010		SPEAKER
6	86-VS2-009-010		GRILL FRAME ASSY
7	85-MS3-610-010		SPEAKER CORD ASSY Y/B
8	84-MS3-611-010		SPEAKER CORD ASSY

**SX-Z3250<Y, YJ, YL>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-VS4-006-010		GRILL FRAME ASSY<YJ, YL>
1	85-VS4-012-010		GRILL FRAME ASSY E<Y>
2	85-VS4-001-010		PANEL FR R<YJ, YL>
3	85-VS4-004-010		PANEL FR L<YJ, YL>
4	86-NSS-003-010		PANEL TW ASSY<YJ, YL>
5	86-MSS-602-010		SPEAKER W 220<YJ, YL>
5	85-VS4-601-010		SPEAKER WOOFER<Y>
6	84-VS3-603-010		SPEAKER TW 60<YJ, YL>
6	85-VS4-603-010		SPEAKER TWEETER<Y>
7	85-VS4-605-010		SPEAKER CERAMIC<Y>
8	83-096-614-010		SPEAKER CORD<YJ, YL>

**SX-NV300 / NV3000 / NV3001 / NK21
<300YJBNC, 300YLBNC, 300YBNC, 3000YUBNC, 300B, 3001YUWNC, 300YJBNC, 300YBNC, 300YJ7, 300YJBNC1, 300YJBNC1C, 3001YUWNT, 3000YUBNT, 300YBNC, 300YBNC1, 300YBNC, NK21YJSTNC>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NST-006-010		GRILL FRAME ASSY<EXCEPT YUBNC, YUWNC, YUWNT, NK21YJSTNC>
1	86-NSU-016-010		GRILL FRAME ASSY W<YUWNC, YUWNT>
1	86-NSU-006-010		GRILL FRAME ASSY D<EXCEPT YJBNC, YLBNC, YBNC, B, YUWNC, YJ7BNC, YBNC1, YJBNC, YUWNT, YBNC2>
2	86-NST-001-010		PANEL FR R<EXCEPT YUBNC, YUWNC, YUWNT, NK21YJSTNC>
2	86-NSU-004-010		PANEL FR R D<YUBNC, YJBNC1, YJBNC1C, YUBNT, YLBNC1, YBNC1>
2	86-NSU-019-010		PANEL FR R ST<NK21YJSTNC>
3	86-NST-002-010		PANEL FR L<EXCEPT YUBNC, YUWNC, YUWNT, NK21YJSTNC>
3	86-NSU-005-010		PANEL FR L D<YUBNC, YJBNC1, YJBNC1C, YUBNT, YLBNC1, YBNC1>
3	86-NSU-020-010		PANEL FR L ST<NK21YJSTNC>
4	86-NSU-602-010		SPEAKER WOOFER<YBNC1, YBNC2>
4	86-NS5-608-010		SPEAKER WOOFER<EXCEPT YBNC1, YBNC2>
5	85-NS7-604-010		SPEAKER TWEETER<EXCEPT YBNC1, YBNC2>
5	86-NSU-604-010		SPEAKER TWEETER<YBNC1, YBNC2>
6	83-096-614-010		SPEAKER CORD
7	82-NSE-610-010		CERAMIC
8	83-NS8-009-010		DIAPHRAGM

**SX-NAV70 / NAV700<70YJ, 70Y, 700YU, 70YSTNC, 70YBNC1, 70YBNC2, 70YSTNY1>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NST-013-010		PANEL FR L ST<YSTNC, YSTNY1>
1	86-NST-002-010		PANEL FR L<YJ, Y, 700YU, YBNC1, YBNC2>
2	86-NST-001-010		PANEL FR R<YJ, Y, 700YU, YBNC1, YBNC2>
2	86-NST-012-010		PANEL FR R ST<YSTNC, YSTNY1>
3	86-NST-003-010		PANEL BA
4	86-NST-006-010		GRILL FRAME ASSY
5	86-NST-608-010		SPEAKER W 140<YBNC1, YBNC2, YSTNY1>
5	86-NS5-608-010		SPEAKER W 140<Y, 700YU, YSTNC>
5	86-NS5-602-010		SPEAKER W 140H<YJ>
6	86-NST-604-010		SPEAKER T 60<YJ, Y, 700YU, YSTNC>
6	86-NST-610-010		SPEAKER T 60<YBNC1, YBNC2, YSTNY1>
7	82-NSE-610-010		CERAMIC
8	83-NS8-009-010		DIAPHRAGM
9	83-096-614-010		SPEAKER CORD

**SX-NAV90 / NAV900<90YJ, 90Y, 90YST, 900YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NSR-005-010		GRILL FRAME ASSY R
2	86-NSR-006-010		GRILL FRAME ASSY L
3	86-NSR-009-010		PANEL FR R<EXCEPT YST>
3	86-NSR-016-010		PANEL FR R ST<YST>
4	86-NSR-010-010		PANEL FR L<EXCEPT YST>
4	86-NSR-017-010		PANEL FR L ST<YST>
5	86-NSR-602-010		SPEAKER W 140 H<EXCEPT Y, YST>
5	86-NSR-606-010		SPEAKER W 140<Y, YST>
6	86-NSR-604-010		SPEAKER TW 60 H
7	83-096-614-010		SPEAKER CORD
8	82-NSE-610-010		CERAMIC

**SX-NAV80 / NAV800 / NM820<80YJBNC, 80YL, 80YBNC, 800YUBNC, 80YST, 800YUBNA, 820YJTNL, 820YTNL, 80YJ7, 80YBN, 80YJBNC, 80YABNT, 80YABNM, 80B, 820YJBNL, 820B>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NSS-009-010	-	PANEL FR 80 R<EXCEPT YST, 820YJTNL, 820YTNL, 820YJBNL, 820B>
1	86-NSS-011-010	-	PANEL FR ST 80 R<YST>
2	86-NSS-010-010	-	PANEL FR 80 L<EXCEPT YST, 820YJTNL, 820YTNL, 820YJBNL, 820B>
2	86-NSS-012-010	-	PANEL FR ST 80 L<YST>
3	86-NSR-005-010	-	GRILL FRAME ASSY R<EXCEPT 820YJBNL, 820B>
4	86-NSR-006-010	-	GRILL FRAME ASSY L<EXCEPT 820YJBNL, 820B>
5	86-NSR-606-010	-	SPEAKER W 140<YBNC, 800YUBNC, YST, 800YUBNA>
5	86-NSS-602-010	-	SPEAKER W 140 H<YJBNC, YL, YJ7, YBN, YJBNC, YABNT, YABNM>
5	86-NSM-602-010	-	SPEAKER W 160<820YJTNL, 820YTNL, 820YJBNL, 820B>
6	86-NSM-604-010	-	SPEAKER TW 25<820YJTNL, 820YTNL, 820YJBNL, 820B>
6	86-NSR-604-010	-	SPEAKER TW 60<EXCEPT 820YJTNL, 820YTNL, 820YJBNL, 820B, 80B>
7	82-NSE-610-010	-	CERAMIC<EXCEPT 820YJTNL, 820YTNL, 820YJBNL, 820B>
8	83-096-614-010	-	SPEAKER CORD<EXCEPT 820YJTNL, 820YTNL, 820YJBNL, 820B>
9	86-NSG-004-010	-	GRILL FRAME ASSY<820YJTNL, 820YTNL, 820YJBNL, 820B>

SX-CR423<YJ, Y, YST>

NOTE : This SX-CR423 speaker contains SX-C400(center speaker) and SX-R230(rear speaker).
Refer to page 8 and 10 when servicing.

SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-NSX-001-010		PANEL FR(R230)<YJ, Y>
1	85-NSX-009-010		PANEL FR(R230)<YST>
2	85-NSX-002-010		PANEL REAR(R230)<YJ, Y>
2	85-NSX-010-010		PANEL REAR(R230)<YST>
3	85-NSX-005-010		GRILL FRAME ASSY(R230)
4	85-NSX-601-010		SPEAKER(R230)
5	81-VSA-010-010		SPEAKER CORD(R230)
6	85-NSY-001-010		PANEL FR(C400)<YJ, Y>
6	85-NSY-011-010		PANEL FR ST(C400)<YST>
7	85-NSY-002-010		PANEL REAR(C400)<YJ, Y>
7	85-NSY-012-010		PANEL REAR ST(C400)<YST>
8	85-NSY-010-010		GRILL FRAME ASSY(C400)
9	85-NSY-602-010		SPEAKER(C400)
10	83-NSM-010-010		SPEAKER CORD(C400)

**SX-R230<YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-NSX-001-010		PANEL FR
2	85-NSX-002-010		PANEL REAR
3	81-VSA-010-010		SPEAKER CORD
4	85-NSX-005-010		GRILL FRAME ASSY
5	85-NSX-601-010		SPEAKER
6	85-NSX-901-010		IB YU(ESF)

**SX-R240<Y, YJ>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-NSV-001-010		PANEL FR
2	85-NSX-005-010		GRILL FRAME ASSY
3	85-NSL-601-010		SPEAKER
4	81-VSA-010-010		SPEAKER CORD

**SX-SR250 / R260<Y, YJ, YL, 260YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-NSX-011-010		PANEL FR R260<260YU>	5	83-NSX-008-010		PANEL TW ASSY
2	83-NSX-004-010		GRILL FRAME ASSY	6	83-NSX-901-010		IB Y<EXCEPT 260YU>
3	83-VS2-601-010		SPEAKER<EXCEPT 260YU>	6	83-NSX-902-010		IB YU(260)<260YU>
3	83-NSX-601-010		SPEAKER<260YU>				
4	81-VSA-010-010		SPEAKER CORD				

**SX-SLM6<YT, YJ>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-CP2-003-010		GRILL FRAME ASSY
2	86-CP2-602-010		SPEAKER W
3	86-CP2-604-010		SPEAKER T

**SX-SL300<B, W, D, G>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-CL7-112-010		PANEL FR<B,D>	3	86-CL7-117-010		NET W<W>
1	86-CL7-116-010		PANEL FR W<W>	4	86-CL7-119-010		SPEAKER
1	86-CL7-220-010		PANEL FR G<G>	5	86-CL7-231-010		SPEAKER CODE
2	86-CL7-113-010		GRILL FRAME	6	86-NS5-012-010		BADGE 35
3	86-CL7-118-010		NET<B,D,G>	7	86-CL7-232-010		CERAMIC

**SX-SL600 / SLAP1MK3<Y, YJ, YL, YG, AP1MK3Y>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-CP6-001-010		PANEL FR R<EXCEPT YG,YL>	2	86-CP6-006-010		PANEL FR L L<YL>
1	86-CP6-003-010		PANEL FR R G<YG>	3	86-CP6-602-010		SPEAKER WOOFER
1	86-CP6-005-010		PANEL FR R L<YL>	4	86-CP6-603-010		SPEAKER TWEETER
2	86-CP6-002-010		PANEL FR L<EXCEPT YG,YL>				
2	86-CP6-004-010		PANEL FR L G<YG>				

**SX-SL800<Y, YJ>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-CP5-001-010		PANEL FR R	6	86-CP5-602-010		SPEAKER W
2	86-CP5-002-010		PANEL FR L	7	85-CP5-604-010		SPEAKER TW
3	86-CP5-005-010		GRILL FRAME ASSY R	8	83-096-614-010		SPEAKER CORD
4	86-CP5-006-010		GRILL FRAME ASSY L	9	85-CP5-611-010		SPEAKER CORD Y/B
5	86-CP5-604-010		SPEAKER MID				

**SX-C300<Y, YJ, YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-NSM-007-010		GRILL FRAME ASSY
2	83-NSM-602-010		SPEAKER
3	83-NSM-010-010		SPEAKER CORD
4	83-NSM-901-010		IB Y<YJ,Y>
4	83-NSM-902-010		IB YU<YU>

**SX-C400<YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-NSY-001-010		PANEL FR
2	85-NSY-002-010		PANEL REAR
3	85-NSY-010-010		GRILL FRAME ASSY
4	85-NSY-602-010		SPEAKER
6	83-NSM-010-010		SPEAKER CORD
7	85-NSY-901-010		IB YU(ESF)-400

**SX-R210<Y, YJ, YU, YHS>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-VS3-001-010		CABI FRONT
2	83-VS3-004-010		GRILL FRAME ASSY
3	83-VS3-601-010		SPEAKER
4	81-VSA-010-010		SPEAKER CORD
5	81-VSA-009-010		CORD BUSH
6	87-351-099-010		SCREW VT+3-15
7	87-342-096-010		SCREW VT+3-10
8	87-302-124-010		SW+3.1-25
9	83-VS3-904-010		IB HS<YHS>
9	83-VS3-902-010		IB U<YU>
9	83-VS3-901-010		IB, Y<EXCEPT YU, YHS>

**SX-R220 / SR220<Y, YJ, YJ1, YL, YL1, YU, SR220YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-VS3-004-010		- GRILL FRAME ASSY
2	85-NSL-601-010		- SPEAKER
3	83-VS3-901-110		- IB Y<Y, YJ, YL>
3	83-VS3-902-110		- IB U<YU>
3	85-NSL-902-010		- IB Y<YJ1, YL1>
3	85-NSL-903-010		- IB U<SR220YU>

**SX-Z240 / Z24<Y, YL, YBNC, Z24YUBNC, Z24YUBNA>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MSU-001-010		PANEL FR<EXCEPT YBNC, Z24YUBNA>	3	85-MS5-611-010		SPEAKER W<YBNC>
2	86-MSU-002-010		GRILL FRAME ASSY<EXCEPT YBNC, Z24YUBNA>	4	85-MS5-613-010		SPEAKER TW<YBNC>
2	86-MSU-011-010		GRILL FRAME ASSY<Z24YUBNA>	4	85-MS5-605-010		SPEAKER TW<EXCEPT YBNC>
2	85-MS5-017-010		GRILL FRAME ASSY E<YBNC>	5	85-MS5-607-010		CERAMIC<EXCEPT YBNC, Z24YUBNA>
3	85-MS5-603-010		SPEAKER W<EXCEPT YBNC>				

**SX-Z260 / Z26<Y, Z26YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MSR-003-010		PANEL FR R<Z26YU>	4	86-VSS-601-010		SPEAKER W<Y>
2	86-MSR-004-010		PANEL FR L<Z26YU>	5	84-NS6-604-010		SPEAKER TW<Z26YU>
3	86-MSN-004-010		GRILL FRAME ASSY<Z26YU>	5	86-VSR-603-010		SPEAKER TW<Y>
3	86-MSR-010-010		GRILL FRAME Y1 ASSY<Y>	6	86-VSR-605-010		CERAMIC<Y>
4	86-MSM-601-010		SPEAKER W<Z26YU>				

**SX-Z270 / Z27<YBNC, YBNC, Z27YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MSN-001-010		PANEL FR R<EXCEPT YBNC>	5	86-VS2-601-010		SPEAKER W<EXCEPT YBNC>
2	86-MSN-002-010		PANEL FR L<EXCEPT YBNC>	6	84-VS3-603-010		SPEAKER TW<EXCEPT YBNC>
3	86-MSP-001-010		PANEL TW R<EXCEPT YBNC>	6	86-MSR-603-010		SPEAKER TW<YBNC>
4	86-MSP-002-010		PANEL TW L<EXCEPT YBNC>	7	86-MSR-604-010		CERAMIC<YBNC>
5	86-MSR-601-010		SPEAKER W<YBNC>	8	86-MSU-004-010		GRILL FRAME ASSY<EXCEPT YBNC>
				8	86-MSP-010-010		GRILL FRAME ASSY<YBNC>

**SX-Z280<Y, YJ>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MSN-001-010		PANEL FR R<EXCEPT Y>	4	86-VSP-601-010		SPEAKER W 160<Y>
2	86-MSN-002-010		PANEL FR L<EXCEPT Y>	5	86-VSR-603-010		SPEAKER T 60<Y>
3	86-MSN-004-010		GRILL FRAME ASSY<EXCEPT Y>	5	84-VS3-603-010		SPEAKER TW<EXCEPT Y>
3	86-MSP-010-010		GRILL FRAME ASSY<Y>	6	86-VSR-605-010		CERAMIC<Y>
4	86-VS2-601-010		SPEAKER W<EXCEPT Y>				

**SX-Z290<YJ, YL, YJ7>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MSN-001-010		PANEL FR R<EXCEPT YJ7>	4	86-MSN-004-010		GRILL FRAME ASSY
1	86-MSN-013-010		PANEL FR ST R<YJ7>	5	86-MSP-602-010		SPEAKER W YJ<EXCEPT YL>
2	86-MSN-002-010		PANEL FR L<EXCEPT YJ7>	5	86-MSP-601-010		SPEAKER W YL<YL>
2	86-MSN-014-010		PANEL FR ST L<YJ7>	6	86-NS6-604-010		SPEAKER TW
3	86-MSN-003-010		PANEL BA				

**SX-FZ2600<Y, YJ, YL, YJST>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MS5-001-010		PANEL FR<EXCEPT YJST>	4	86-MS5-609-010		SPEAKER W YL<YL>
1	86-MS5-012-010		PANEL FR ST<YJST>	5	86-MS5-605-010		SPEAKER TW
2	86-MS5-019-010		HLDR SQ ASSY	6	86-MS5-607-010		SPEAKER
3	86-MS5-017-010		GRILL FRAME ASSY	7	85-MS3-611-010		SPEAKER CORD ASSY
4	86-MS5-603-010		SPEAKER W YB<EXCEPT YL>	8	85-MS3-610-010		SPEAKER CORD ASSY Y/B

**SX-FZ2700<Y, YJ, YL, YJST>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-VS2-001-010		PANEL FR<EXCEPT YJST>	5	86-NS5-608-010		SPEAKER TW
2	86-VS2-002-010		PANEL BA	6	86-NS5-610-010		SPEAKER
3	86-VS2-008-010		GRILL FRAME ASSY				
4	86-VS2-603-010		SPEAKER W<EXCEPT Y>				
4	86-VS2-605-010		SPEAKER W<Y>				

**SX-AZ2800<Y, YJ, YL, YJ7, YJST, YJ7ST>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MS3-001-010		PANEL FR R<EXCEPT YJST, YJ7ST>	8	86-NS4-606-010		SPEAKER
1	86-MS3-023-010		PANEL FR ST R<YJST, YJ7ST>	9	86-NS4-608-010		SPEAKER TW
2	86-MS3-002-010		PANEL FR L<EXCEPT YJST, YJ7ST>	10	85-NS6-611-010		SPEAKER CORD Y/B
2	86-MS3-024-010		PANEL FR ST L<YJST, YJ7ST>	11	85-NS5-613-010		SPEAKER CORD ASSY
3	86-MS3-025-010		GRILL FRAME ASSY R				
4	86-MS3-026-010		GRILL FRAME ASSY L				
5	86-MS3-011-010		PANEL TW R				
6	86-MS3-012-010		PANEL TW L				
6	86-MS3-601-010		SPEAKER W				
7	86-NS4-604-010		SPEAKER MID				

**SX-AZ3450<Y>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-MS3-025-010		GRILL FRAME ASSY R	6	86-NS4-604-010		SPEAKER MID
2	86-MS3-026-010		GRILL FRAME ASSY L	7	86-NS4-606-010		SPEAKER
3	86-MS3-001-010		PANEL FR R	8	86-NS4-608-010		SPEAKER TW
4	86-MS3-002-010		PANEL FR L				
5	86-NS3-601-010		SPEAKER W				

**SX-Z4400<YBNI, YBNI1, YJBNI>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-VS4-011-010		GRILL FRAME ASSY<YBNI, YBNI1>	5	86-VSR-603-010		SPEAKER TW<YBNI>
1	85-VS4-006-010		GRILL FRAME ASSY<YJBNI>	5	84-VS3-603-010		SPEAKER TW<YJBNI>
2	85-VS4-001-010		PANEL FR R<YJBNI>	6	83-096-614-010		SPEAKER CORD<YJBNI>
3	85-VS4-004-010		PANEL FR L<YJBNI>	7	86-VSR-605-010		CERAMIC<YBNI>
4	85-VS4-601-010		SPEAKER W<YBNI1>	7	85-VS4-605-010		CERAMIC<YBNI1>
4	86-VSR-602-010		SPEAKER W<YJBNI, YBNI>				
4	86-VSR-602-010		SPEAKER W<YBNI>				
5	85-VS4-603-010		SPEAKER T<YBNI1>				

**SX-Z7400<Y>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-VSM-601-010		SPEAKER W
2	86-MSR-603-010		SPEAKER TW
3	86-MSR-604-010		CERAMIC
4	86-MSP-010-010		GRILLE FRAM ASSY

**SX-Z9400<Y, YJ, YL>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-VS1-002-010		PANEL W	6	83-149-611-010		TERMINAL
2	86-VS1-003-010		PANEL TW ASSY	7	81-672-612-010		SPEAKER CORD
3	86-VS1-009-010		GRILL FRAME ASSY				
4	86-VS1-602-010		SPEAKER WOOFER				
5	84-VS3-603-010		SPEAKER TWEETER				

**SX-NV200 / NV2000<Y, YJ, YL, NV2000YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-CPC-003-010		GRILL FRAME ASSY R
2	86-CPC-006-010		GRILL FRAME ASSY L
3	86-CPC-605-010		SPEAKER

**SX-NV210 / NV2100<YBNC, YBNC1, YJ, YL, NV2100YUBNC, NV2100YUBNC1>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NSZ-001-010		PANEL, FR<EXCEPT YBNC>	3	86-NSZ-602-010		SPEAKER, CERA 14<EXCEPT YBNC>
2	86-NSZ-601-010		SPEAKER, 120<NV2100YUBNC>	4	86-NSZ-003-010		NET<EXCEPT YBNC>
2	86-NSZ-603-010		SPEAKER, 120H<YBNC1>	5	86-NSZ-610-010		CODE, SP
2	86-NSZ-605-010		SPEAKER, 120D<NV2100YUBNC1>				
2	86-NSZ-607-010		SPEAKER, 120DH<YJ, YL, YBNC>				

**SX-NAVH8 / NAVH80<Y, YJ, YT, TN, T1, T2, 80YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NSM-001-010		PANEL FR
2	86-NSM-004-010		GRILL FRAME ASSY
3	83-096-614-010		SPEAKER CORD
4	86-NS2-602-010		SPEAKER W 140
5	83-MS2-603-010		SPEAKER TW 60

**SX-NAVH9 / NAVH90 / NM9<Y, YJ, YL, YT, YJ7, 90YU, NM9YT>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NSM-001-010		PANEL FR<EXCEPT NM9YT>	5	86-NSM-604-010		SPEAKER TW 25<NM9YT>
2	86-NSM-004-010		GRILL FRAME ASSY	5	83-MS2-603-010		SPEAKER TW 60<EXCEPT NM9YT>
3	83-096-614-010		SPEAKER CORD	6	86-NSM-610-010		TERMINAL ASSY<EXCEPT NM9YT>
4	86-NS2-602-010		SPEAKER W 140<EXCEPT NM9YT>	6	85-NSG-610-010		TERMINAL ASSY<NM9YT>
4	86-NSM-602-010		SPEAKER W 160<NM9YT>				

**SX-ANH9 / ANH90<Y, YJ, YL, YJ7, ANH90YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS1-001-010		PANEL FR R
2	86-NS1-002-010		PANEL FR L
3	86-NS1-010-010		GRILL FRAME ASSY R
4	86-NS1-011-010		GRILL FRAME ASSY L
5	86-NS1-602-010		SPEAKER W 140H
6	86-NS4-604-010		SPEAKER M 80
7	86-NS4-606-010		SPEAKER S 80
8	86-NS4-608-010		SPEAKER T 50

**SX-FNH8<YJ, YL>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS2-001-010		PANEL FR
2	86-NS2-016-010		PANEL TW ASSY
3	86-NS2-006-010		GRILL FRAME ASSY
4	86-NS1-602-010		SPEAKER W 140 H
5	83-NS5-608-010		SPEAKER TW
6	83-NS5-610-010		SPEAKER

**SX-N340 / N410G / N3150 / N3200<340YB, 340YBNC, 340YJBNC, 340YJABN, 410GB, 3150YU, 3200YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	82-NS7-002-010		PANEL FR L<3200YU, 340YBNC, 340YJABN, 3150YU>
1	82-NS7-007-010		PANEL FR L H<340YJBNC, 340YBNC>
1	82-NS7-017-010	-	PANEL FR L 410<410GB>
2	82-NS7-003-010		PANEL FR R<3200YU, 340YBNC, 340YJABN, 3150YU>
2	82-NS7-008-010		PANEL FR R H<340YJBNC, 340YBNC>
2	82-NS7-018-010	-	PANEL FR R 410<410GB>
3	82-NS7-014-010	-	GRILL FRAME ASSY L
4	82-NS7-015-010	-	GRILL FRAME ASSY R
5	83-NS2-602-010	-	SPEAKER WOOFER
6	83-NS2-604-010	-	SPEAKER TWEETER
7	81-MSE-610-010	-	CERAMIC
8	83-096-614-010	-	SPEAKER CORD

**SX-FNF7 / FNF77<Y, YJ, YL, YJ7, YJST, FNF77YU>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NSA-001-010		PANEL FR <EXCEPT YJST>	4	86-NSA-608-010		SPEAKER, W 160H<Y, YU>
1	86-NSA-013-010		PANEL FR ST<YJST>	5	86-NS5-604-010		SPEAKER, T 80<EXCEPT Y, YU>
2	86-NSA-003-010		GRILL FRAME ASSY	5	86-NSA-610-010		SPEAKER, T 60H<Y, YU>
3	86-NSA-007-010		PANEL, TW	6	86-NS5-606-010		SPEAKER, 80
4	86-NSA-602-010		SPEAKER, W 160<EXCEPT Y, YU>	7	86-NSA-611-010		SPEAKER CODE

**SX-Z2890<YJ>
SPEAKER PARTS LIST**

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-MSD-002-010		GRILL, ASSY
2	85-MSD-005-010		PANEL, W
3	85-MSD-006-010		PANEL, M
4	85-MSD-007-010		PANEL, T ASSY
5	85-MSD-601-010		SPEAKER, WOOFER
6	83-NS2-603-010		SPEAKER, TWEETER
7	81-672-612-010		SPEAKER CODE

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER
	SERGE SUPPRESSOR
	CAP, CERA

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL
	ARM, SHAFT
	GUIDE, SHAFT
	STRAP
	S-SCREW
	HINGE
	S-SCREW
	SCREW, SERPART

サービス技術ニュース	
番号	連絡内容
G- -	
G- -	
G- -	

アイワ株式会社
AIWA CO.,LTD.

912204, 750038

Tokyo Japan