

### 3-5. WHITE BALANCE

#### WHITE BALANCE ADJUSTMENT

1. Input an all white signal from the pattern generator.
2. Enter into the Service Mode.
3. Enter into the 'Picture Adjustment' service menu.
4. Select 'Sub contrast' and adjust to 7.
5. Select the 'Green drive' and adjust so that the white balance becomes optimum.
6. Select the 'Blue drive' and adjust so that the white balance becomes optimum.
7. Press the 'TV' button on the remote commander to return to TV operation.

PICTURE ADJUSTMENT	
AFC mode	1
REF position	2
SCP BGR	1
SCP BGF	1
Trap fo	0
Sub contrast	Adj
Sub colour	Adj
Sub brightness	Adj
Sub hue	Adj
Green drive	Adj
Blue drive	Adj
Green cutoff	Adj
Blue cutoff	Adj
Gamma	0
Pre / overshoot	3
Y delay	3