


**SCHEMATIC DIAGRAM - TUNER SECTION -** • See page 18 for Note.



1      2      3      4      5      6      7      8      9

	Germany	AEP,UK,E
R3	330	
R4	330	33
R5	330	33

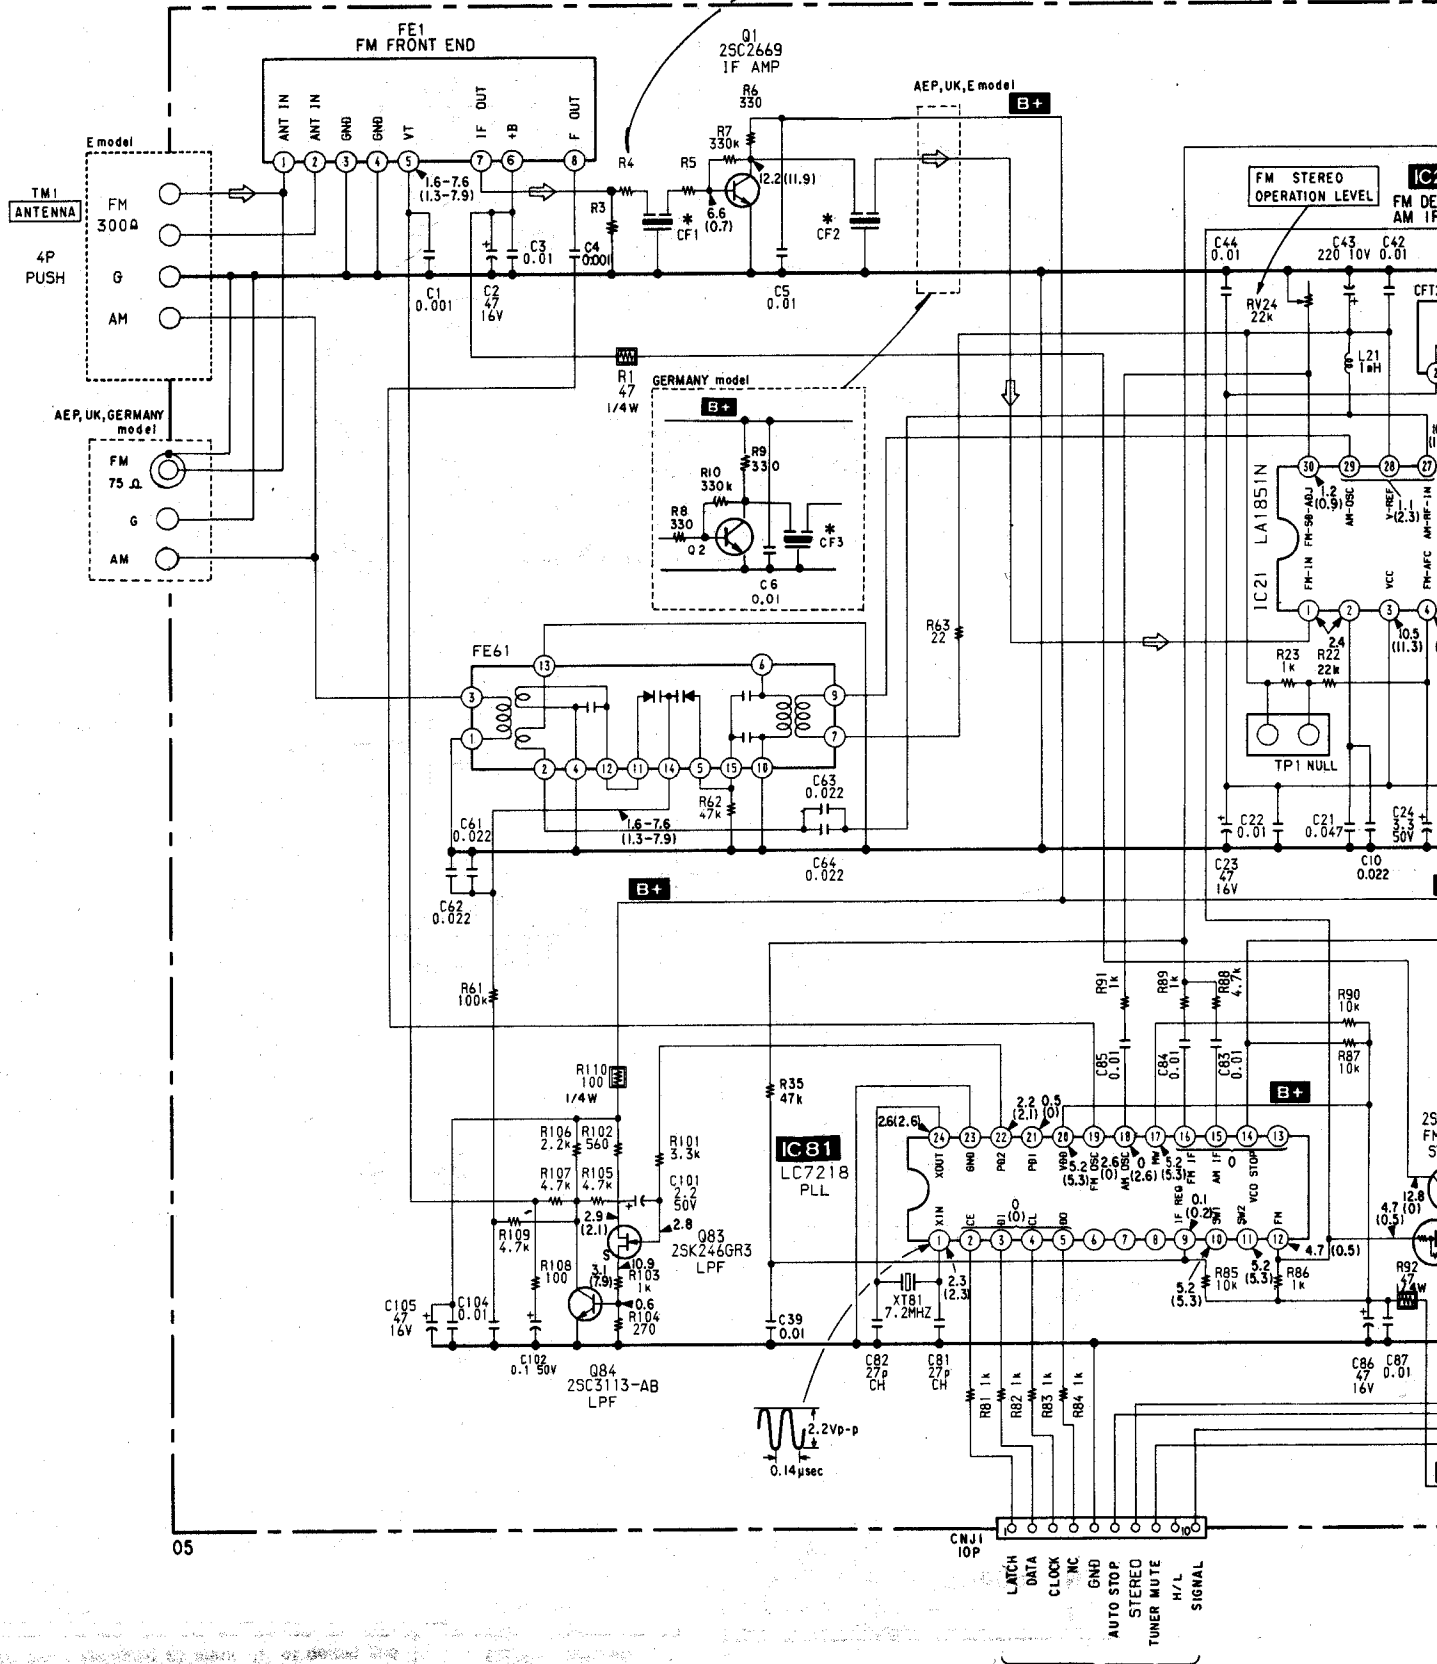

Germany	AEP.UK.E
330	
330	33
330	33


**[TUNER BOARD]**

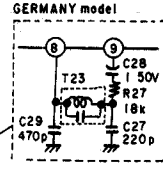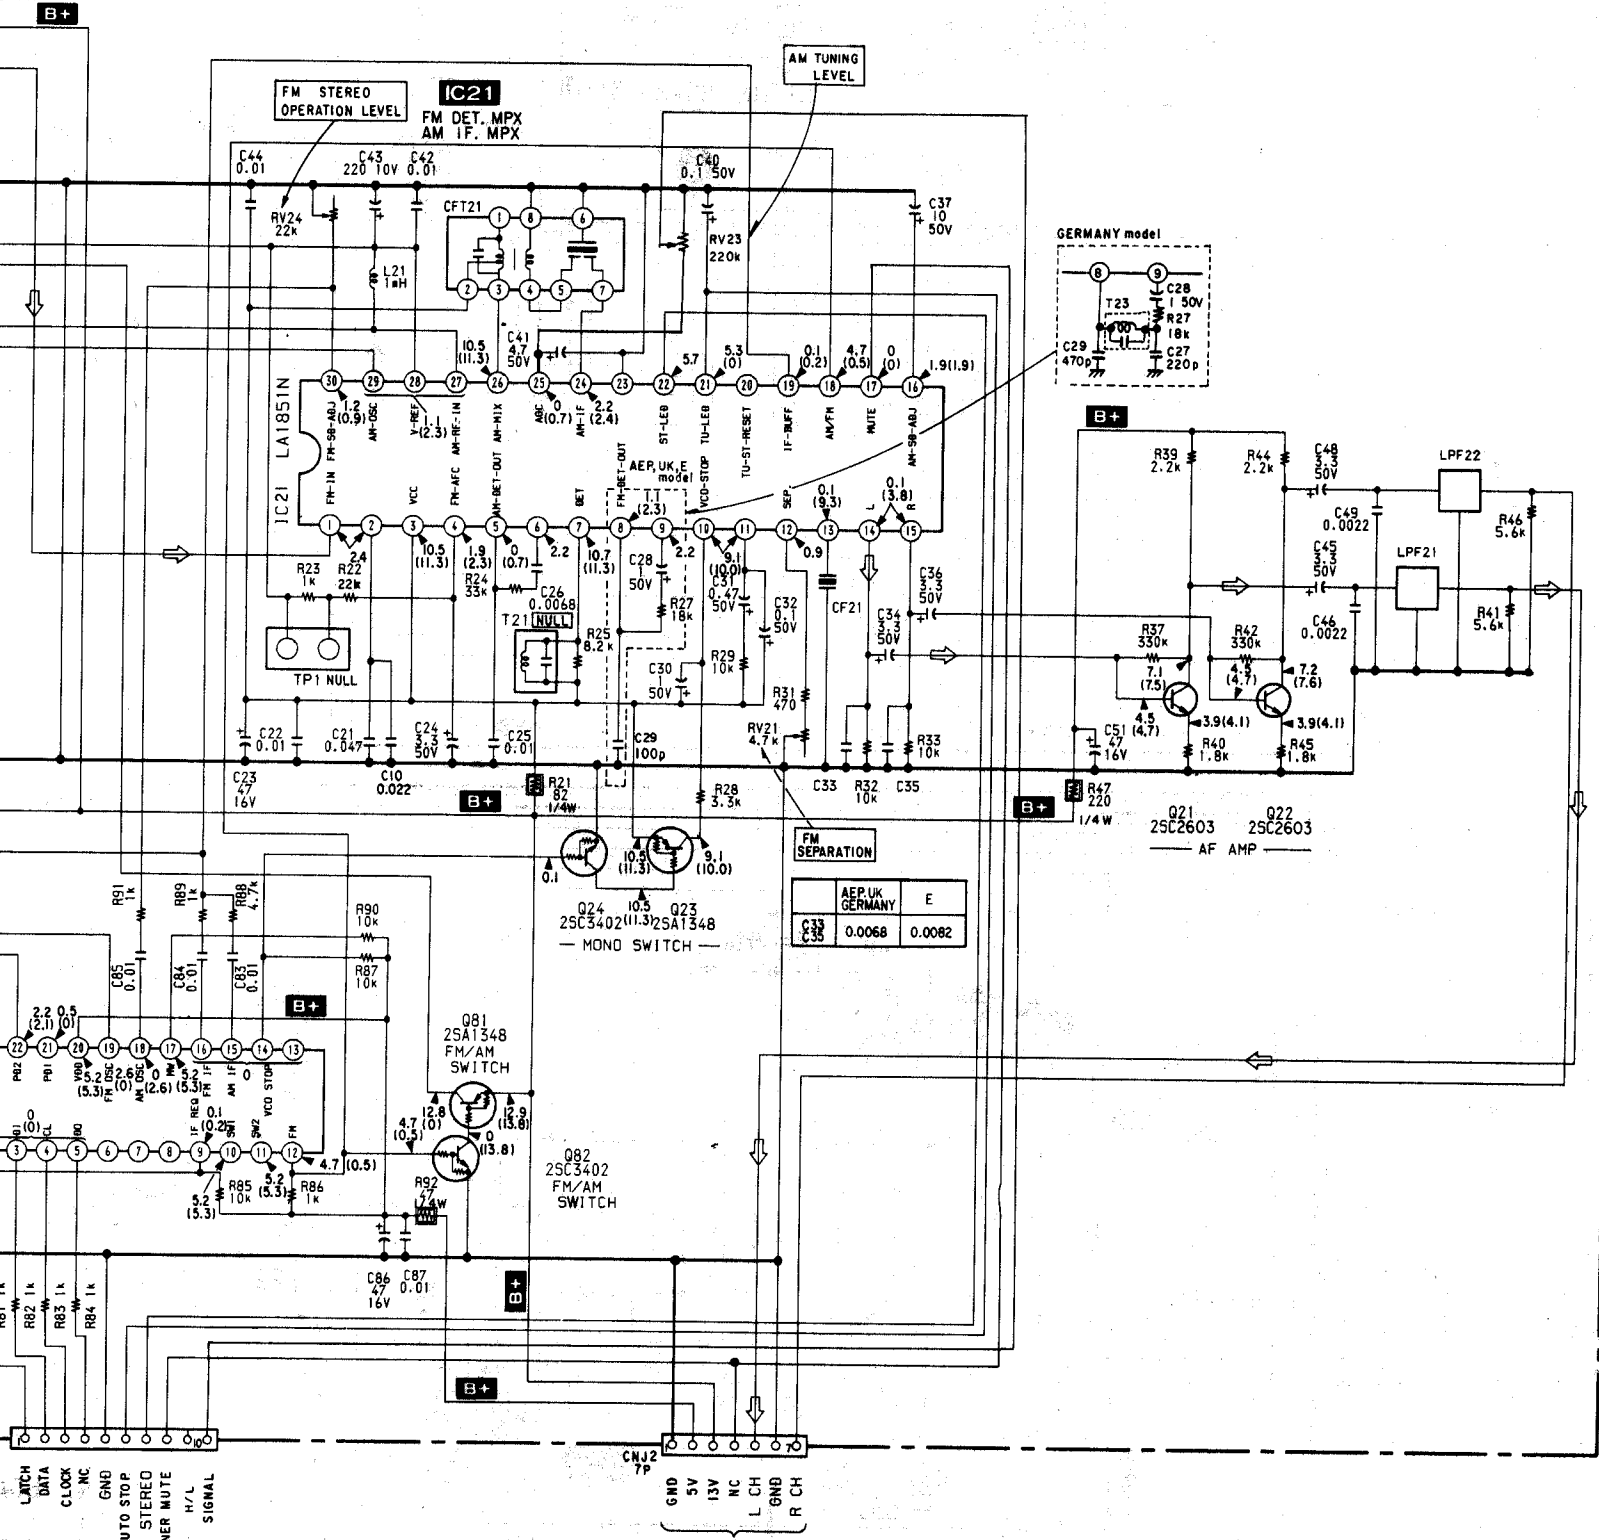

**FM SEPARATION**


AEP.UK	E
GERMANY	
C33	0.0068
C32	0.0082

Q21 25C2603  
Q22 25C2603  
AF AMP

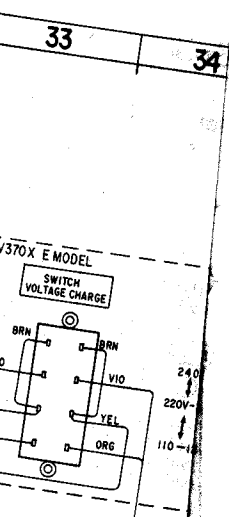

DJ

E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

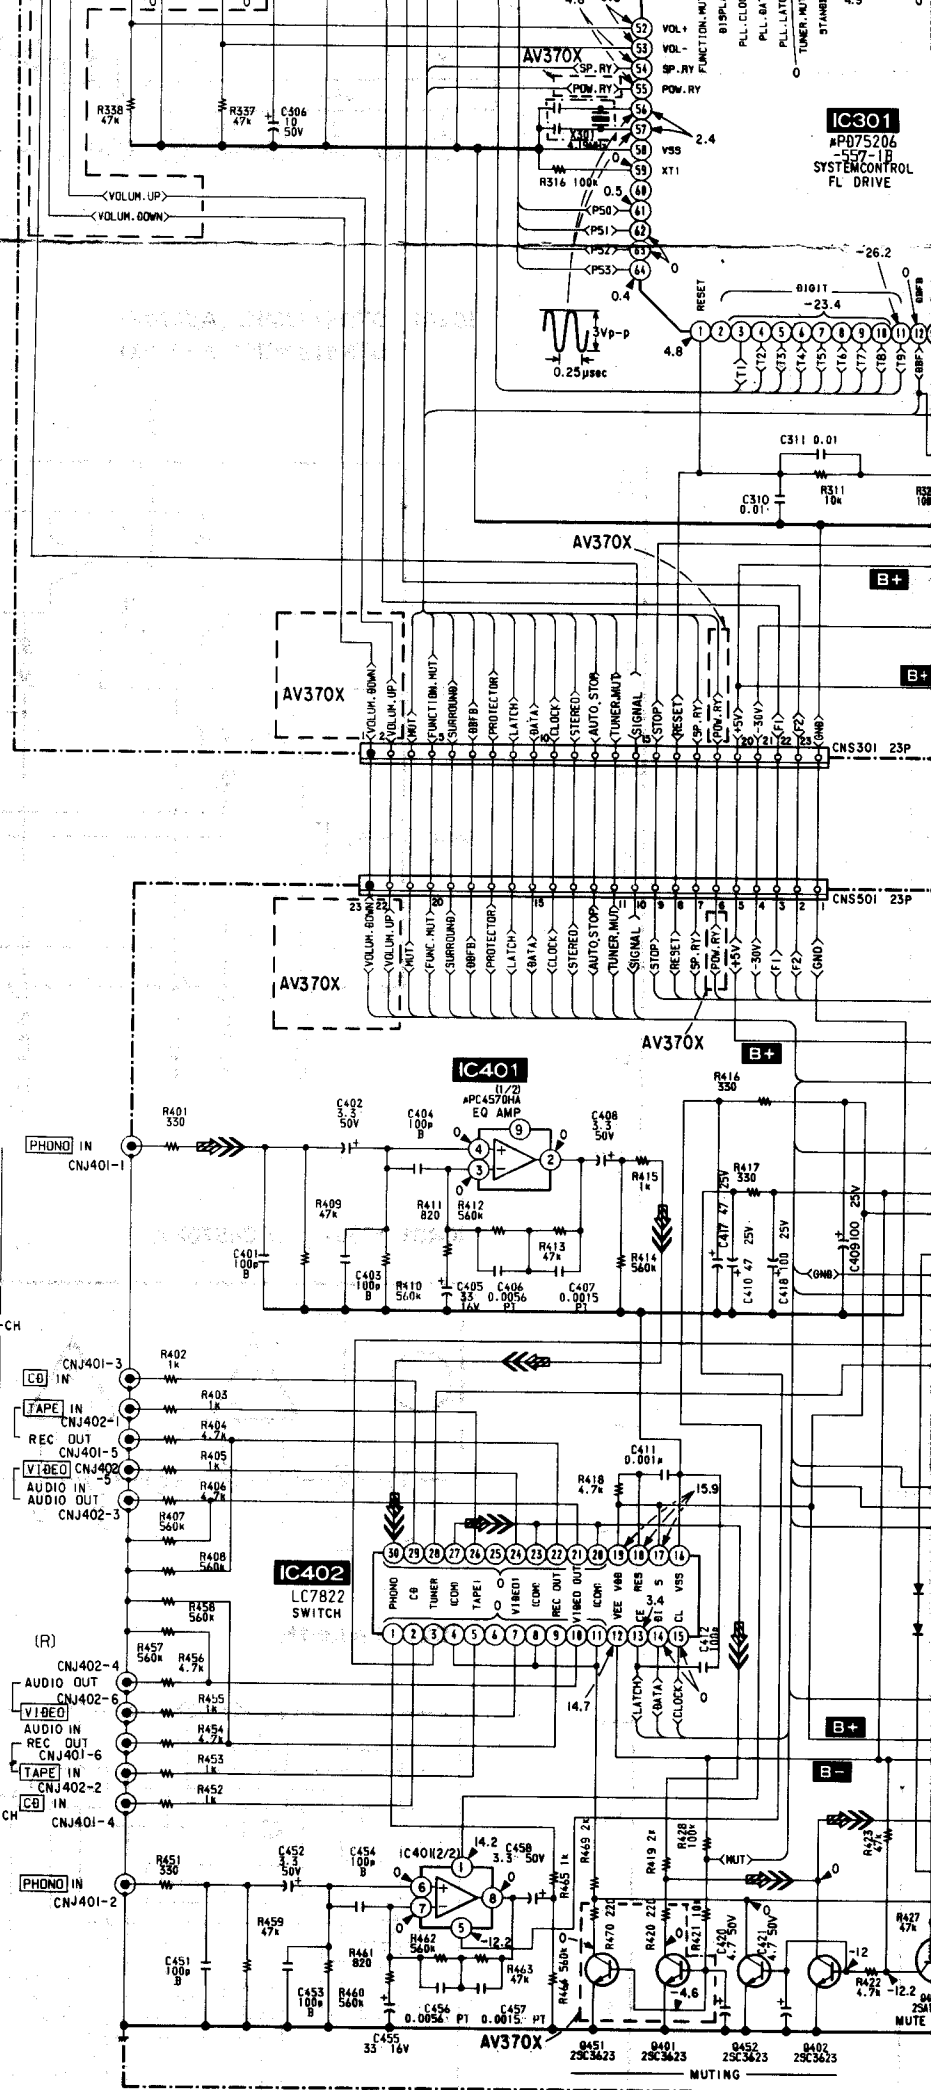

IC301  
APD75206  
557-1B  
SYSTEM CONTROL  
FL DRIVE

IC401  
APC4570HA  
EQ AMP


IC402  
LC7822  
SWITCH

AV370X  
MUTING



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L


[DISPLAY BOARD] FL301 FLUORESCENT INDICATOR TUBE

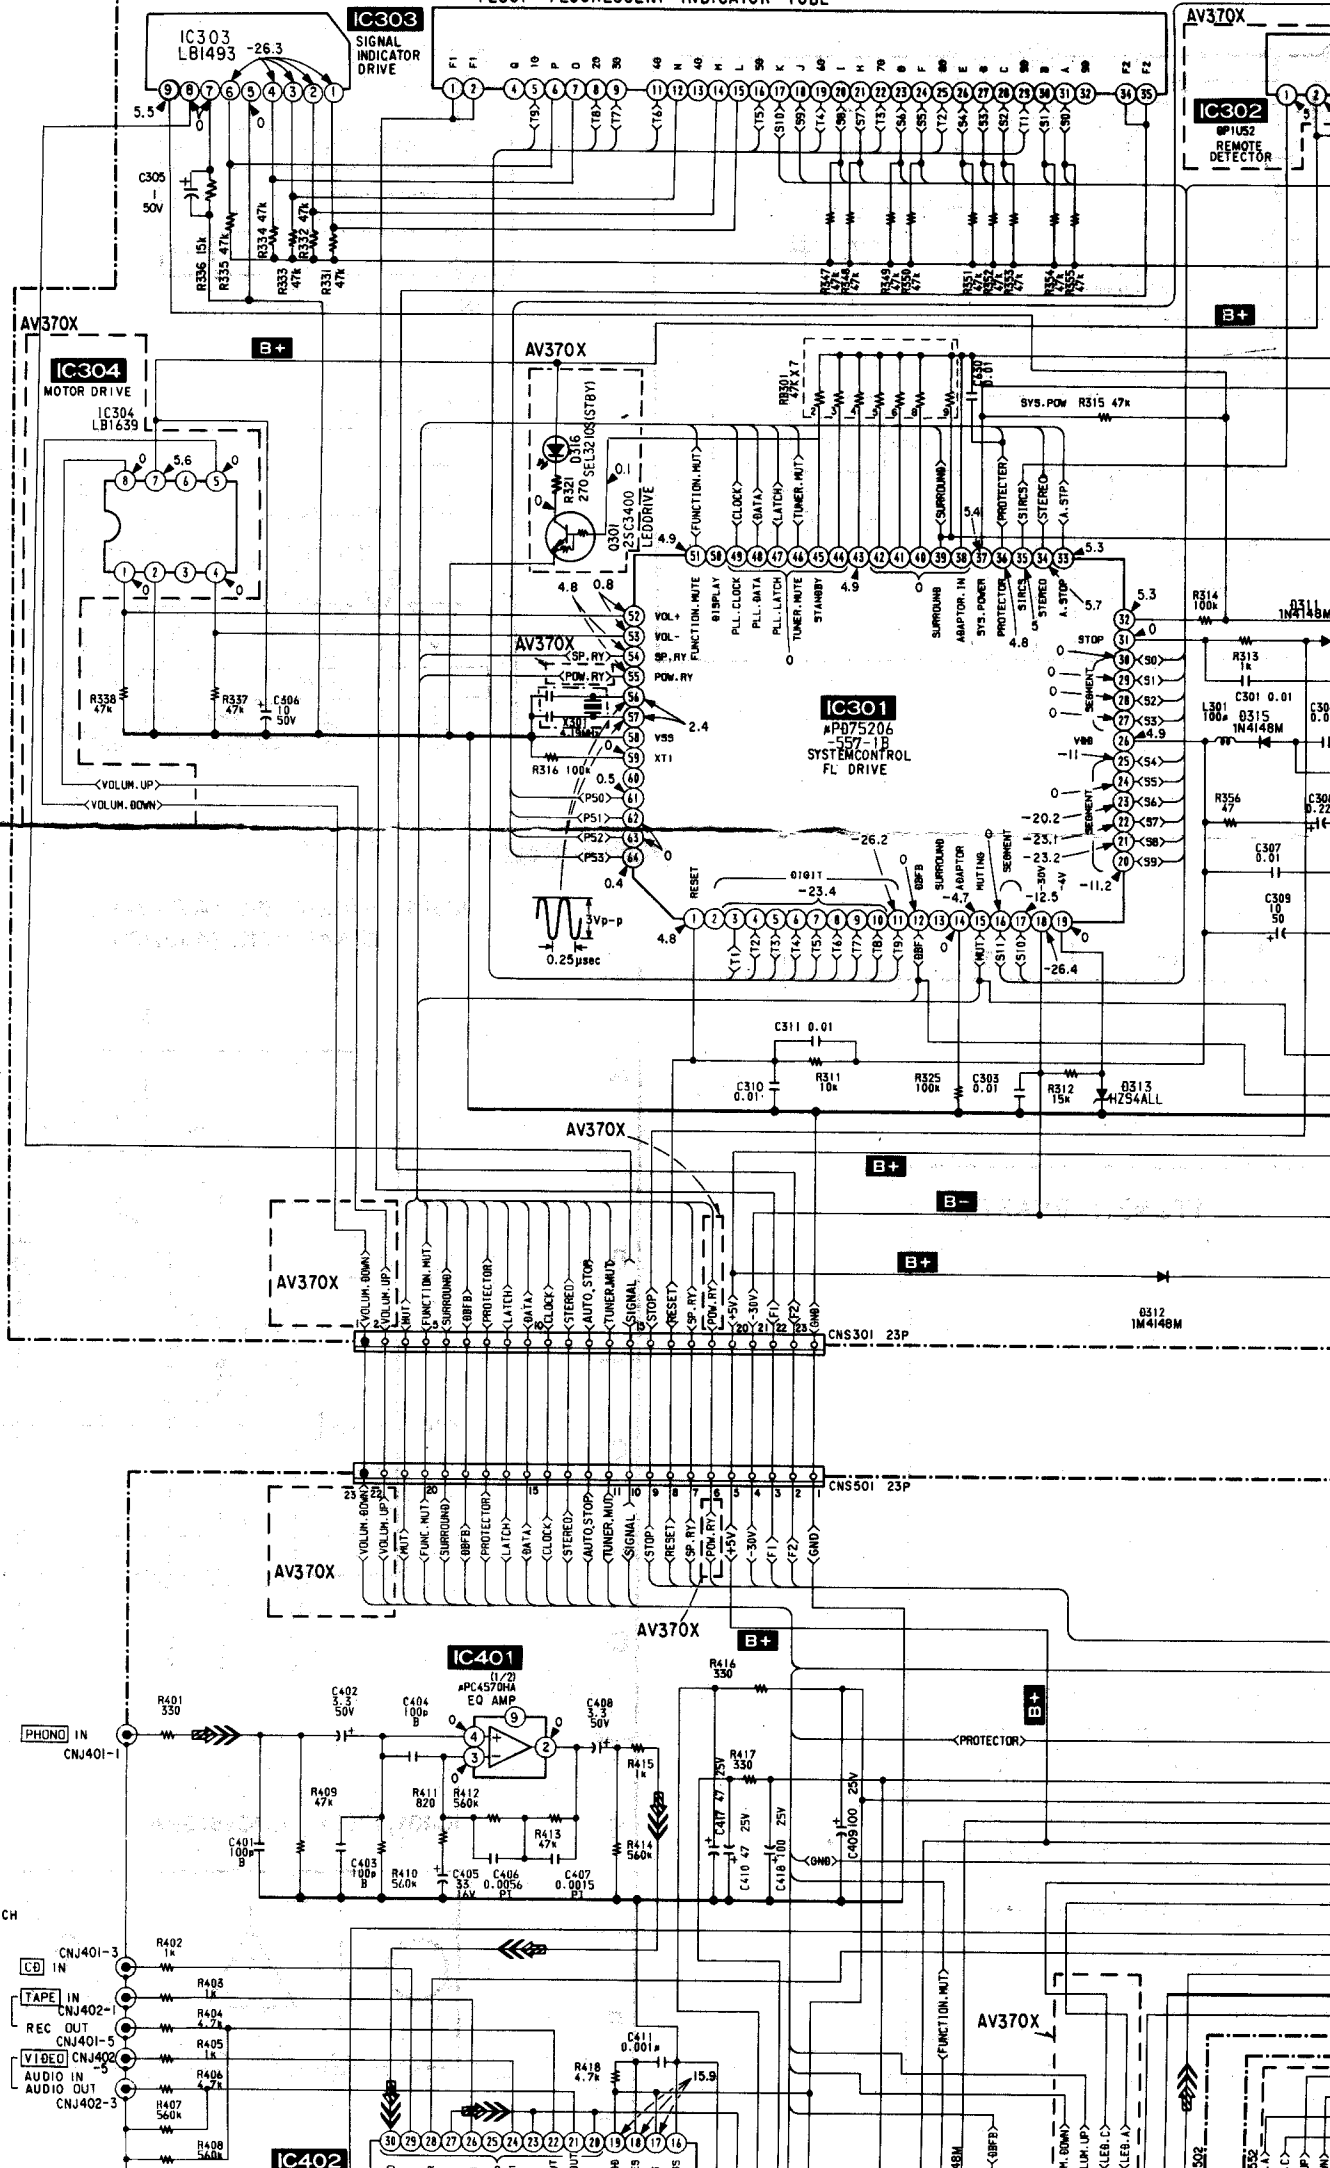





[SPEAKER SWITCH BOARD]

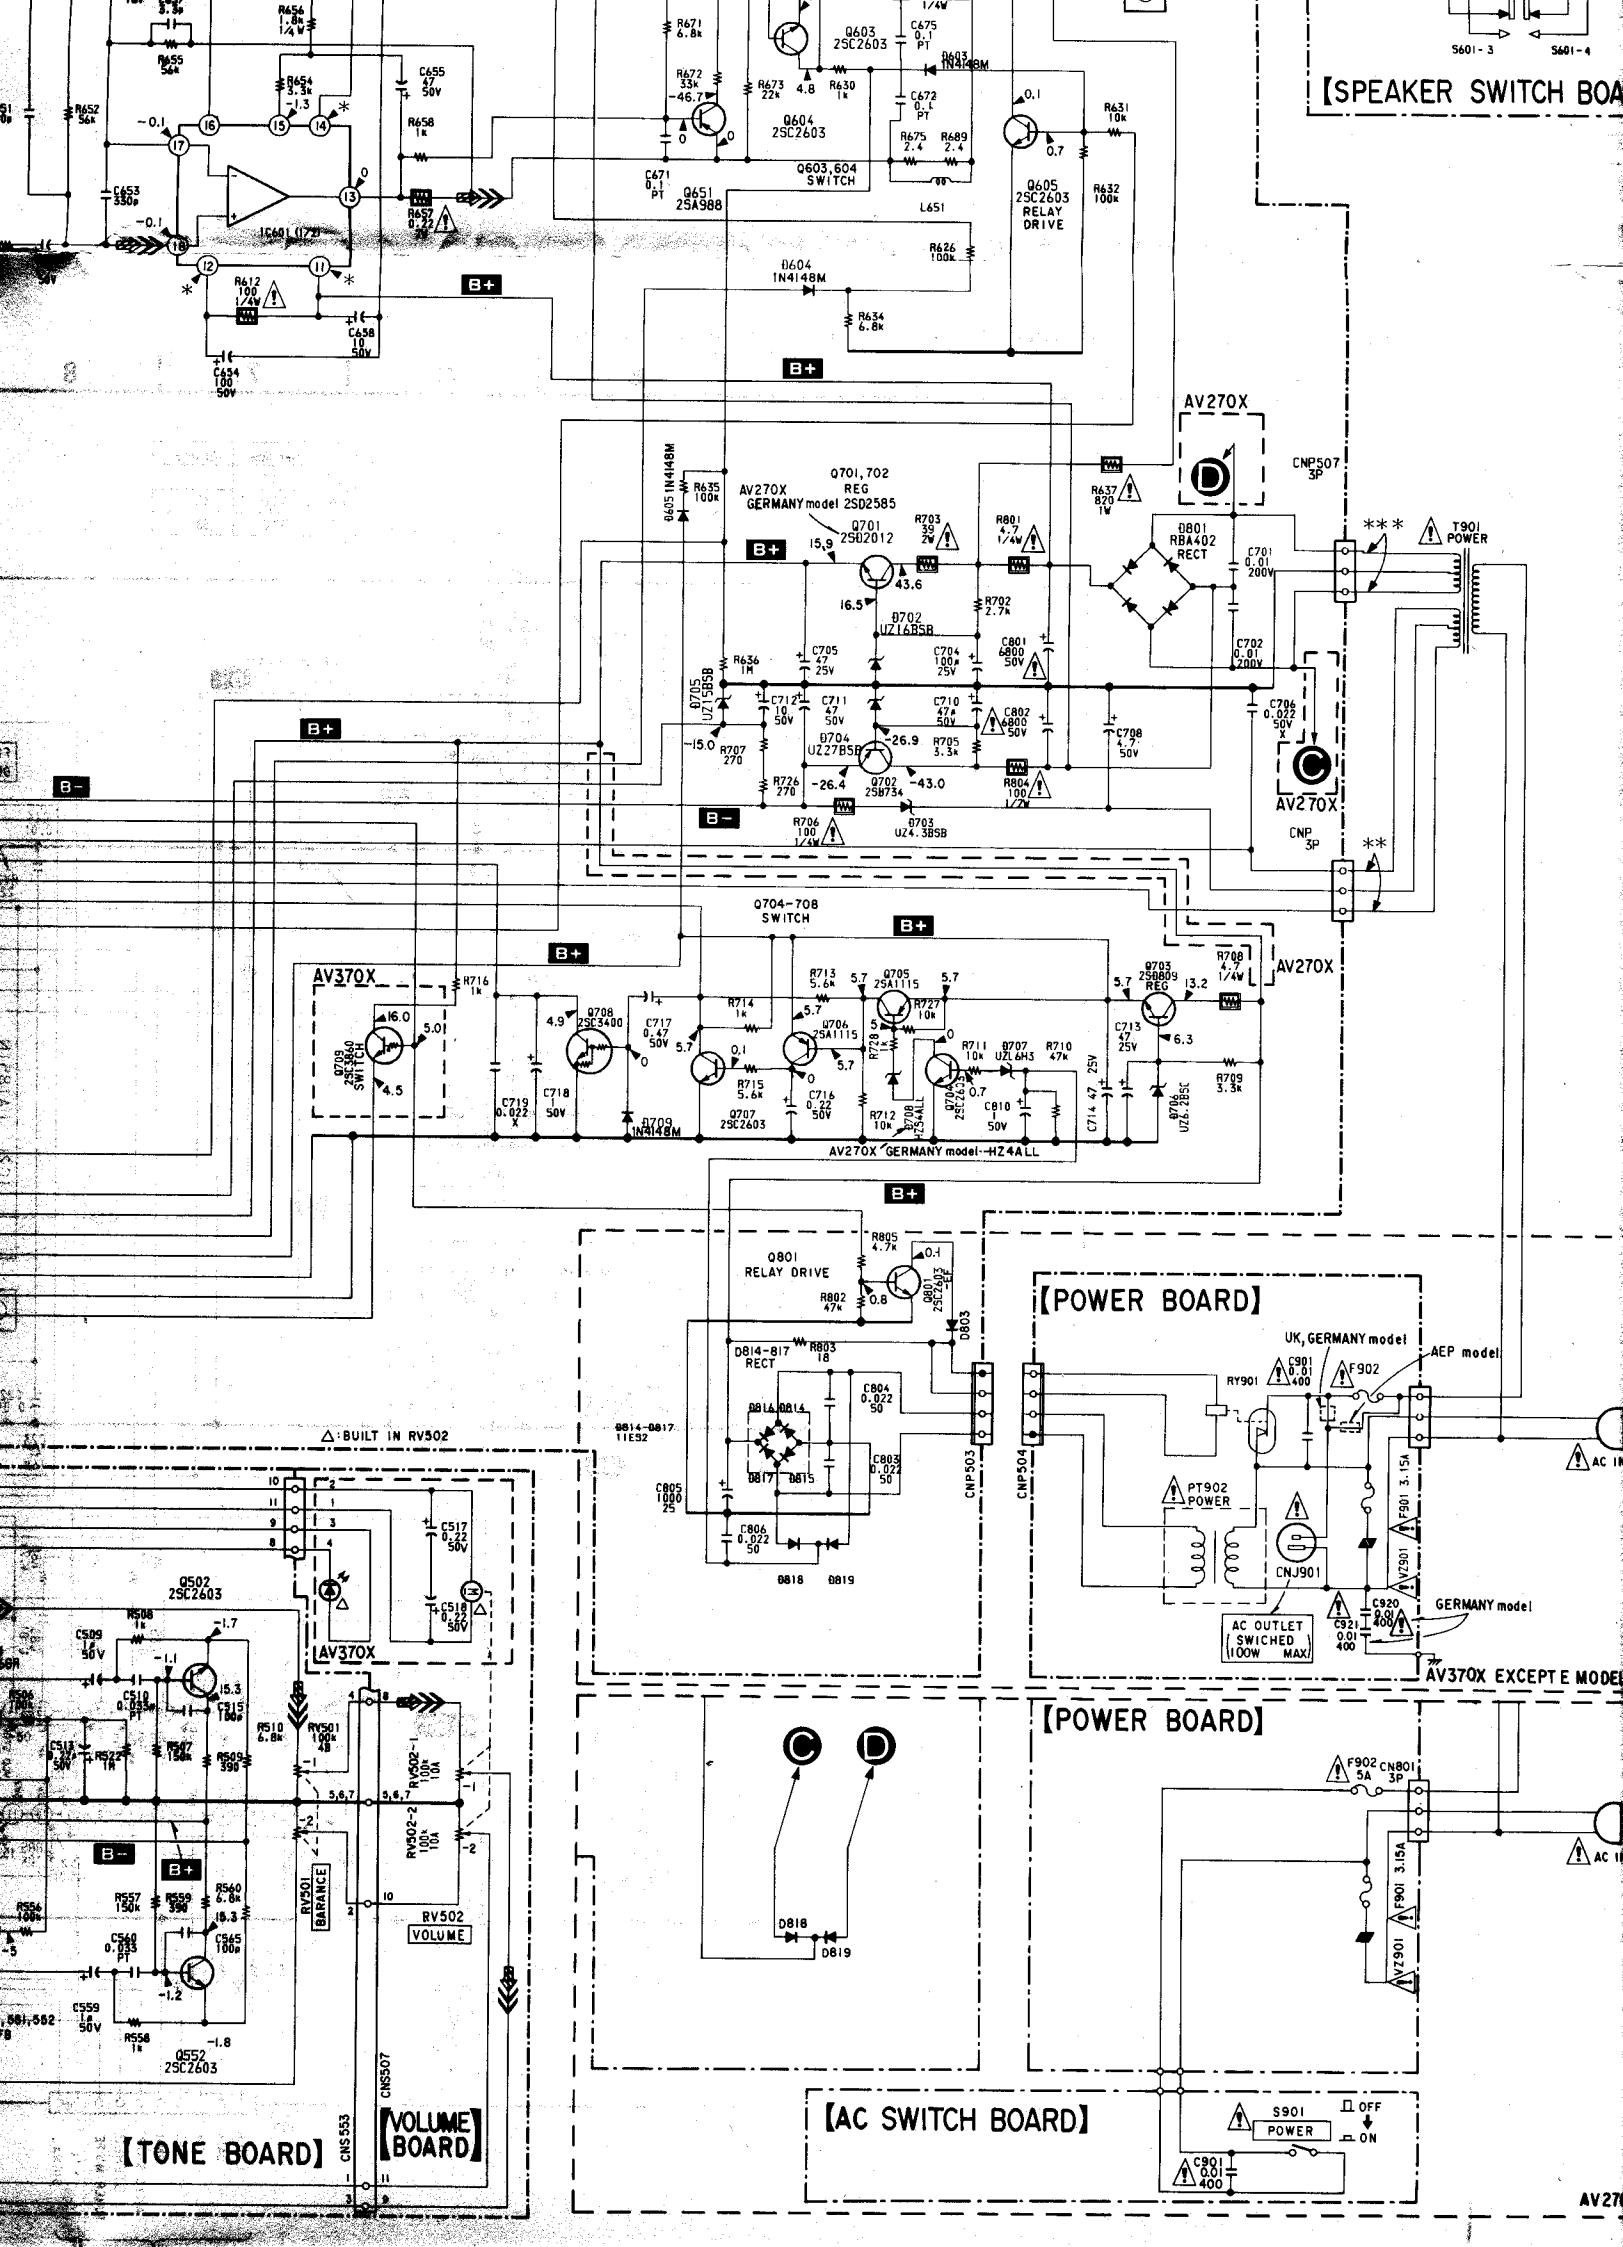

S601-3 S601-4

AV270X

AV270X

AV370X

AV270X

[POWER BOARD]

[POWER BOARD]

[AC SWITCH BOARD]

[TONE BOARD]

[VOLUME BOARD]