

# JVC


## SERVICE MANUAL

COLOUR TELEVISION

### AV-21V115/B

BASIC CHASSIS


CW

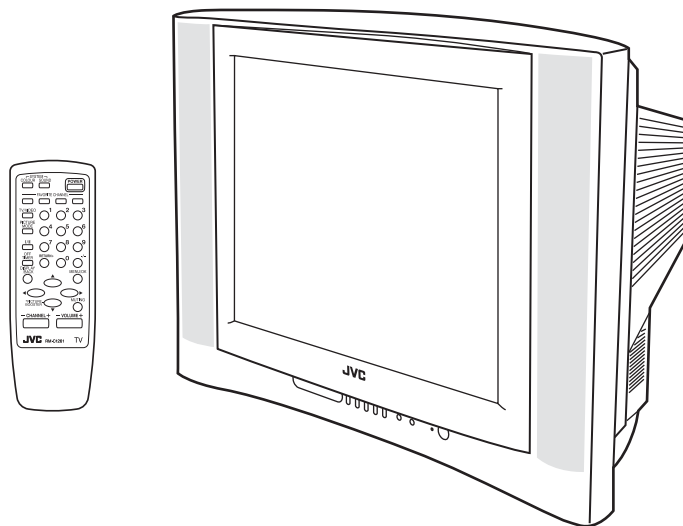

### TABLE OF CONTENTS


1	PRECAUTION.....	1-3
2	SPECIFIC SERVICE INSTRUCTIONS.....	1-4
3	DISASSEMBLY .....	1-6
4	ADJUSTMENT .....	1-12
5	TROUBLESHOOTING .....	1-26

BLOCK DIAGRAM

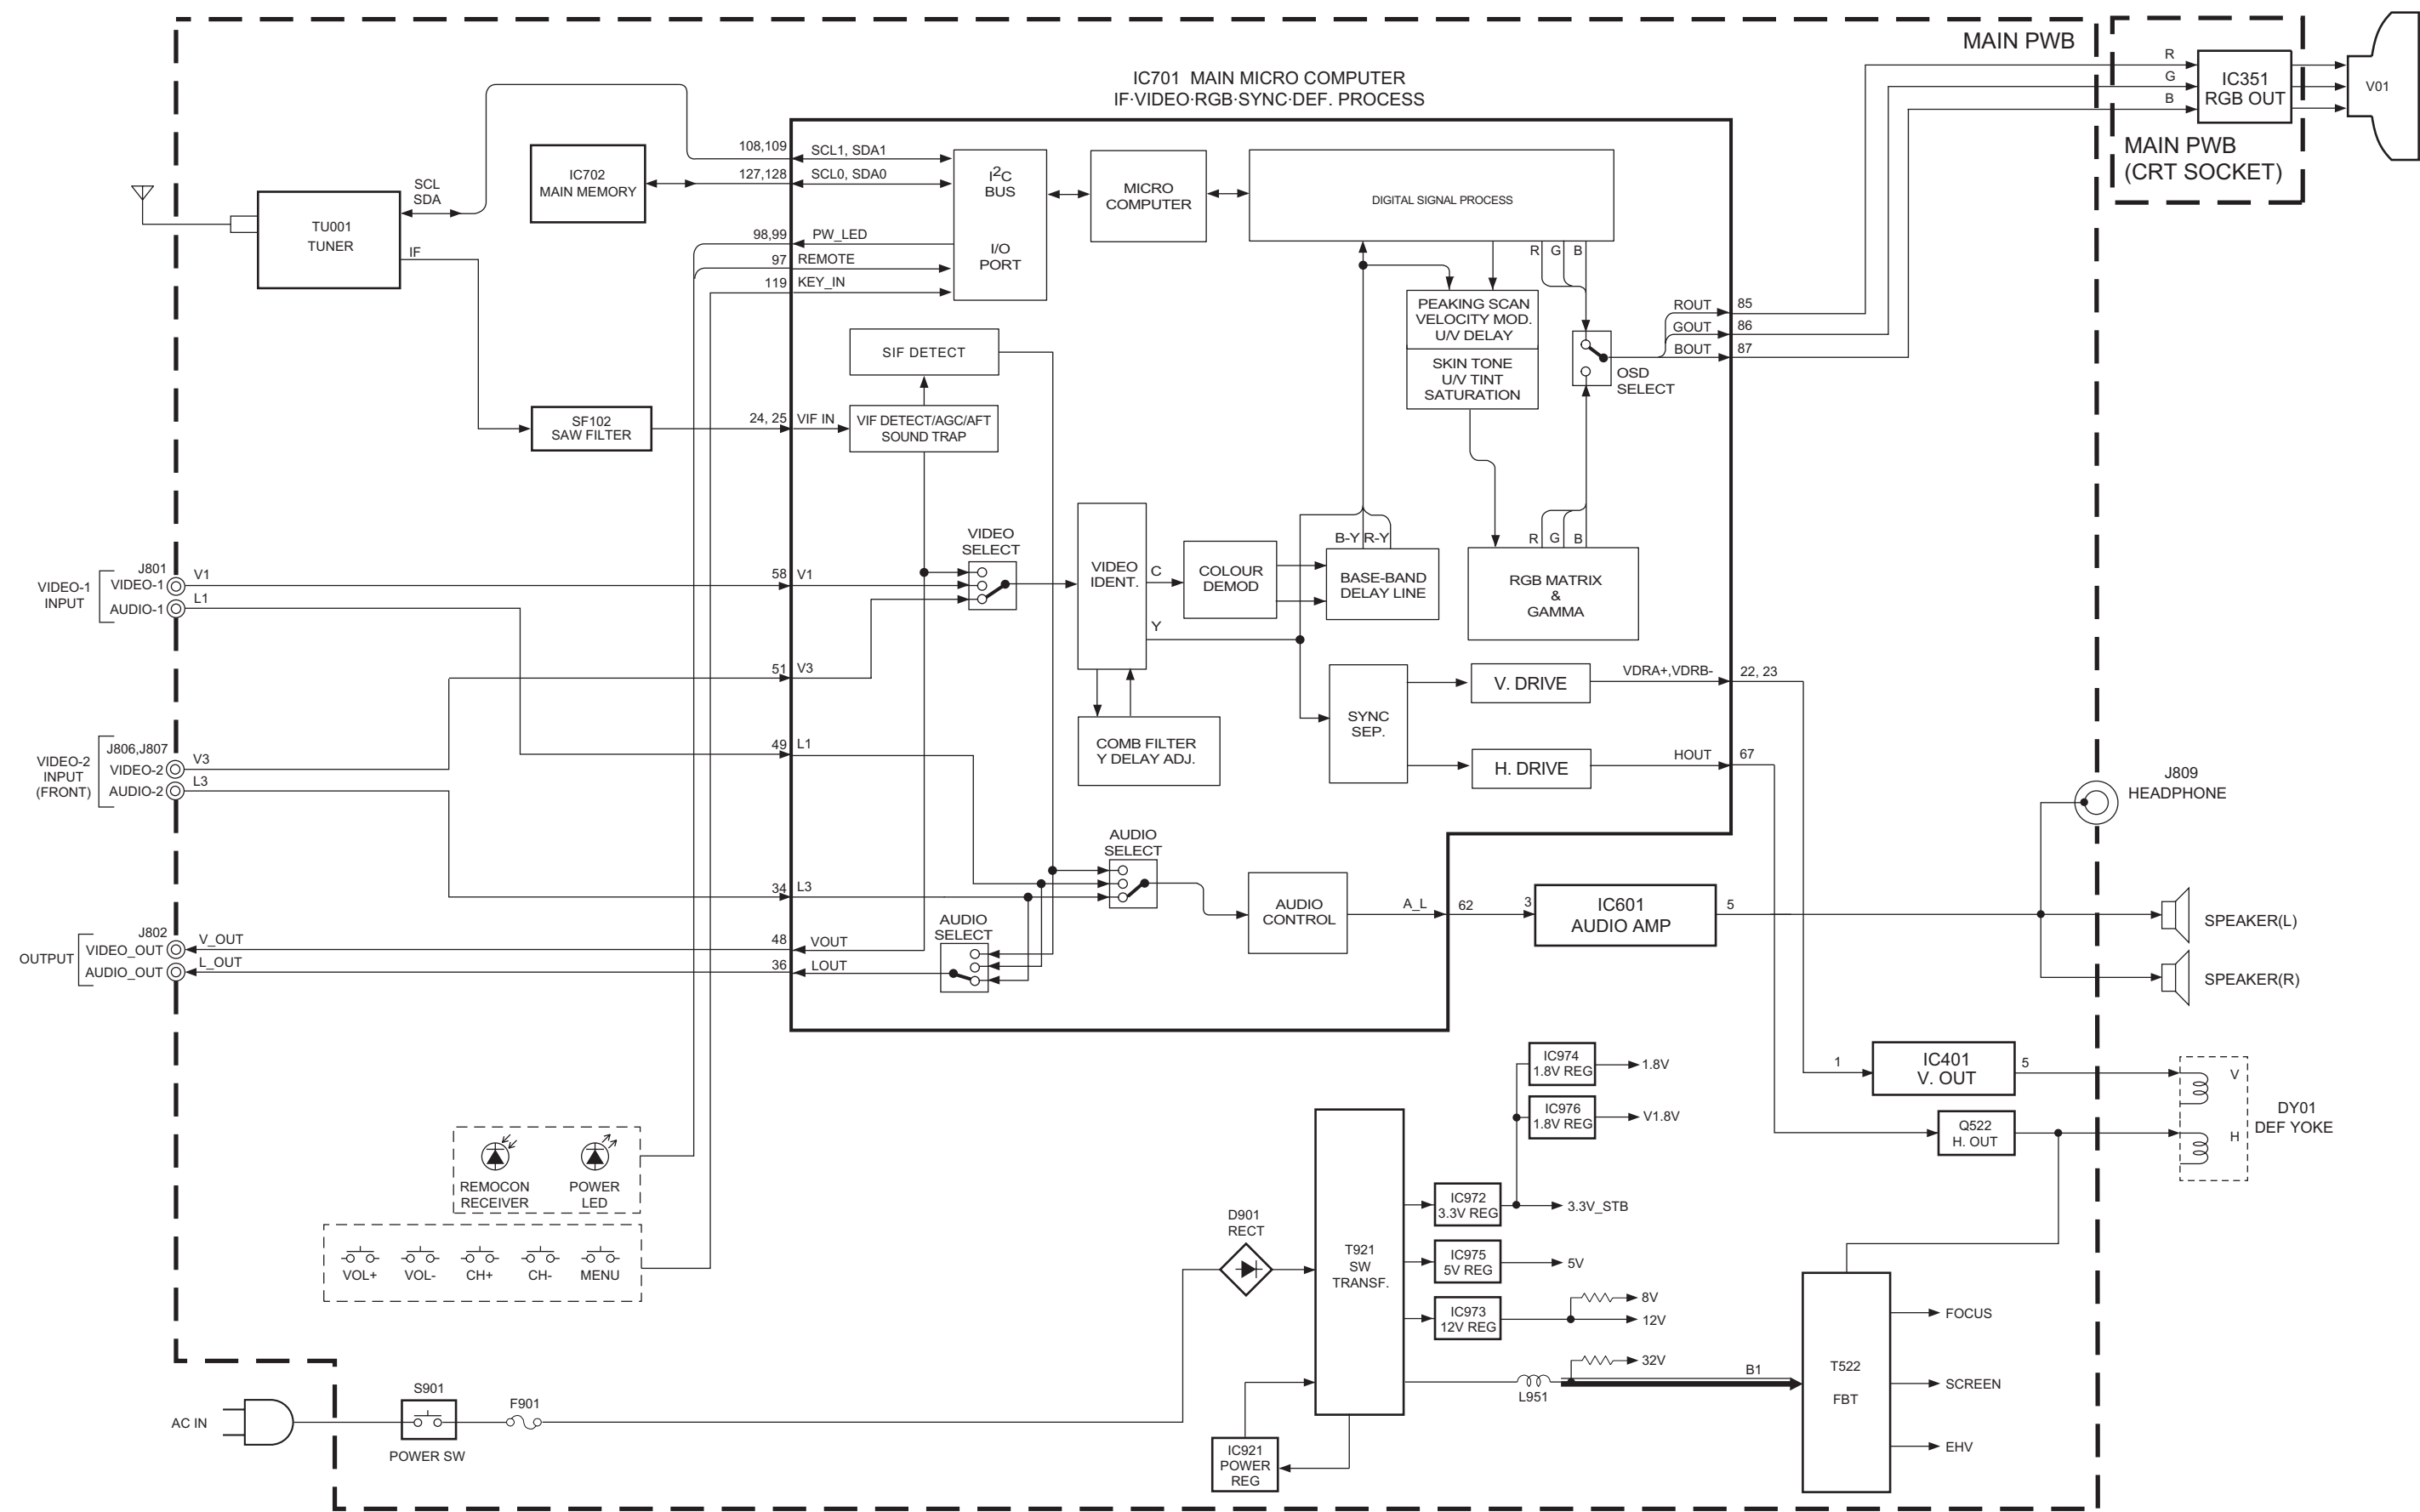

MAIN PWB CIRCUIT DIAGRAM (1/3)


MAIN PWB CIRCUIT DIAGRAM (1/3)

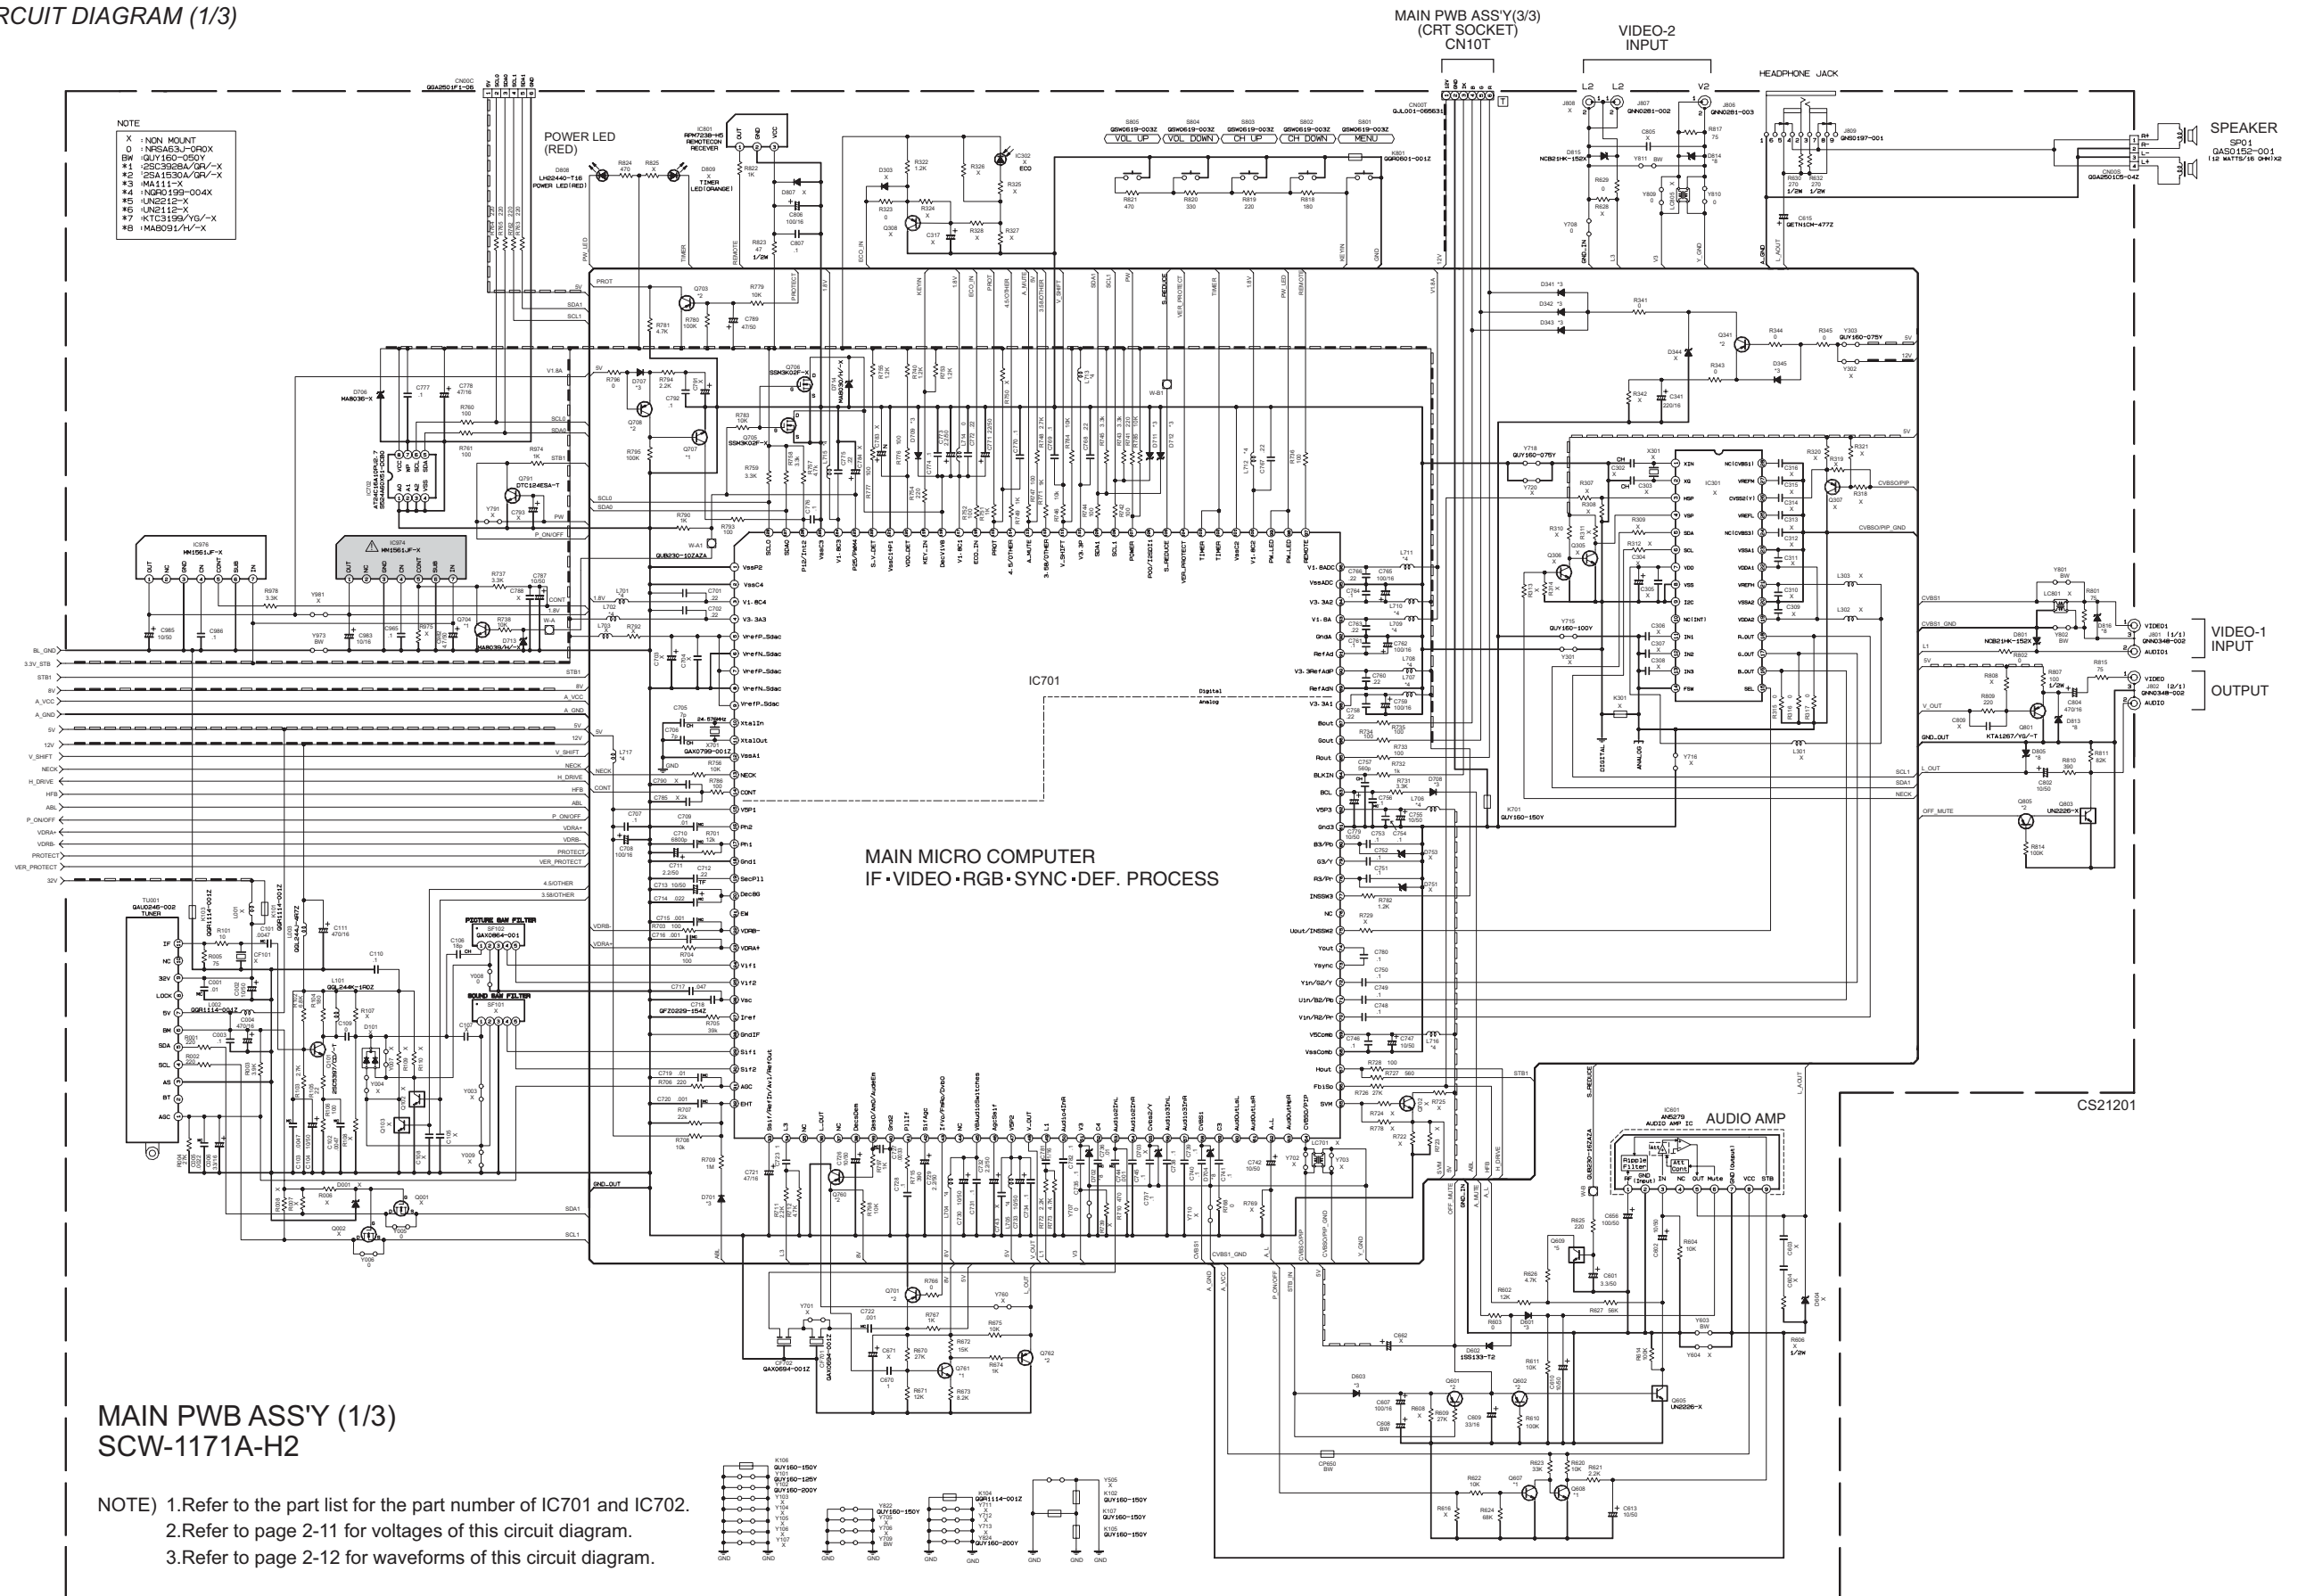

MAIN PWB ASS'Y (1/3)  
SCW-1171A-H2


NOTE) 1.Refer to the part list for the part number of IC701 and IC702.  
2.Refer to page 2-11 for voltages of this circuit diagram.  
3.Refer to page 2-12 for waveforms of this circuit diagram.

MAIN PWB CIRCUIT DIAGRAM (2/3), (3/3)

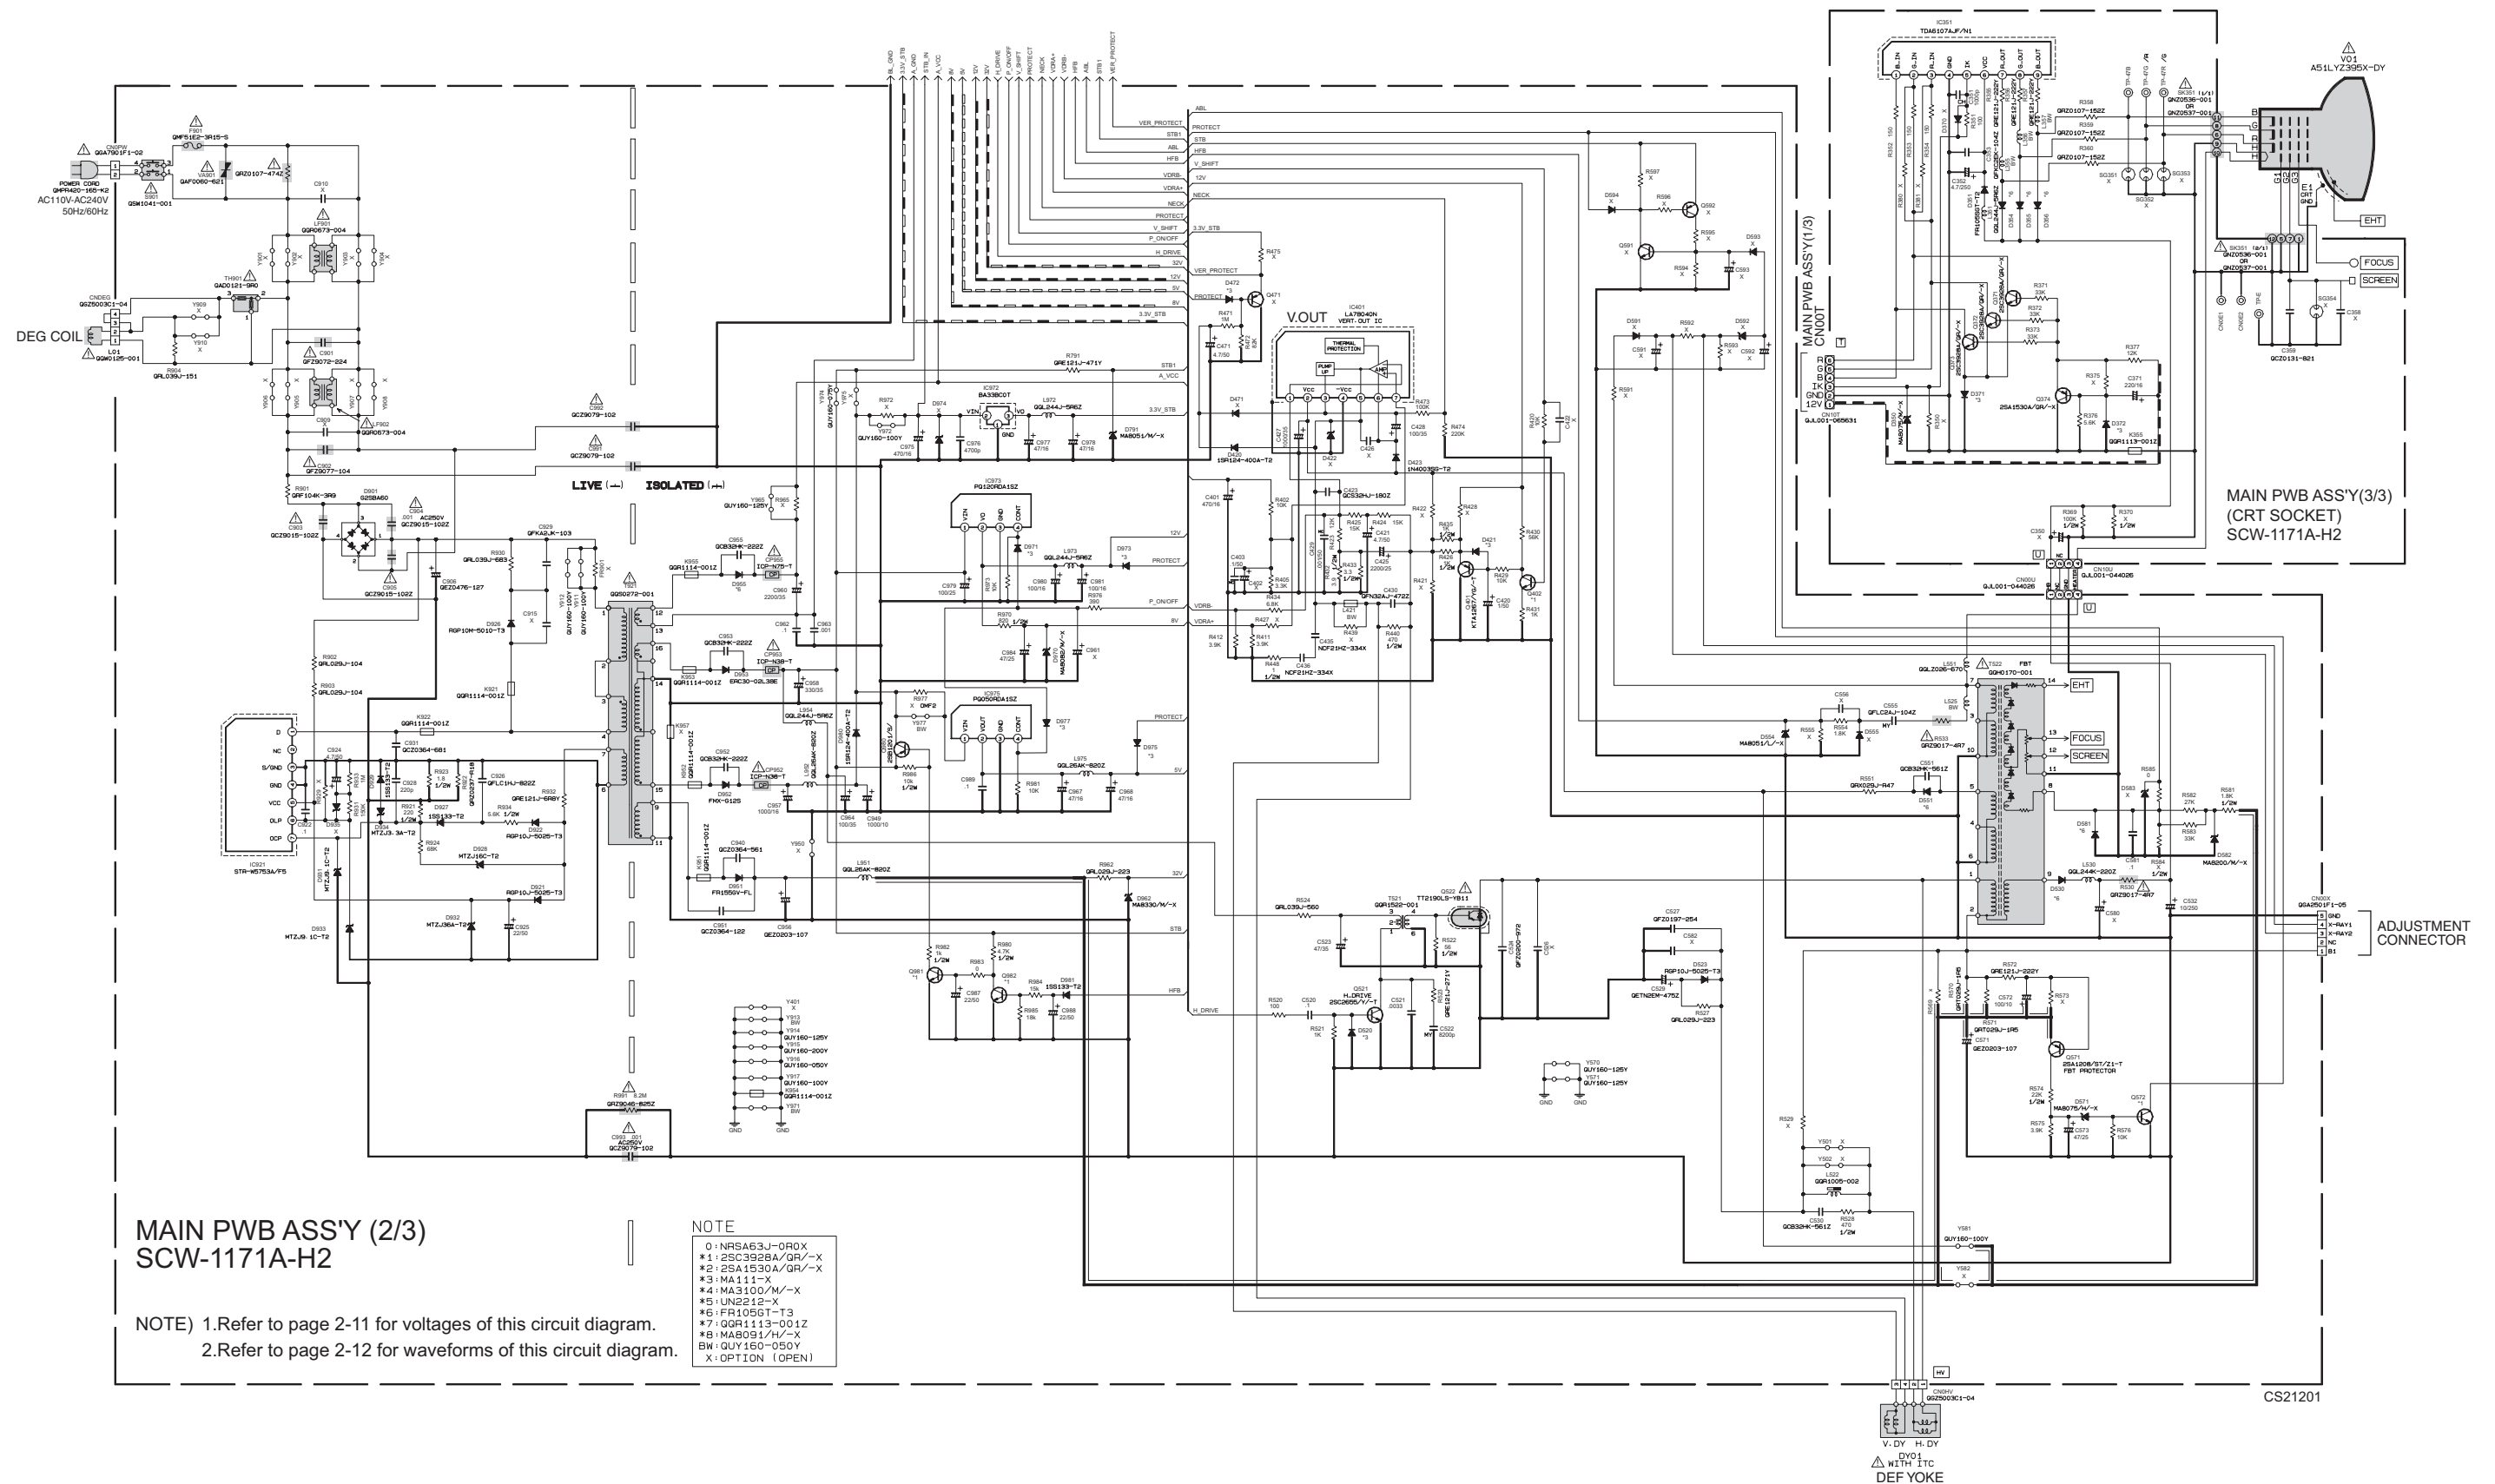

WAVEFORMS

-MAIN PWB-

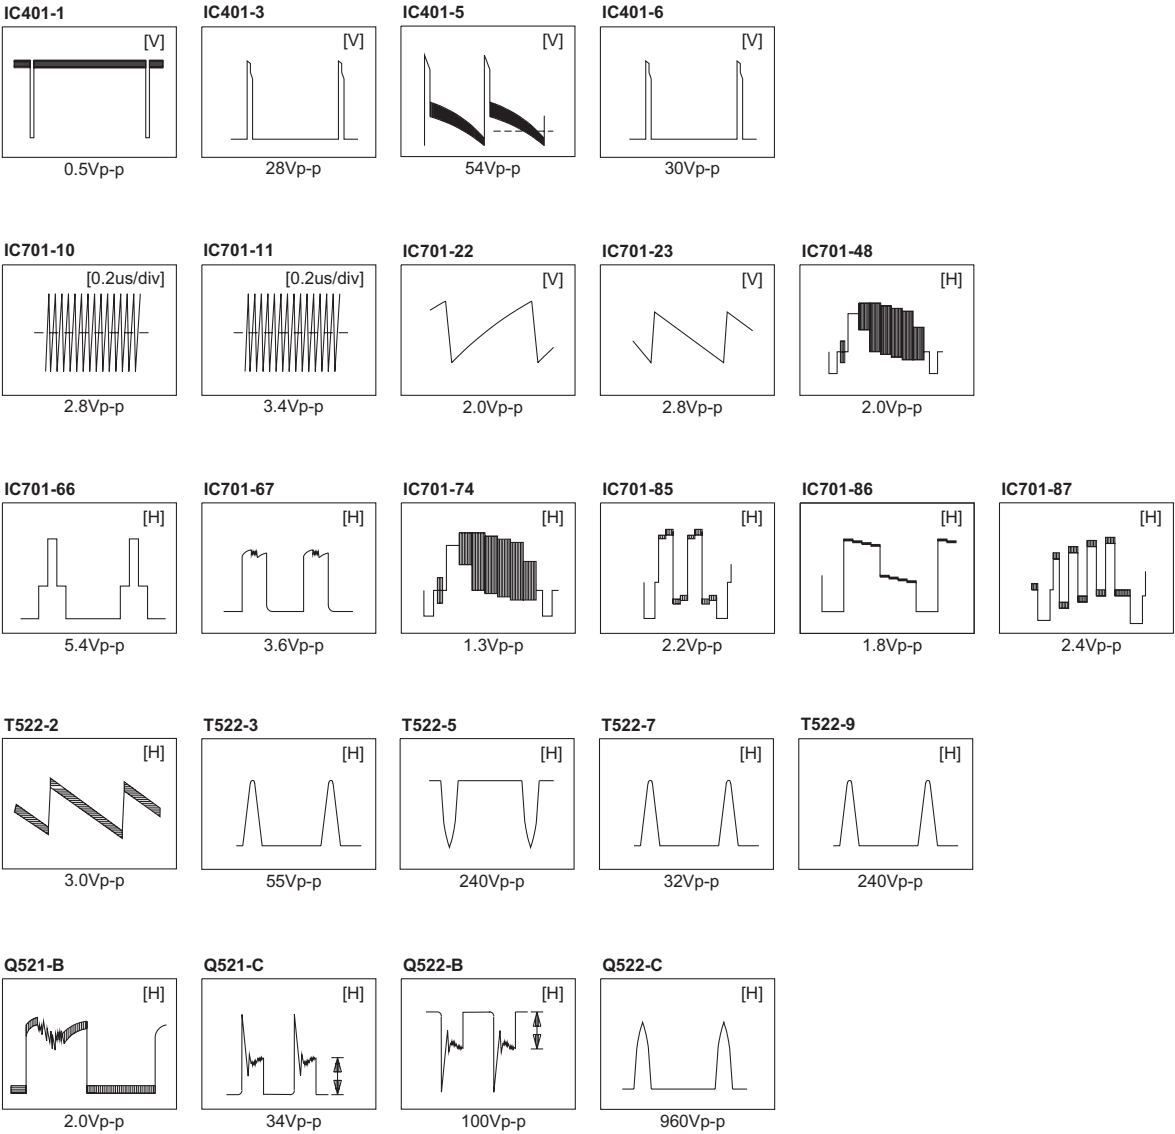

-CRT SOCKET PWB-

