

14) Bearings

a) Disassembling/Assembling



Left bearing

- 1 - Remove the left side panel.
- 2 - Remove the drum screw.
- 3 - Use the tool for loosening the bearing (in the direction of opening).
PN899298001848/5



Right bearing

- 1 - Remove the right side panel.
- 2 - Remove the drum screw with pulley.
- 3 - Remove the pulley.
- 4 - Remove the drum earth fastening parts with a saw
- 5 - Use the tool for loosening the bearing (in the direction of opening).
PN899298001848/5

During assembling take care to the correct position of the round gasket. Clean the drum shaft, grease the shaft-sealing ring, screw the bearing to the tub (closed sense).

Note: These bearings are auto-fastening, therefore do not fasten them too strong.

15) Left and right weight

a) Disassembling / Assembling

The whole tub can be equipped with 3 kinds of weights:

- weight of concrete
- weight with a "polypropylene" housing
- weight of iron

Right weight

- 1 - Remove the right side panel.
- 2 - Remove the foam damper.
- 3 - Untighten and remove the 4 screws for the fixation of the weight, which have a different length depending on the kind of weight.