





**INITIAL GUIDANCE PART LIST (IGPL) MODEL : TV3788SC (14IGODLX)**

Please refer this guidance part list after repairing the product  
to order the spare with correct part no.

No.	Part No.	Part Name
1	E1MICM37221M4-322S	IC MICON (IGO-DLX)
2	E1MSFN0202-410A	SPEAKER 2 1/4"X5",8O
3	E1MWFS14010-H01A	TRANSFORMER FLYBACK
4	E1MWILT001-C02A	COIL (IF 38.9MHZ)
5	E1MWS40117-M01C	TRANSFORMER SW 21IG
6	E1SDIMTZJ5.6(B)-T2	DIODE ZENER
7	E1SDIMTZJ9.1(C)-T2	DIODE ZENER
8	E1SFC0357952-49U2	CRYSTAL-3.5795MHZ,52
9	E1SFC0443316-49U2	CRYSTAL
10	E1SFCCSB503F18	CERAMIC RESONATOR
11	E1SFCCSTS0800MG23	CERAMIC RESONATOR
12	E1SFCSFSRA5.5MC	CERAMIC FILTER,5.5MH
13	E1SFCSFSRA6.5MC	CERAMIC FILTER,6.5MH
14	E1SFSK2965M	SAW FILTER
15	E1SFTTPSRA5.5MB	CERAMIC TRAP,5.5MHz,
16	E1SFTTPSRA6.5MB	CERAMIC TRAP,6.5MHz,
17	E1SICKIA7809PI	IC VOLTAGE REGULATOR
18	E1SICL78LR05E-MA	IC
19	E1SICLA7840	IC
20	E1SICM52325AP	IC
21	E1SICM52771ASP	IC
22	E1SICPC123F2	IC (PHOTO COUPLER)
23	E1SICSTR-S6707	IC REGULATOR
24	E1SICTDA2616	IC AUDIO
25	E1SICTDA7449	IC AUDIO PROCESSOR
26	E1SICTSOP4838	PHOTO MODULE
27	E1SMCMPY54C59	LDR
28	E1SRCRP-10RAINFORD	REMOTE CONTROL RP-10
29	E1SRH017J-1R8	RES FUSI-1E8,1W,+/-5
30	E1SRW052J-R27	RES WW-.27E,5W,+/-5%
31	E1STR2SA1015(GR)	TRANSISTOR SI
32	E1STR2SA966(OY)	TRANSISTOR SI
33	E1STR2SC1627A(OY)	TRANSISTOR SI
34	E1STR2SC1815(GR)	TRANSISTOR SI
35	E1STR2SC4015TV2N	TRANSISTOR SI
36	E1STR2SC4722(NP)	TRANSISTOR SI
37	E1STRST1803DHI	TRANSISTOR POWER
38	E1STUWV05I-212A	TUNER WSP VST 5V PHI
39	E1STWT1107-V01Z	SWITCH TACT,4.3MM HT
40	M1TBC12712-C06A	REAR COVER 14" IGO C
41	M1TFC10170-M05A	FRONT CABINET 14 IGO
42	M1TPA10218-M01A	CUSHION ASSY 14" IGO
43	M1TPA30863-M17A	PACKING CASE 14IGO-D
44	M1TPL20169-M01B	CONTROL KNOB 14" IGO
45	M1TPL30619-M01A	SPEAKER ADAPTER IQE2
46	M1TPL30679-M01A	POWER KNOB 14" IGO C
47	M1TPL30681-M01A	SENSOR BASE 14" IGO
48	M1TPL40604-M01A	SENSOR LENS 14" IGO
49	M1TPL40606-M01A	LED LENS 14" IGO

This is not 1% FOC list. This is a guidance list for ordering parts.