

DCR-SX33E/SX34E/SX43/SX43E/SX44/
SX44E/SX53E/SX63/SX63E

SONY®

SERVICE MANUAL

Ver. 1.3 2010.06

LEVEL 2

US Model
Canadian Model
AEP Model
UK Model
North European Model
E Model
Australian Model
Chinese Model
Korea Model
Argentine Model
Brazilian Model

SUPPLEMENT-1

File this supplement with the service manual.
(10-041)

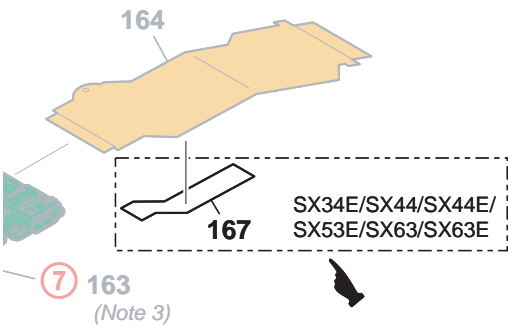 
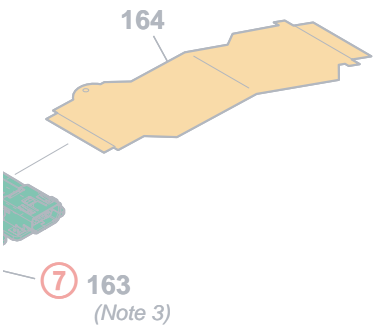 
• Deletion of EXPLODED VIEWS

Note : Please refer to SERVICE MANUAL for the revision of accessories.

2-1. EXPLODED VIEWS

2-1-4. LENS/CHASSIS SECTION

 : Points deleted portion

Page	Former	New						
2-6	 <p>Ref. No. Part No. Description</p> <table><tr><td>167</td><td>4-181-801-01</td><td>SHEET (FP1241), RADIATION (SX34E/SX44/SX44E/SX53E/SX63/SX63E)</td></tr></table>	167	4-181-801-01	SHEET (FP1241), RADIATION (SX34E/SX44/SX44E/SX53E/SX63/SX63E)	 <p>Ref. No. Part No. Description</p> <table><tr><td>—</td><td>—</td><td>—</td></tr></table>	—	—	—
167	4-181-801-01	SHEET (FP1241), RADIATION (SX34E/SX44/SX44E/SX53E/SX63/SX63E)						
—	—	—						