

ALIGNMENT SETTINGS

1. Select program position 60 and set the sharpness to minimum.
2. Press the **Off Timer** button on the remote control and at the same time press the **V** (down) button on the customer controls at the front of the TV, this will place the TV into Service Mode.
3. Press the **^ / v** buttons to step up / down through the functions.
4. Press the **+ / -** buttons to alter the function values.
5. Press the **STORE** button after each adjustment has been made to store the required values.
6. To exit Service Mode press the Normalization button.

NOTE : The figures used below are nominal and used for representative purposes only.

Alignment Function	Setting indication Note: All setting values are approximate	Settings / Special features
1. Vertical amplitude	V-Amp 31	Optimum setting
2. Vertical position	V-Pos 22	Optimum setting
3. Horizontal centre	H-Ctr 07	Optimum setting.
4. Red cutoff	R-Cut 148	Optimum setting.
5. Green cutoff	G-Cut 146	Optimum setting.
6. Blue cutoff	B-Cut 163	Optimum setting.
7. Red drive	R-Drv 37	Optimum setting.
8. Blue drive	B-Drv 25	Optimum setting.
9. AGC	AGC 29	Optimum setting.
10. Sub contrast	S-Con 26	Optimum setting.
11. Sub colour	S-Col 49	Optimum setting.
12. Sub bright	S-Bri 43	Optimum setting.