


WAVEFORMS A BOARD

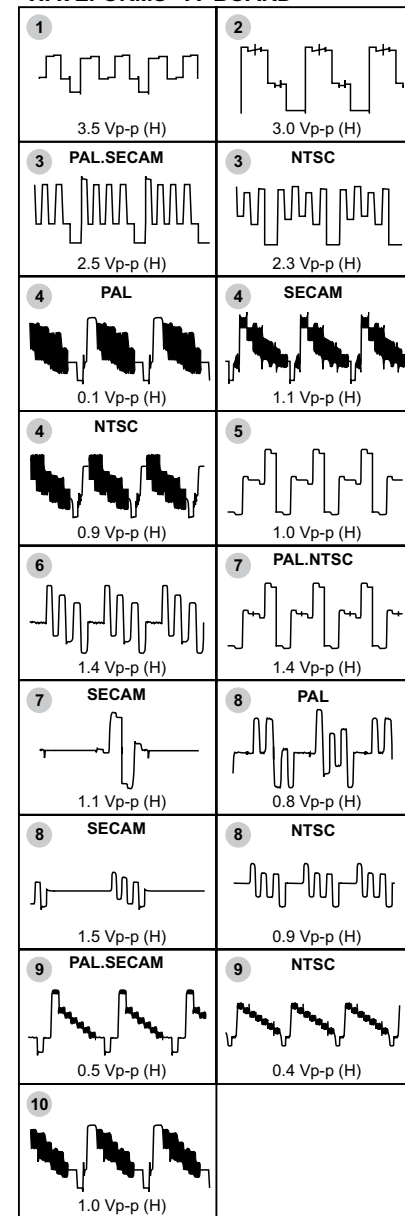

Voltages indicated with the mark * on the schematic diagram are shown in the table below.


IC	Pin	PAL	SECAM	NTSC	NTSC
IC301	17	4.0	4.0	4.0	0
	35	3.6	2.5	3.5	3.5
	44	1.5	3.1	1.5	1.5
	45	1.5	3.0	1.5	1.5
	48	1.7	4.4	1.6	1.7
	49	1.4	1.4	2.0	1.4
	50	2.0	2.0	1.4	2.0
	63	3.4	2.5	2.2	2.5
IC303	1	1.7	4.4	1.6	1.7
	11	1.5	3.0	1.5	1.5
	12	1.5	3.1	1.5	1.5

A BOARD




J401 21P

Pin	Signal
1	R OUT
2	R IN
3	L OUT
4	GND
5	L IN
6	B
7	MODE
8	GND
9	NC
10	G
11	NC
12	GND
13	NC
14	NC
15	C IN
16	NC
17	GND
18	GND
19	V OUT
20	V IN
21	GND




A (TUNER AUDIO CONTROL)
AUDIO AMP, AV SW
RGB JUNGLE
V/C PROCESSOR

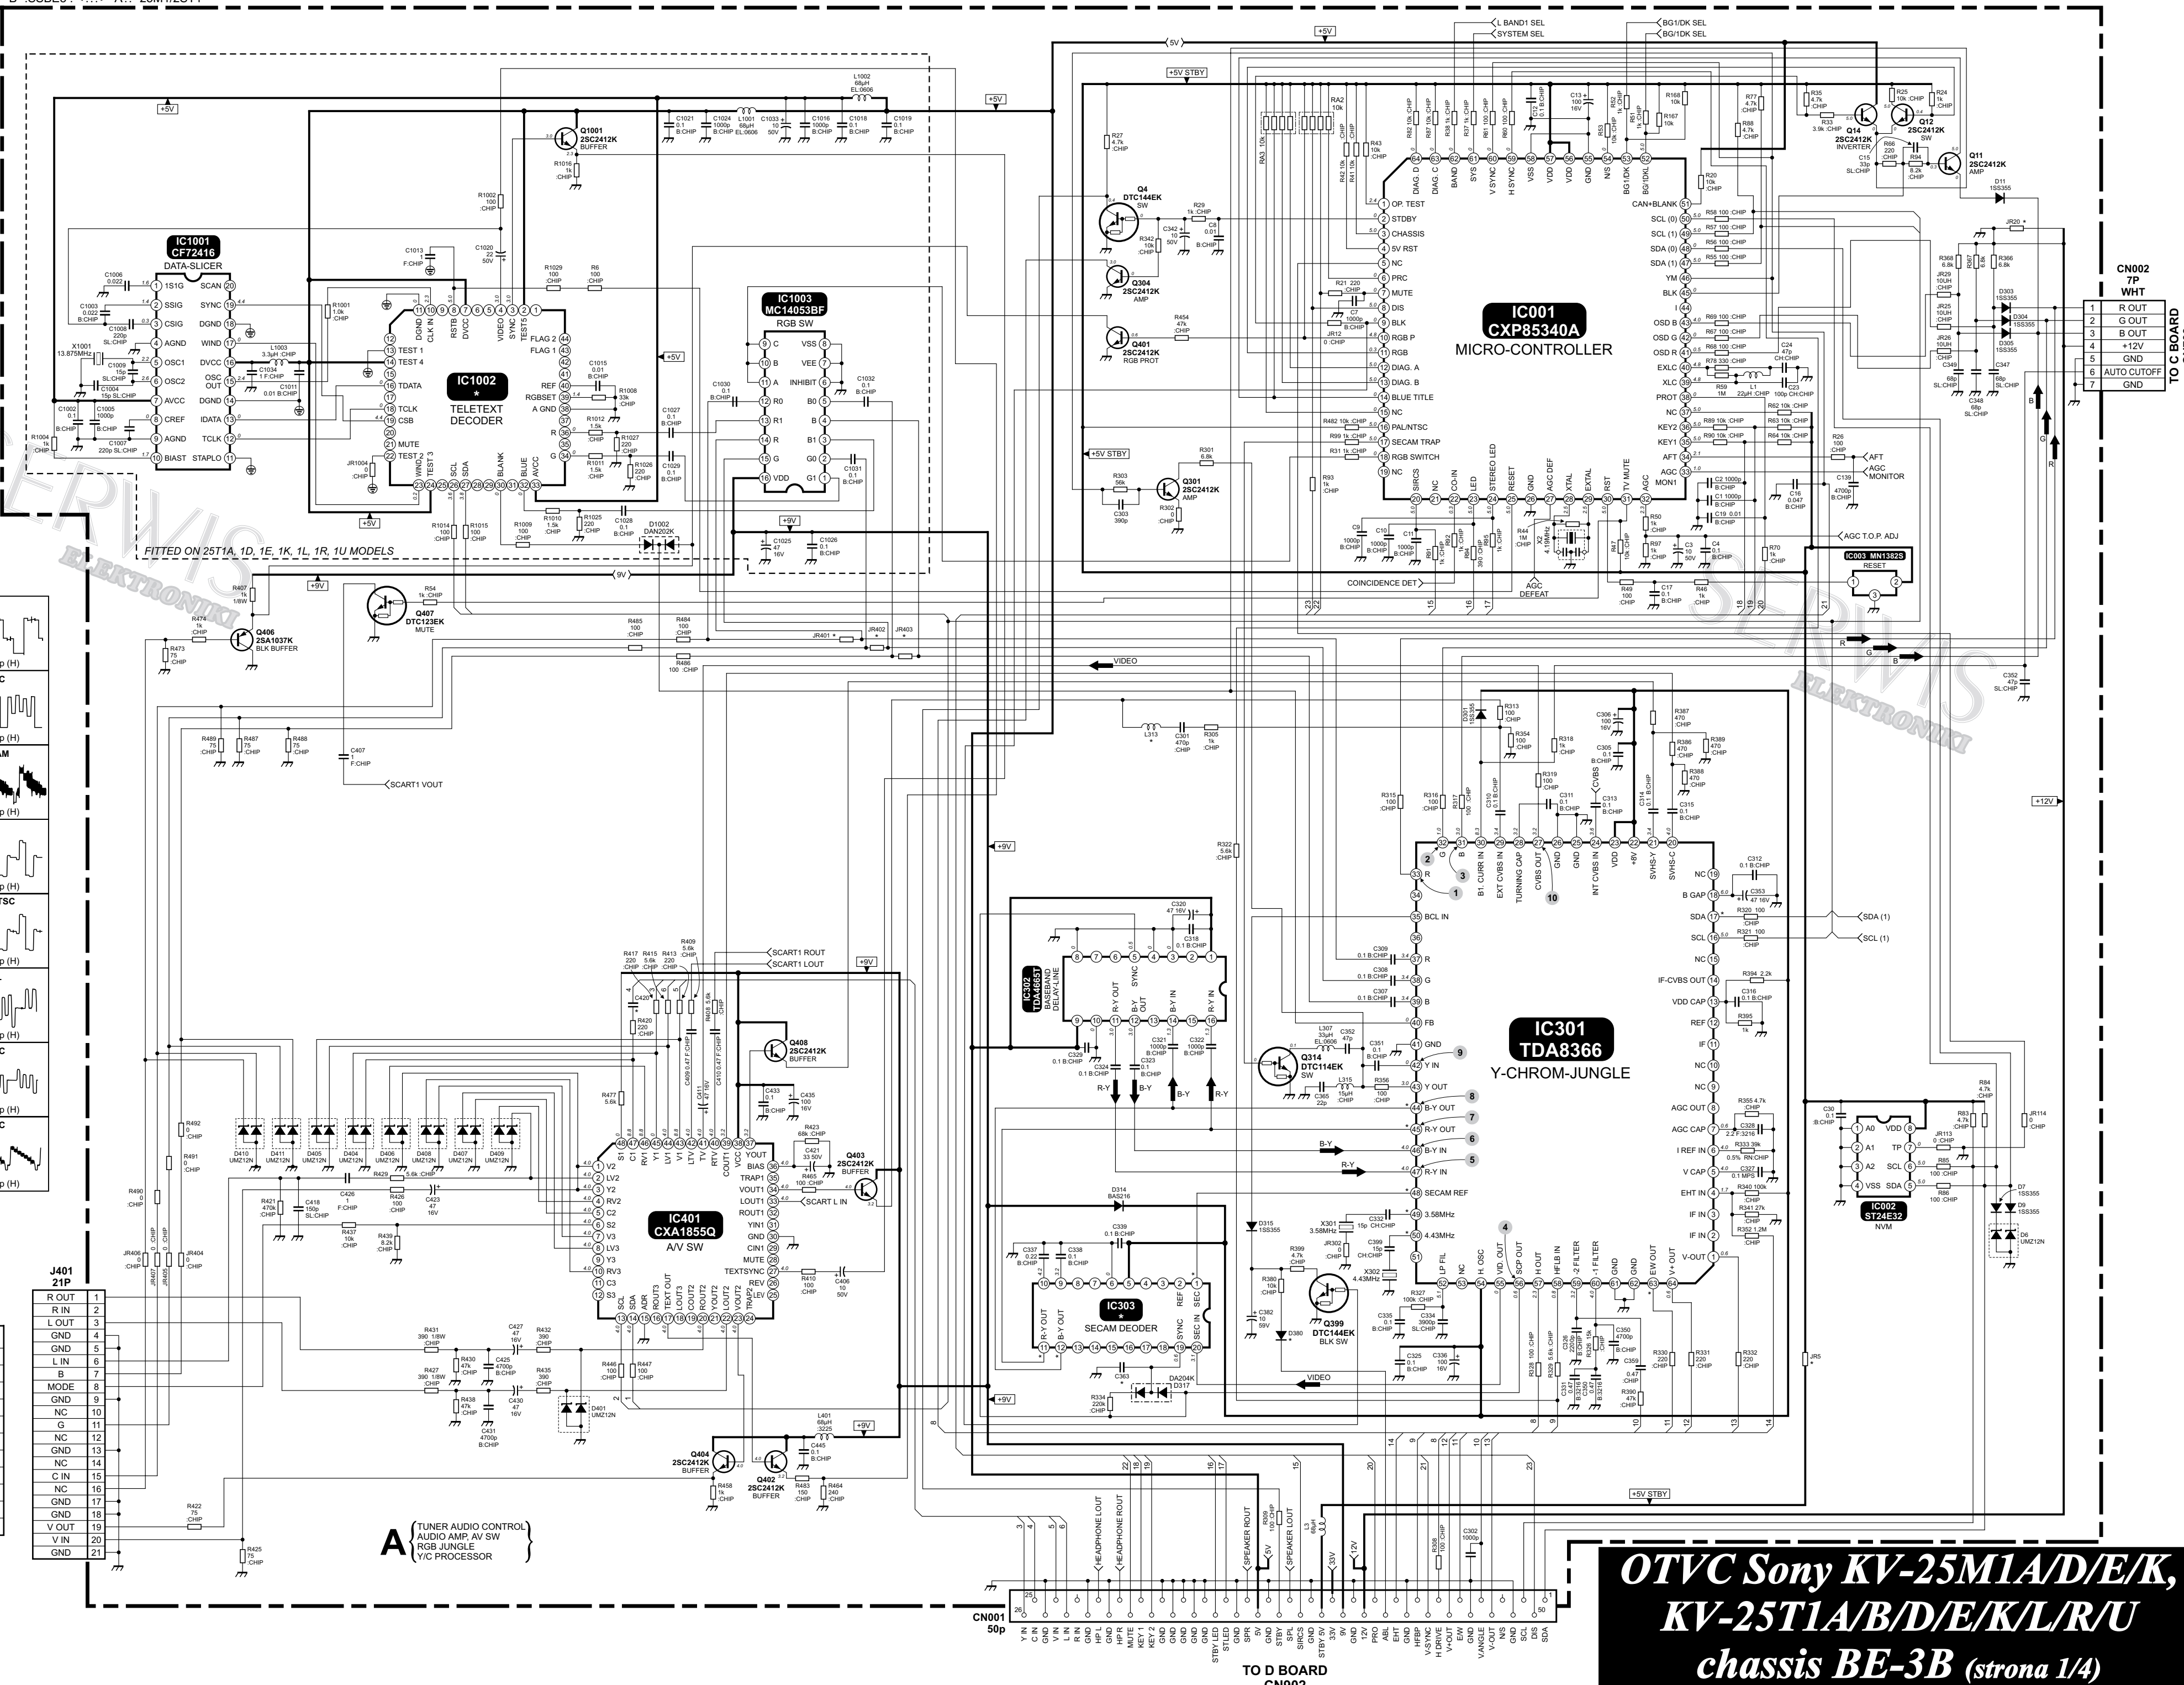


**OTVC Sony KV-25M1A/D/E/K,
KV-25T1A/B/D/E/K/L/R/U
chassis BE-3B (strona 1/4)**

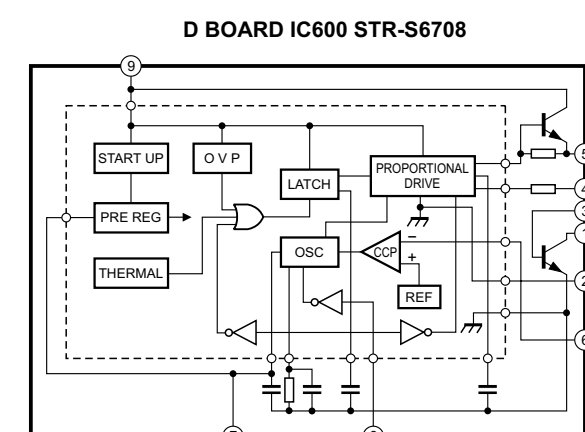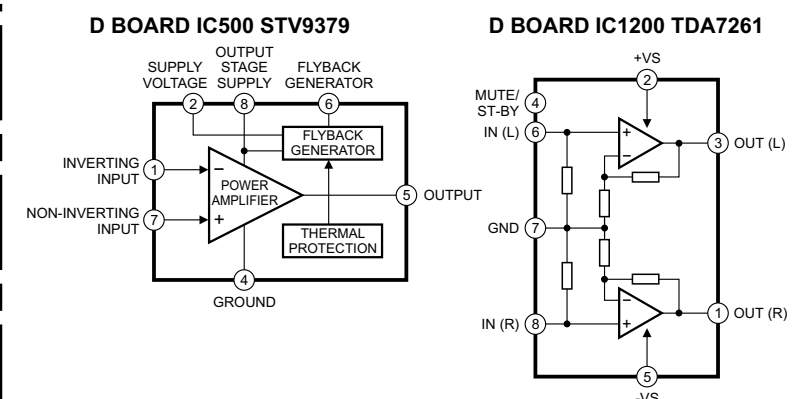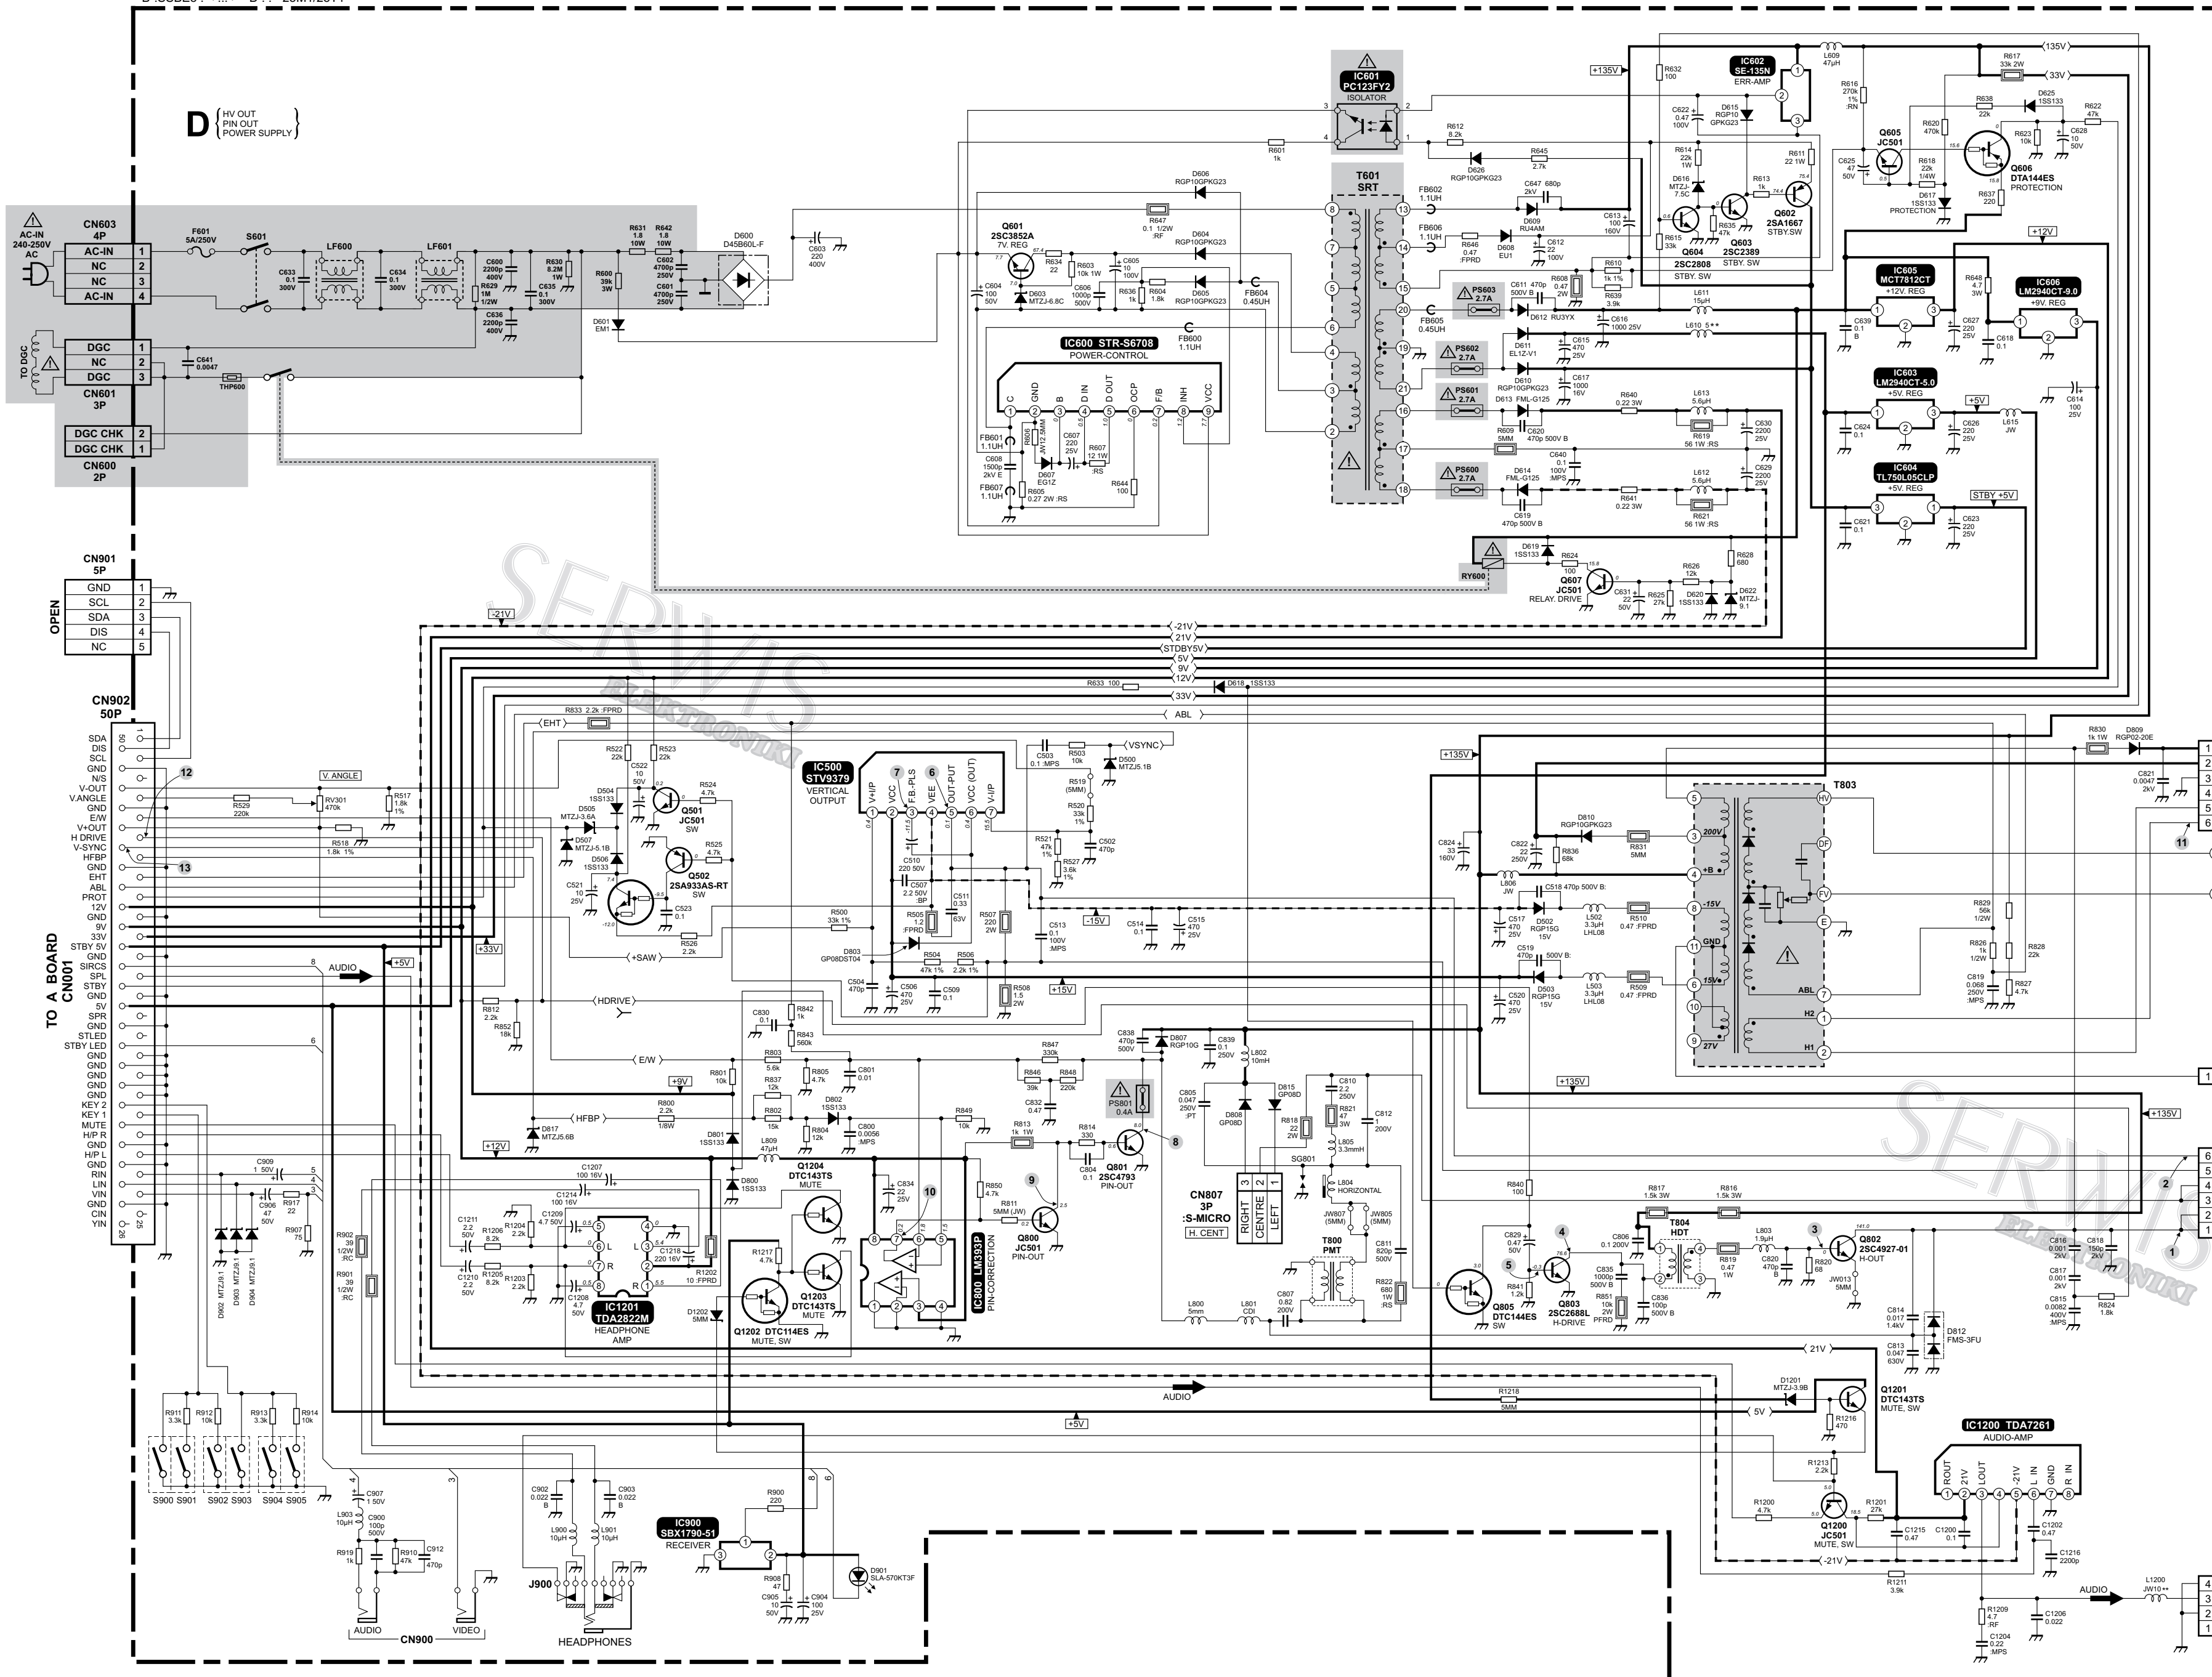


WAVEFORMS D BOARD

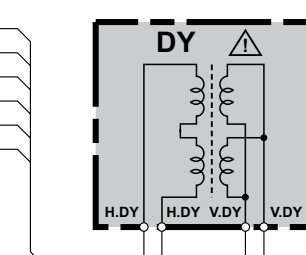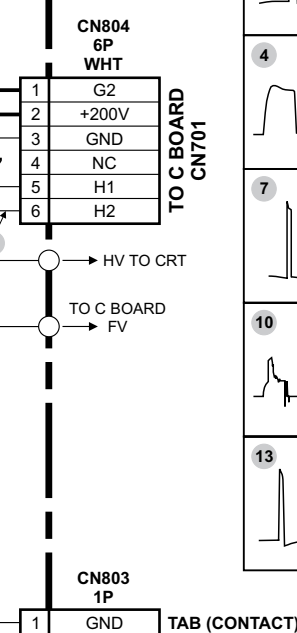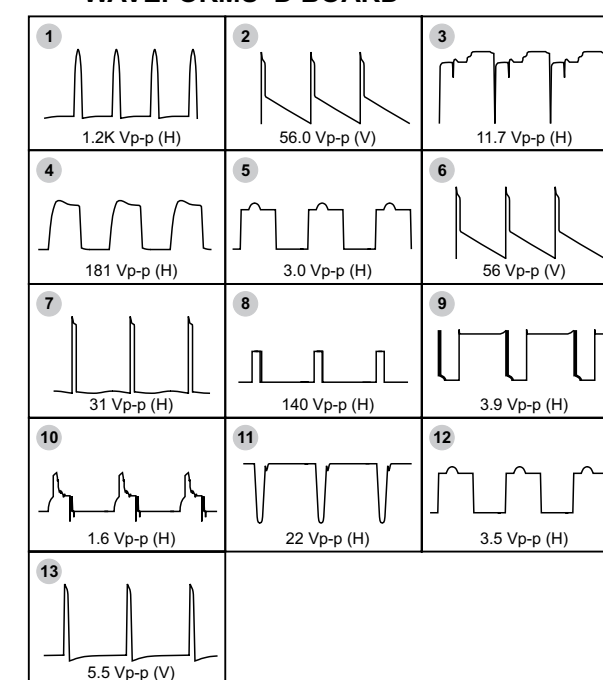

B::SSBE3. <...>A...-25M1/25T1

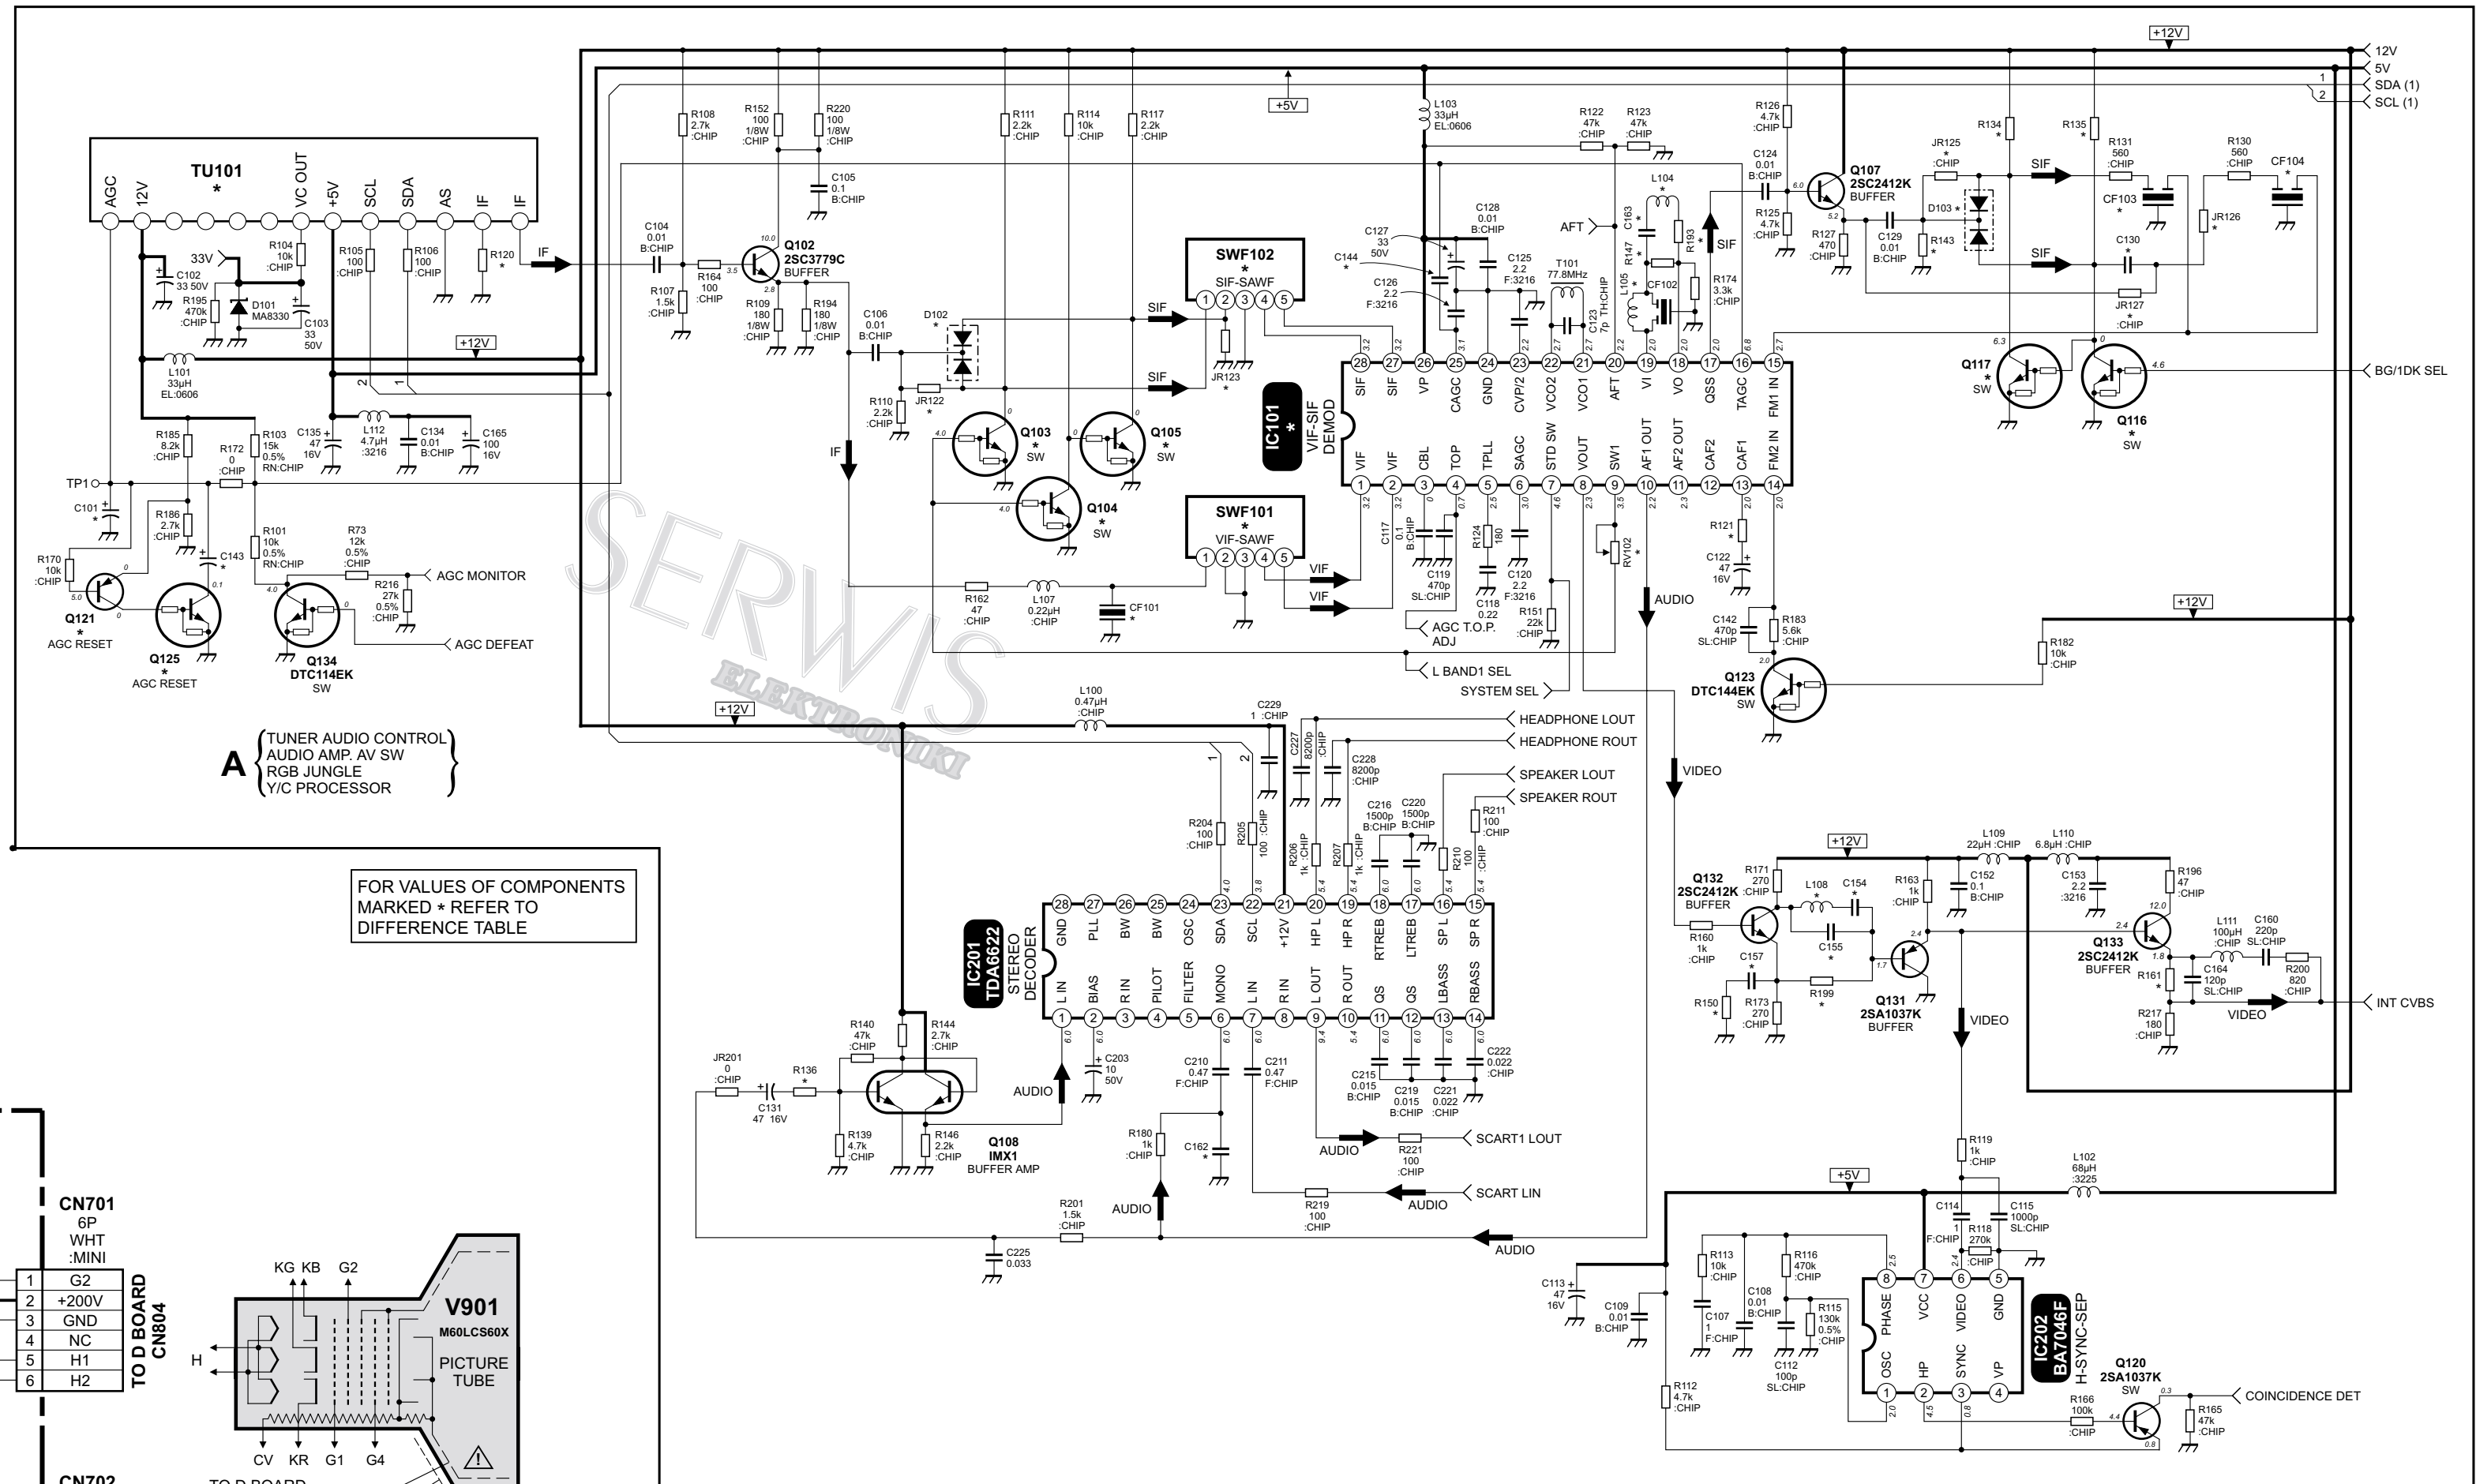

B::SSBE3. <...>C...-25M1/25T1

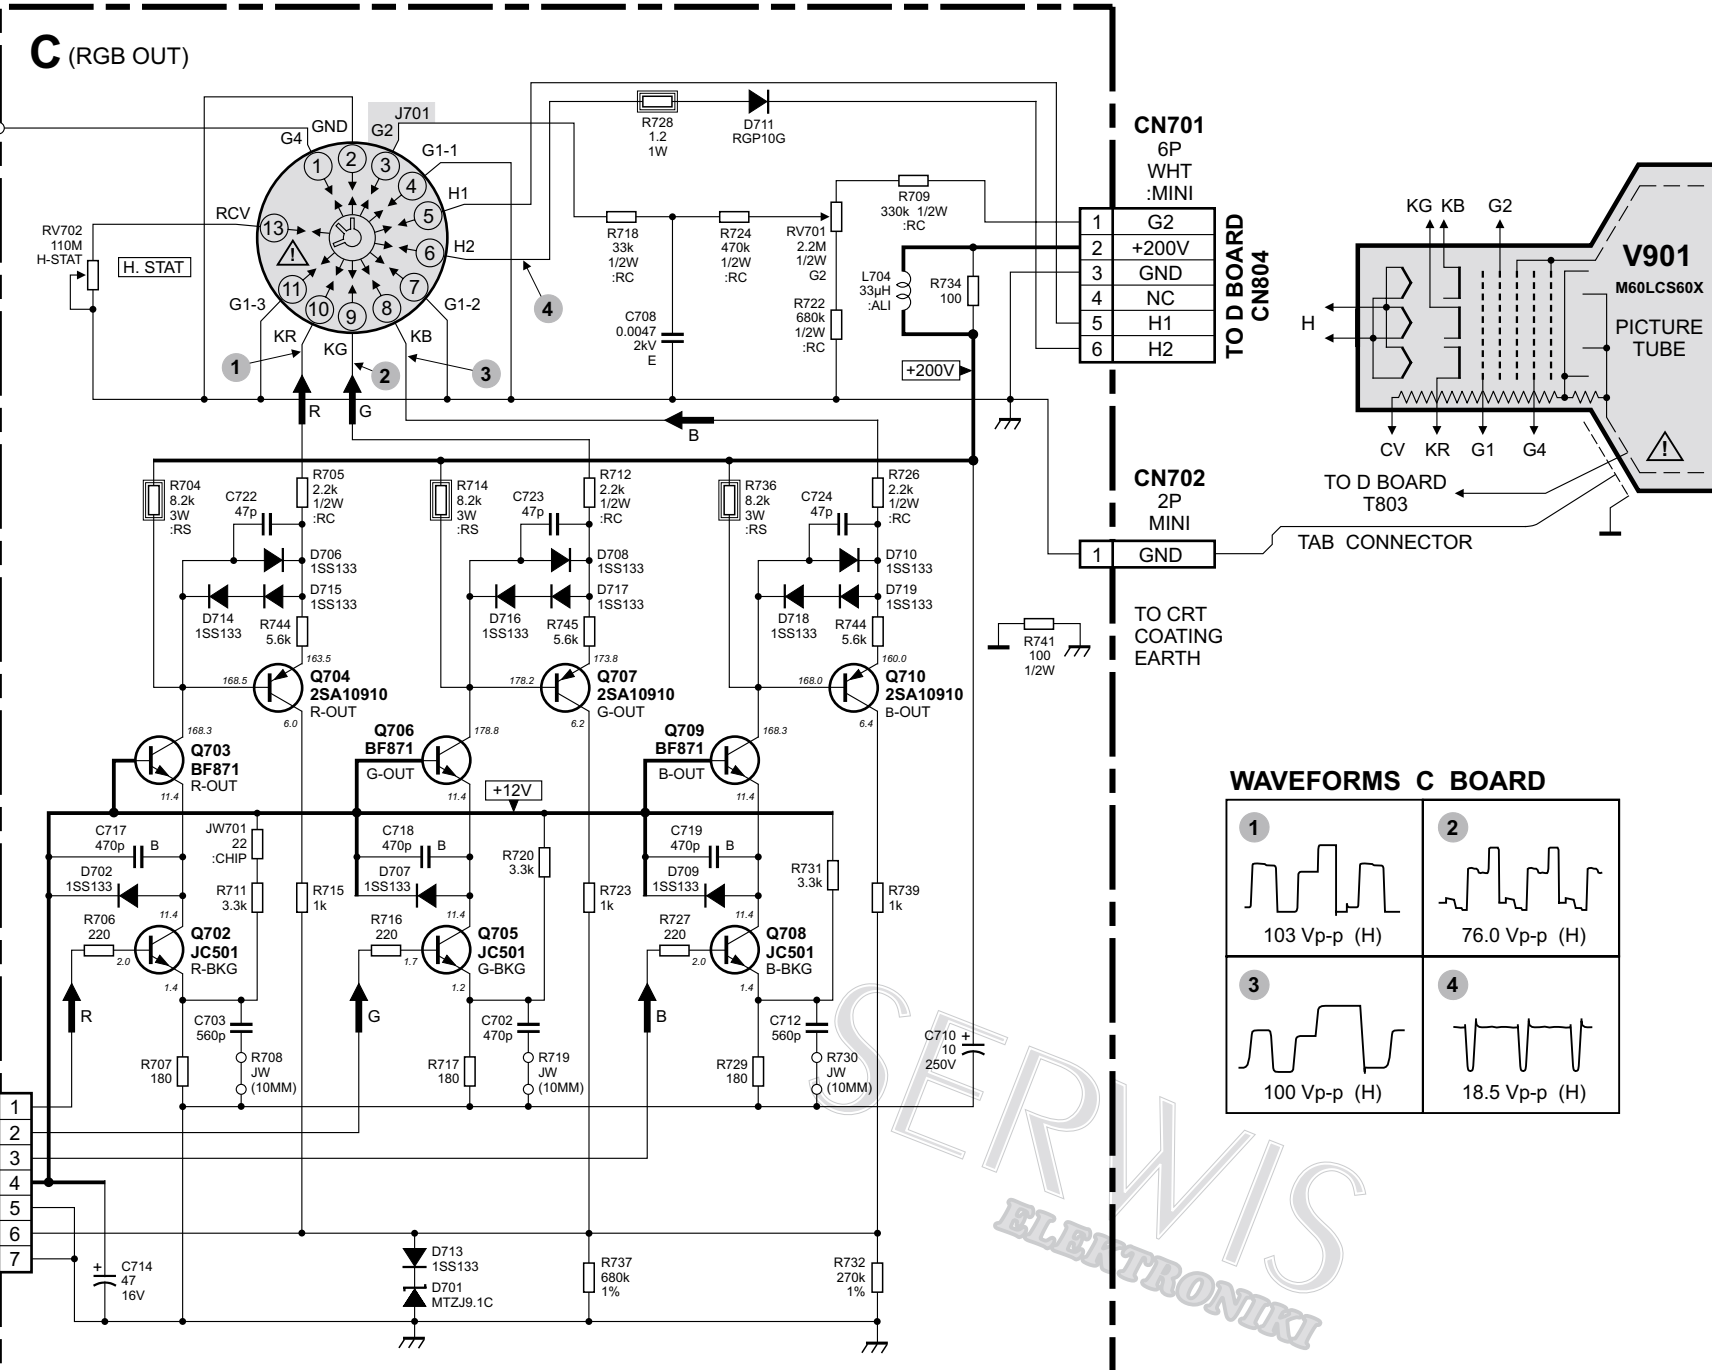

OTVC Sony KV-25M1A/D/E/K, KV-25T1A/B/D/E/K/L/R/U
chassis BE-3B (strona 4/4)