

IR CODE (KASEIKYO)

KEY CODE (家製協)				Maker Code (C₀C₁)
RCD-M39:RC-1162				DENON (3254H)
KEY No.	Name	Genre 1(D ₀)	Genre 2(D ₁)	DATA Code (D ₂)
KEY1	SLEEP	SYSTEM (5H)	SYSTEM (1H)	SLEEP (431H)
KEY2	CLOCK	SYSTEM (5H)	SYSTEM (1H)	CLOCK(434H)
KEY3	DIMMER	SYSTEM (5H)	SYSTEM (1H)	DIMMER(433H)
KEY4	POWER	SYSTEM (5H)	SYSTEM (1H)	POWER ON/STANDBY(403H)
KEY5	CD	SYSTEM (5H)	AUDIO PLAYER(3H)	(/FUNCTION)CD(407H)
KEY6	TUNER	SYSTEM (5H)	TUNER (6H)	(/FUNCTION)TUNER (407H)
KEY7	iPod/USB	SYSTEM (5H)	AMP/RECIEVER (2H)	(FUNCTION)USB/iPod(413H)
KEY8	DIGITAL IN	SYSTEM (5H)	AMP/RECIEVER (2H)	(/FUNCTION)OPTICAL(414H)
KEY9				
KEY10	ANALOG IN	SYSTEM (5H)	AMP/RECIEVER (2H)	(/FUNCTION)AUX1(408H)
KEY11				
KEY12				
KEY13				
KEY14	<<	SYSTEM (5H)	SYSTEM (1H)	<< (40DH)
KEY15	PLAY/ PAUSE	SYSTEM (5H)	SYSTEM (1H)	PLAY/PAUSE(40AH)
KEY16	>>	SYSTEM (5H)	SYSTEM (1H)	>> (40CH)
KEY17	<</TU -	SYSTEM (5H)	SYSTEM (1H)	<</TU- (40FH)
KEY18	STOP	SYSTEM (5H)	SYSTEM (1H)	STOP (43FH)
KEY19	>>/TU +	SYSTEM (5H)	SYSTEM (1H)	>>/TU+ (40EH)
KEY20	CH+	SYSTEM (5H)	TUNER (6H)	CH+(40CH)
KEY21	MUTE	SYSTEM (5H)	SYSTEM (1H)	MUTE (406H)
KEY22	VOLUME up	SYSTEM (5H)	SYSTEM (1H)	VOLUME+ (404H)
KEY23	CH-	SYSTEM (5H)	TUNER (6H)	CH-(40DH)
KEY24	SDB/TONE	SYSTEM (5H)	SYSTEM (1H)	TONE(/SDB)(430H)
KEY25	VOLUME down	SYSTEM (5H)	SYSTEM (1H)	VOLUME- (405H)
KEY26	FOLDER MODE	SYSTEM (5H)	SYSTEM (1H)	FOLDER(42DH)
KEY27	UP	SYSTEM (5H)	SYSTEM (1H)	CURSOR UP (420H)
KEY28	REMOTE/BROWSE	SYSTEM (5H)	PORTABLE (7H)	REMOTE/BROWSE(42DH)
KEY29	LEFT	SYSTEM (5H)	SYSTEM (1H)	CURSOR LEFT (422H)
KEY30	ENTER	SYSTEM (5H)	SYSTEM (1H)	ENTER (424H)
KEY31	RIGHT	SYSTEM (5H)	SYSTEM (1H)	CURSOR RIGHT (423H)
KEY32	DAB/RDS	SYSTEM (5H)	TUNER(6H)	DAB/RDS(42AH)
KEY33	DOWN	SYSTEM (5H)	SYSTEM (1H)	CURSOR DOWN (421H)
KEY34	SETUP	SYSTEM (5H)	SYSTEM (1H)	(/SYSTEM)MENU(440H)
KEY35	1	SYSTEM (5H)	SYSTEM (1H)	1 (411H)
KEY36	2	SYSTEM (5H)	SYSTEM (1H)	2 (412H)
KEY37	3	SYSTEM (5H)	SYSTEM (1H)	3 (413H)
KEY38	4	SYSTEM (5H)	SYSTEM (1H)	4 (414H)
KEY39	5	SYSTEM (5H)	SYSTEM (1H)	5 (415H)
KEY40	6	SYSTEM (5H)	SYSTEM (1H)	6 (416H)
KEY41	7	SYSTEM (5H)	SYSTEM (1H)	7 (417H)
KEY42	8	SYSTEM (5H)	SYSTEM (1H)	8 (418H)
KEY43	9	SYSTEM (5H)	SYSTEM (1H)	9 (419H)
KEY44	+10	SYSTEM (5H)	SYSTEM (1H)	+10(41CH)
KEY45	0	SYSTEM (5H)	SYSTEM (1H)	0 (41BH)
KEY46	CLEAR	SYSTEM (5H)	SYSTEM (1H)	CLEAR(42FH)
KEY47	RANDOM	SYSTEM (5H)	SYSTEM (1H)	RANDOM (42AH)
KEY48	REPEAT	SYSTEM (5H)	SYSTEM (1H)	REPEAT (42BH)
KEY49	PROGRAM	SYSTEM (5H)	SYSTEM (1H)	PROGRAM(429H)
KEY50	INFO	SYSTEM (5H)	SYSTEM (1H)	DISPLAY(/TIME) (432H)

Key number of RC-1162

1	2	3	4
5	6	7	
8	9	10	
11	12	13	
14	15	16	
17	18	19	
20	21	22	
23	24	25	
26	27	28	
29	30	31	
32	33	34	
35	36	37	
38	39	40	
41	42	43	
44	45	46	
47	48	49	50