



Service Adjustments with Replacing Memory IC(IC802)

[Entering to Service Mode]



1. Press and hold the **MENU** button on the Remote Control and press the **VOLUME (+)** button on the TV set. Following setting items appears on the screen.

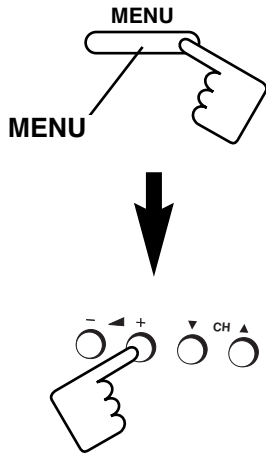

Display for [RF AGC] RF AGC adjustment

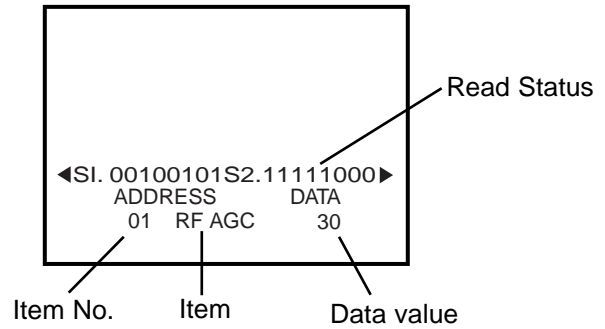


2. Select item by pressing the **TIMER** (Item No. UP) or **SOUND MUTE** (Item No. DOWN) button on the remote control handset.

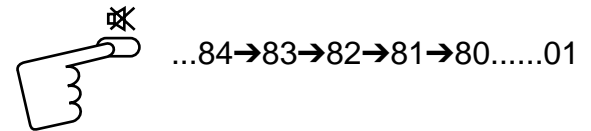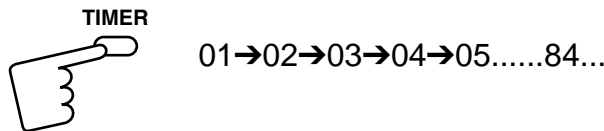


Example


Display for [V-SCO] V-S Correction adjustment

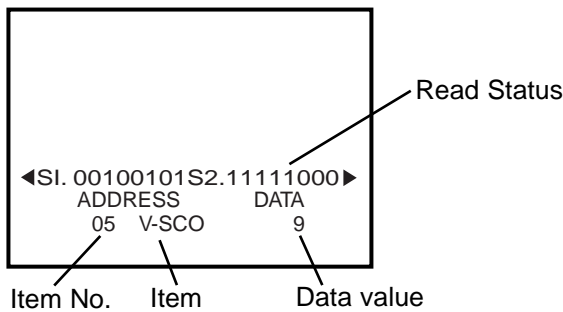

Display for [DRV] White balance adjustment

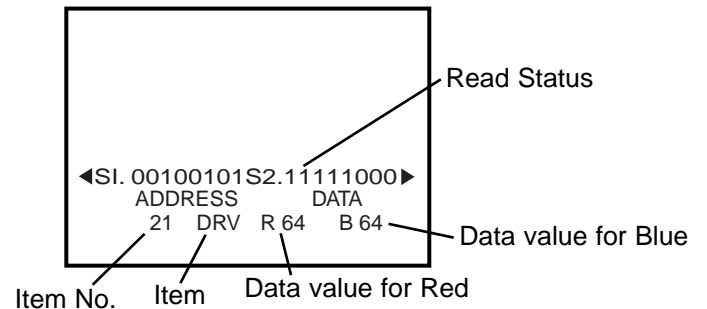

3. Adjust data value by pressing the **VOLUME +** or **VOLUME -** button on the remote control handset.

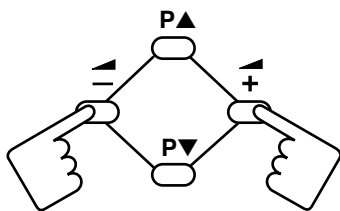

To return to normal TV mode, press the **MENU** button on the TV set or the remote control handset.