



■ REMOTE CONTROL WH217700: RX-E810 (U, C, T, K, A, L, V models)
WH217800: RX-E810 (B, G models)

• SCHEMATIC DIAGRAM

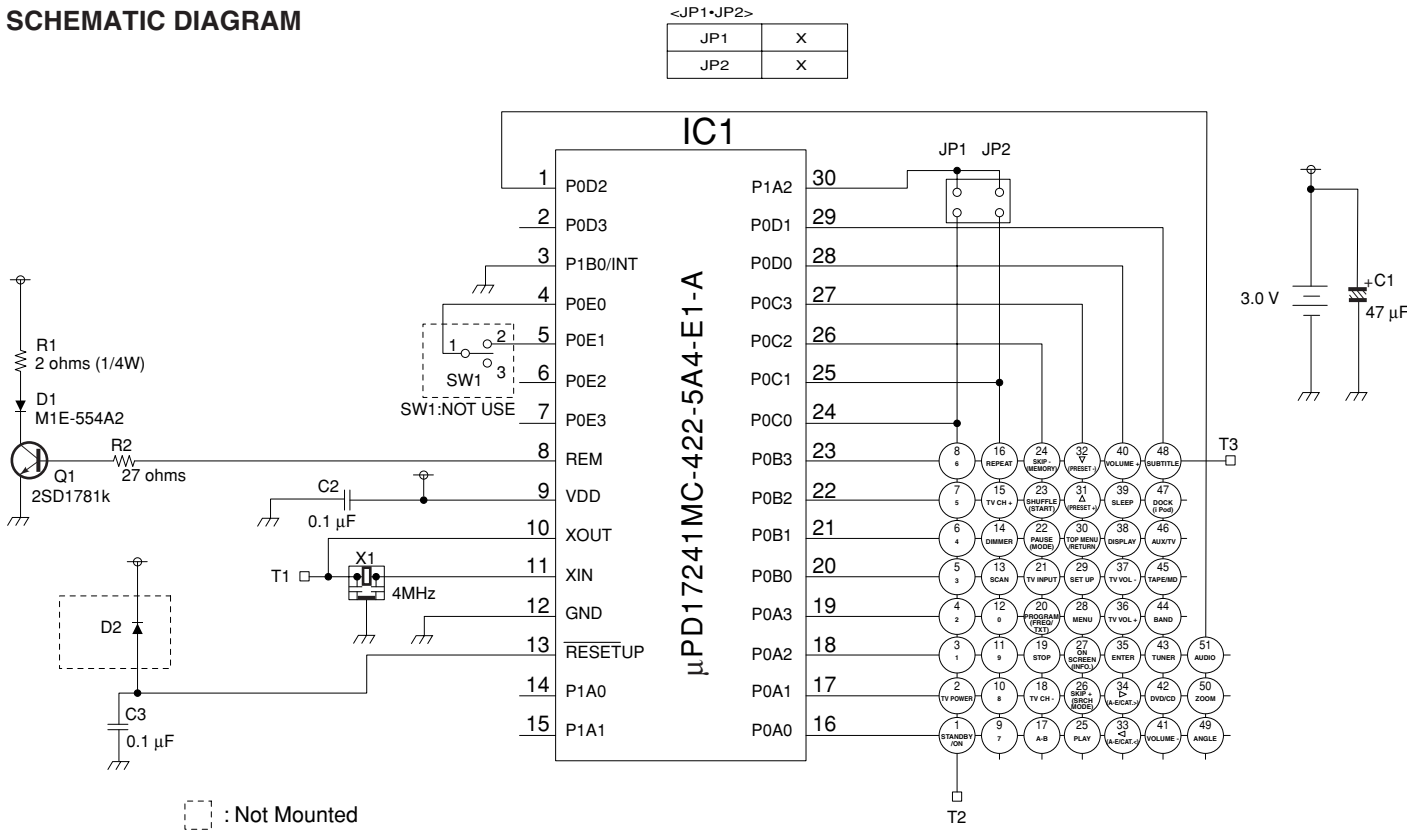


• PANELS


U, C, T, K, A, L, V models

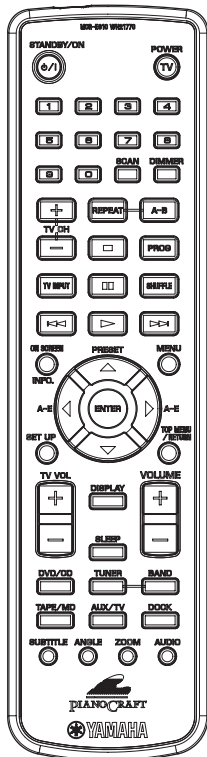

B, G models

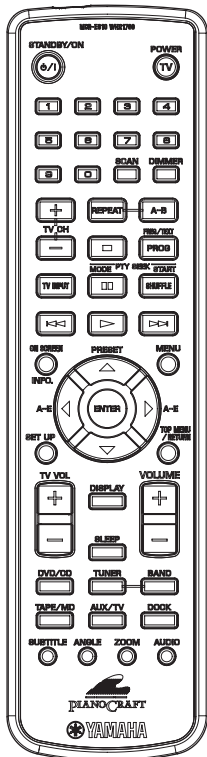

• KEY LAYOUT

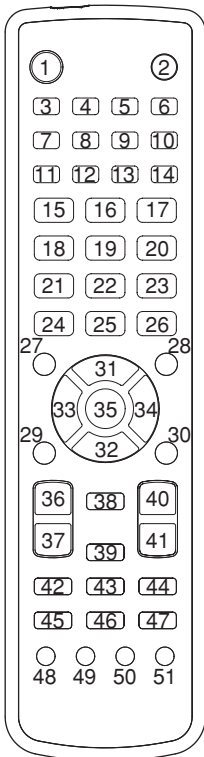


• KEY CODE

Key No.	Key Label	Common	DVD/CD		TUNER		ACX/TV		DOCK		TAPE/MD	
		code	Function	code	Function	code	Function	code	Function	code	Function	code
1	STANDBY/ON	78-0F	<	<	<	<	<	<	<	<	<	<
2	TV POWER	-	TV POWER : 50-17									
3	1	-	1	7C-94	P1	78-11	-	-	-	-	-	-
4	2	-	2	7C-95	P2	78-12	-	-	-	-	-	-
5	3	-	3	7C-96	P3	78-13	-	-	-	-	-	-
6	4	-	4	7C-97	P4	78-14	-	-	-	-	-	-
7	5	-	5	7C-98	P5	78-15	-	-	-	-	-	-
8	6	-	6	7C-99	P6	78-16	-	-	-	-	-	-
9	7	-	7	7C-9A	P7	78-17	-	-	-	-	-	-
10	8	-	8	7C-9B	P8	78-18	-	-	-	-	-	-
11	9	-	9	7C-9C	-	-	-	-	-	-	-	-
12	0	-	0	7C-93	-	-	-	-	-	-	-	-
13	SCAN	-	SCAN	7C-E2	-	-	-	-	-	-	-	-
14	DIMMER	78-BA	-	-	-	-	-	-	-	-	-	-
15	TV CH +	-	-	-	-	-	TV CH + : 50-19		-	-	-	-
16	REPEAT	-	REPEAT	7C-A3	-	-	-	-	REPEAT	7F01-45BA	-	-
17	A-B	-	A-B	7C-A4	-	-	-	-	-	-	-	-
18	TV CH -	-	-	-	-	-	TV CH - : 50-18		-	-	-	-
19	[STOP]	-	DVD STOP	7C-85	-	-	-	-	STOP	7F01-1DE2	STOP	7A-03
20	PROGRAM (FREQ/TXT)	-	PROGRAM	7C-A0	FREQ/TXT	78-81	-	-	-	-	-	-
21	TV INPUT	-	-	-	-	-	TV INPUT : 50-09		-	-	-	-
22	[PAUSE (MODE)]	-	PAUSE	7C-83	MODE	78-82	-	-	PAUSE	7F01-1AE5	-	-
23	SHUFFLE (START)	-	SHUFFLE	7C-A1	START	78-83	-	-	SHUFFLE	7F01-46B9	-	-
24	[SKIP - (MEMORY)]	-	SKIP -	7C-B9	-	-	-	-	SKIP/SEARCH -	7F01-1BE4	REW	7A-01
25	[PLAY]	-	DVD PLAY	7C-82	-	-	-	-	PLAY	7F01-1EE1	PLAY	7A-00
26	[SKIP + (SRCH MODE)]	-	SKIP +	7C-BA	-	-	-	-	SKIP/SEARCH +	7F01-1CE3	FF	7A-02
27	ON SCREEN (INFO.)	-	ON SCREEN	7C-A6	-	-	-	-	INFO.	7F01-15EA	-	-
28	MENU	-	MENU	7C-B2	-	-	-	-	MENU	7F01-0FF0	-	-
29	SET UP	-	SET-UP	7C-AC	-	-	-	-	-	-	-	-
30	TOP MENU/RETURN	-	RETURN	7C-B1	-	-	-	-	-	-	-	-
31	[PRESET +]	-	UP	7C-B4	PRESET/CH ^	78-8E	-	-	UP	7F01-0EF1	-	7A-07
32	[PRESET -]	-	DOWN	7C-B3	PRESET/CH v	78-8F	-	-	DOWN	7F01-14EB	DIR B	7A-40
33	[A-E/CAT. <]	-	LEFT	7C-B5	A-E <	78-9F	-	-	LEFT	7F01-10EF	REC/PAUSE	7A-04
34	[A-E/CAT. >]	-	RIGHT	7C-B6	A-E >	78-9E	-	-	RIGHT	7F01-12ED	DECK A/B	7A-06
35	ENTER	-	ENTER	7C-B8	-	-	-	-	ENTER	7F01-11EE	-	-
36	TV VOL +	-	TV VOLUME + : 50-12									
37	TV VOL -	-	TV VOLUME - : 50-15									
38	DISPLAY	78-4E	<	<	<	<	<	<	<	<	<	<
39	SLEEP	78-4F	<	<	<	<	<	<	<	<	<	<
40	VOLUME +	78-1E	<	<	<	<	<	<	<	<	<	<
41	VOLUME -	78-1F	<	<	<	<	<	<	<	<	<	<
42	DVD/CD	78-4A	<	<	<	<	<	<	<	<	<	<
43	TUNER	78-4B	<	<	<	<	<	<	<	<	<	<
44	BAND	-	-	-	BAND	78-B6	-	-	-	-	-	-
45	TAPE/MD	78-41	<	<	<	<	<	<	<	<	<	<
46	AUX/TV	78-49	<	<	<	<	<	<	<	<	<	<
47	DOCK (IPOD)	78-D0	<	<	<	<	<	<	<	<	<	<
48	SUBTITLE	-	SUBTITLE	7C-AA	-	-	-	-	-	-	-	-
49	ANGLE	-	ANGLE	7C-AE	-	-	-	-	-	-	-	-
50	ZOOM	-	ZOOM	7C-D7	-	-	-	-	-	-	-	-
51	AUDIO	-	AUDIO	7C-AD	-	-	-	-	-	-	-	-


RX-E810/RX-E410/NX-E800

■ REMOTE CONTROL WH256400: RX-E410 (B, G models)


• SCHEMATIC DIAGRAM

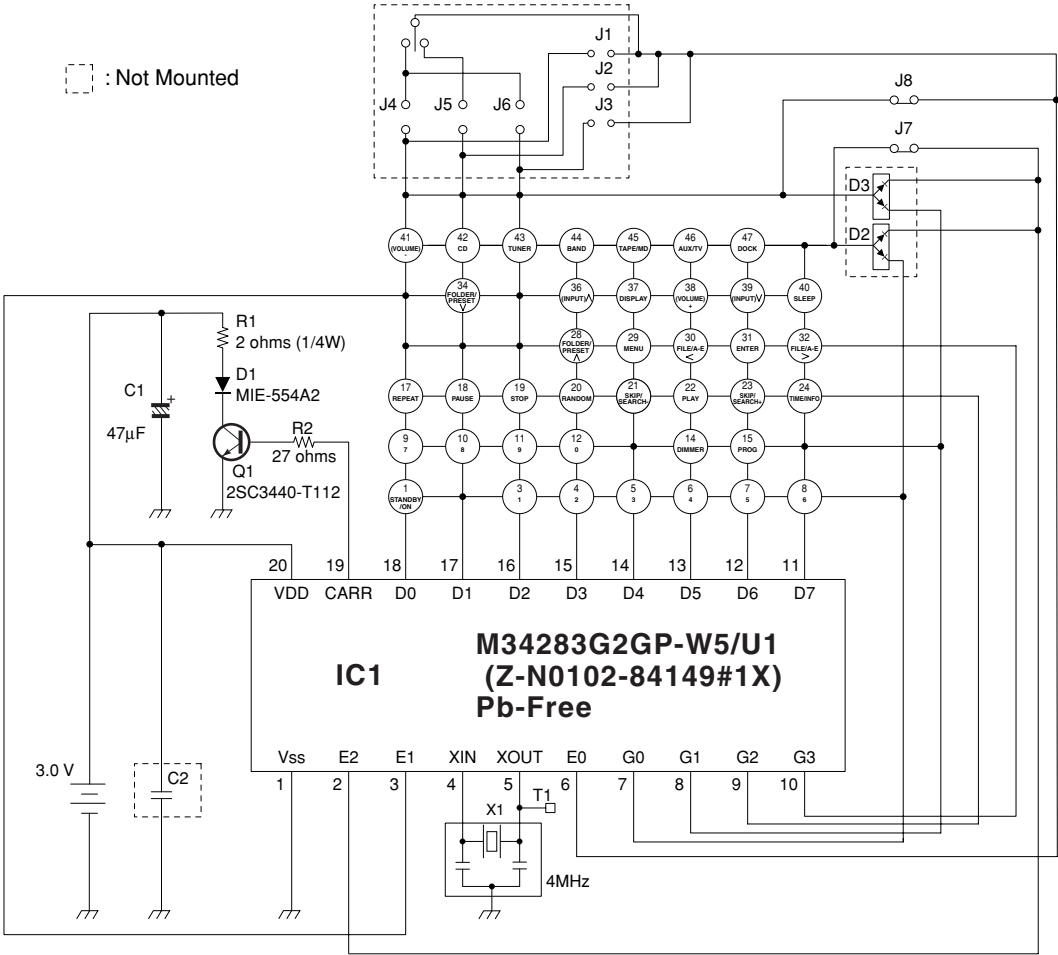

• PANEL

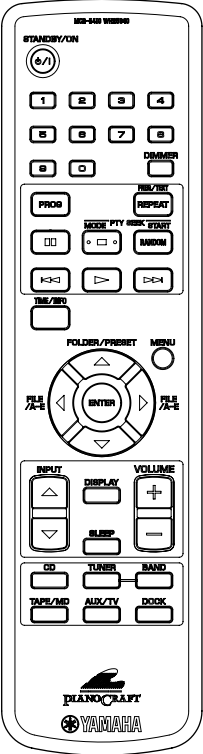

• KEY LAYOUT

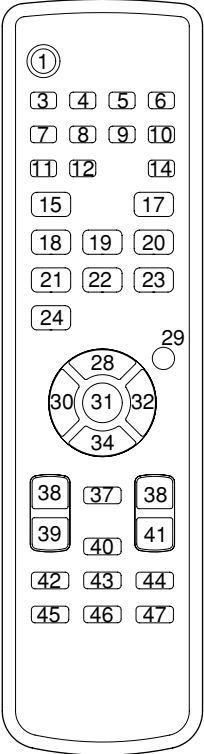

• KEY CODE

Key No.	Key Label	CUSTOM CODE	DATA CODE
1	STANDBY/ON	78	0F
3	1	78	11
4	2	78	12
5	3	78	13
6	4	78	14
7	5	78	15
8	6	78	16
9	7	78	17
10	8	78	18
11	9	78	19
12	0	78	10
14	DIMMER	78	BA
15	PROG	78	0B
17	REPEAT	78	0C
18	⏸ (PAUSE)	78	B9
19	⏹ (STOP)	78	01
20	RANDOM	78	07
21	SKIP/SEARCH -	78	04
22	▶ (PLAY)	78	02
23	SKIP/SEARCH +	78	03
24	TIME/INFO	78	0A
28	FOLDER/PRESET Δ	78	8E
29	MENU	78	9D
30	FILE/A-E ◀	78	9F
31	ENTER	78	C1
32	FILE/A-E ▶	78	9E
34	FOLDER/PRESET ▽	78	8F
36	INPUT Δ	78	5E
37	DISPLAY	78	4E
38	VOLUME +	78	1E
39	INPUT ▽	78	40
40	SLEEP	78	4F
41	VOLUME -	78	1F
42	CD	78	4A
43	TUNER	78	4B
44	BAND	78	B6
45	TAPE/MD	78	41
46	AUX/TV	78	49
47	DOCK	78	D0