

Microcontroller configuration : Service mode

To switch the TV set into service mode please see instruction below.

- 1 - Select pr. number 91
- 2 - Adjust sharpness to minimum and exit all menu.
- 3 - Quickly press the key sequence : **RED - GREEN - menu**

To exit SERVICE menu press **menu** key or **Std By** key.

In Service Mode press "**OK**" to stop the microcontroller i.e. the I2C bus is free and the set can be controlled by external equipment.
Press "**OK**" again to allow the microcontroller to control the set again