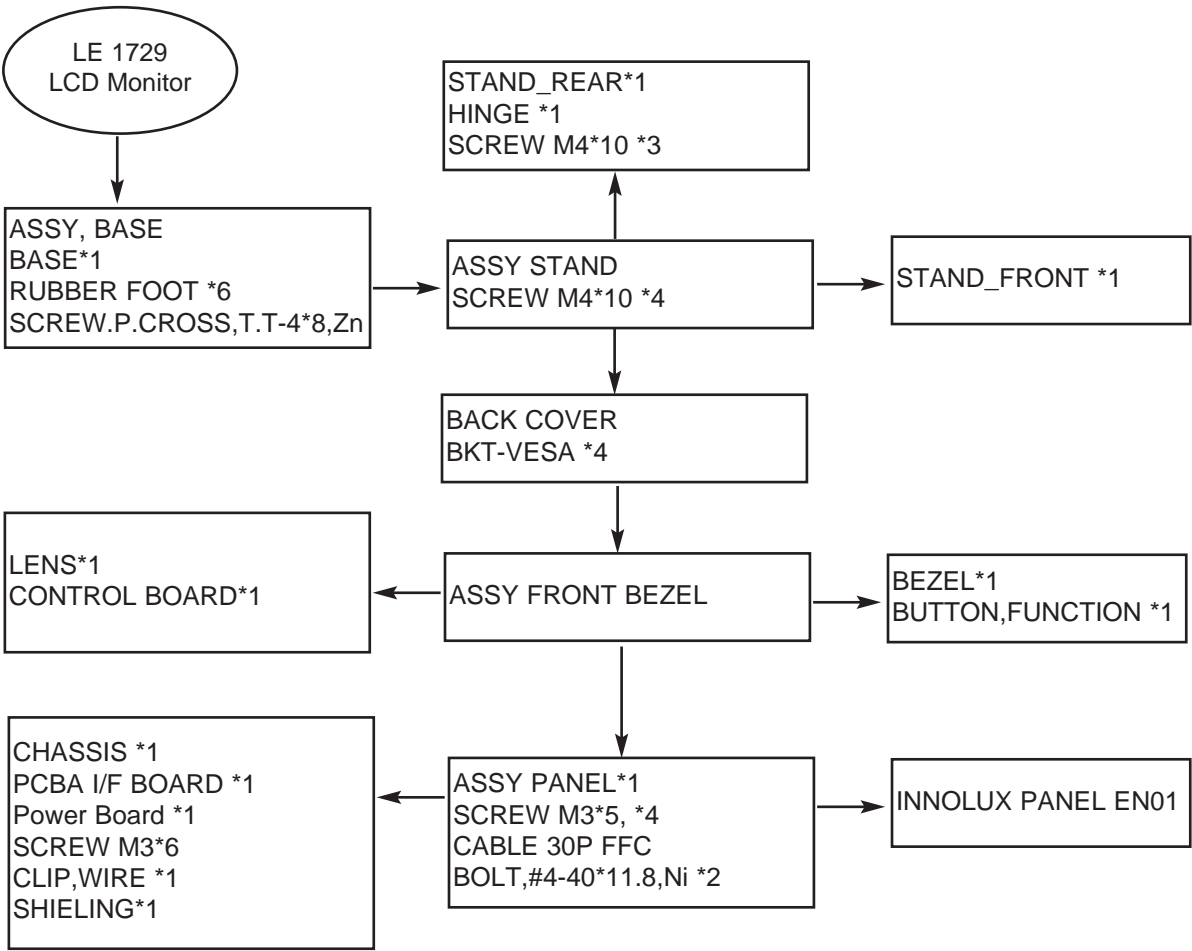


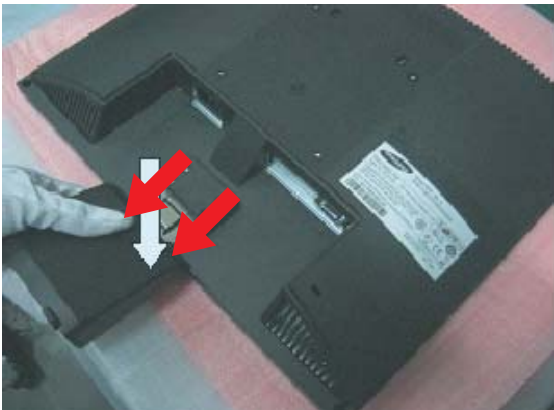
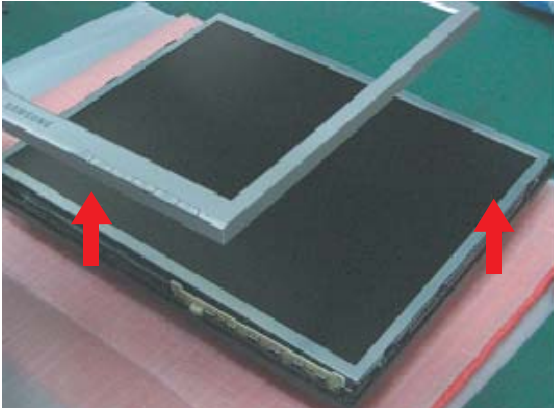


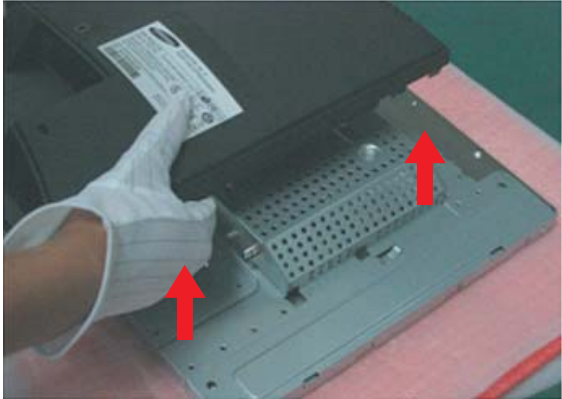

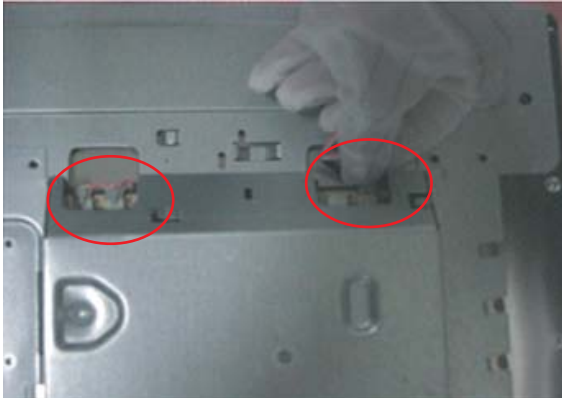

# 11 Disassembly and Reassembly

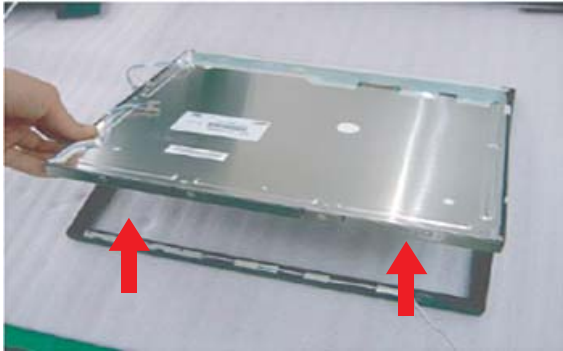

## 11-1 Disassembly Block



**Note:** The DIS assembly direction please following direction of arrowhead

Description	Picture Description
1. Remove 4 screw from the stand	
	
2. Remove the stand and front color	
	

Description	Picture Description
<p>3. Lift the back cover and use the jig to remove the shield lamp.</p>	
	
<p>4. Disconnect cables</p>	
<p>5. Lift up the shield and disconnect LVDS cables</p>	

Description	Picture Description
<p>6. Lift up the LCD panel</p>	
	

## 11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.