





Content

Chapter 1 Basic Care and Instructions	2
Chapter 2 System Tour of N8608I-AW	4
2.1 Front View	4
2.2 Back View	5
2.3 The Remote	6
Chapter 3 Initial Use of N8608I -AW	9
3.1 Checking List	9
3.2 Connection	10
3.3 Power On	10
Chapter 4 System Management	11
4.1 User Logi n	11
4.2 Basic Settings	13
4.3 Network Configurations	13
4.31 Static IP	13
4.3.2 DHCP Settings	14
4.3.3 Wireless Network Settings	14
4.4 PPPOE Settings	16
4.5 Advanced Settings	17
4.6 Back to Home Menu	17
Chapter 5 Input Methods	17
5.1 Letters	18
5.2 Numbers	18
5.3 Soft Keyboard	18
Chapter 6 Upgrade of STB	19
Chapter 7 EPG Login	20
7.1 Initial User Password	20



Chapter 1 Basic Care and Instructions

FCC ID:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.



In order to avoid electric shock, please do not open the box by yourself.



Place this product on a steady, level and clean surface. Do not cover the intakes.



Keep it far away from heat. Do not expose it to direct sunlight. Do not put combustible things on it, such as burning candles.



Do not put it near any equipment that might cause electromagnetic or electric field.



Keep it in dry environment. Do not spill water or any liquid on the box.

If liquid flows into it, please turn off power immediately and contact our technical maintenance staff.



Never place objects on top of the box to avoid damaging the STB.

带格式的: 正文,缩进:首 行缩进: 2 字符,定义网 格后不调整右缩进,定义落间磅, 距段商: 0 转,现后: 0 等 证明整一文与中文之间的 不调整西文与中文之数字之 间的空格,不调整中文和数字之 间的空格

带格式的:字体:(中文)宋体,10磅,下划线,字体颜色:红色





Please pull out power plug if it is not to be operated for a long period.

Do not use damaged power cord. Please contact technical maintenance staff for changing new power cord.



Please pull out the power plug during thunder storm.



Stop operation immediately and switch off the power and pull out the power plug, if such malfunction occurs like smoking, abnormal sound, bad smell, etc.




When cleaning the exterior, please switch off the unit and pull out the power plug. Do not operate with wet hands. Use a damp cloth moistened with water and soft detergent for cleaning. Do not use chemicals cleaners like benzene, alcohol, gasoline, etc.



Chapter 2 System Tour of N8608I-AW

2.1 Front View

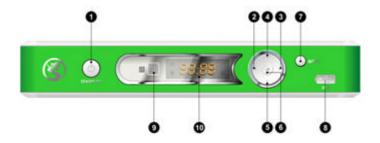

1 STANDBY

2 ARROW BUTTON – LEFT

3 ARROW BUTTON - RIGHT

4 ARROW BUTTON – UP

ARROW BUTTON - DOWN

6 ENTER/OK

7 MENU


8 USB PORTAL

9 REMOTE RECEIVER

10 LED DISPLAY



2.2 Back View

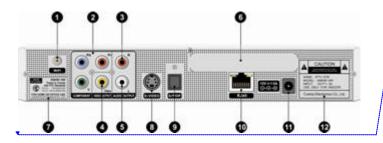

WIFI Antenna Portal

2 Y-Pb-Pr Output

3 Right Audio Channel Output

4 Video Output

5 Left Audio Channel Output

6 Bar Code

FCC Mark

8 S.Video ...

9 S/P DIF Portal_

10/100 Base-T Rj45 Port

Power Jack

Safety Indicator

删除的内容:

删除的内容: 8 S Video

删除的内容: 9 S/P DIF

Portal

带格式的: 字体: 非加粗

删除的内容: W UL Mark

删除的内容: 🛈 10/100

Base-T Rj45 Port

删除的内容: 🕡 Power

Jack

删除的内容: 🔞 Safety


Indicator

删除的内容: 7 FCC

Mark



2.3 The Remote

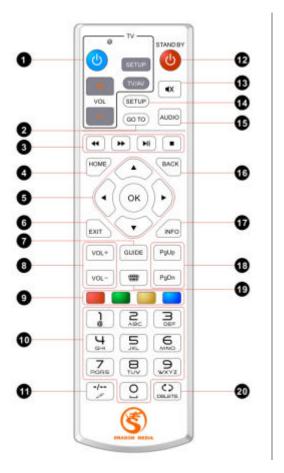



Function buttons for remote control of TV set:

Blue key is the power of TV set

VOL +/ -: Control the volume of TV set

SETUP: Setup TV parameters

TV/AV: Switch between TV and AV

- 2 GO TO: Skip to specified position while playing
- REW, FFWD, PLAY/PAUSE, STOP: Fast rewind, fast forward, play/pause, stop
- 4 HOME: Back to the home menu
- 5 Arrow buttons of Up, Down, Left, Right and "OK"
- **6 EXIT:** To exit, cursor navigation button
- **Q** GUIDE: Program navigation button
- 8 VOLUME +/-: Increase or decrease Volume
- 9 Red, Green, Yellow, Blue buttons: Shortcut keys with special purposes:

Red Button - Switch to VOD menu

Green Button - Switch to TV channel menu

Yellow Button - Switch to feature channel menu

Blue Button - Switch to hot recommendation menu

- 0-9: Number keys
- 4--: Switch input methods
- **12** STANDBY: Standby



MUTE: Muting

4 SETUP: Enter system settings

15 AUDIO: Switch left and right audio channels

16 BACK: Go back to previous page

INFO: Information-prompting of current page

Page Buttons: PgDn – Page Down, PgUp – Page Up;

9 Soft Keyboard: Open or close soft keyboard

DELETE: Clear one character

Notes:

- Fast forward, back forward, pause and timing can not be applied to live and roll broadcasting programs.
- 2. Press "STANDBY" (on the front panel of STB) when STB is down abnormally.
- 3. As every step of the operation reads data from network, please be patient and wait for 2 seconds after pressing the keys. Do not press continually during fast forward or fast rewind



Chapter 3 Initial Use of N8608FAW

This chapter gives you detailed information on using N8608I-AW STB for the first time. After finishing this chapter, you will be able to order programs through IP network.

Contents in this chapter:


- Checking List
- Connection
- Power On


3.1 Checking List

Components	Quantity
N8608I-AW IP Set Top Box Unit	1
Power Adapt e r	1
User Manual	1
Audio / Video Cable	1
RJ45 Network Cable	1
The Remote	1
The Antenna	1
AAA Battery	2



3.2 Connection cable

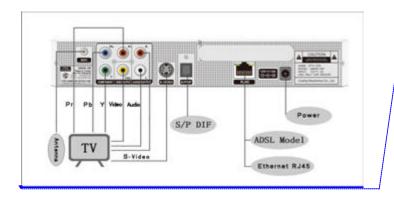

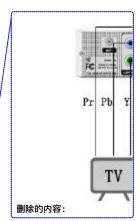

3.3 Power On

Follow the below steps to power on the N8608I -AW STB and TV set:

- (1) Insert the power plug of N8608I-AW STB to nearby power socket
- (2) Make sure that the power connection of TV set is correct
- (3) Switch on the powers on both TV set and back panel of STB. The indicator light on the front panel of STB is on now, which shows the STB is working now
- (4) Change to A/V mode on TV set
- (5) You can connect wireless antenna to 'antenna' as shown in above picture if you use wireless network

删除的内容:

Notes:

Press "STANDBY" key on the remote to reset the box if the STB is down. If this is useless, turn off the power on the back panel of STB and restart.


删除的内容:



Chapter 4 System Management

This chapter will tell you the system management operation of N8608I-AW. All instructions refer to the remote of N8608I-AW if there is no special instruction.

After start-up successfully, STB will enter the beginning screen as show in Picture 4-1:

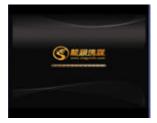

Picture 4-1 Beginning Screen

4.1 User Login

Press "SETUP" key for system settings after entering the main menu. The initial default system password is 123456. Below is the screen of login, Picture 4-2:



Picture 4-2 Login Screen

Modify the password as shown in Picture 4-3:





Picture 4-3 Modify Password

System management functions provided by N8608I -AW include:

- Basic Settings
- Network Settings
- PPPOE Settings
- Advanced Settings

System management screen as shown in Picture 4-4 below:



Picture 4-4 Front Screen of Settings

Notes:

- > Make modifications (except advanced settings) with the guidance of technical professionals!
- > Pictures in this chapter are for reference only. Screen displays change with different versions of software.
- > The system settings of N8608I -AW apply for most of the status, and no need to



make any change to system settings. Basic settings are used for ISP maintenance staff in special application.

4.2 Basic Settings

Basic settings are used by ISP maintenance staff. You don't need to make any basic settings. Press "EXIT" on the remote to exit basic settings page. See Picture 4-5:



Picture 4-5 Basic Settings

4.3 Network Configurations

It is easy to modify and manage the internet access mode by network settings functions provided by N8608I -AW.

Choose network configurations on the left of the settings page.

4.3.1 Static IP

Choose "Cable network"? Choose "Static IP" in connection mode? Setup IP address, subnet mask, gateway address, DNS address, then press "OK" to save the parameters. Press "EXIT" to exit current setting page. See Picture 4-6 (Note: Please make sure the IP address is correct):





Picture 4-6 Static IP Settings

4.3.2 DHCP Settings

Choose "Cable Network" if there is DHCP server? Choose "Dynamic" in connection mode? Press "OK" to save the parameters. Press "EXIT" to exit current setting page. See Picture 4-7 below:



Picture 4-7 DHCP Settings

4.3.3 Wireless Network Settings

Choose "Wireless Network" if there is wireless network? Configure wireless network settings.

Both static and dynamic mode can be chosen as connection. Press "OK" to save. Press "EXIT" to exit current setting page. See Picture 4-8 Wireless Static IP Settings. If someone has set up wireless network for you, and created the WEP key, you have to contact with this person and get the secret key. Follow below procedures for configuration:



Param eters:

SSID Number: Wireless Network Number Encryption: Encryption for wireless use Secret Key Format: Format of secret key

Secret Key: The secret key for connecting wireless network

 Enter SSID (Wireless Network Name), and follow below steps to help you find out your own SSID

First open your PC or notebook connected by wireless network and wait until the completion of the start up of windows system. There will be an icon like a computer on the bottom right corner next to the time display. Double click the icon.

Choose to check the wireless network status

Get your SSID

- Choose Encryption: Move to "Encryption" by arrow keys, then press "OK". Press "UP" or 'DOWN' to choose and press "OK" to open the option list. There are 3 ways for secret key: no secret key, WEP and WPA-PSK encryption.
- For WEP key, please choose "Encryption Format" by arrow keys, then press "OK" to open option list. Move "UP" or "DOWN" and press "OK" to choose. There are 4 secret key formats: "ASCII Code", "HEX". Choose "ASCII Code" if your secret key is in character, and "HEX" for others.
- 4. Enter the key: Move by arrow keys to the secret key input column and enter the key. Please note: "ASCII" is case sensitive. If you are using a HEX key, the key must be entered in all capitals.
- Choose Static or Dynamic for connection mode to set up for static IP and DHCP. Press "OK" to save. Press " EXIT" to exit current setting page.





Picture 4-8 Wireless Static IP Settings

Dynamic settings as below:



Picture 4-9 Wireless DHCP Settings

4.4 PPPOESettings

Choose PPPOE Connection, "Yes" or "No"? Enter correct user ID and password? Press "OK" to save. Press "EXIT" to exit current setting page. See Pic ture 4-10.



Picture 4-10 PPPOE Settings



Notes:

Static IP and DHCP settings cannot be sued after PPPOE settings.

4.5 Advanced Settings

Choose "A dvanced Settings" on the left of setting menu, then press "OK" to save after advanced settings. Press "EXIT" to exit current setting page. See Picture 4-11 (please make a careful choice of "Restore to Default Factory Settings" and "Clear Cookies"). You don't need to configure advanced settings. Default factory setting is OK. Please contact ISP service provider for help if you need any modification:



Picture 4-11 Advanced Settings

4.6 Back to Home Menu


Press "Home Menu" on the left of the setting page or press "HOME" key to go back to Home Menu.

Chapter 5 Input Methods

Set Top Box N8608I-AW provides 6 Input Methods: Pinyin (no tones), Numbers, Capital Letters, Initial Capital Letters, Iowercase and Soft Keyboard. Numbers input method is default. Press input method key "/--" for once or more to choose other input methods. Input methods icons are shown as below:





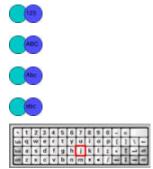

5.1 Letters

Change to the mode of Letters by "/--" key, as is shown on the remote. Symbols are on the key " 1", and 34 letters on each other number keys. You need to press one key for once or more to get the right letter on it. For example, the letter " n" is on the key " 6", the second letter on it. So you have to press " 6" for twice, then the letter " n" will be on the textbox. And so on.

5.2 Numbers

Change to the mode of numbers by "-/--" key. The numbers you choose will be shown in the textbox.

5.3 Soft Keyboard

Change to the mode of Soft Keyboard by pressing the key "Soft Keyboard". Control by the remote, and input the letters, numbers or symbols you need. Switch capital, lowercase letters and symbols by the key "Shift". Switch capital and lowercase letters by the key "LOCK". Move the soft keyboard position by "CTRL" and direction keys.



Chapter 6 Upgrade of STB

STB N8608I-AW has an auto upgrade function built in. It will check the new version software package while booting after you set the update address. Please make sure about below two points in upgrading

- (1) Do not cut off of the power of STB;
- (2) Network cable is well connected and functions.

When the STB detects the upgrade software package, upgrade starts as Picture 6-1 shown below:



Picture 6-1 Upgrade Download

Successful upgrade. See Picture 6-2.



Picture 6-2 Successful Upgrade Completed

After successful upgrade is totally completed, STB will reset automatically and go to the home menu (as long as the network is well connected).

There may be some abnormal situations during the upgrade due to different factors. Please



restart the STB if it cannot work normally.

Chapter 7 EPG Login

7.1 Initial User Password



You will see above picture when you first enter the EPG home menu. Initial default registration ID and password are the last 6 bits of the bar code on the back of STB. For

example:

STB Serial No.	EPG Default User	EPG Default Password
00010100011086800743000E0950DBE4	50DBE4	50DBE4

带格式的:字体:(中文)宋 体

带格式的:字体:(中文) 9 株 株 帯格式表格

With correct ID and password, you can go to EPG homepage for ordering programs as below:

