

CONNECTORS LIST

- J1 = CONNECTORS 9 CONTACTS RST 5
- J2 = CONNECTORS 8 CONTACTS RST 5
- J1 = CONNECTORS EDG 12 CONTACTS RST 2.5
- J10 = CONNECTORS EDG 4 CONTACTS RST 2.5
- J11 = CONNECTORS 2 CONTACTS RST 5
- J12 = CONNECTORS EDG 5 CONTACTS RST 2.5

