



List of Components Current Path

B2	Pressure Switch Level 1	9
B3	Pressure Switch Level 2	13
E1	Heater	8
F3	Porthole with Interlock	7
F7	Motor Overload	19
K5	Reversing Relay	20
K6	Reversing Relay	21
K12	Relay	14
M1	Programme Switch Motor	16
M2	Wash/Spin Motor	19
M3	Pump Motor	10
N7	Control Module	1-22
Q4	Main Switch On/Off Switch	4
R1	Temperature Sensor	11
S1	Push Button Switch	2-4
S3	Temperature Switch	7,8
V4	Triac Programmer	16
V5	Triac Motor Control	19
X1	Mains Terminal Block	1
X2	Motor Connector Plug	19-22
X11	Plug in Connection Module	5-22
Y2	Solenoid Valve Main Wash	13
Y3	Solenoid Valve Prewash	12
YR	Solenoid Valve Warm Water	15
Z1	Mains Suppressor	3

	K5	K6
Drum rotation right	on	off
Drum rotation left	off	on

- Programme contact on N7
- Connector module N7
- Connector to elec. component

- Valid as from FD 7804
- * Appliance with W/Water
- ** Appliance without W/Water
- and (...) optional

(GB)

B00 5008 AA1	Issue: C	04.99
M 502 .	SO-20/ 0697	