

## HOTEL MODE SURVEY

CHASSIS	FAMILY	IDENT's	HOTEL MODE ACTIVATION	HOTEL MODE DE-ACTIVATION	SPECIFICATION OF THE HOTEL MODE
AA5		V1.0/V1.1/ V2.0/V2.1/V3.0	Select program 38, then press "MENU" on local keyboard and "SLEEPTIMER" (or "OSD") on remote control for at least 4 seconds (at activation a "H+" is displayed (to remove this "H+" switch off/on the set))	Select program 38, then press "MENU" on local keyboard and "SLEEPTIMER" (or "OSD") on remote control for at least 4 seconds (at de-activation a "H-" is displayed (to remove this "H-" switch off/on the set))	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered (else 3 seconds LOCKED). Delta volume can not be entered. PP can not be stored. Always program number 1 at switch on.
Anubis A	3 local controls	-3146	Select program 38, then press "SELECT" on local keyboard and "SLEEPTIMER" on remote control for at least 4 seconds (at activation a "H+" is displayed (to remove this "H+" switch off/on the set))	Select program 38, then press "SELECT" on local keyboard and "SLEEPTIMER" on remote control for at least 4 seconds (at de-activation a "H-" is displayed (to remove this "H-" switch off/on the set))	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered
Anubis A	8 local controls	-3121/3122	Select program 38, then press simultaneously "INSTALL" and "PROGRAM+" on local keyboard	Select program 38, then press simultaneously "INSTALL" and "CONTROL-" on local keyboard	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered + continuous OSD display
Anubis A	8 local controls	/R217	Select program 38, then press "INSTALL" on local keyboard and "SLEEPTIMER" on remote control for at least 4 seconds (at activation a green "H" is displayed (to remove this "H" switch off/on the set))	Select program 38, then press "INSTALL" on local keyboard and "SLEEPTIMER" on remote control for at least 4 seconds (at de-activation a green "H" is displayed (to remove this "H" switch off/on the set))	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered
Anubis A AC	3 local controls TXT	/R131/R132/R133/ R165	Select program 38, then press "MENU" on local keyboard and "SLEEPTIMER" (or "OSD") on remote control for at least 4 seconds (at activation a "H+" is displayed (to remove this "H+" switch off/on the set))	Select program 38, then press "MENU" on local keyboard and "SLEEPTIMER" (or "OSD") on remote control for at least 4 seconds (at de-activation a "H-" is displayed (to remove this "H-" switch off/on the set))	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered
Anubis B		CV6006	First enabling, activate hotel mode option in Service Menu via OPTION 2 menu. Then select program 38. Then press simultaneously "INSTALL" and "PROG+" on local keyboard (OSD "38" from green to red). Put the set in stand-by and then switch on via PROG+.	Select program 38. Then press simultaneously "INSTALL" and "PROG+" on local keyboard (OSD "38" from red to green). Put the set in stand-by and then switch on via PROG+-. For disabling hotel mode, switch off hotel mode option in Service Menu via OPTION 2.	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered. If "INSTALL" is pressed the color of OSD program changes from green to red and the INSTALLATION menu is not displayed any more.
Anubis B		CV6014/ CV6107/107	See CV6006, but now first press "INSTALL" on the local keyboard, the press "SLEEPTIMER" on the remote control while keep pressing "INSTALL" on the local keyboard for at least 4 seconds.	See CV6006, but now first press "INSTALL" on the local keyboard, the press "SLEEPTIMER" on the remote control while keep pressing "INSTALL" on the local keyboard for at least 4 seconds.	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered. If "INSTALL" is pressed the color of OSD program changes from green to red and the INSTALLATION menu is not displayed any more.
Anubis B AB	Hotel TV	CV6012/ CV6018/ CV6109/109	Dedicated Hotel TV set, so always hotel mode	Dedicated Hotel TV set, so always hotel mode	See reference documentation
Anubis S AA/BB/CC	VST sets	Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Two hotel modes are possible:	Hotel mode 1 is activated by simultaneously pressing the "STORE" and "PROGRAM-" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 38 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
			Hotel mode 2 is activated by simultaneously pressing the "STORE" and "PROGRAM+" on the local keyboard while program 37 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 2 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 37 is selected.	Same features as Hotel mode 1 except for program numbers 30 to 49 the screen remains blanked to be used as a radio (transmitter should produce a valid horizontal IDENT). For these program numbers the small program number are displayed continuously.
Anubis S AA/BB/CC	PLL sets	Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Only one hotel modes is possible:	Hotel mode 1 is activated by simultaneously pressing the "STORE" and "PROGRAM-" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 38 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
Anubis S DD	VST sets	Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Two hotel modes are possible:	Hotel mode 1 is activated by simultaneously pressing the "VOLUME-" and "PROGRAM+" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 40 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
			Hotel mode 2 is activated by simultaneously pressing the "VOLUME-" and "PROGRAM+" on the local keyboard while program 37 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 2 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 40 is selected.	Same features as Hotel mode 1 except for the "radio" program numbers. The "radio" program numbers can be programmed via addresses 241 and 242 (see service manual). For these "radio" program numbers the small program number are displayed continuously.
Anubis S DD	PLL sets	Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Only one hotel modes are possible:	Hotel mode 1 is activated by simultaneously pressing the "VOLUME-" and "PROGRAM+" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 40 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
Anubis S DD 14" new styling only		Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Only one hotel modes are possible:	Hotel mode 1 is activated by simultaneously pressing the "INSTALL" and "PROGRAM+" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "INSTALL" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 40 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
CTT-H	VST-sets	All versions	Select program 38, then press "SELECT" on local keyboard and "SLEEPTIMER" on remote control for at least 4 seconds (at activation a "H+" is displayed (to remove this "H+" switch off/on the set))	Select program 38, then press "SELECT" on local keyboard and "SLEEPTIMER" on remote control for at least 4 seconds (at de-activation a "H-" is displayed (to remove this "H-" switch off/on the set))	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered
TV/VCR		All versions	Select program 38. Press simultaneously "SELECT" on local keyboard and "SLEEPTIMER" on remote control until a red "H+" is displayed on OSD. To remove this "H+", switch off and on the set again.	Select program 38. Press simultaneously "SELECT" on local keyboard and "SLEEPTIMER" on remote control until a red "H-" is displayed on OSD. To remove this "H-", switch off and on the set again.	Max volume in hotel mode is the volume present when activating the hotel mode. STORE and INSTALL mode can not be entered.
G8 G8.1 G8.1 ECO G88		All versions	Select "Video 2" mode. Press the remote control keys "Teletext" and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "ON".	Select "Video 2" mode. Press the remote control keys "Teletext" and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "OFF".	"Maximum volume" and "Blanked channels" can be set in Hotel menu.
		All versions	Select "Sound Only" mode. Press the remote control keys "Teletext" and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "ON".	Select "Sound Only" mode. Press the remote control keys "Teletext" and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "OFF".	"Maximum volume" and "Blanked channels" can be set in Hotel menu.

## HOTEL MODE SURVEY

CHASSIS	FAMILY	IDENT's	HOTEL MODE ACTIVATION	HOTEL MODE DE-ACTIVATION	SPECIFICATION OF THE HOTEL MODE
AA5		V1.0/V1.1/V2.0/V2.1/V3.0	Select program 38, then press "MENU" on local keyboard and "SLEEPTIMER" (or "OSD") on remote control for at least 4 seconds (at activation a "H+" is displayed (to remove this "H+" switch off/on the set))	Select program 38, then press "MENU" on local keyboard and "SLEEPTIMER" (or "OSD") on remote control for at least 4 seconds (at de-activation a "H-" is displayed (to remove this "H-" switch off/on the set))	Max volume in hotel mode is the volume present when activating the hotel mode. STORE or INSTALL can not be entered (else 3 seconds LOCKED). Delta volume can not be entered. PP can not be stored. Always program number 1 at switch on.
Arubis S AA/BB/CC	VST sets	Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Two hotel modes are possible:	Hotel mode 1 is activated by simultaneously pressing the "STORE" and "PROGRAM-" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 38 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
			Hotel mode 2 is activated by simultaneously pressing the "STORE" and "PROGRAM-" on the local keyboard while program 37 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 2 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 37 is selected.	Same features as Hotel mode 1 except for program numbers 30 to 49 the screen remains blanked to be used as a radio (transmitter should produce a valid horizontal IDENT). For these program numbers the small program number are displayed continuously.
Arubis S AA/BB/CC	PLL sets	Hotel mode can only be activated if the software for hotel mode is available (so an "H" version) and when the hotel mode option (address 246) is enabled. Only one hotel modes is possible:	Hotel mode 1 is activated by simultaneously pressing the "STORE" and "PROGRAM-" on the local keyboard while program 38 is selected. Both keys must be hold down for at least 3 seconds.	Hotel mode 1 is deactivated by simultaneously pressing the "PROGRAM+" and "VOLUME-" keys on the local keyboard for at least 3 seconds while program 38 is selected.	Install menu (also automatic search) and storing PP not possible. Using the "PROGRAM +/-" keys from standby, switches the TV on to program 1 i.s.o. the last selected program. Maximum volume value is limited to the value present at switching on Hotel Mode.
G88		All versions	Select "Sound Only" mode. Press the remote control keys "Teletext" and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "ON".	Select "Sound Only" mode. Press the remote control keys "Teletext" and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "OFF".	"Maximum volume" and "Blanked channels" can be set in Hotel menu.
PV4.0		All versions	Select channel 38. Press on remote control the keys "Picture Menu" and "Features" in sequence within 1 second.	Select channel 38. Press on remote control the keys "Picture" and "OSD" in sequence within 1 second.	Max. volume in hotelmode is the volume present when activating the hotelmode. After entering a channel number "Blank Off" can be selected in Hotel Mode.

## HOTEL MODE SURVEY

CHASSIS	FAMILY	IDENT's	HOTEL MODE ACTIVATION	HOTEL MODE DE-ACTIVATION	SPECIFICATION OF THE HOTEL MODE
G88.1		All versions	Select "Sound Only" mode. Press the remote control keys "Teletext" (for P/M sets) or "CC" (for LTK sets) and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "ON".	Select "Sound Only" mode. Press the remote control keys "Teletext" (for P/M sets) or "CC" (for LTK sets) and "Feature" in sequence within 1 second. In the now displayed Hotel Menu "Hotel mode" must be set to "OFF".	"Maximum volume" and "Blanked channels" can be set in Hotel menu.
PV4.0		All versions	Select channel 38. Press on remote control the keys "Picture Menu" and "Features" in sequence within 1 second.	Select channel 38. Press on remote control the keys "Picture" and "OSD" in sequence within 1 second.	Max. volume in hotelmode is the volume present when activating the hotelmode. After entering a channel number "Blank Off" can be selected in Hotel Mode.