

- Enter in Service mode:

- Select program 75 and press at the same time OSD key (+) on RC and MENU key on local key board during 4 seconds.

Service mode is indicated by a S symbol on the down left corner of the screen.

Note : Controls (volume, contrast, brightness and saturation) will be pre-adjusted to the mid position.

- Display Service Menu : When the set is in service mode it is possible to display Service Menu by OSD key (+) on RC. Using P+, P- keys of remote control the different items can be displayed (see table 8.1):