

h t t p : / / r a d i o x p r e s s . w z . c z
M11 (M37221M4-322SP)

		Specification
PCB		
μCom	M37221M4-322SP	IC701
Memory	M24C08	IC703
Video	M52771ASP, M52325AP	IC201, IC302
SAW	K2966M	SF101
Vert	LA7840	IC401
FBT	E1MWFS20005-H01A (S20007-H01, AS14010-H01A)	T501
HOT	2SD2578-YD (ST1803DHI)	Q522
SMPS	STR-S6707	IC901
Tuner	TECC2949VG28K (UV1355/AL-2, WV05I-212A)	TU001
Voice	TDA2616	IC601
IR IC		

ПОДГОТОВКА К РЕГУЛИРОВКЕ

- Adjustments of this model are performed by using the remote control unit and in the conventional manner by using adjustable parts.
- Adjustments using the remote control are performed on the basis of the initial setting values. However, where an adjustment results in the optimum picture, it may differ from the initial setting value.
- Перед регулировкой телевизор должен проработать не менее 30 минут.
- Убедитесь, что сетевое напряжение составляет AC 220V.
- Where the received or input signal is not specified, use the optimum signal for the adjustment.
- Use care not to disturb adjustable parts (variable resistors, transformers, capacitors, etc.) not specifically mentioned in these adjustment steps.
- Presetting before adjustment: Unless otherwise indicated in the adjustment steps, use the remote control unit to preset as follows.

СЕРВИСНЫЙ РЕЖИМ

На пульте необходимо одновременно нажать кнопки **DISPLAY** и **VSM**.

USE menu keys (top, bottom, left and right) to adjust the service menu setting.

Press **DISPLAY** to memorize the service setting and come out of the service mode.

Item	Description	Options Byte	
		Vol	Range
R CUTOFF		7C	
G CUTOFF		A7	
B CUTOFF		97	
R DRIVE		43	
B DRIVE		43	
SUB CONTRAST		28	
SUB COLOR		0A	
SUB BRIGHT		7B	
SUB TINT		15	
SUB BASS		0A	
SUB TREBLE		0A	
VERTICAL SIZE		33	
ZOOM SIZE		55	
VERICAL POS		02	
H-CENTER 50		07	
H-CENTER 60		07	
RFAGC		40	
VCO		7F	
DTRAP		00	
FTRAP		00	
HR		03	
CV		03	
DTPAL		05	
DT SECAM		05	
DT NTSC		05	
DTBW		07	
AVTINT		0F	
AV SHARPNESS		0F	
B,G		01	
I		01	
D,K,KI		01	
SECAM		01	
N3.58		01	
VIDEO GAIN		05	
BGPSW		01	
BPF		01	
STEREO		01	

PBASS	00
SURROUND	00
SOFT TONE	09
GLOWING TONE	09
SOUND CURVE	00
DIGITAL EYE	01
KEY BOARD	00
WHITEBACK	00

VSM Setting				
	News	Cartoon	Sports	Film/Pop
BRIGHTNESS	32	25	25	48
CONTRAST	63	25	40	60
COLOR	30	32	30	52
SHARPNESS	42	32	42	63
TINT	32	32	32	32

Digital Eye Settings						
STAGE	1st	2nd	3rd	4th	5th	
BRIGHTNESS	15	17	20	25	32	
CONTRAST	25	35	40	50	55	
COLOR	26	32	32	32	32	
SHARPNESS	32	32	32	32	32	

SSM Setting				
	News	Cartoon	Sports	Film/Pop
TREBLE	8	8	12	16
BASS	12	8	12	16

http://radioexpress.wz.cz/rxp_tele/tv_service/tcl/svc_m11.html

29-Mar-2007

