

	<p>the player halts on the FBI Warnings, press Forward Search x2 or faster.</p> <p>10. Macrovision can also be disabled here.</p> <p>Note: The Repeat key is located directly to the right of the 9 key - it's the one with a circular arrow symbol on it.</p>	
--	--	--

MODEL(S)	METHOD	CONFIRMED?
24WT25E 24WT2US	<ol style="list-style-type: none"> <li>1. Press EJECT, FFWD and OK at the same time to enter region-free mode.</li> <li>2. If you have no Eject button, use Open/Shut button together with Fast Forward and OK at the same time.</li> </ol>	Yes

MODEL(S)	METHOD	CONFIRMED?
DTH-4008 DTH-210E DTH-220E DTH-460	<ol style="list-style-type: none"> <li>1. Make sure there is no disc in the player and it is turned on.</li> <li>2. Using the remote control, key in the following: Menu, 1, 6, 7.</li> <li>3. Region Code should be displayed.</li> <li>4. Press the Mute button for region free, or the number of the region required.</li> </ol> <p>For the 210E, you may need to omit step 1. For the 460, 210E and 220E, use 0 for region free.</p>	Yes