

SECTION 4 ADJUSTMENT

4.1 Special mode

4.1.1 Outline

The contents in the special mode of operation, and the definition of a key (remote controller or main unit)

 
4.1.2 Special mode

1.DVD TEST MODE

It goes into the TEST mode of DVD.

DVD TEST mode is canceled by except DVD source, and POWER OFF.

It is referring to the "4.2 DVD test mode" for details.

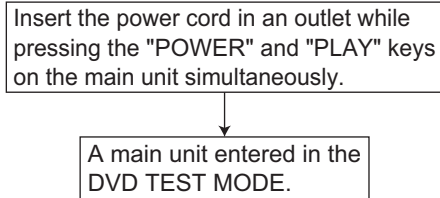


2.DVD NORMAL INITIALIZE

Initialize DVD backend memory.

<RDS> segment of FL will light up if successful.

 It is referring to the "4.2 DVD test mode" for details.

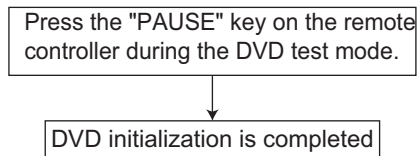


3.DVD FULL INITIALIZE

Initialize DVD memory including frontend.

<RDS> segment of FL will light up if successful.

 It is referring to the "4.2 DVD test mode" for details.

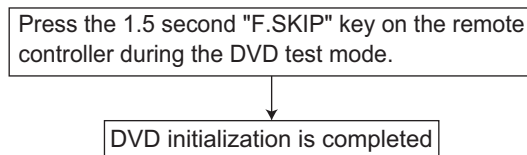

4.DVD REGION CHECK

FL display in DVD TEST MODE.

It is referring to the "4.2 DVD test mode" for details.

