


H-LCD700 Service Manual


1、 FAULT DESCRIPTION: NO SOUND

Confirm the volume isn't in silent mode before check.

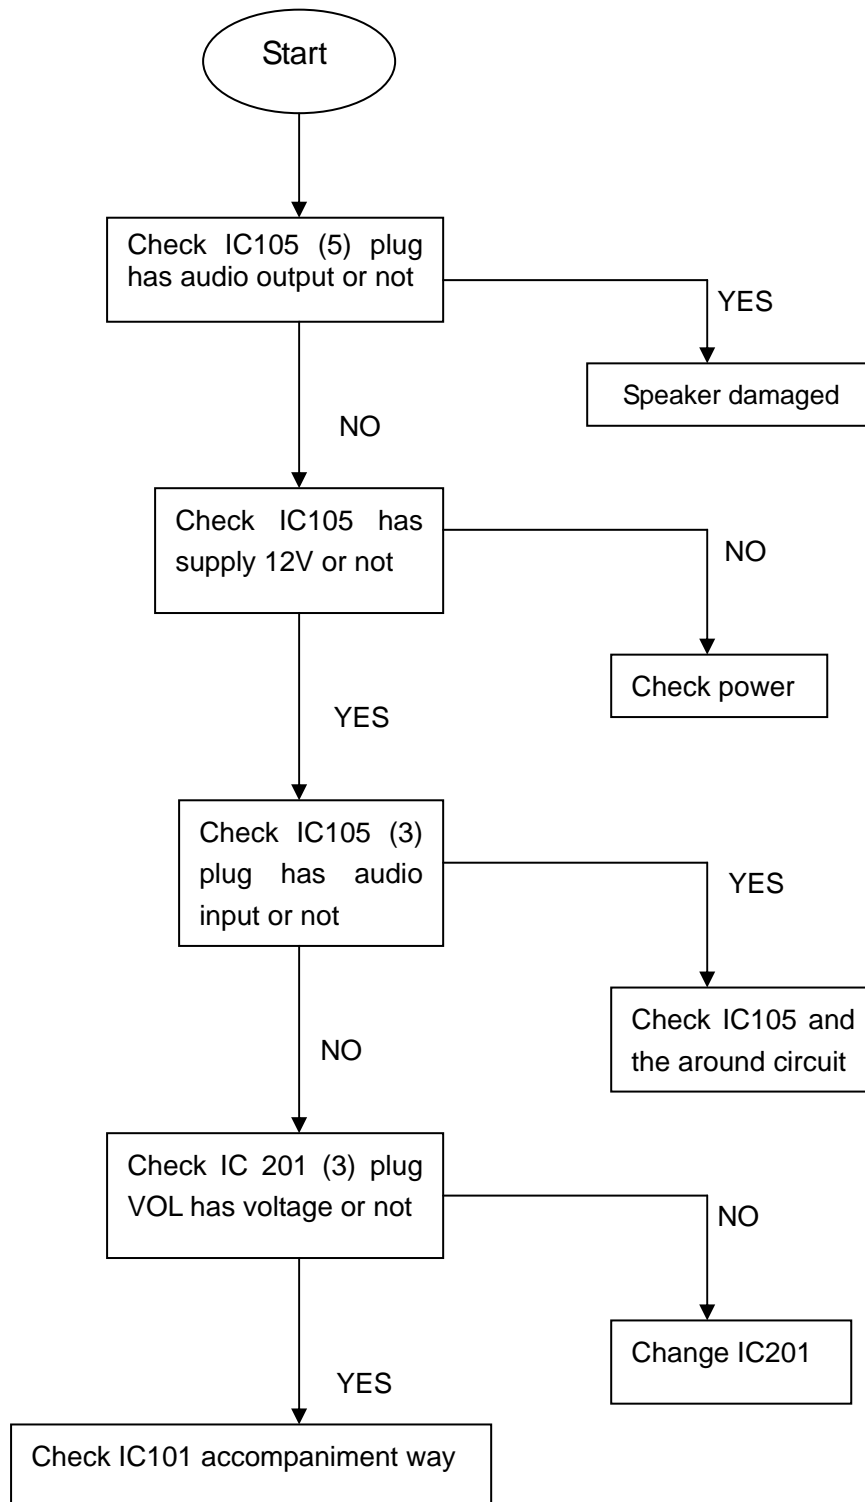


H-LCD700 Service Manual

2、FAULT DESCRIPTION: REMOTE CONTROL

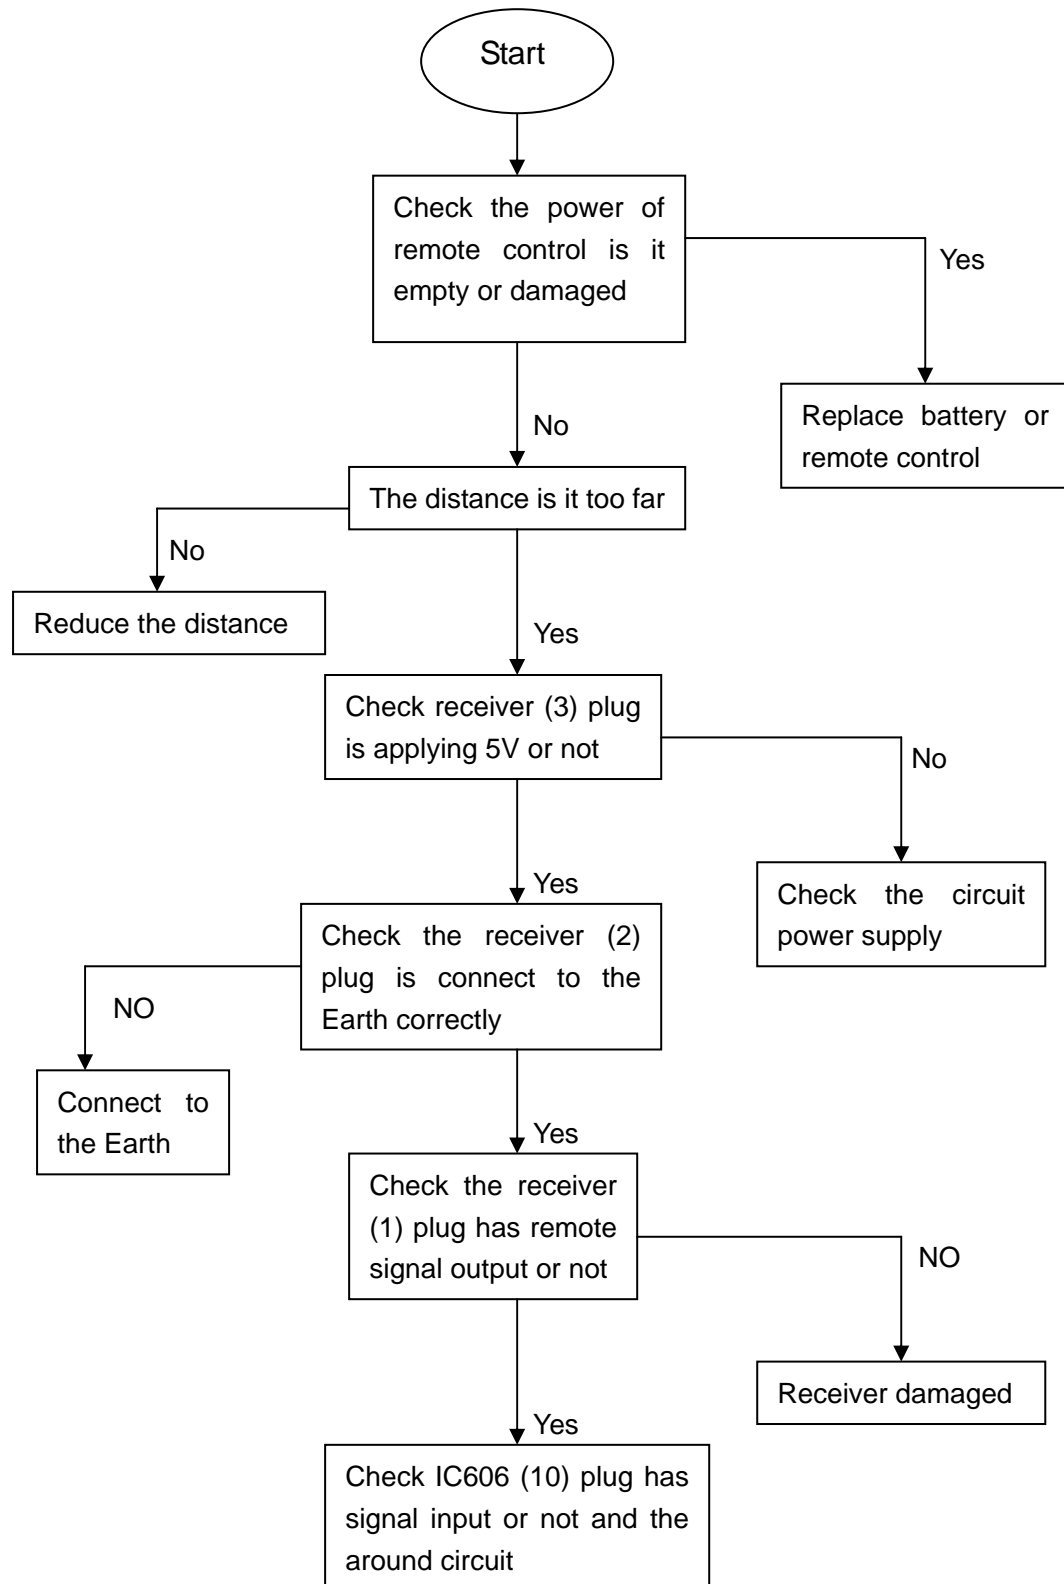


H-LCD700 Service Manual

3、FAULT DESCRIPTION: NO COLOR

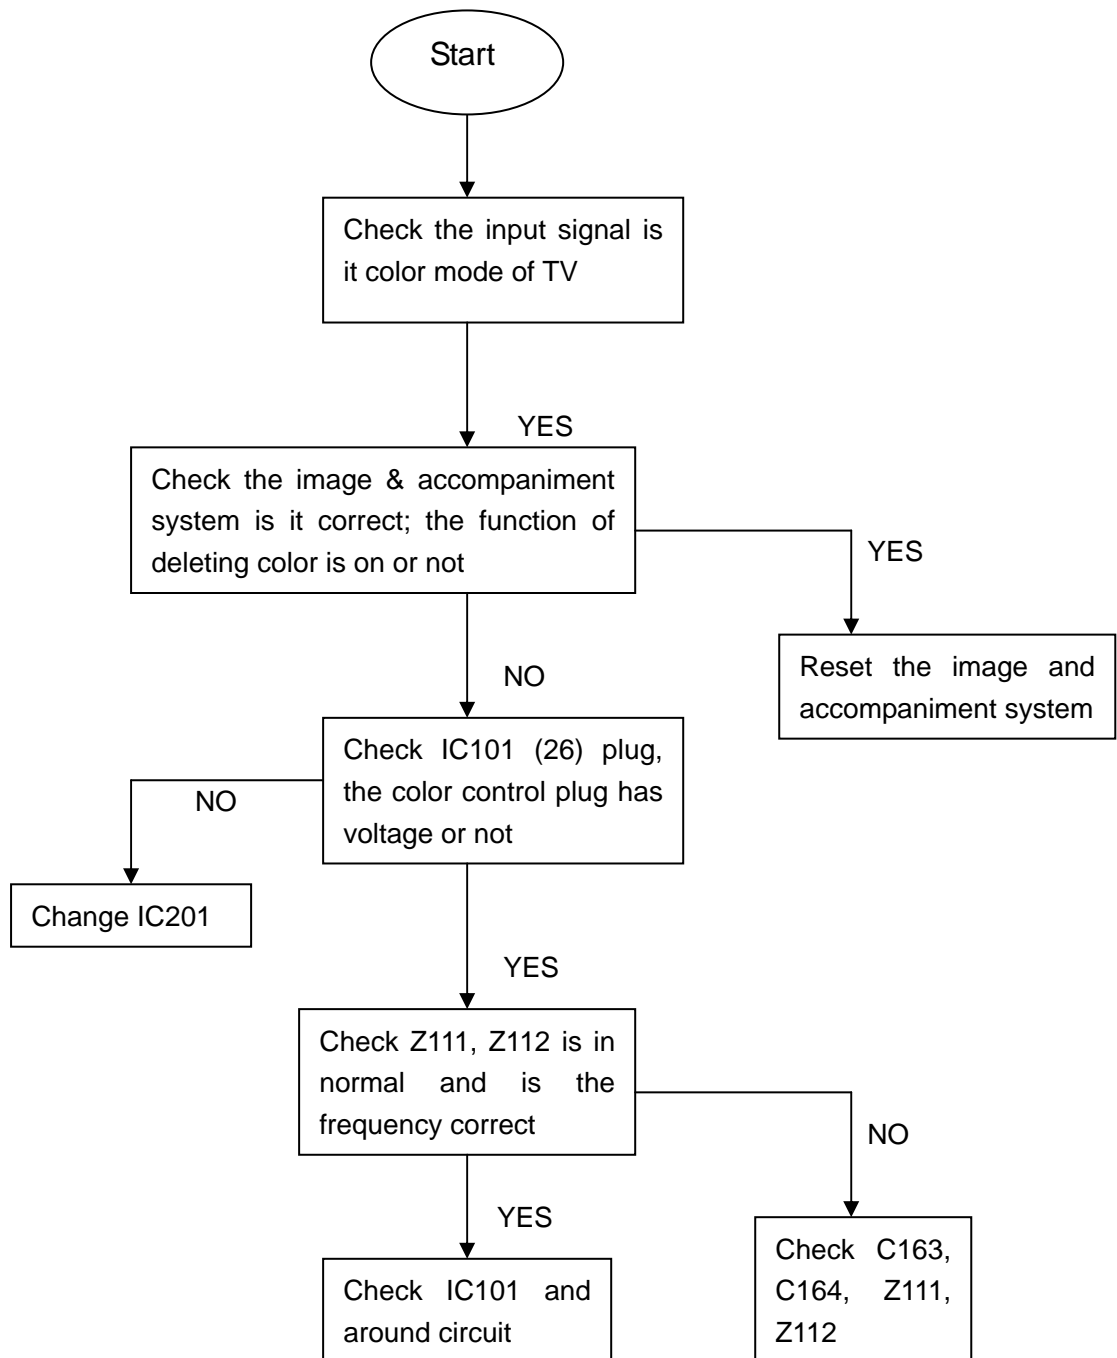

H-LCD700 Service Manual

4、 FAULT DESCRIPTION: HAVE SOUND BUT NO PICTURE

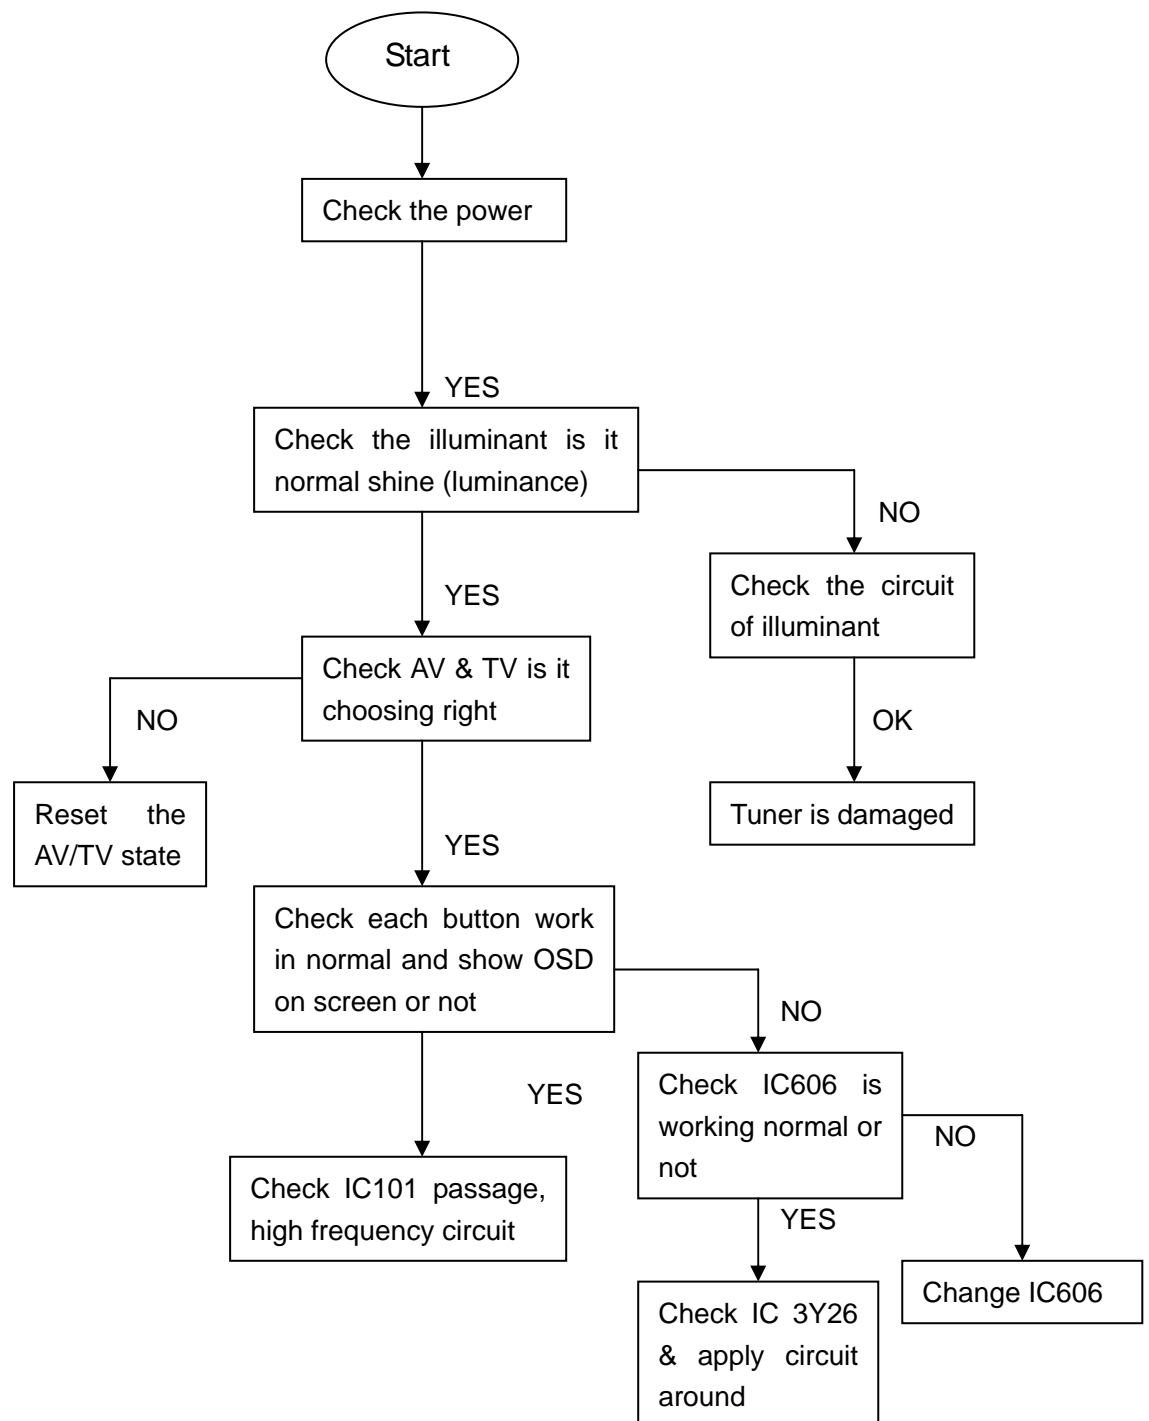

H-LCD700 Service Manual

5、 FAULT DESCRIPTION: NO SOUND, NO PICTURE

