

Service Manual



Colour television


TX-2150T/TS

MX-3 CHASSIS


[illegible]


➔ **AUDIO**
➔ **VIDEO**

Scematic Diagrams

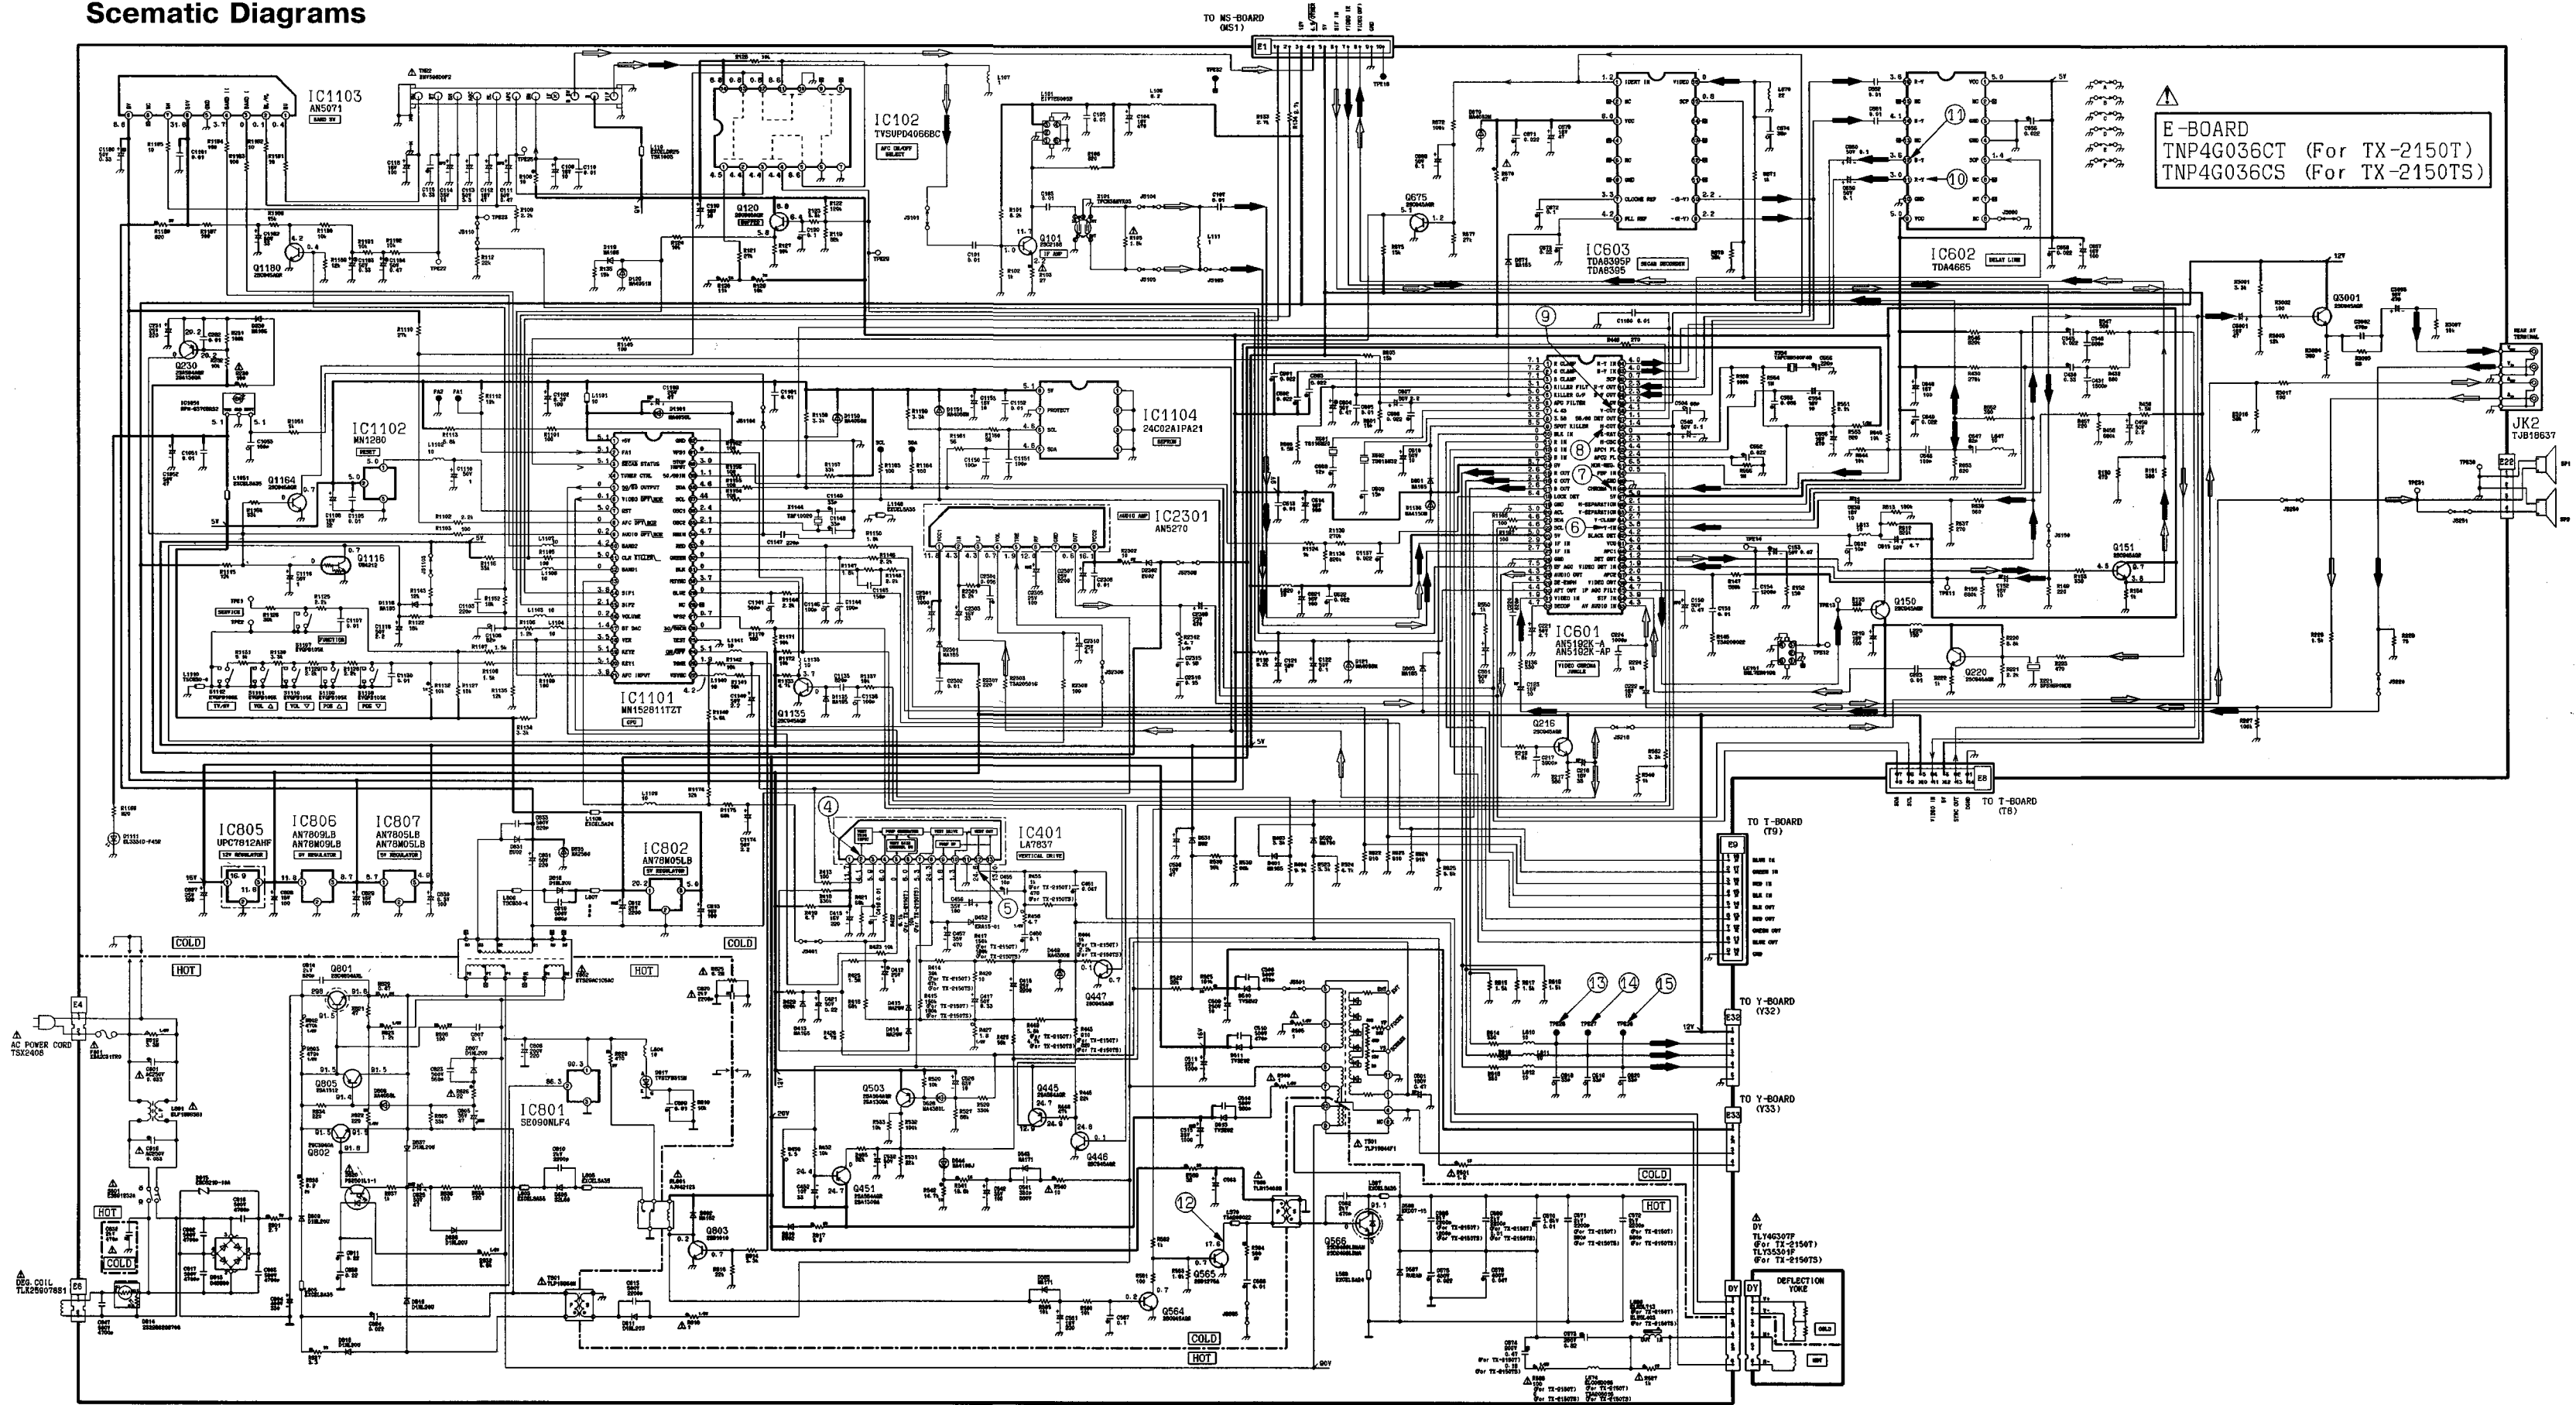

Scematic Diagrams

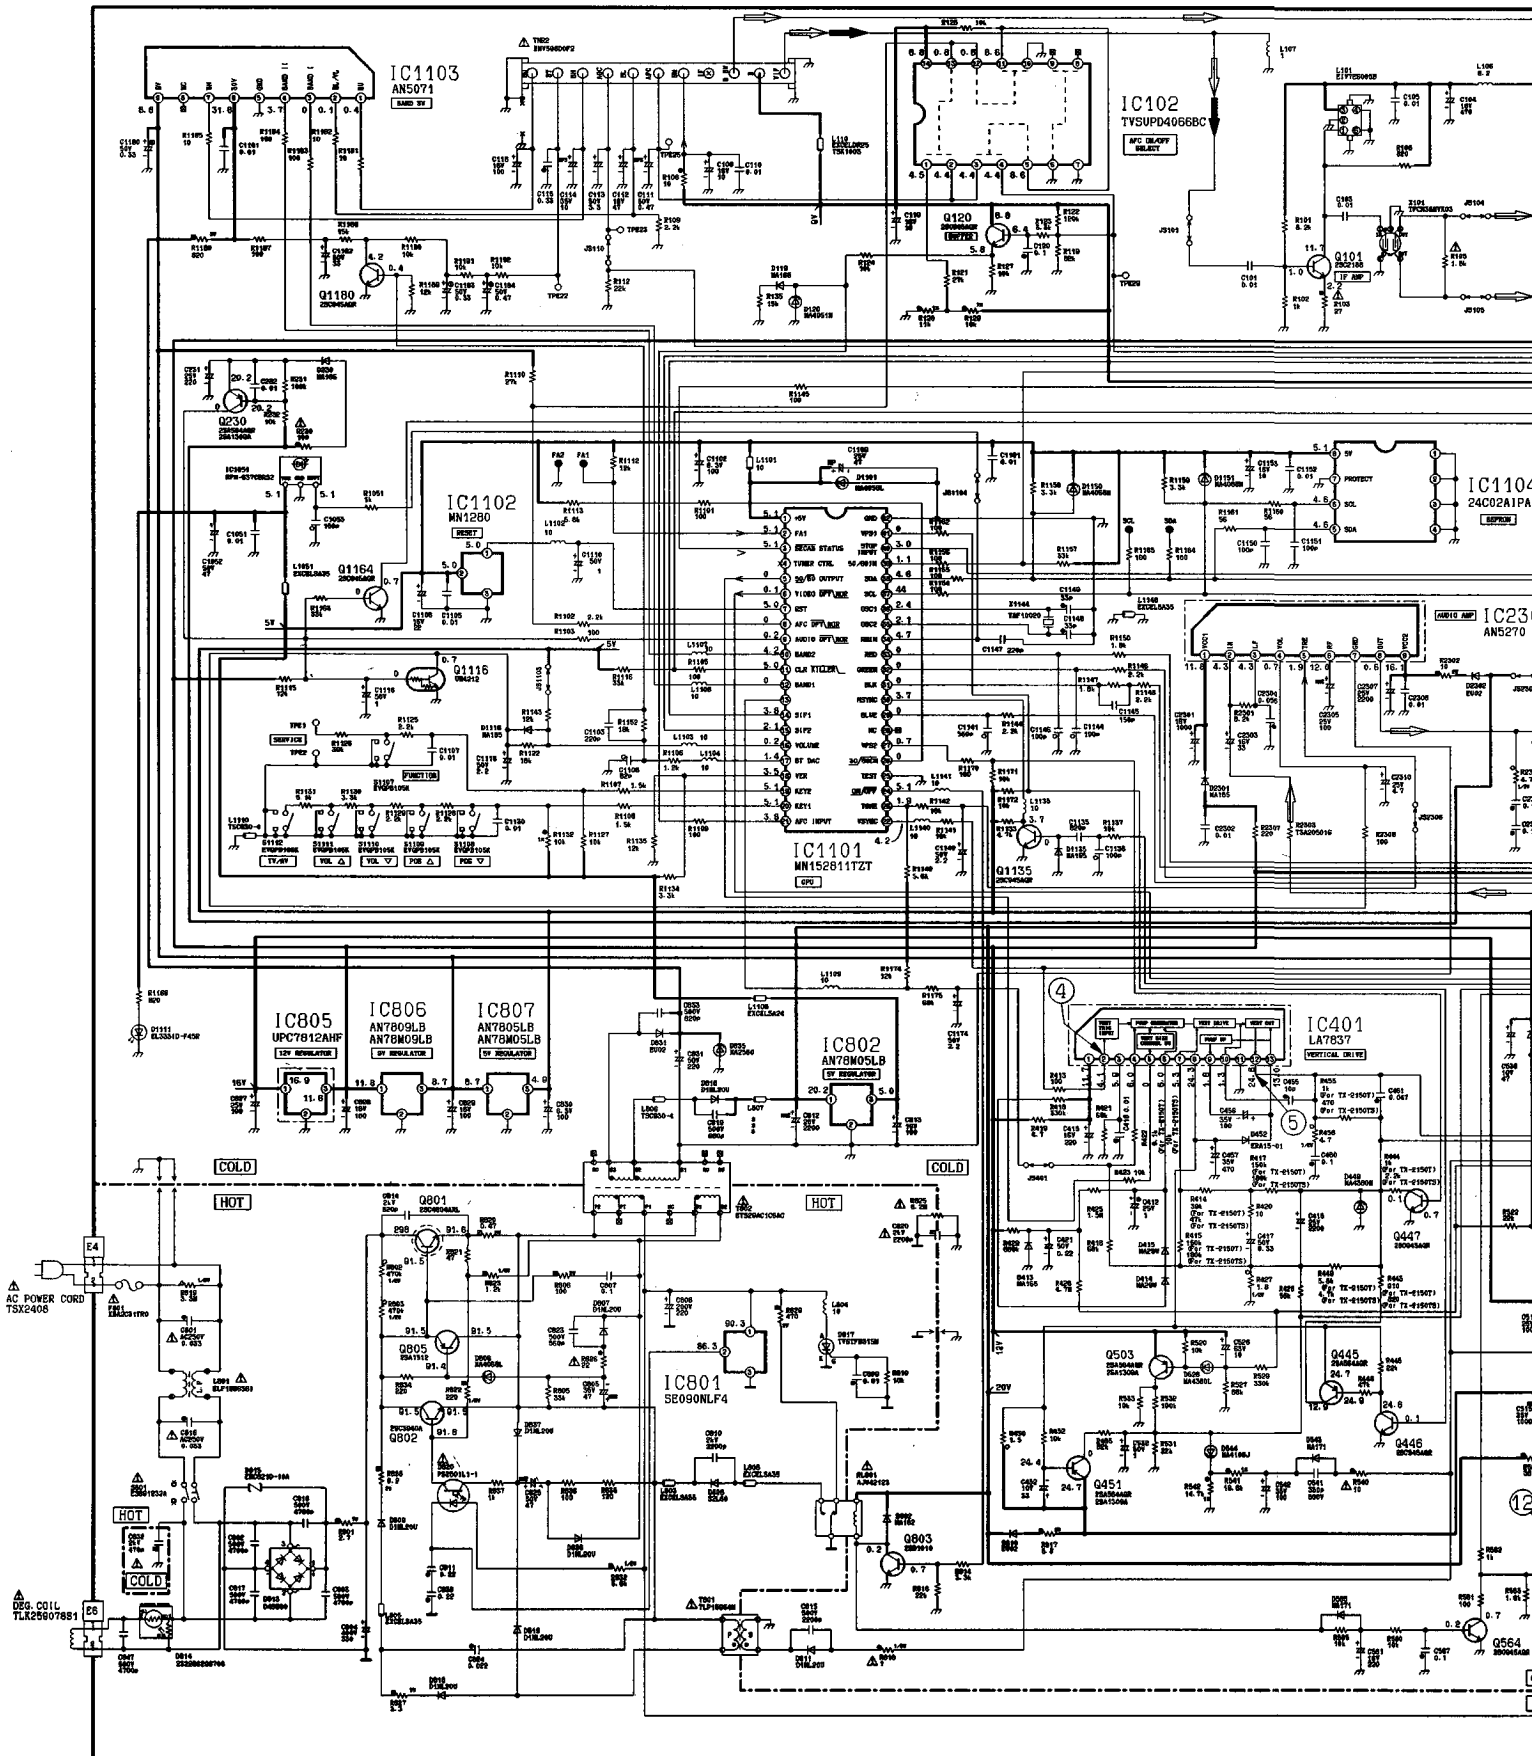


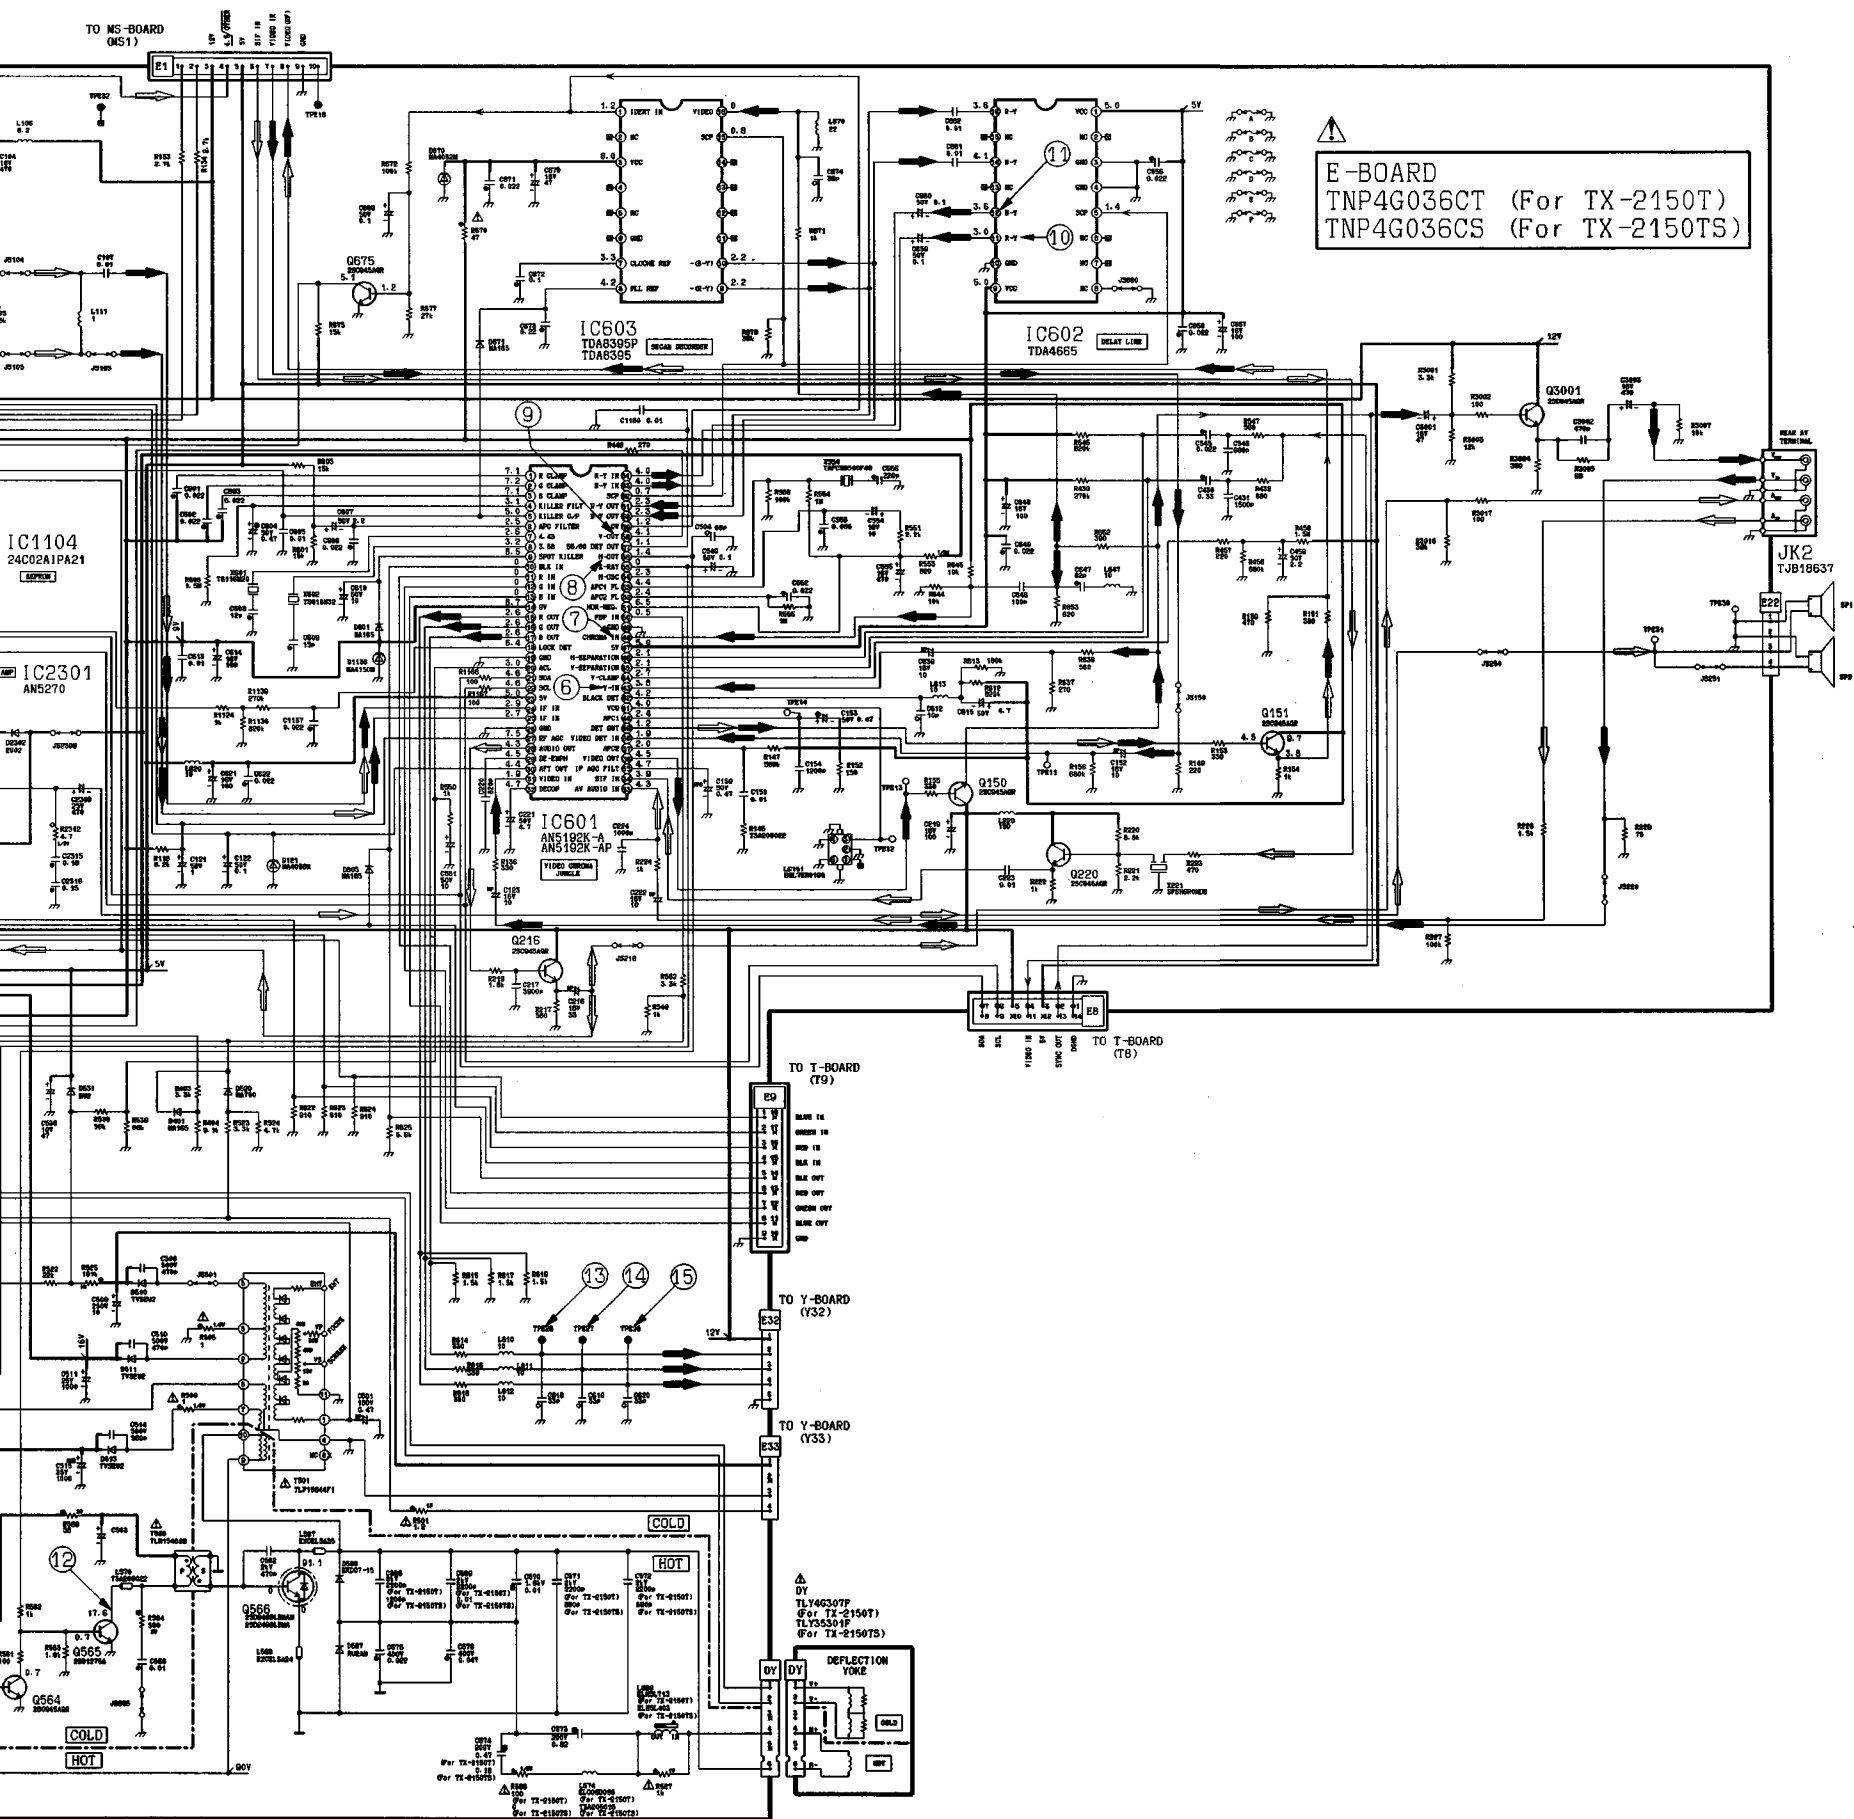

TO E-BOARD
(E1)




MS-BOARD
TNP4G008AG

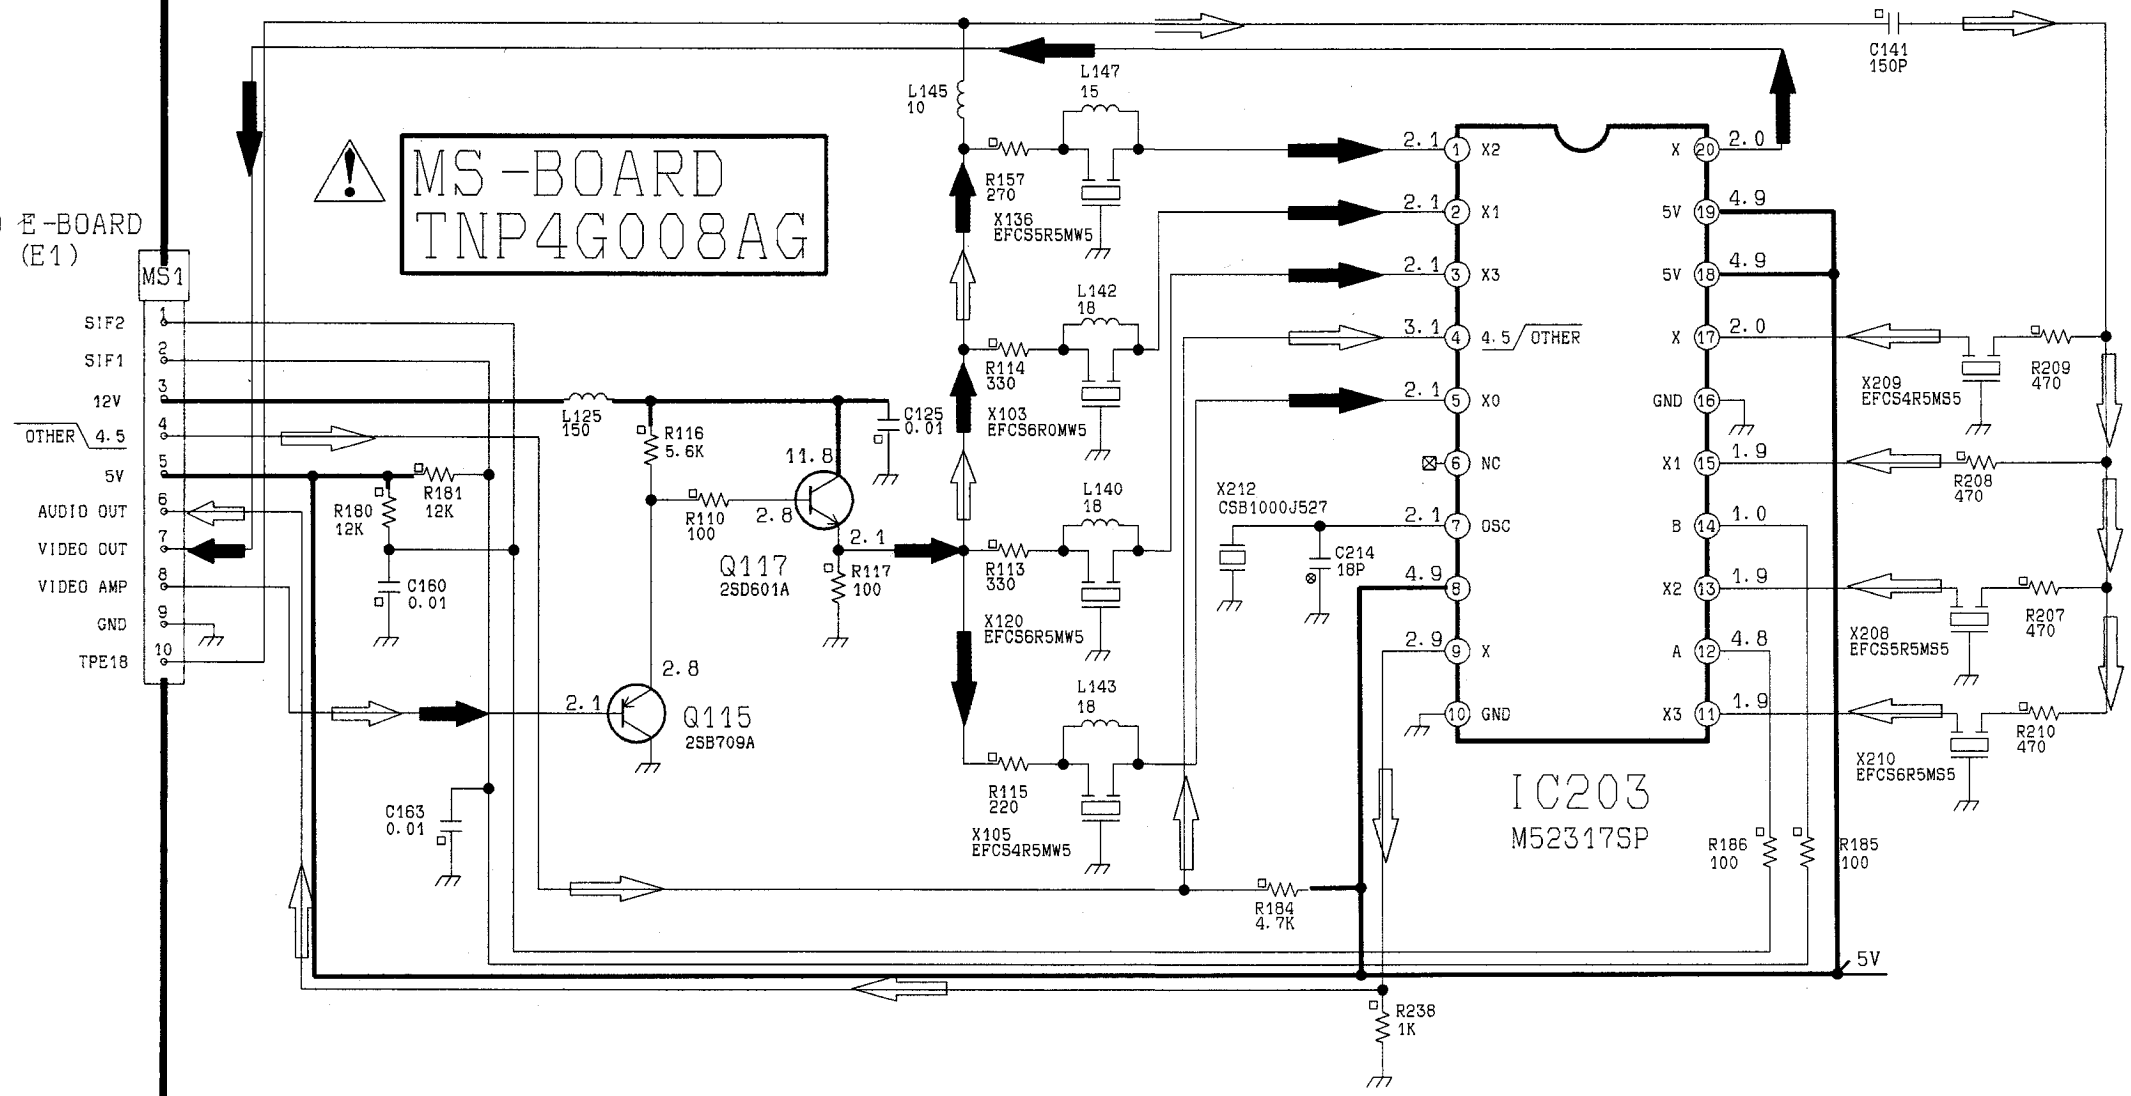

TO E-BOARD
(E32)

TO E-BOARD
(E33)

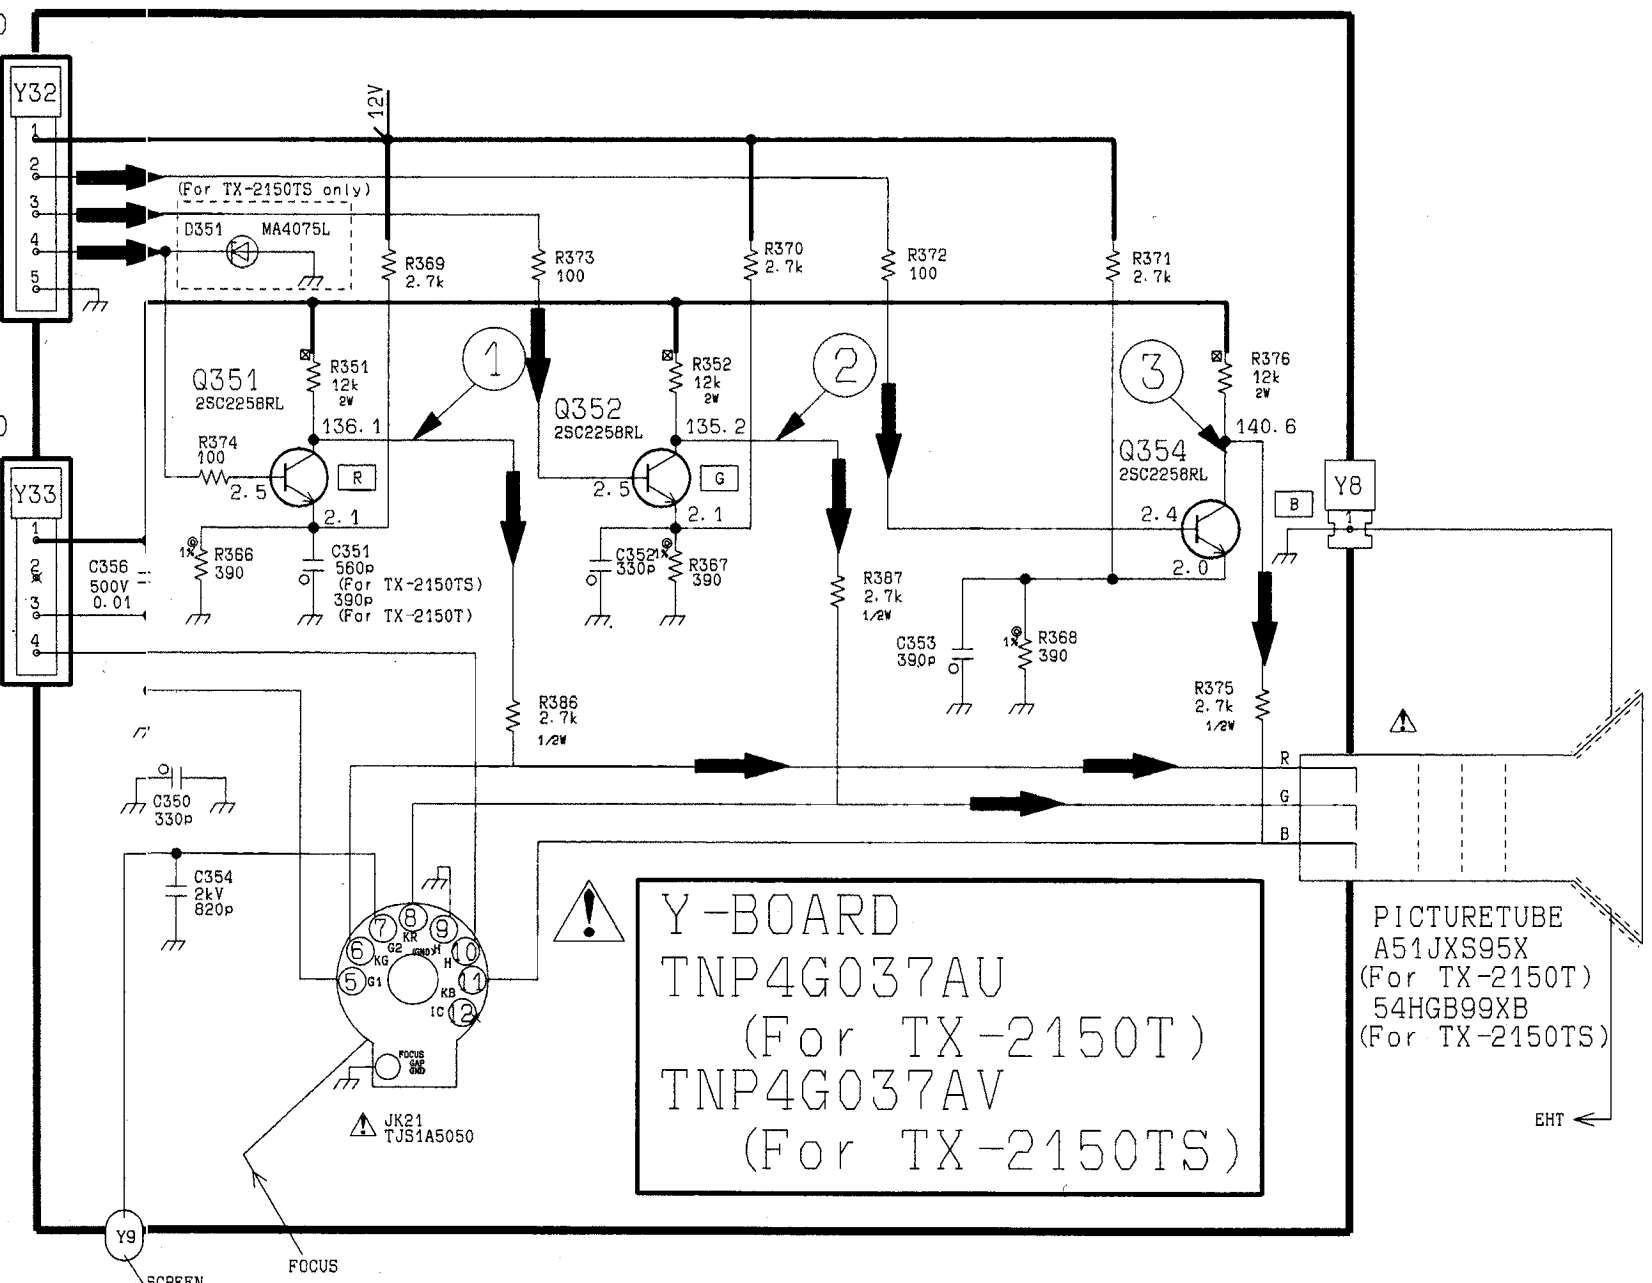

! T-BOARD
TNP4G039ZZ

IC3503
MN1280-R

IC3502
CF70209NW

UNITEXT/EUROTERT

IC3505
TC4066BFN


TO E-BOARD
(E9)


T9


IC3506
TC4066BFN

T8

TO E-BOARD
(E8)

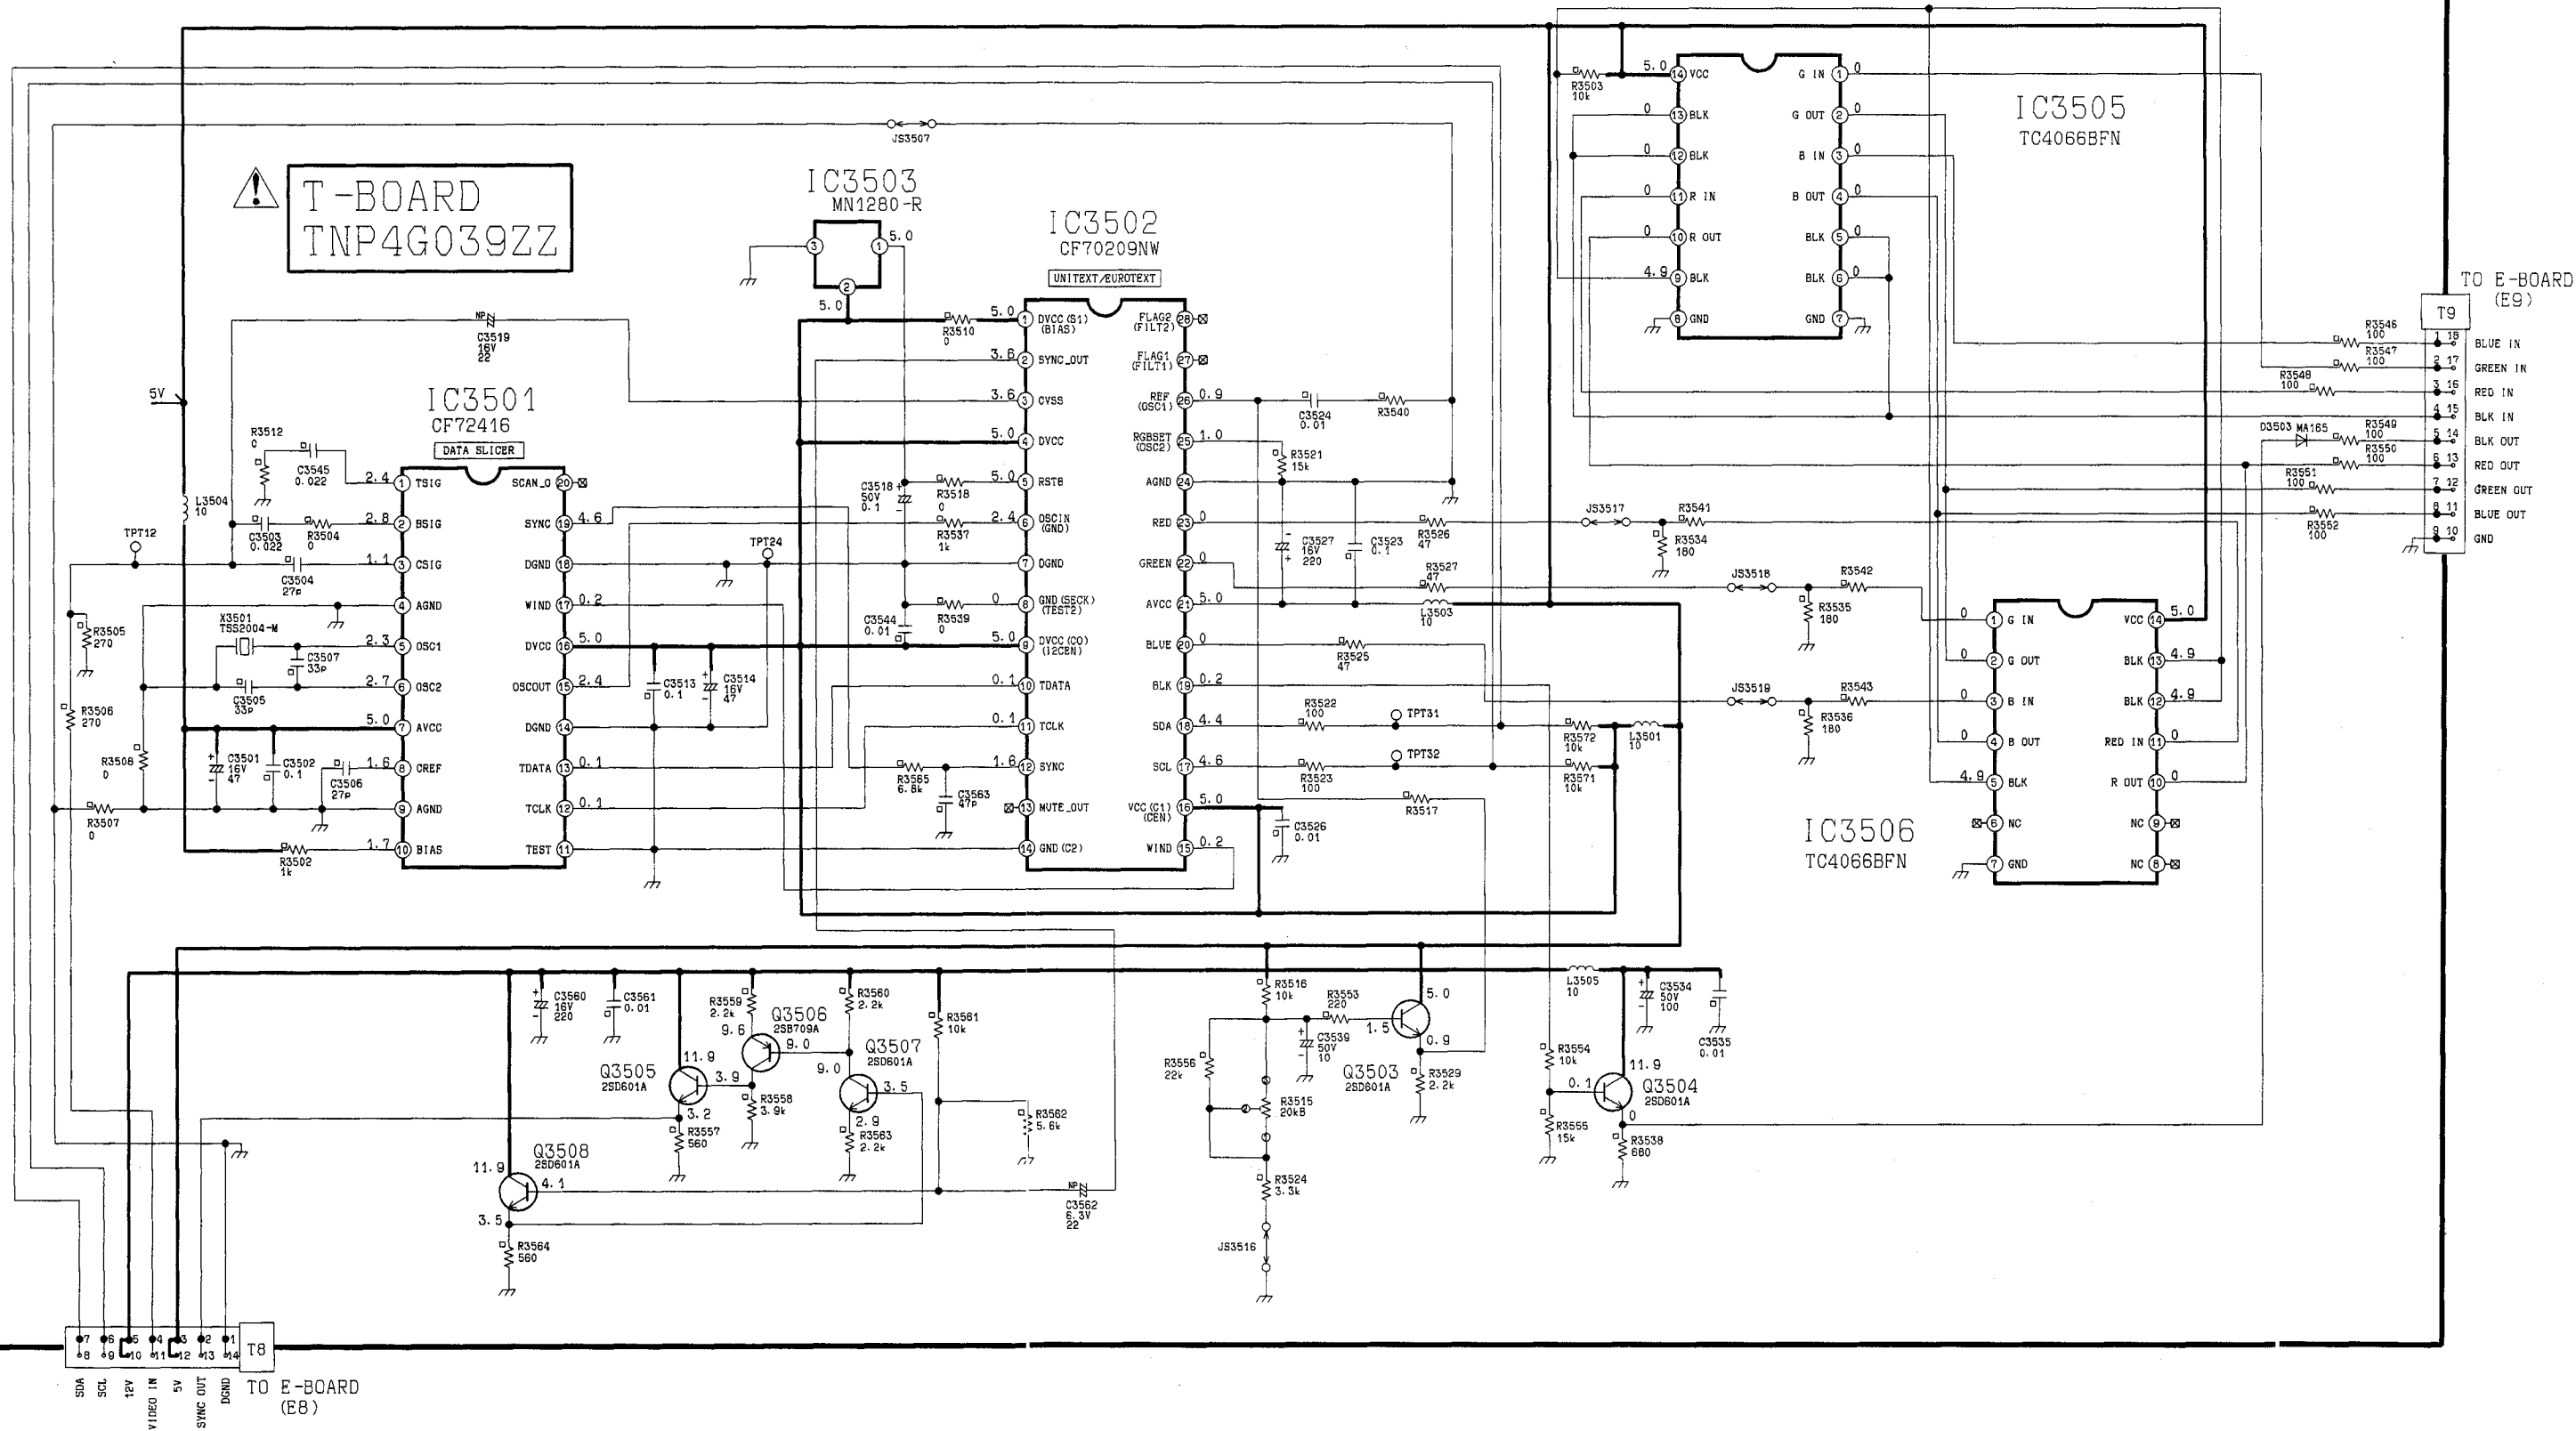


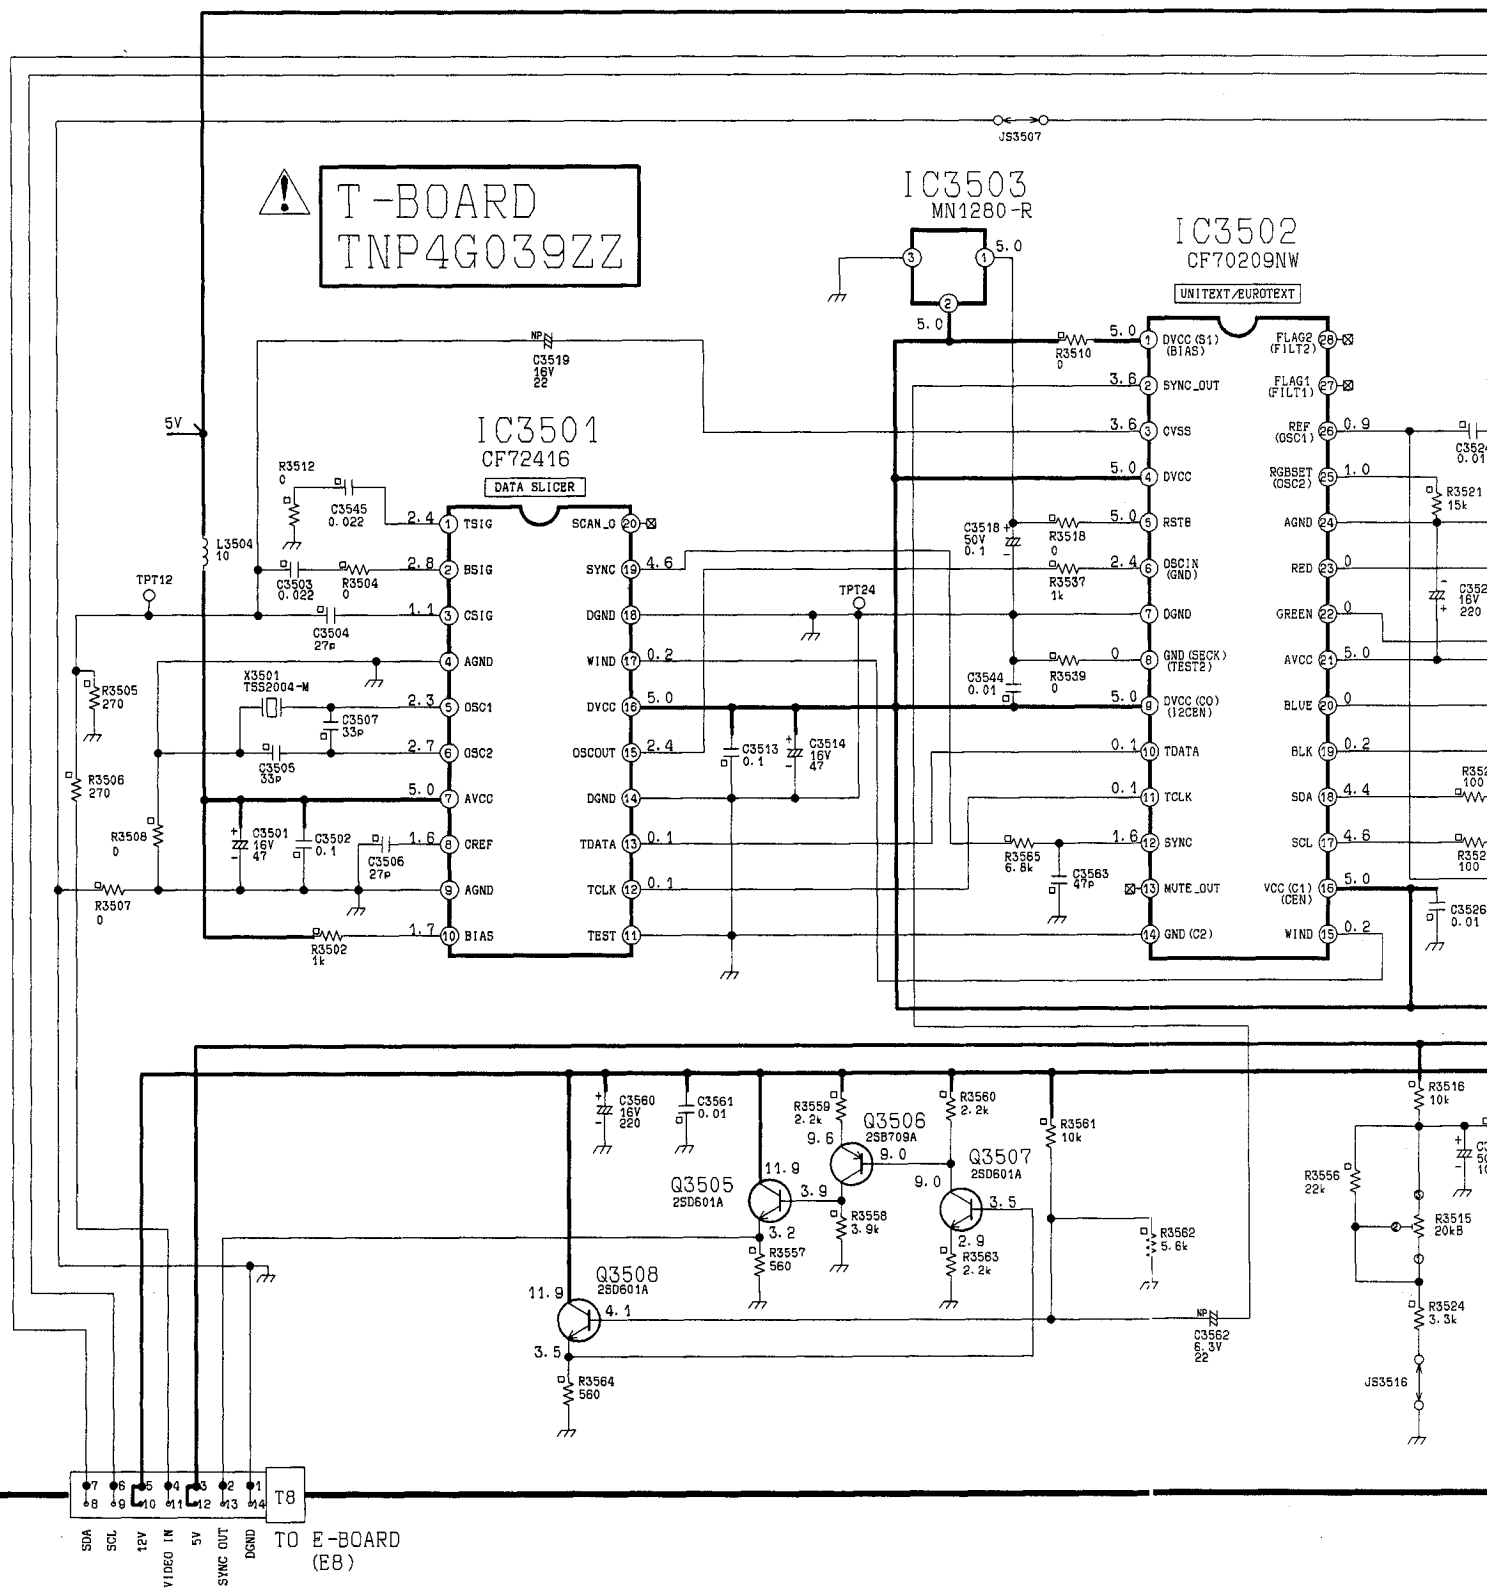

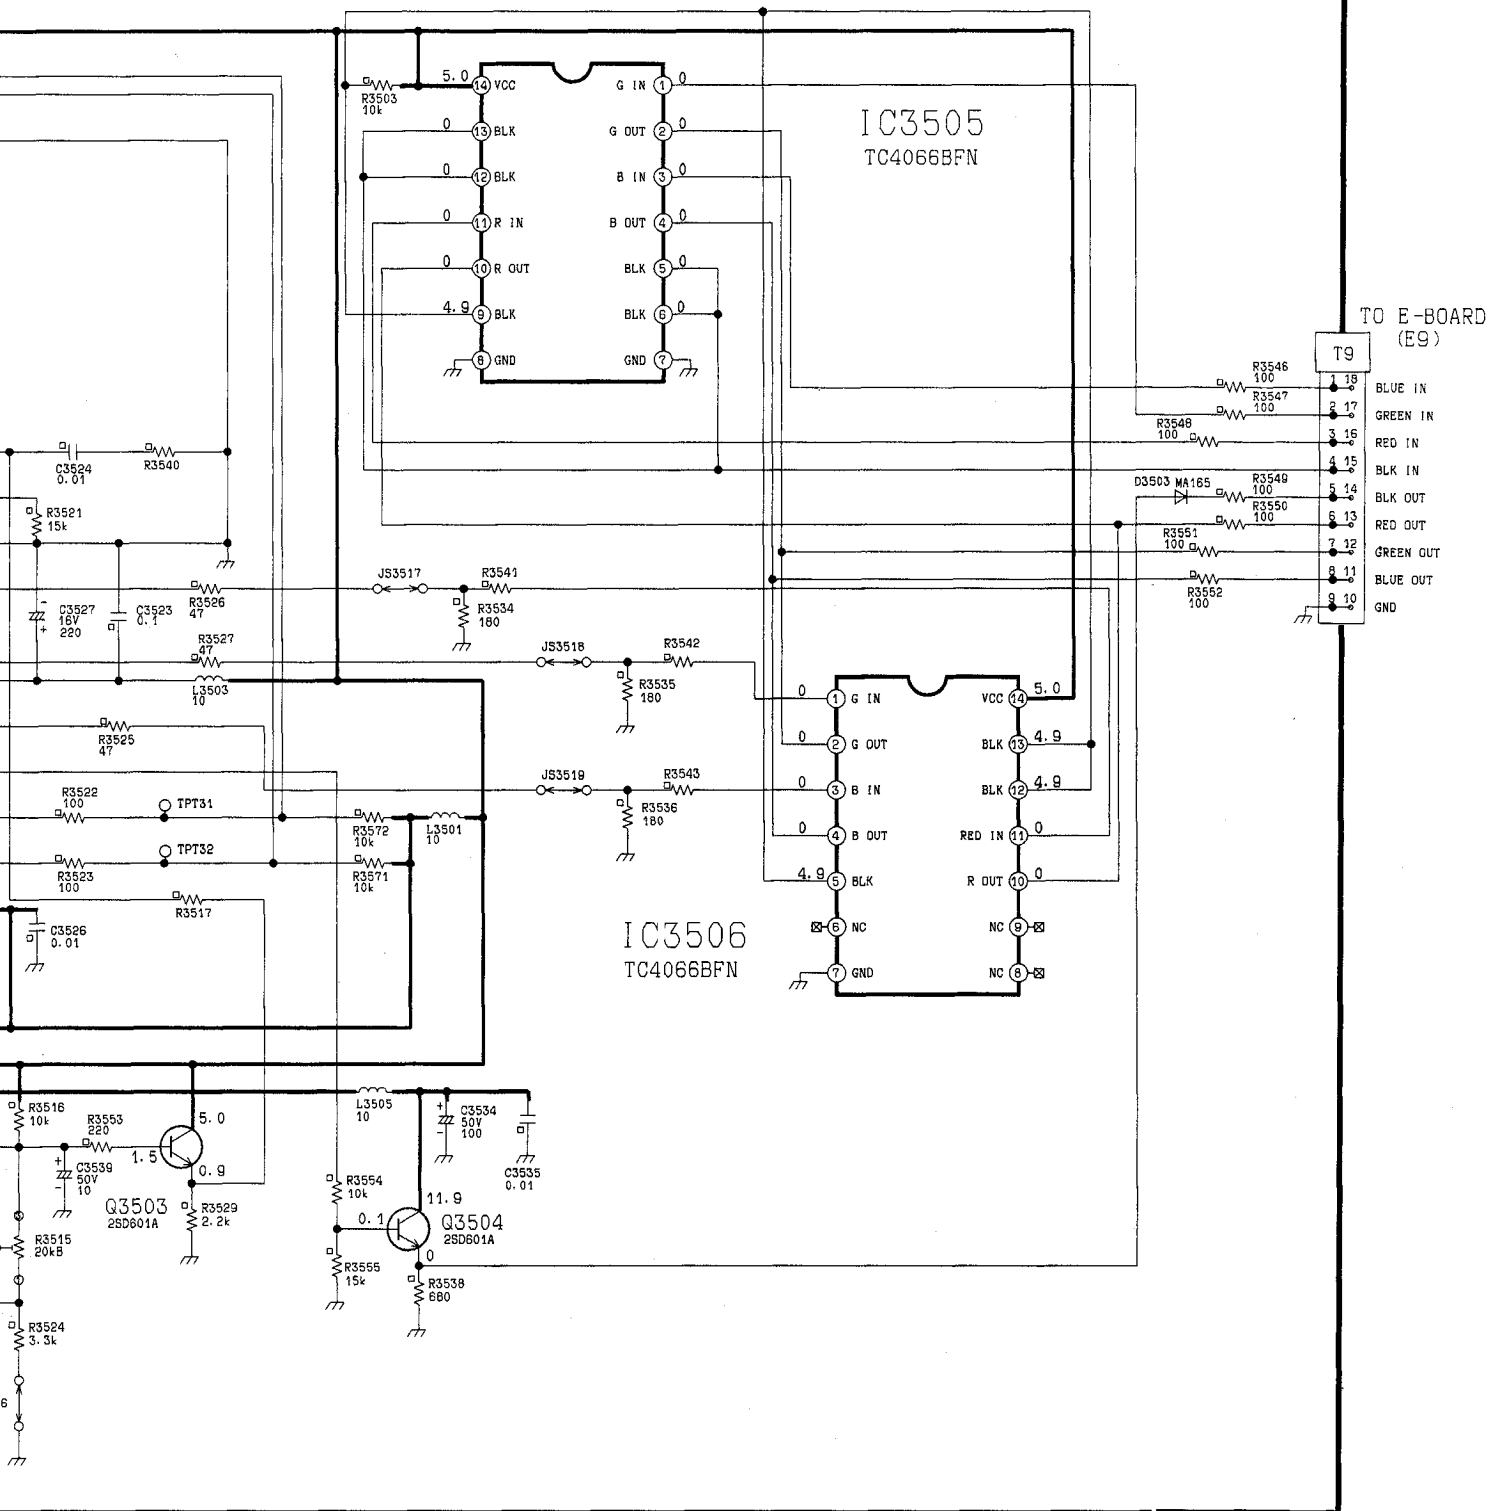

①


Q351-C

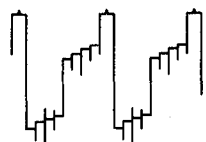

135Vp-p(20μsec)

②


Q352-C

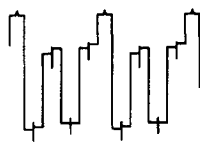

130Vp-p(20μsec)

③


Q354-C

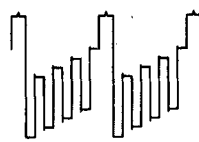

119Vp-p(20μsec)

④

 IC401-2



4.6Vp-p(5msec)

⑤

IC401-12



50.6Vp-p(5msec)

⑥

IC601-43



0.9Vp-p(20μsec)

⑦

IC601-48



1.0Vp-p(20μsec)

⑧


IC601-56



3.9Vp-p(20μsec)

⑨

IC601-58

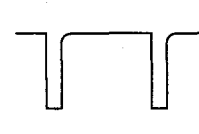

4.7Vp-p(5msec)

⑩


IC602-11



1.2Vp-p(20μsec)

⑪


IC602-12

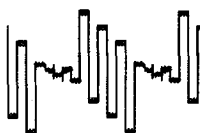

1.5Vp-p(20μsec)

⑫

Q565-C

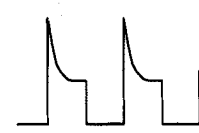

93.8Vp-p(20μsec)

⑬

TPA26



3.7Vp-p(20μsec)

⑭


TPA27



4.3Vp-p(5msec)

⑮

TPA28

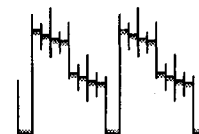

4.0Vp-p(20μsec)

