




## Пульт(TNQE159) дистанционного управления

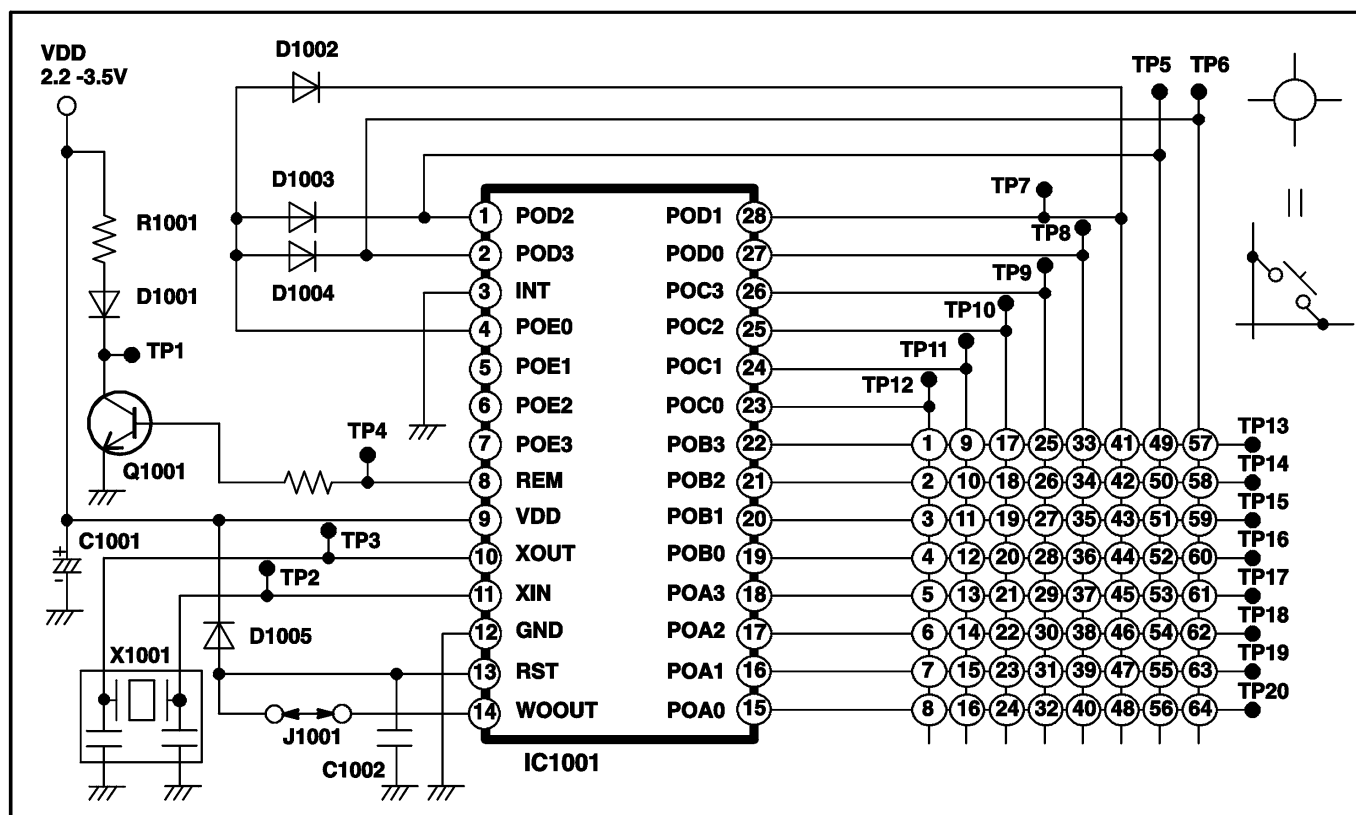


### Таблица функций клавиш

key No.	Function	key No.	Function	key No.	Function
1	MUTE	23	MAIN MENU	45	INDEX
2	SURROUND	24	4	46	HOLD
3	TV/AV	25	9	47	STEREO
4	VCR/LD:REW	26	8	48	D.PNR
5	VCR/LD:STOP	27	VOL.UP	49	CHANGE
6	VCR/LD:FF	28	N(NORMAL)	50	STROBE
7	VCR/LD:PLAY	29	▶	51	PIP ACTION
8	VCR/LD:POWER ON/OFF	30	VCR:CH UP/LD:SKIP	52	TIME TEXT
9	3	31	◀	53	REVEAL
10	2	32	7	54	F/T/B
11	POS. UP	33	2 DIGIT	55	F.P.
12	LD FUNCTION	34	0	56	P.A.I
13	VCR:ADVANCE/LD:DISC A	35	VOL. DOWN	57	-----
14	VCR:REC/LD:DISC B	36	▼	58	-----
15	VCR FUNCTION	37	PC	59	-----
16	1	38	VCR:CH DOWN/LD:SKIP-	60	GREEN
17	6	39	OFF TIMER	61	YELLOW
18	5	40	RECALL	62	BLUE
19	POS. DOWN	41	STILL	63	RED
20	▲	42	CH SEARCH	64	POWER ON/OFF
21	VCR/LD:PAUSE	43	PIP		
22	VCR:REC	44	TV/TEXT		

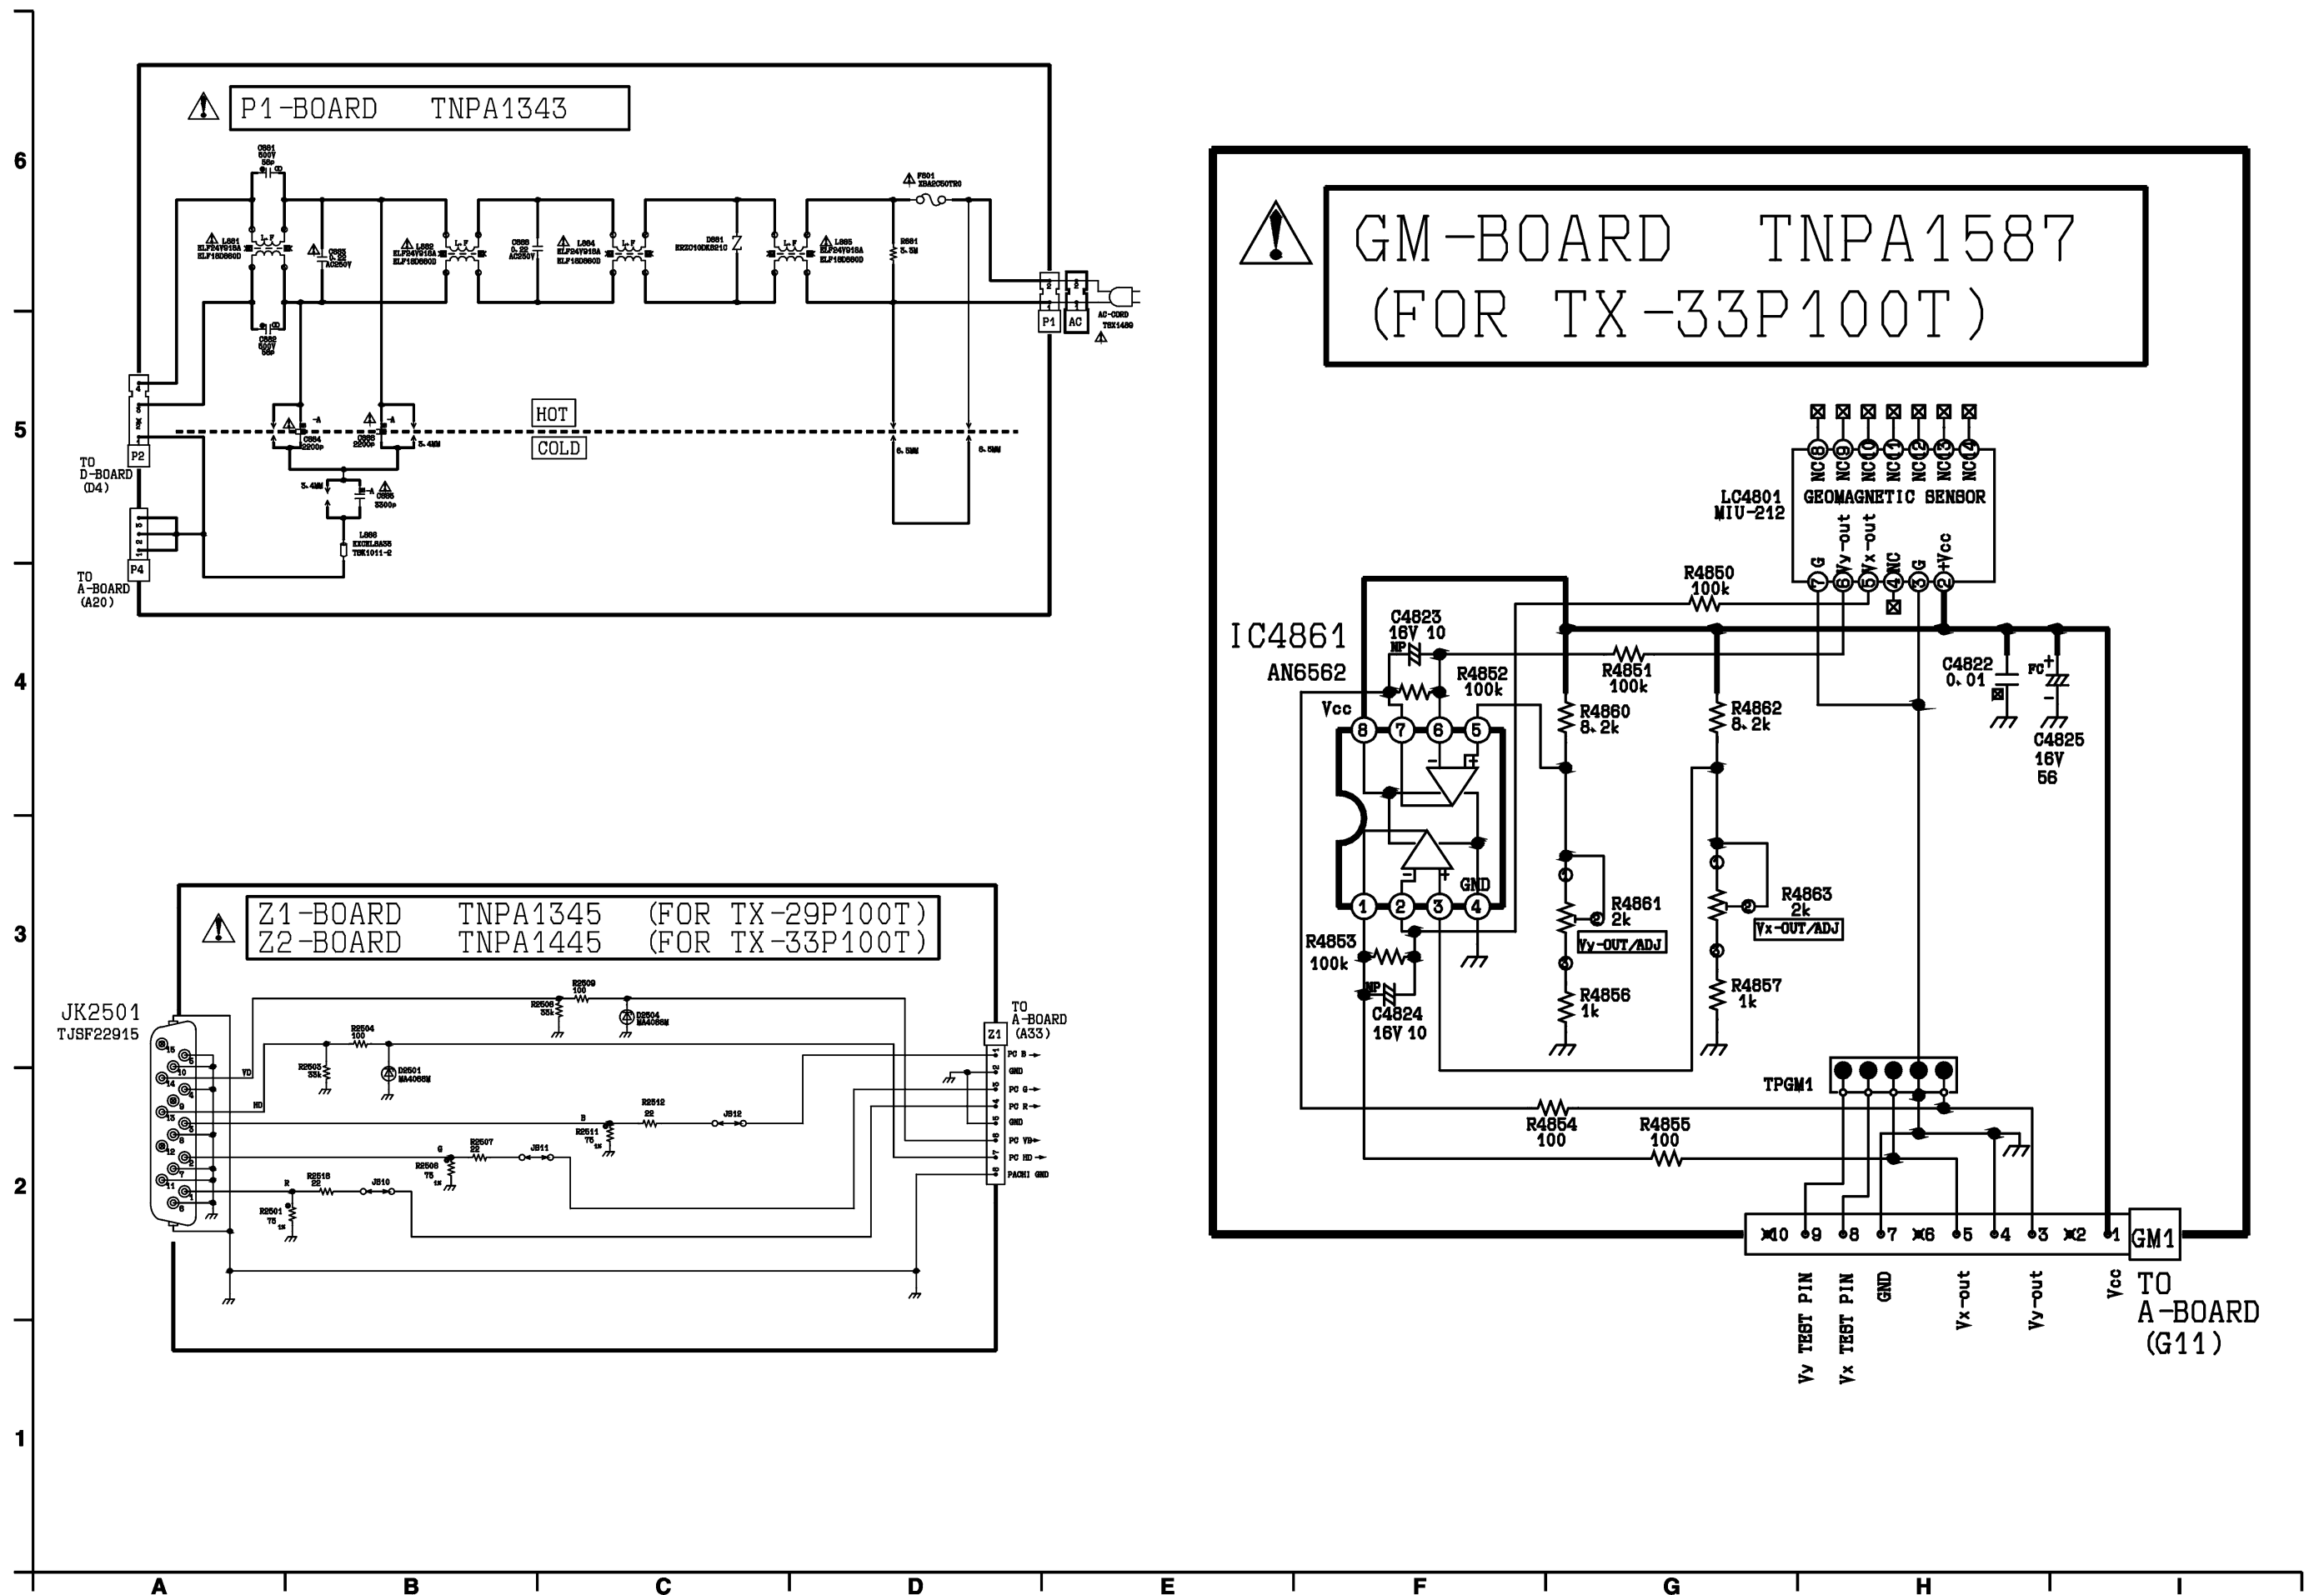

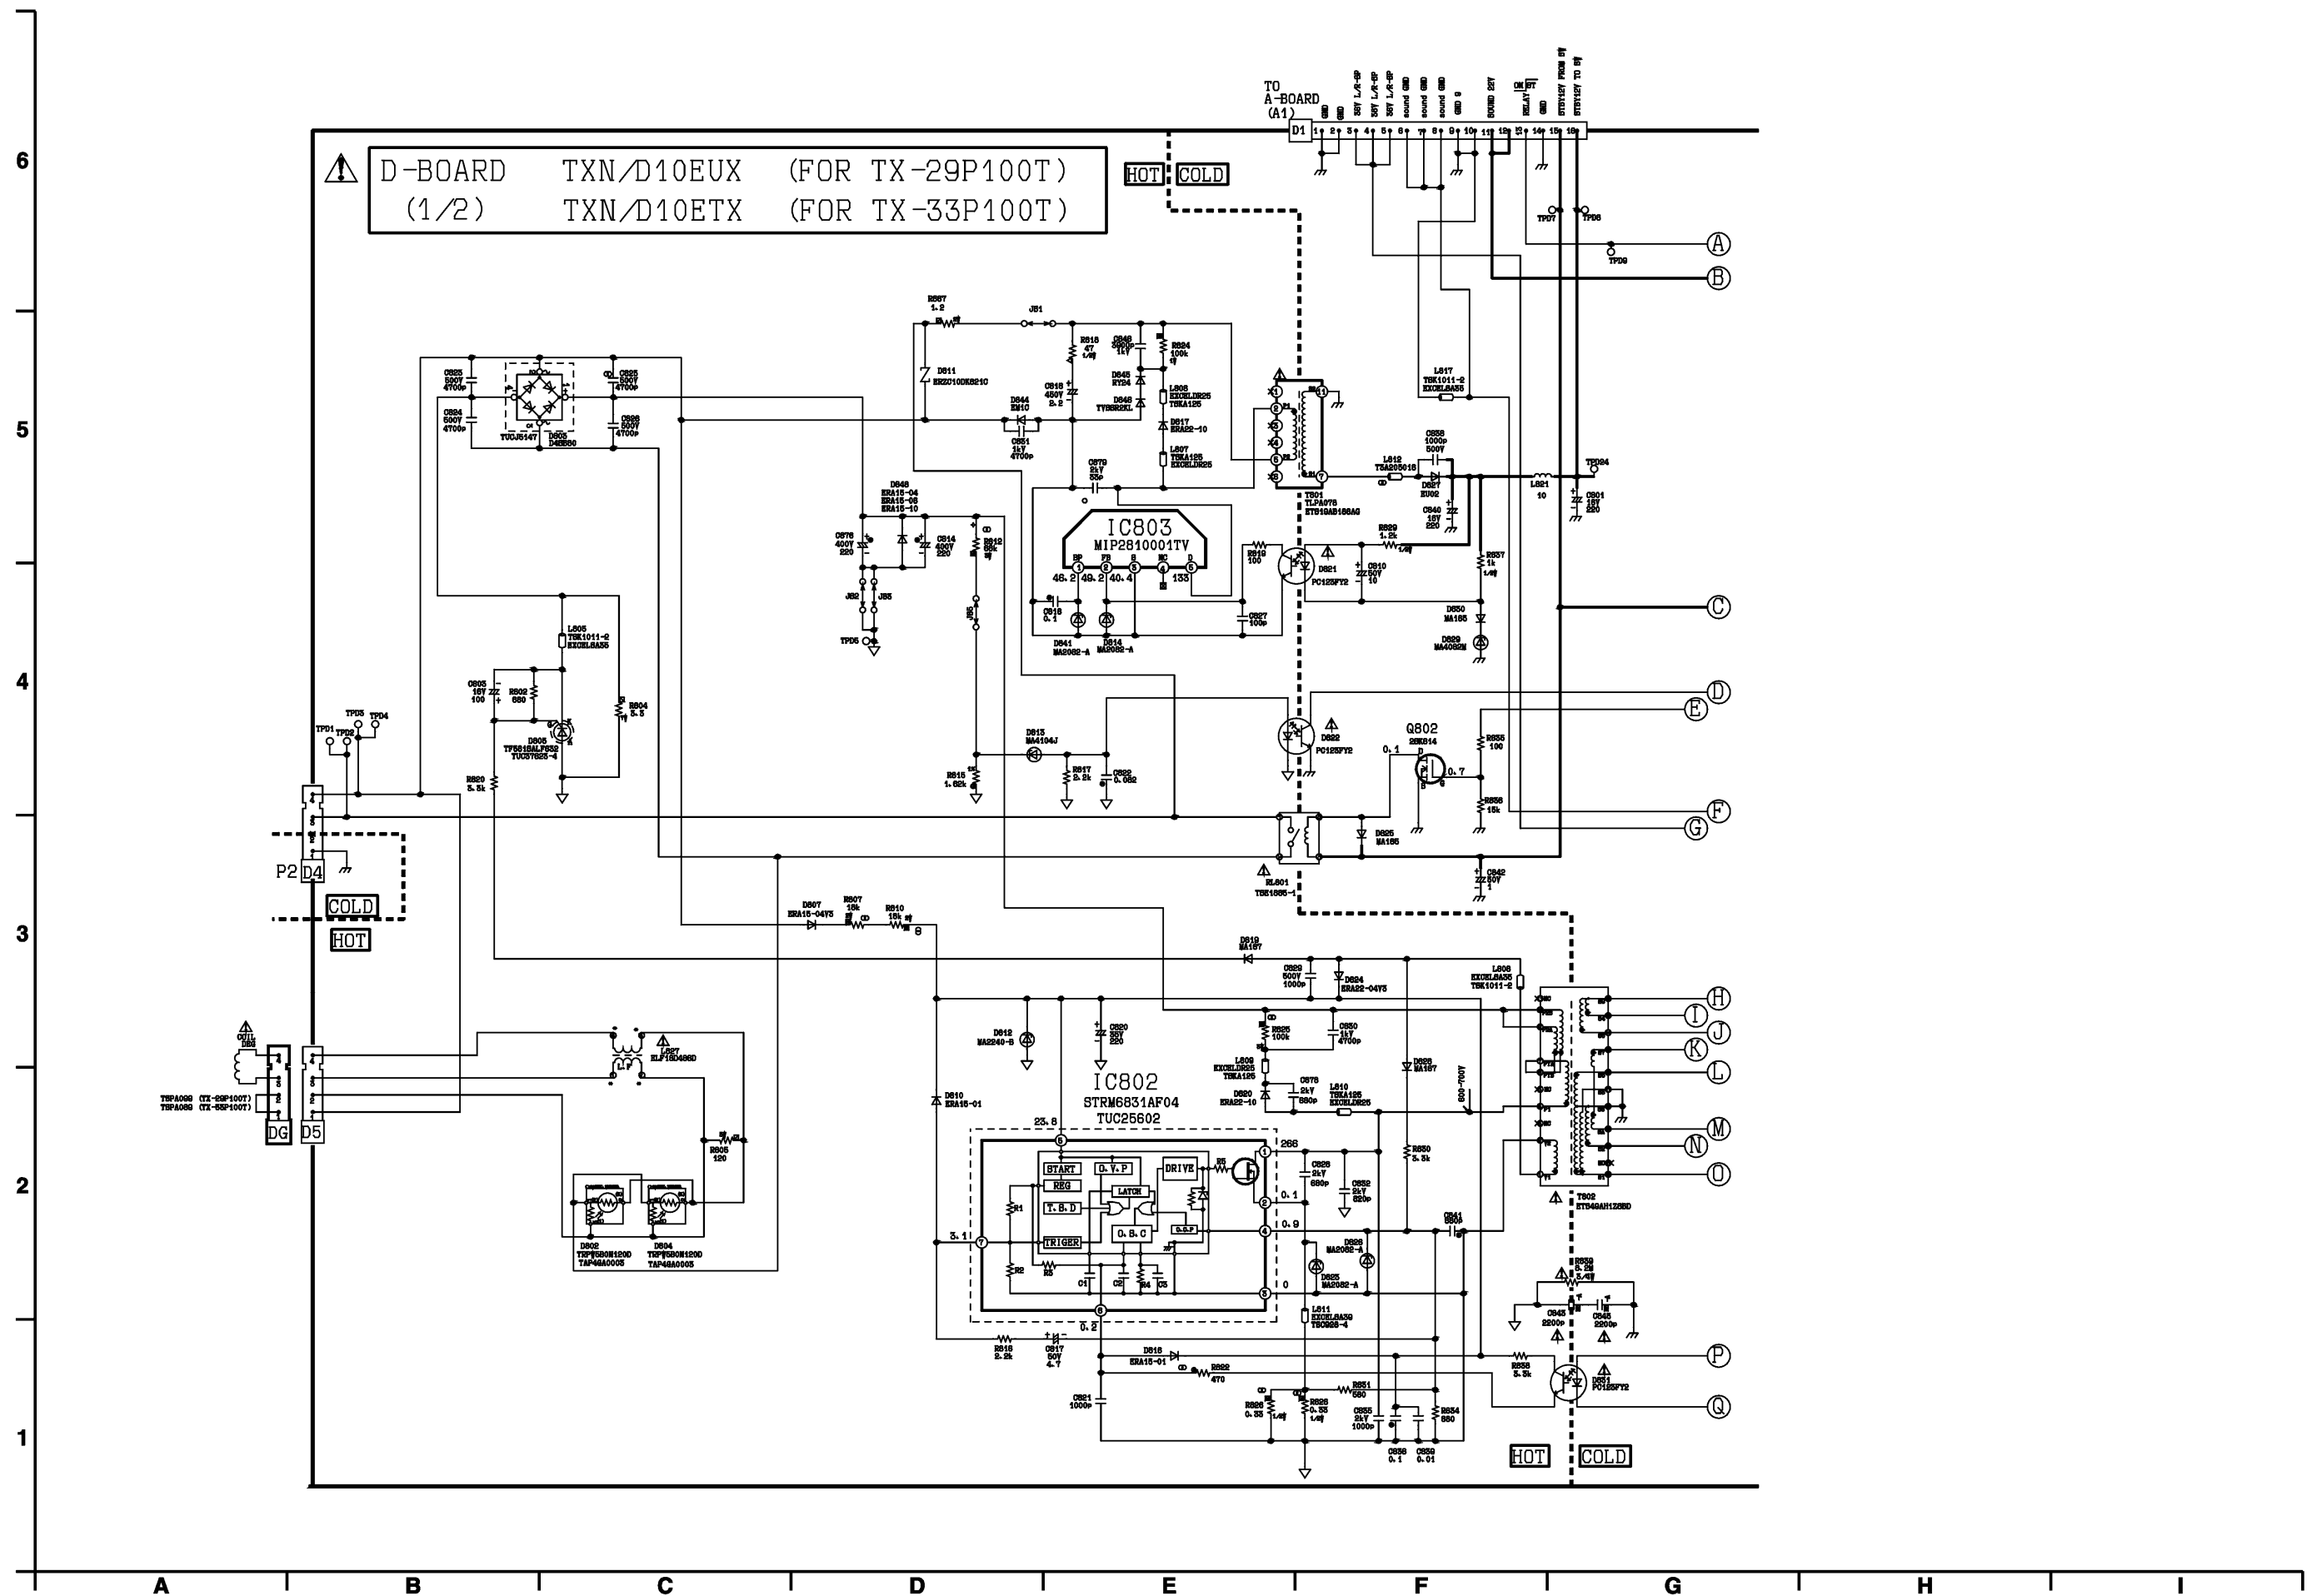

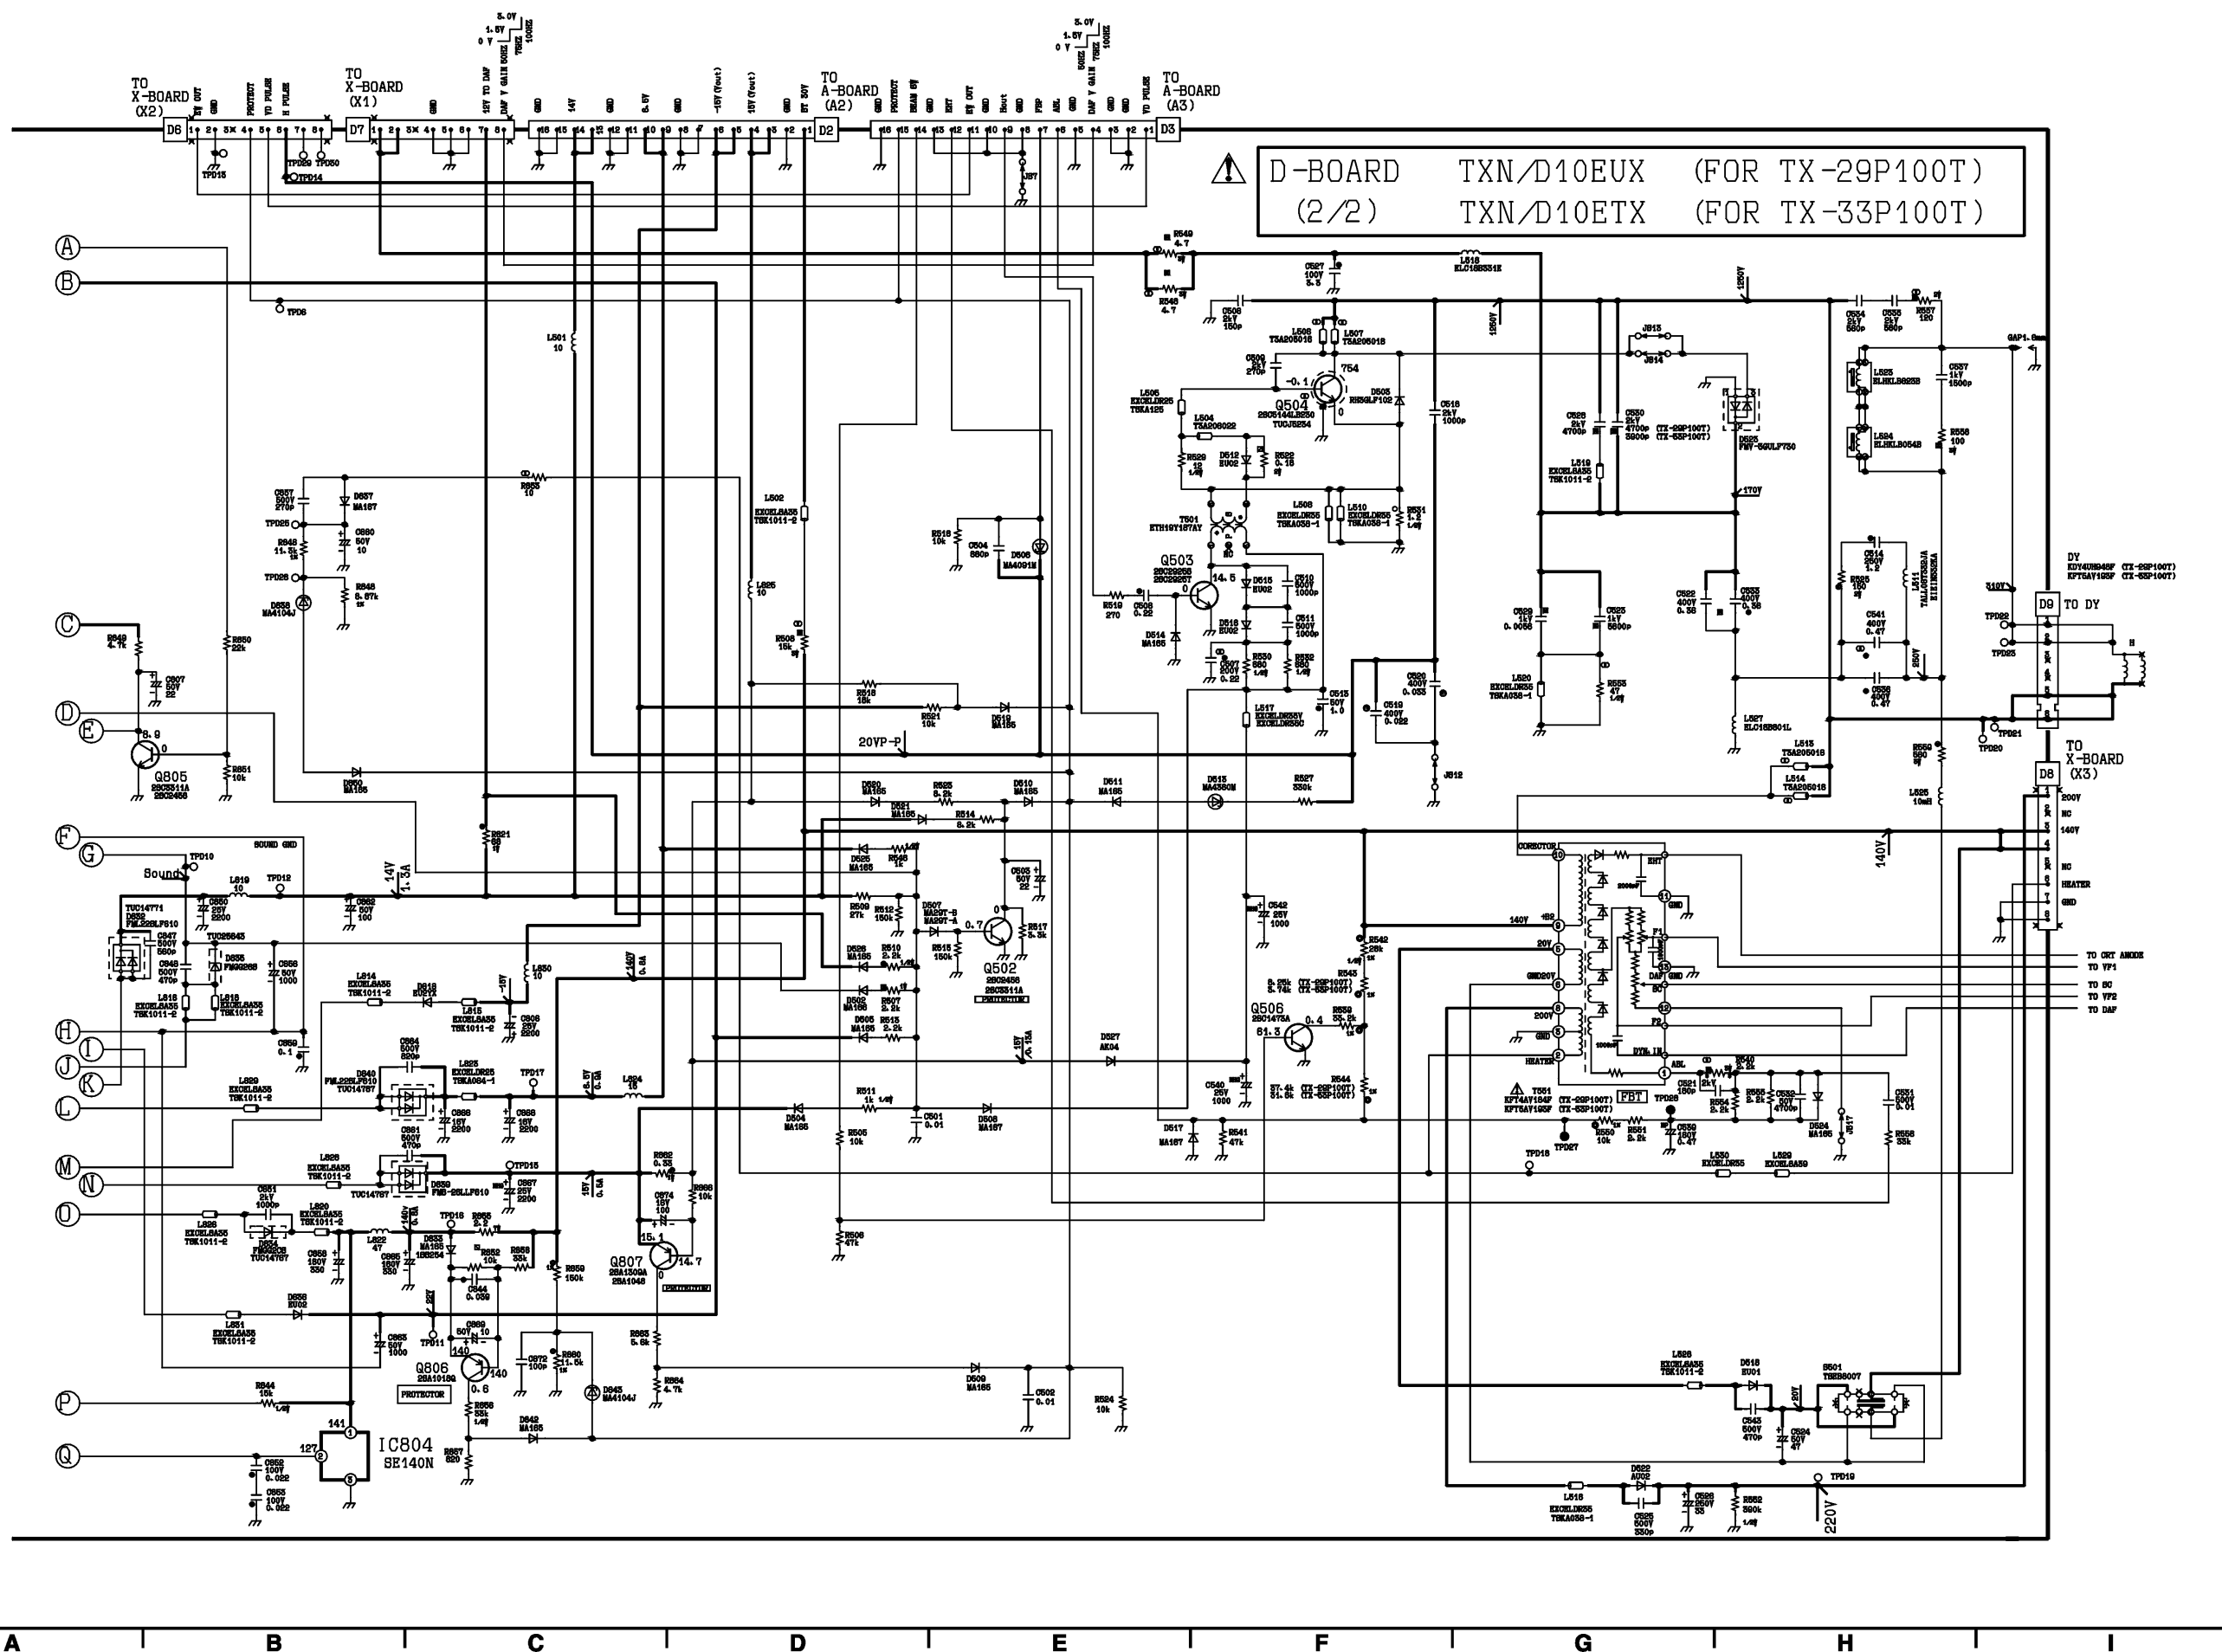

6


5

 
4

3

2

1

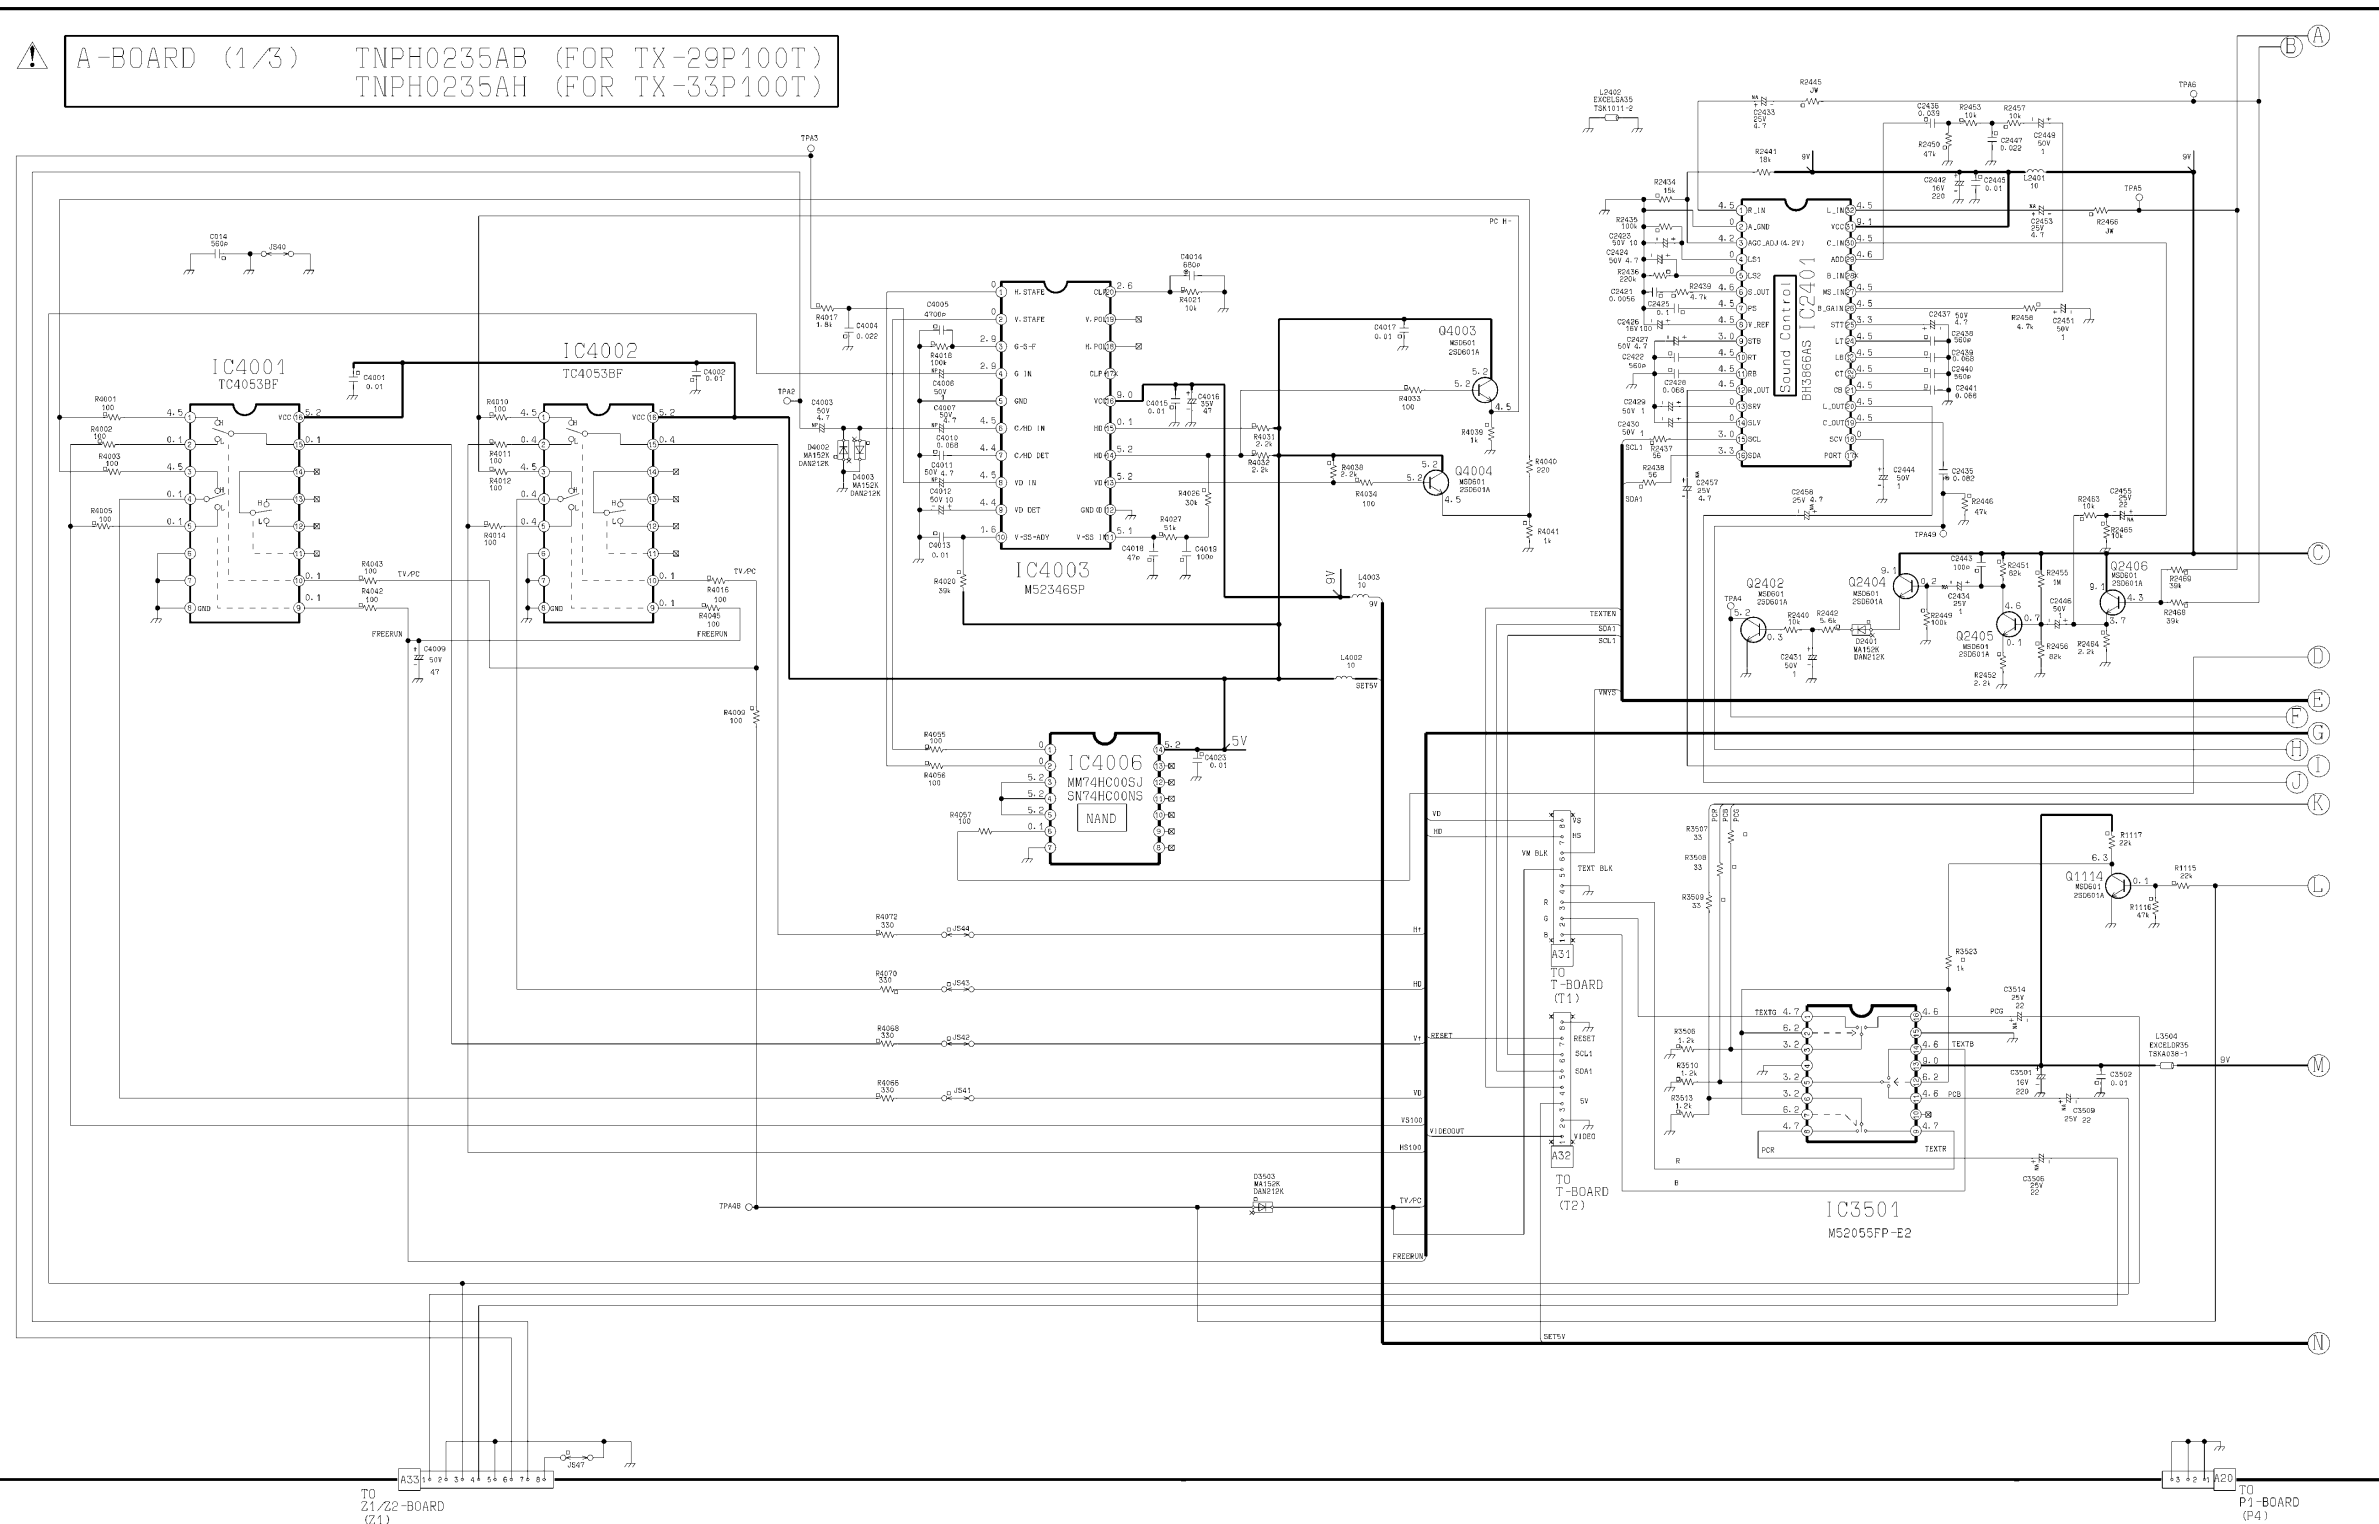



6


5

4

3

2


1

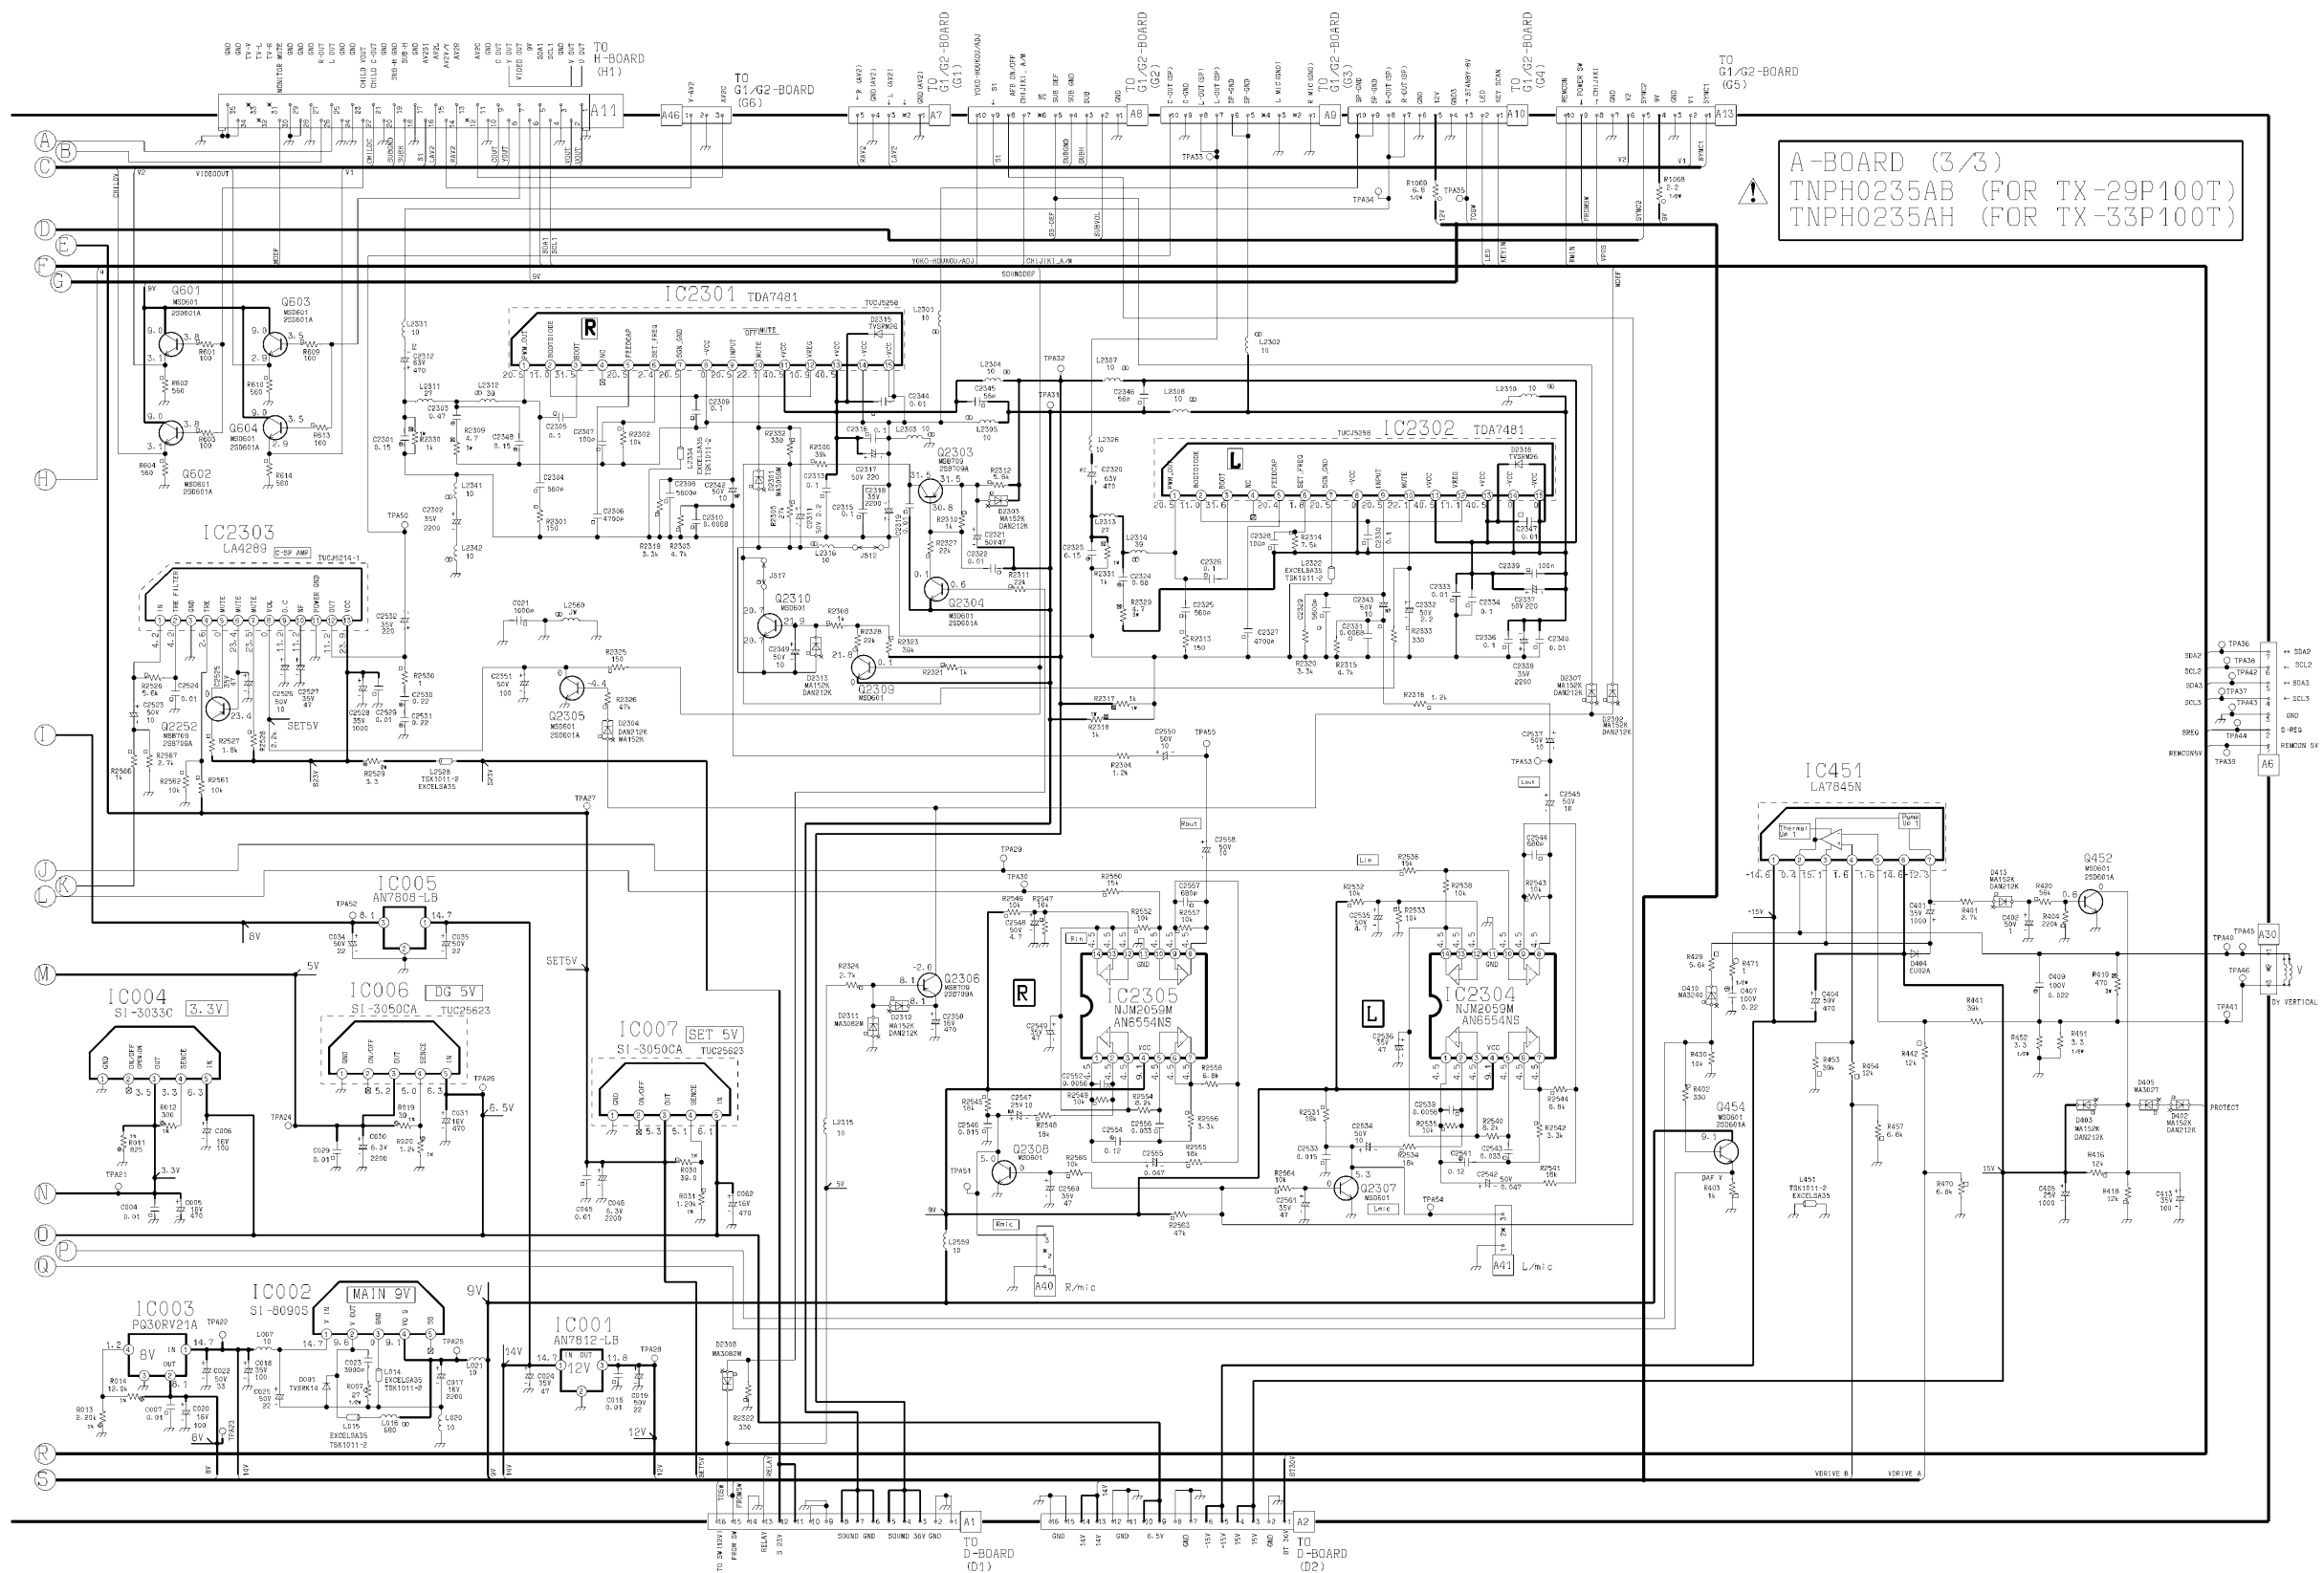







⚠ H-BOARD TNPA1182

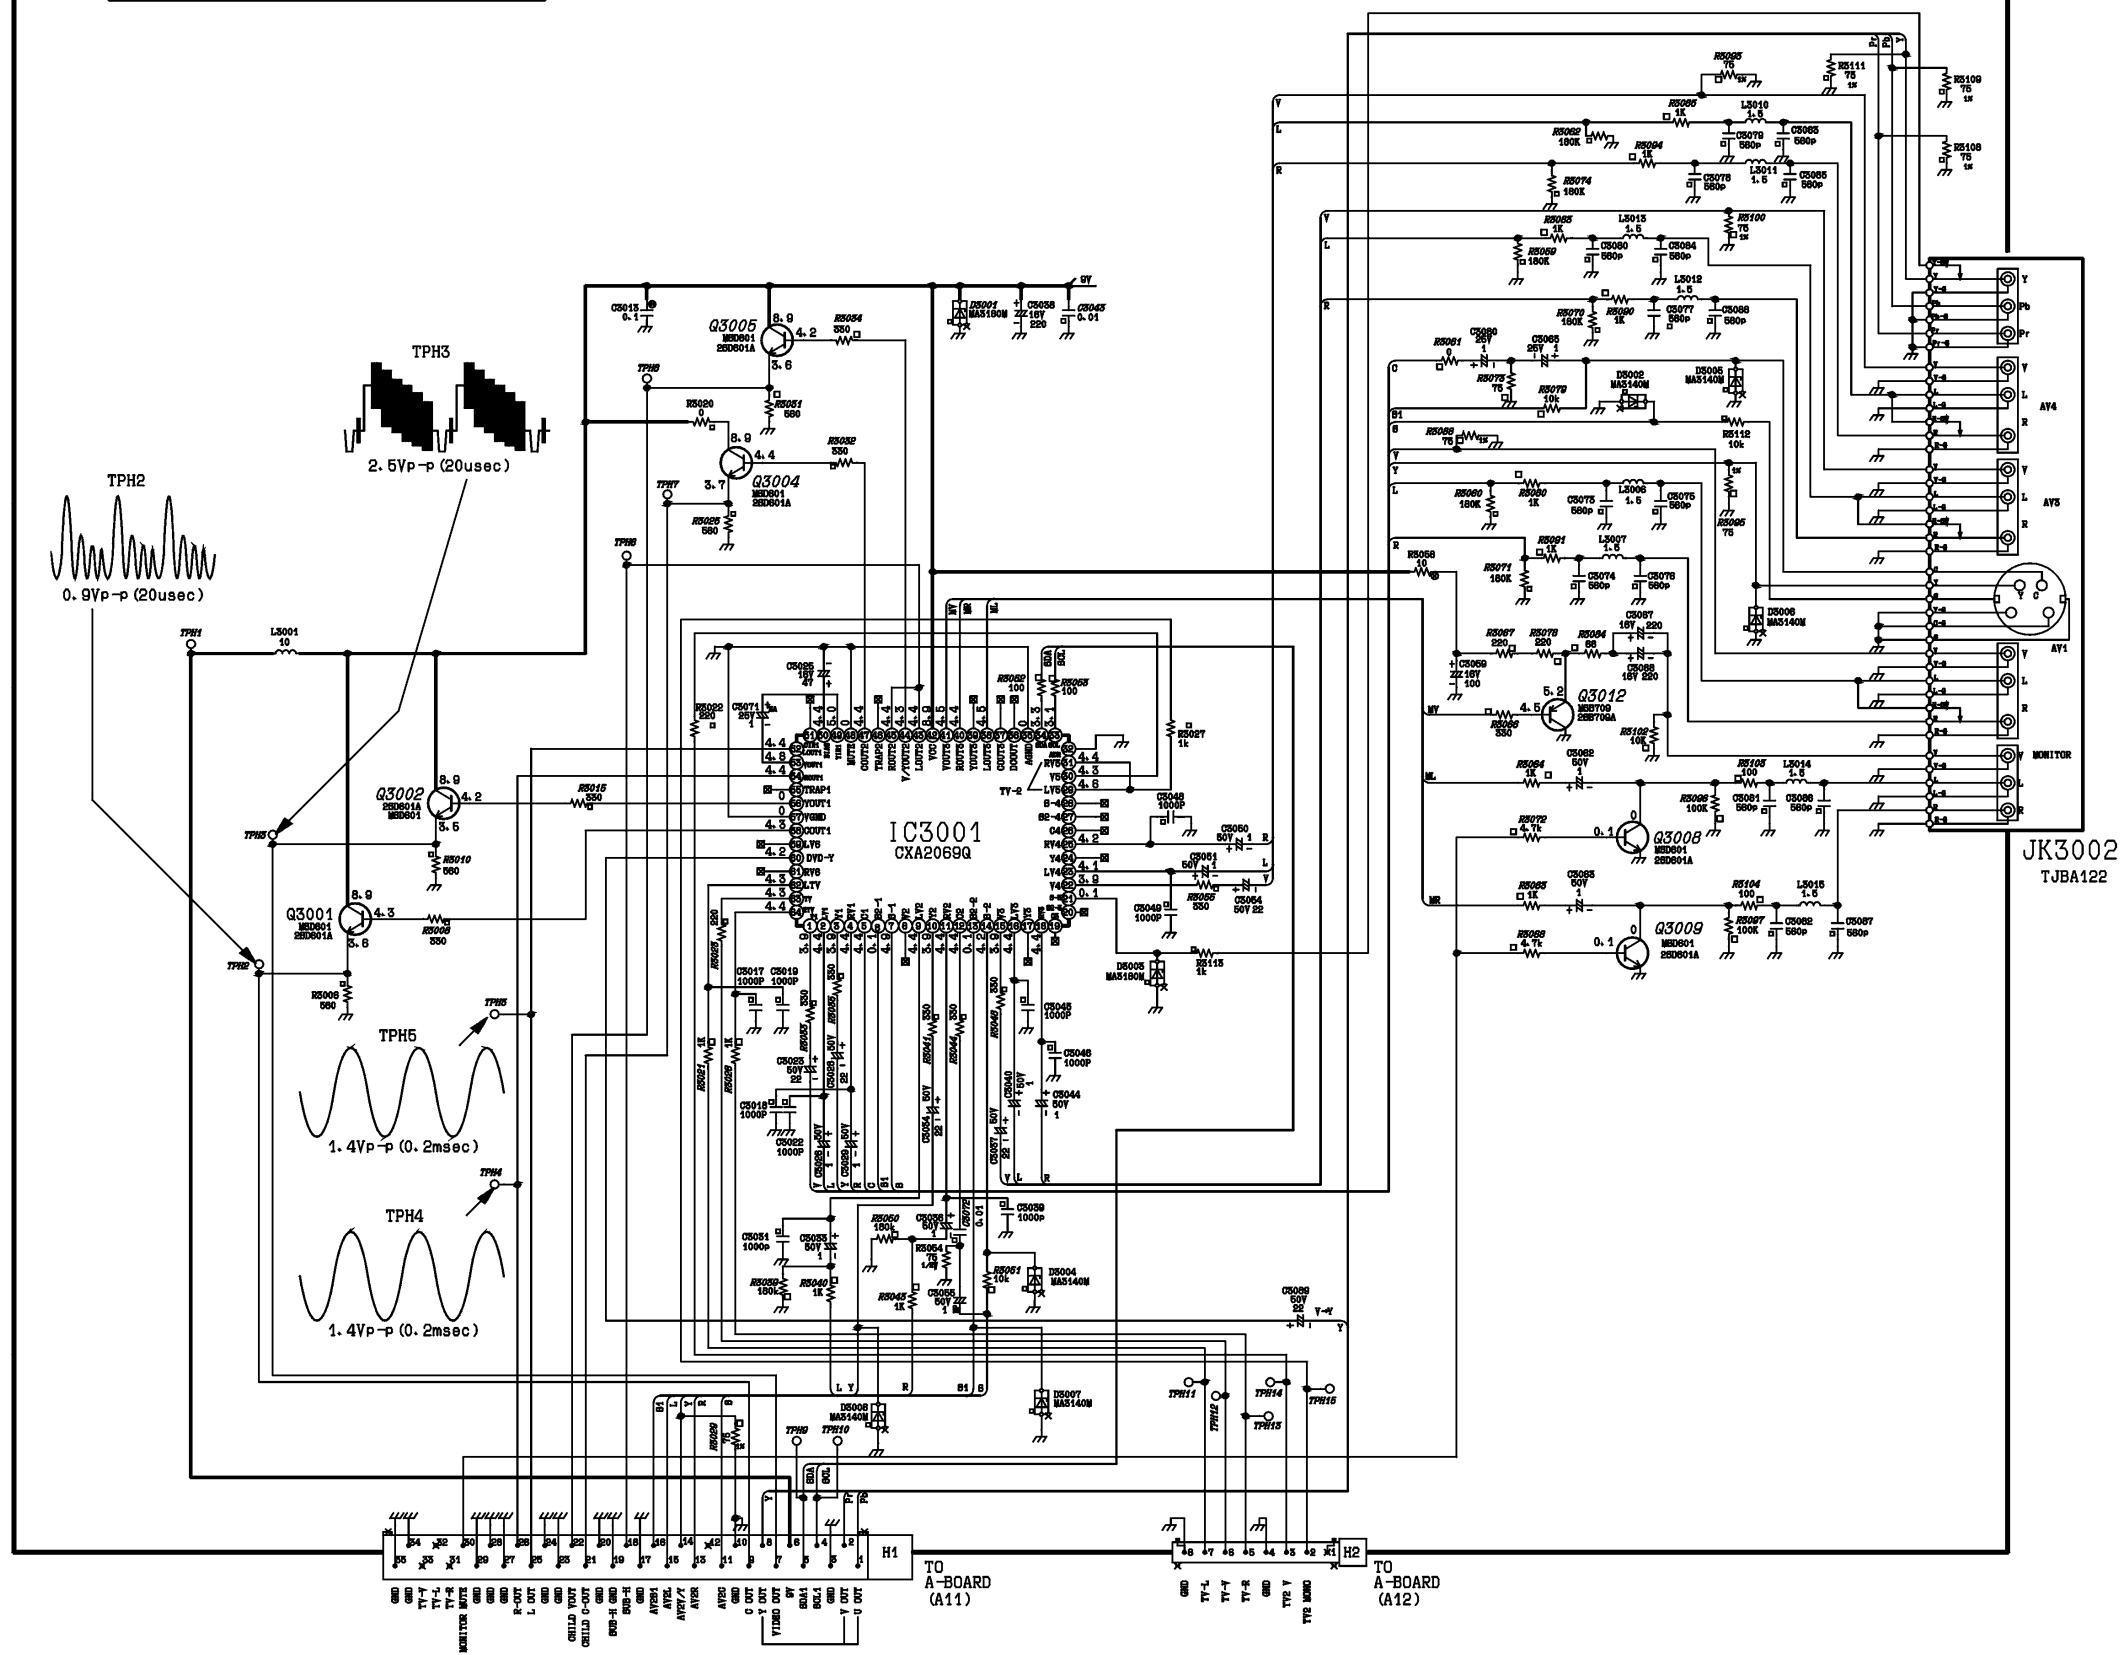




X-BOARD  
TNPA1180 (FOR TX-29P100T)  
TNPA1180AB (FOR TX-33P100T)

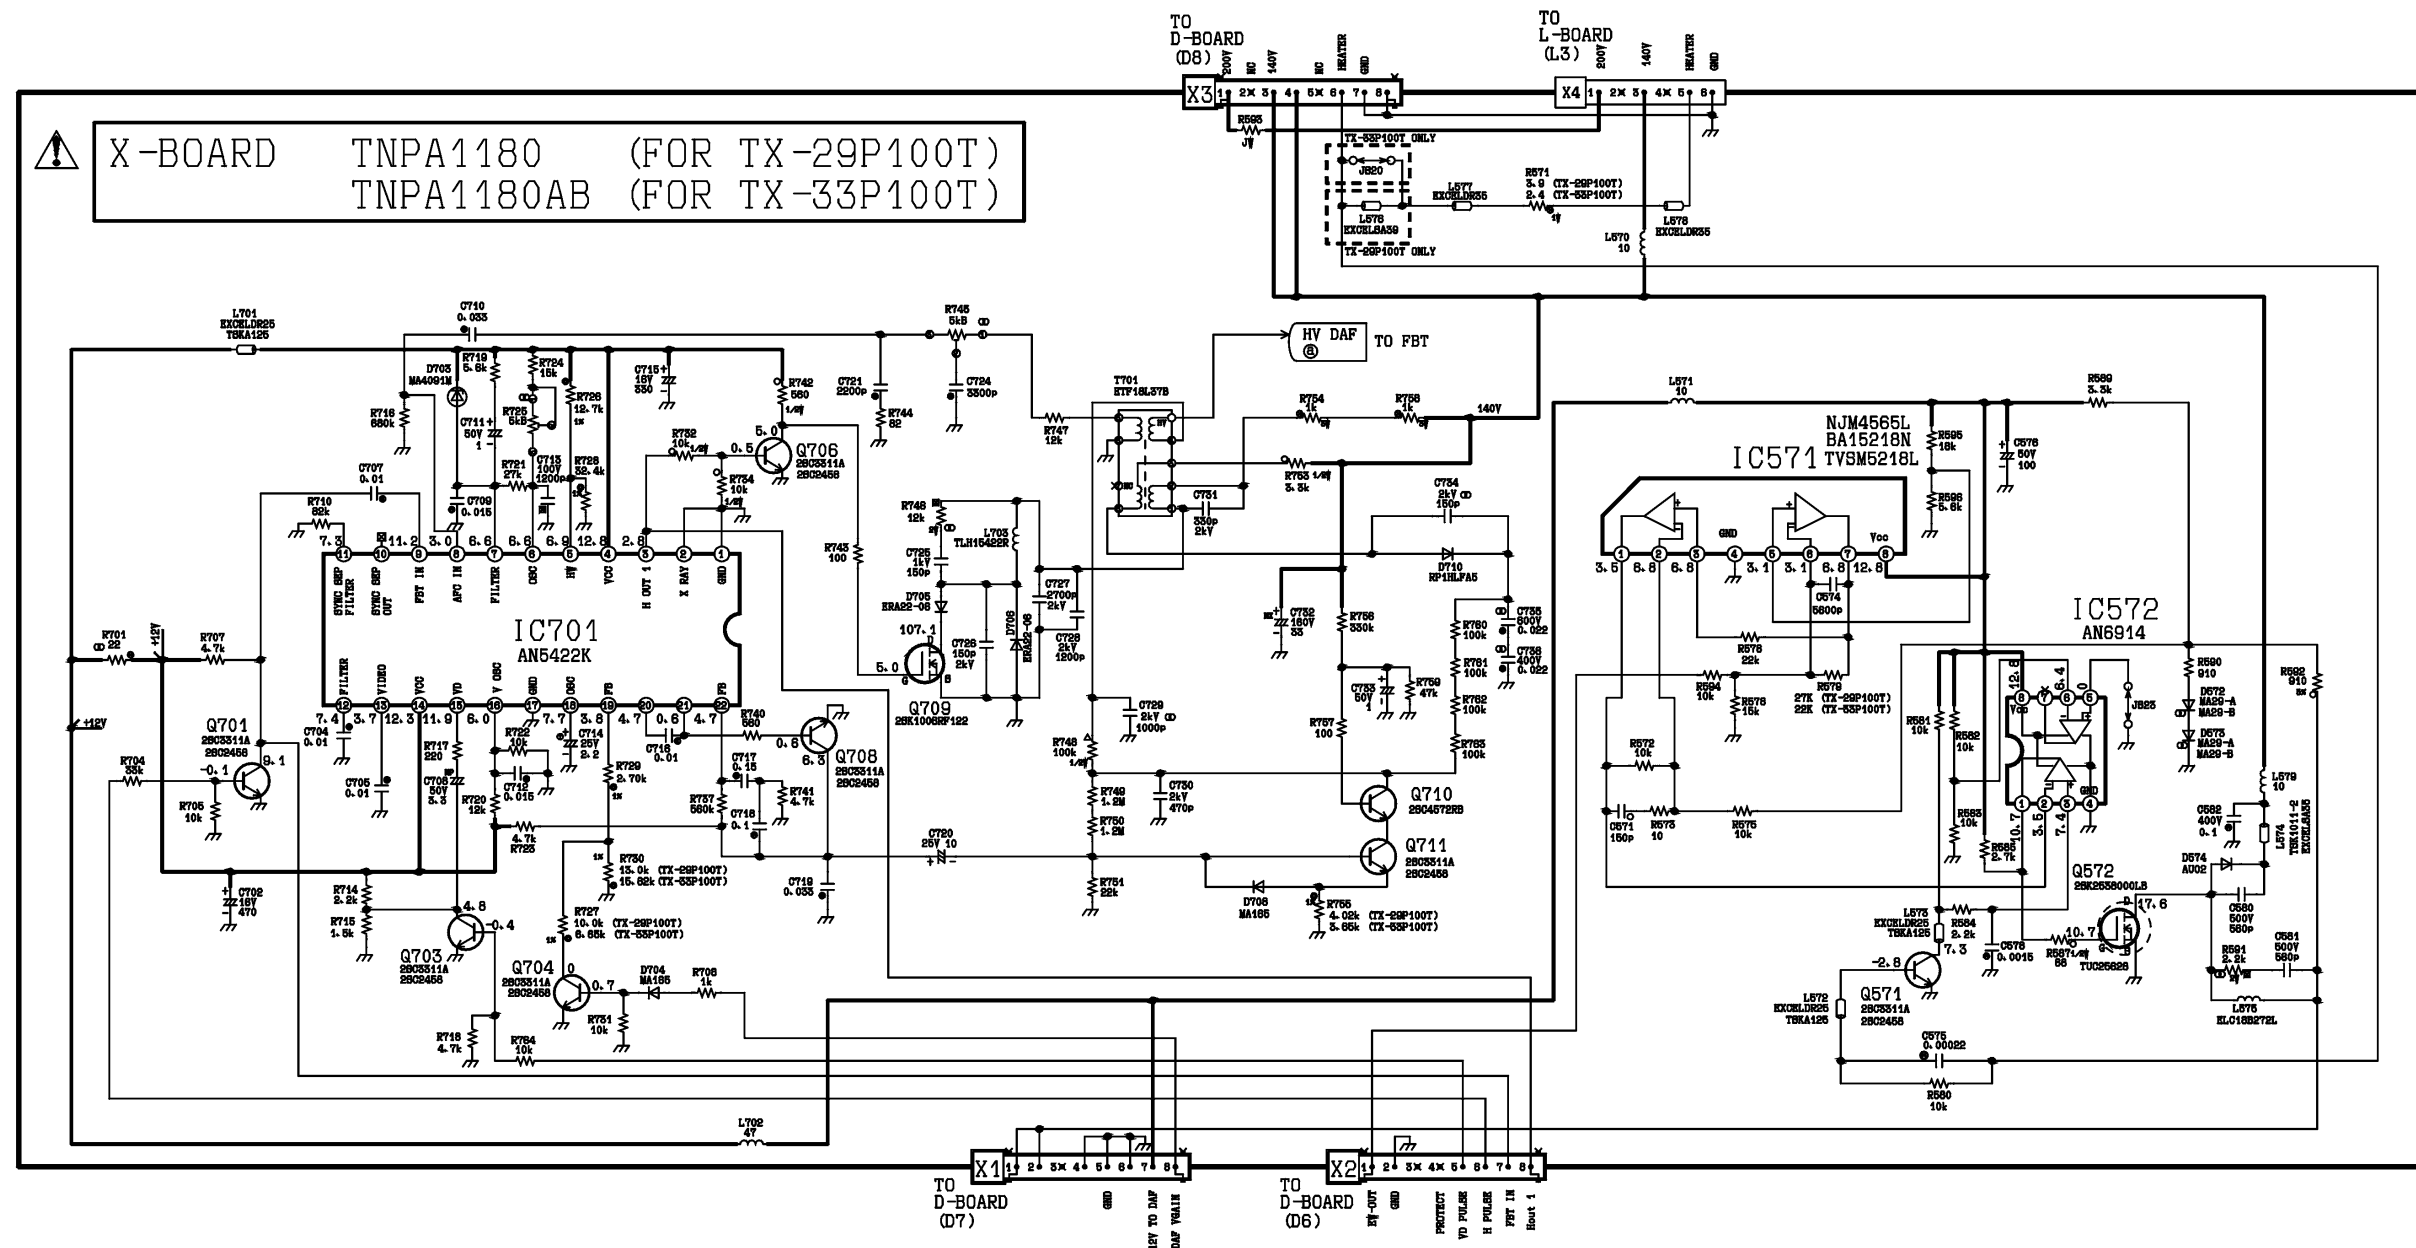

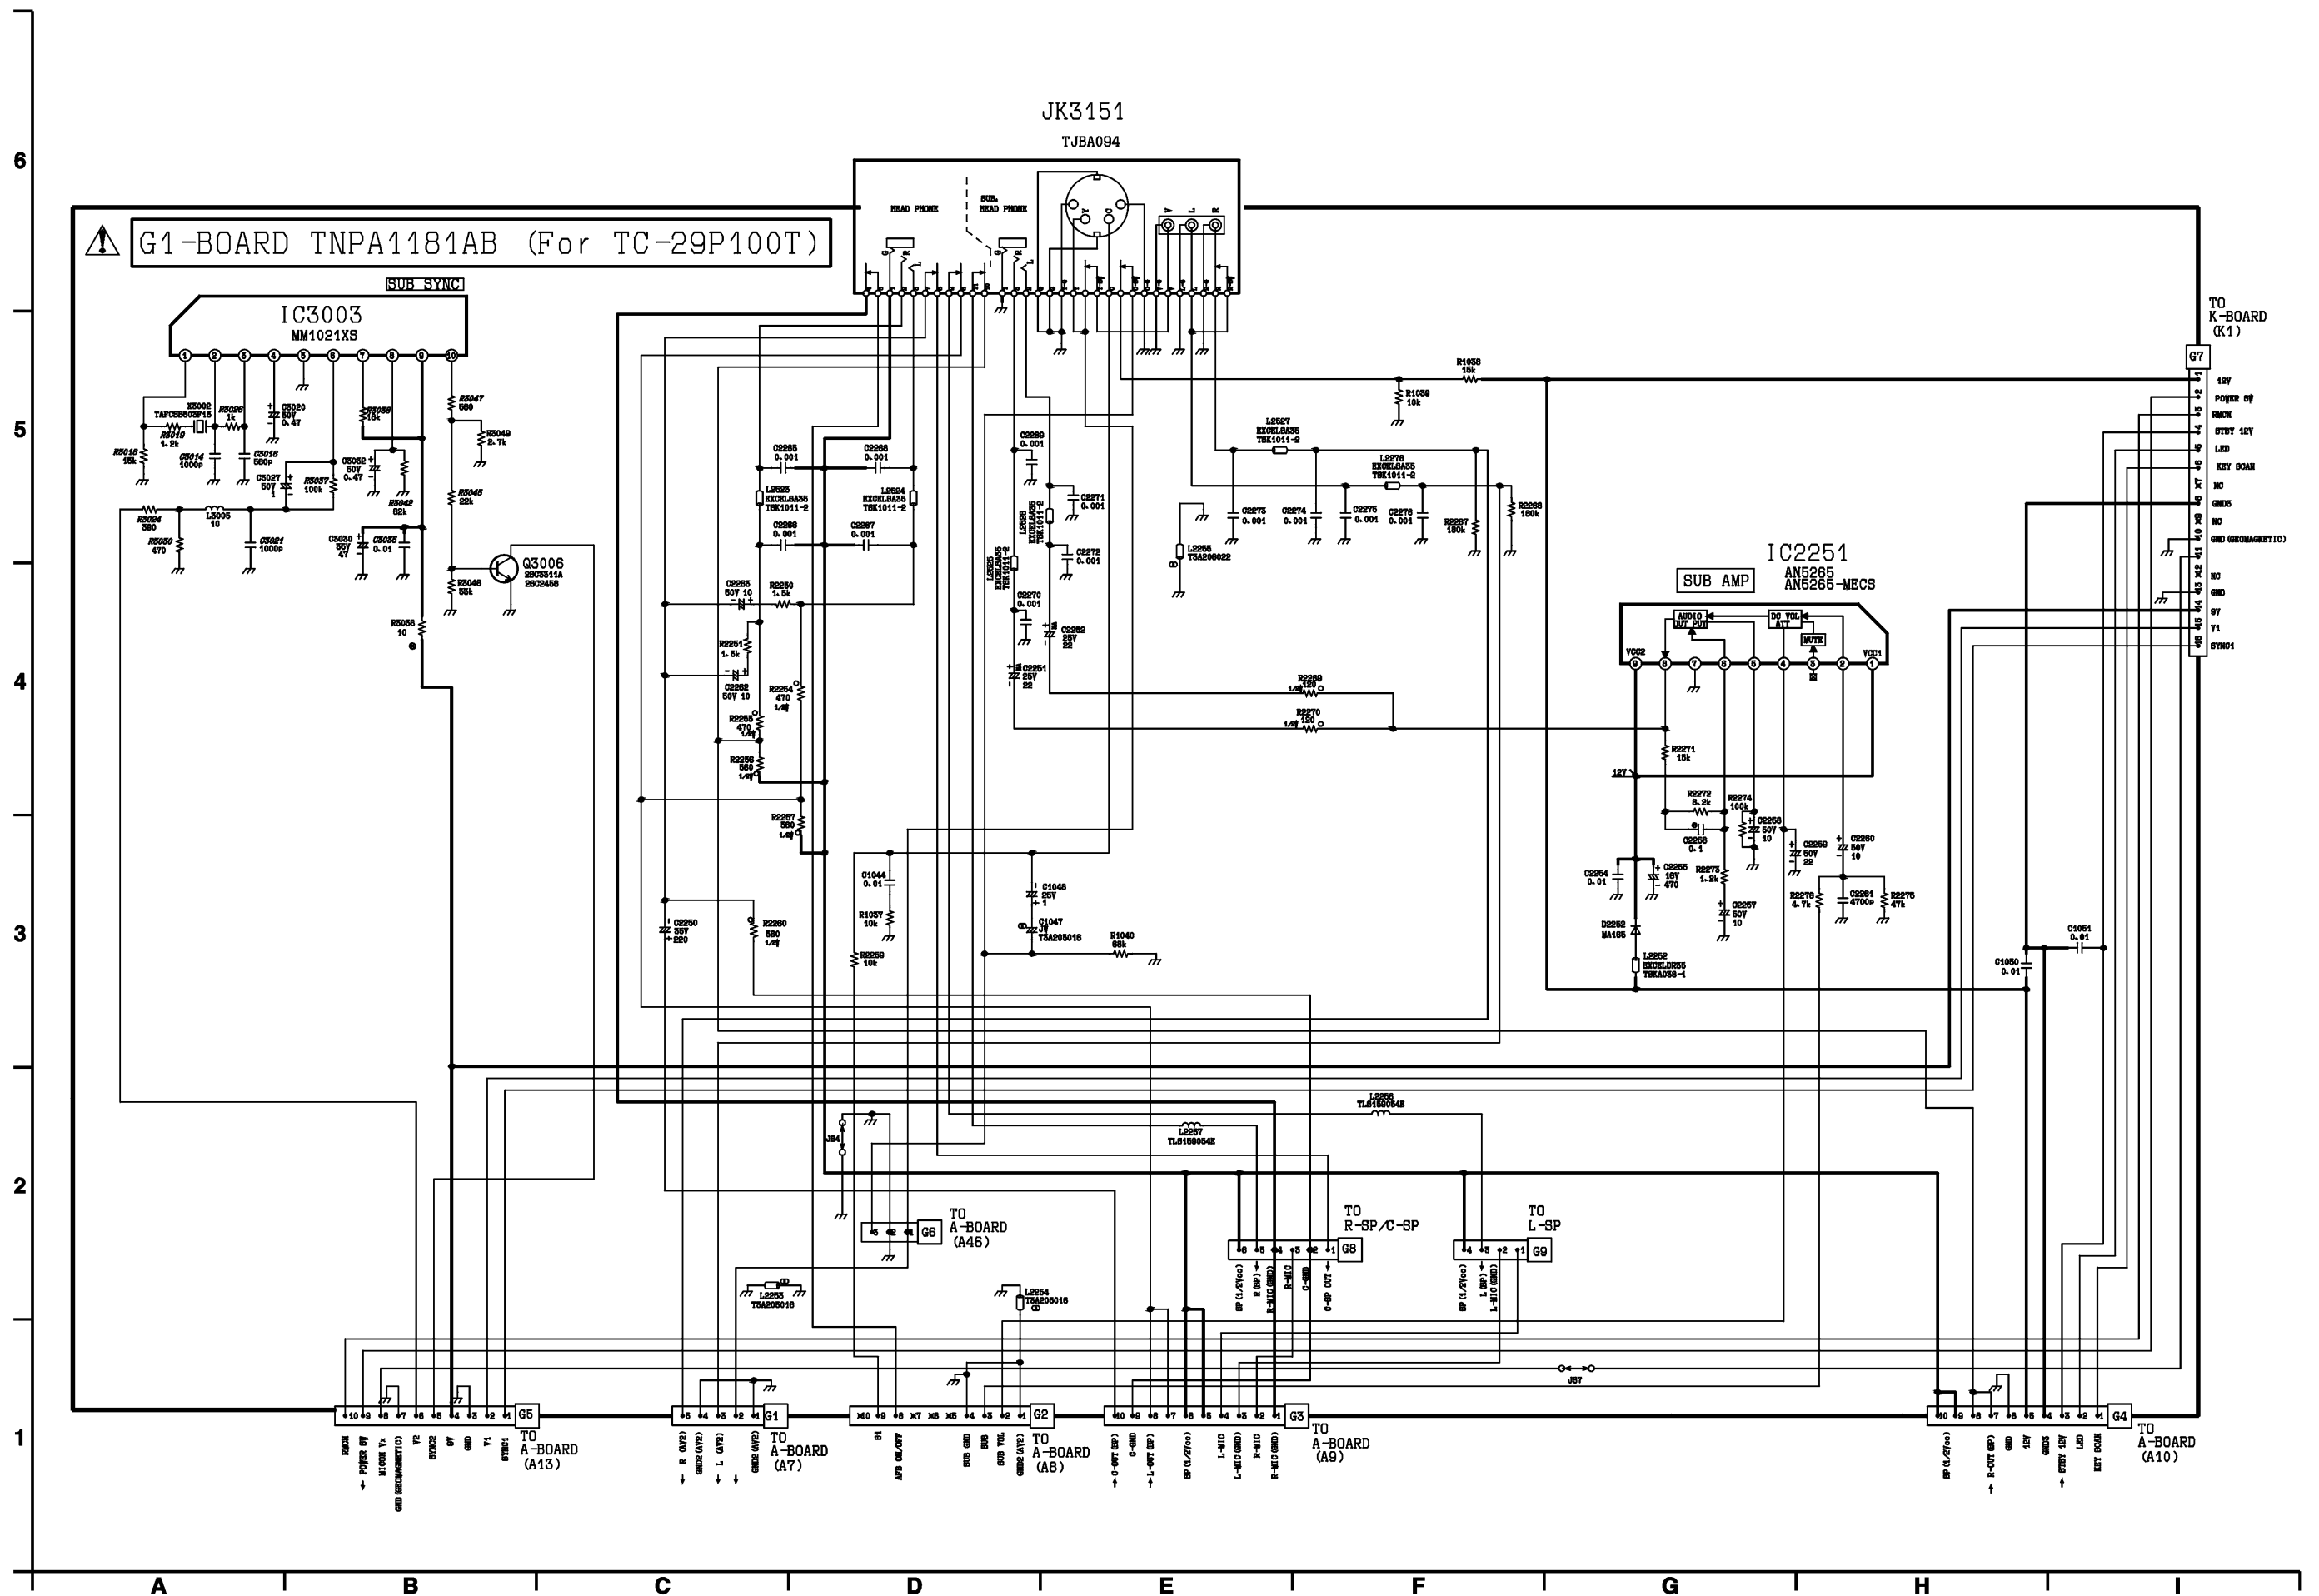





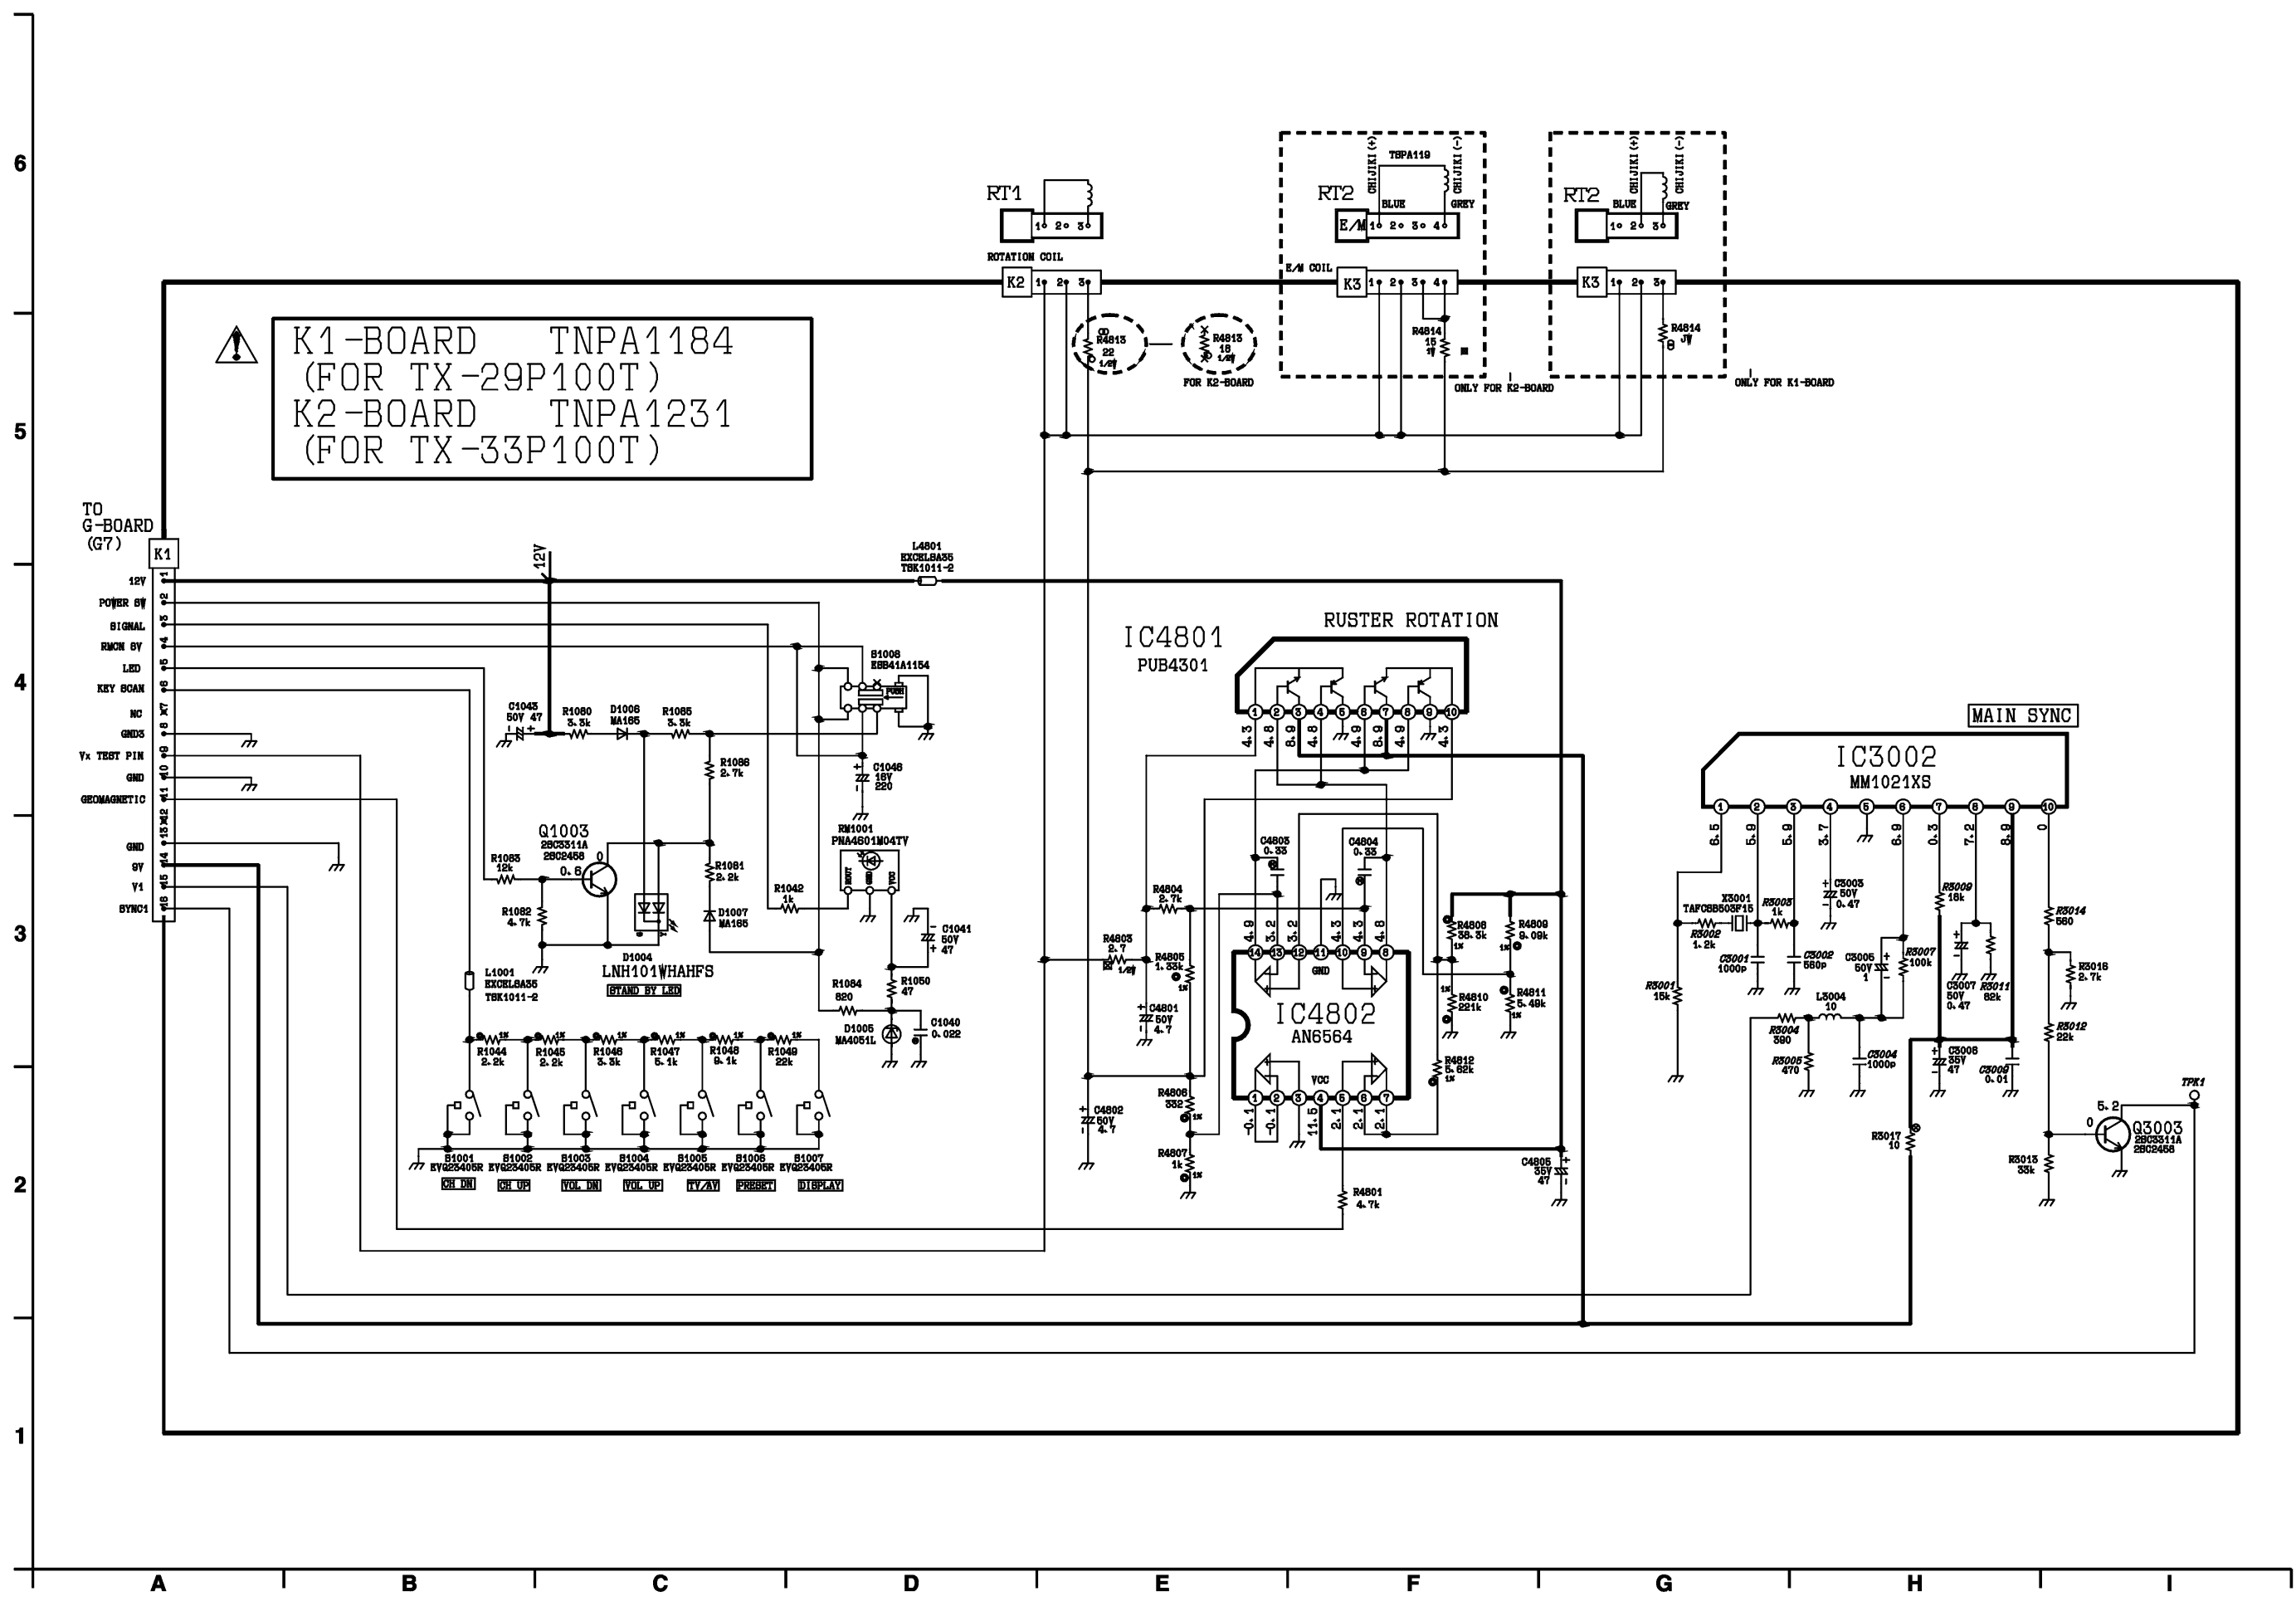

DG-BOARD (1/2) TXNDG10EUC

