


## RTV servis Horvat



**UNIVERSUM**


FT 7172B  
 FT 7173  
 FT 7176B  
 FT 7174C

FT 7188  
 FT 7191

    Tel: ++385-31-856-637  
 Tel/fax: ++385-31-856-139  
 Mob: 098-788-319  
[www.rtv-horvat-dj.hr](http://www.rtv-horvat-dj.hr)

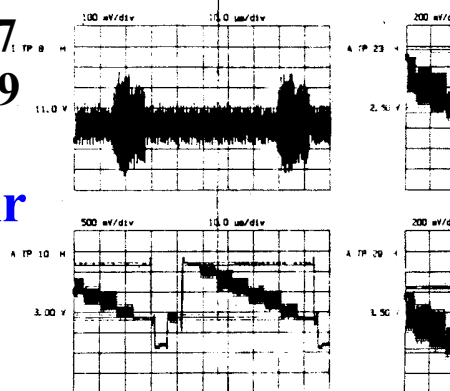





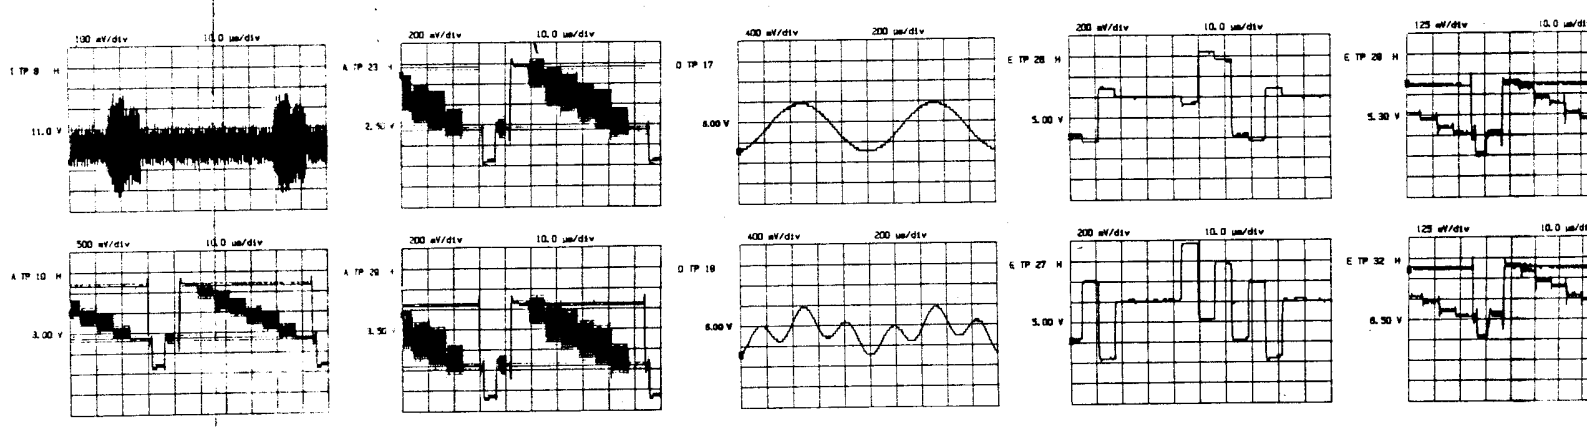
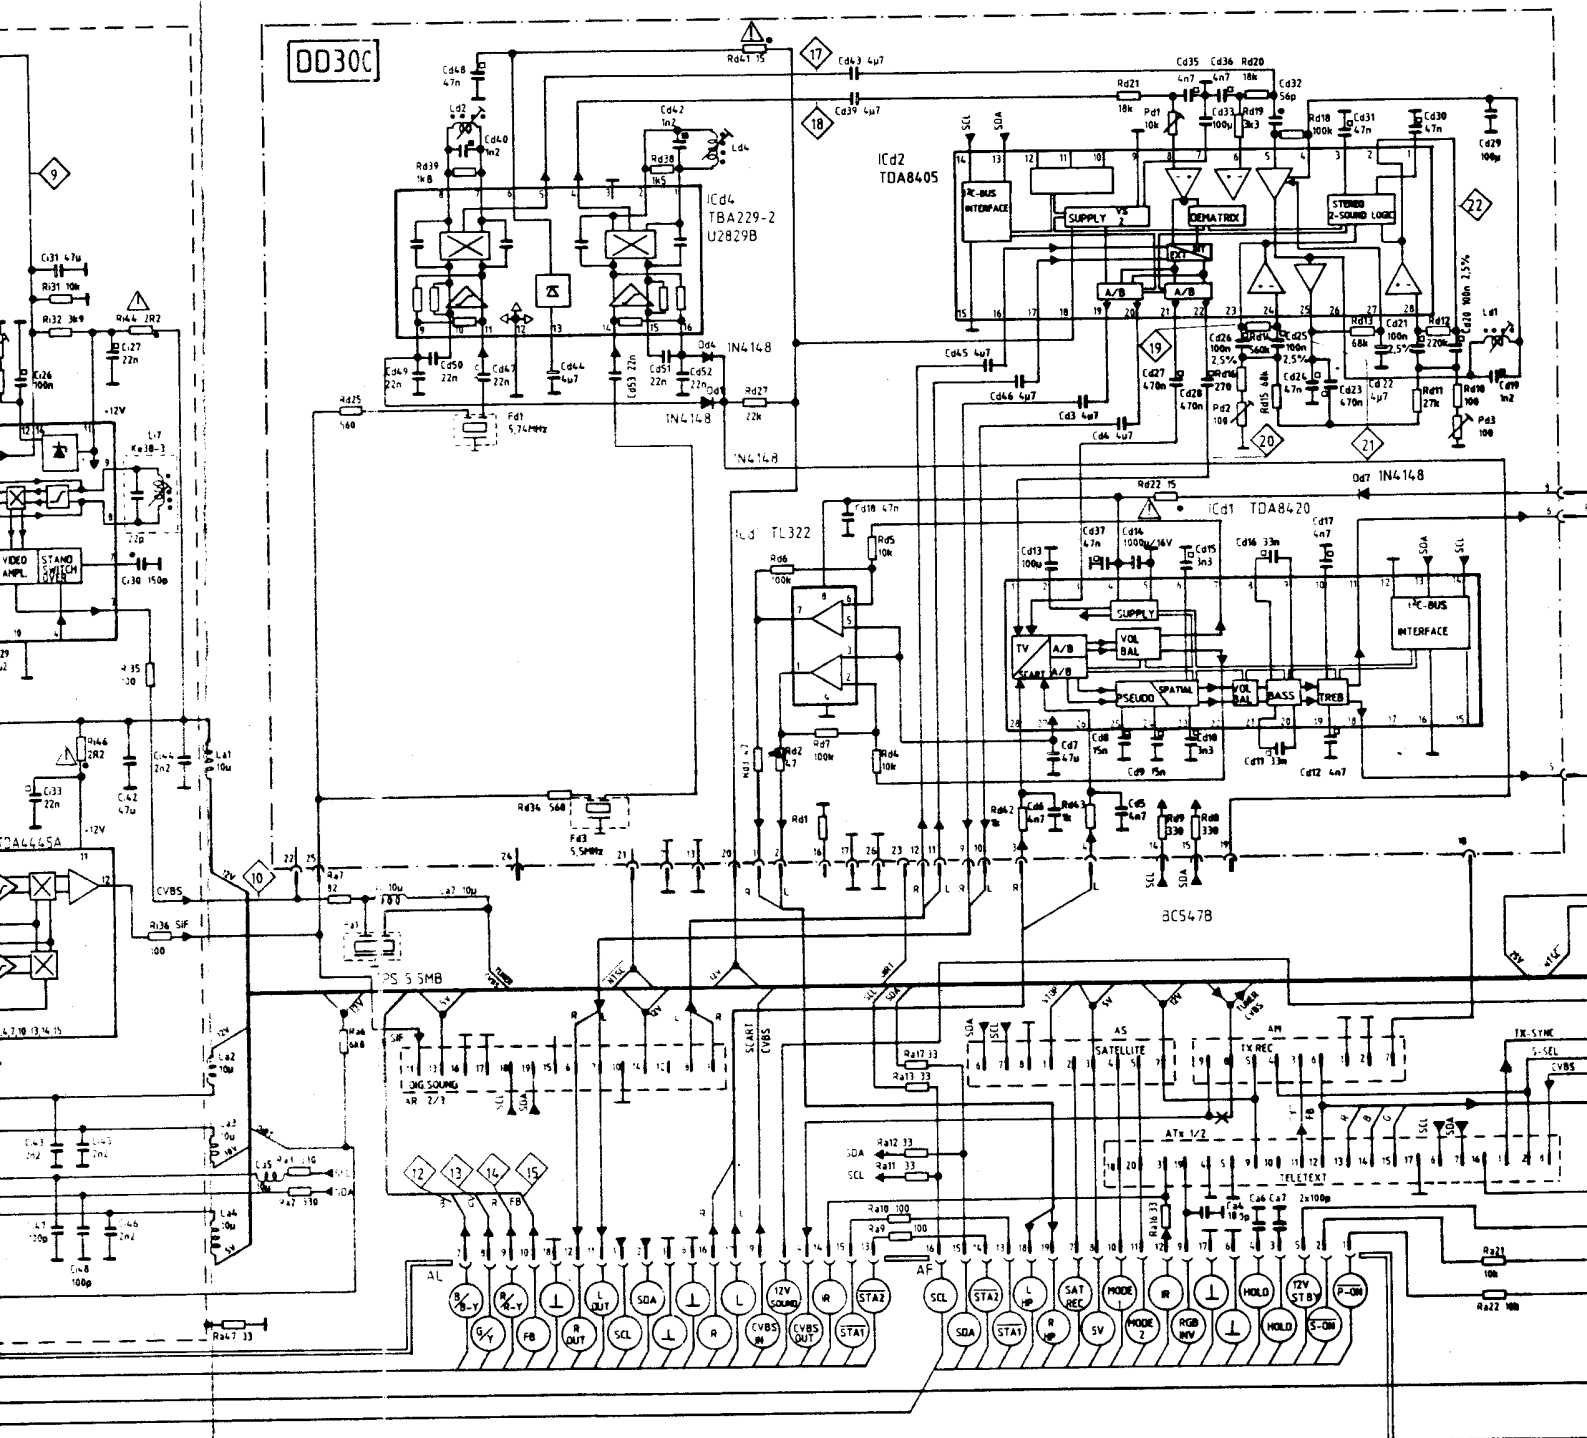

















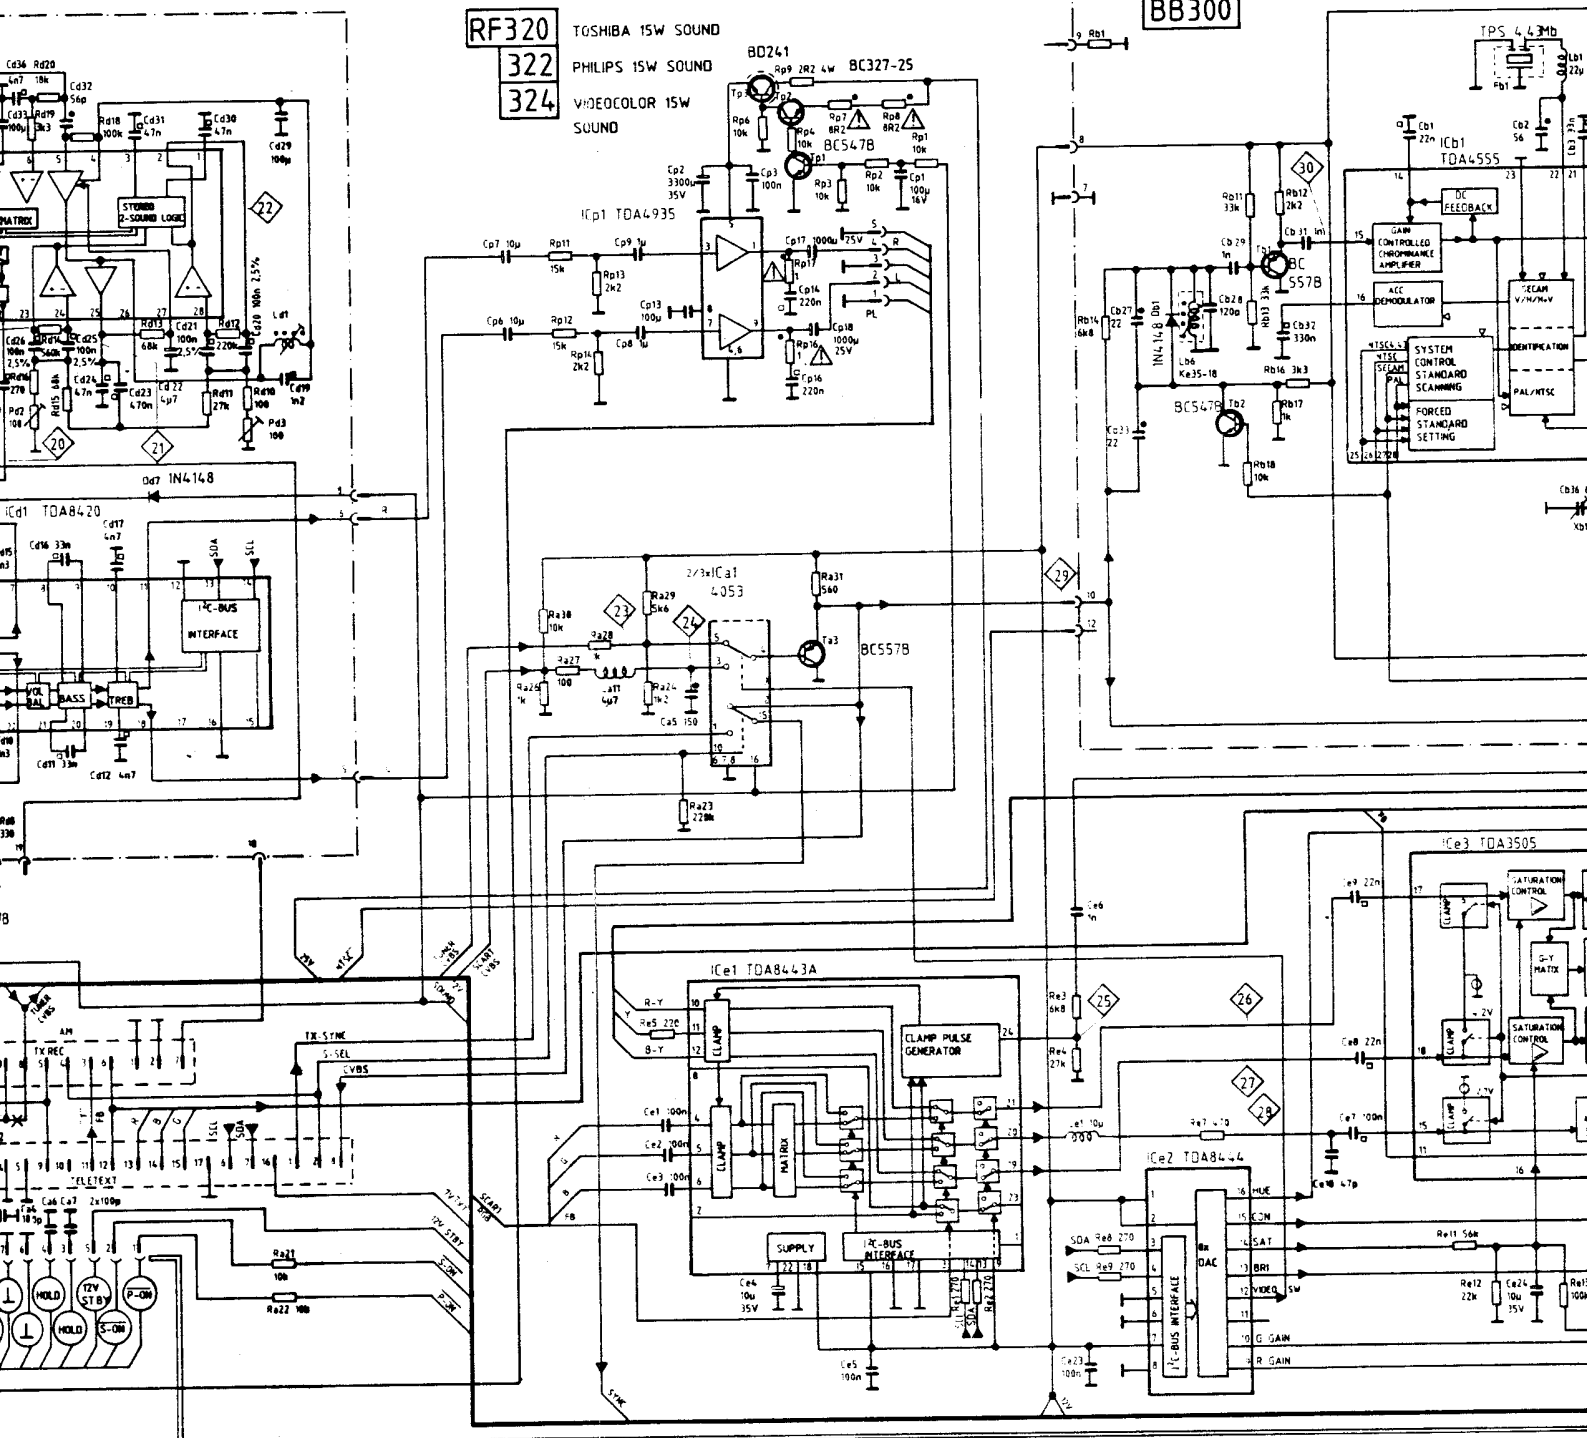



**RF320** TOSHIBA 15W SOUND  
**322** PHILIPS 15W SOUND  
**324** VIDEOCOLOR 15W SOUND

                       **BB300**

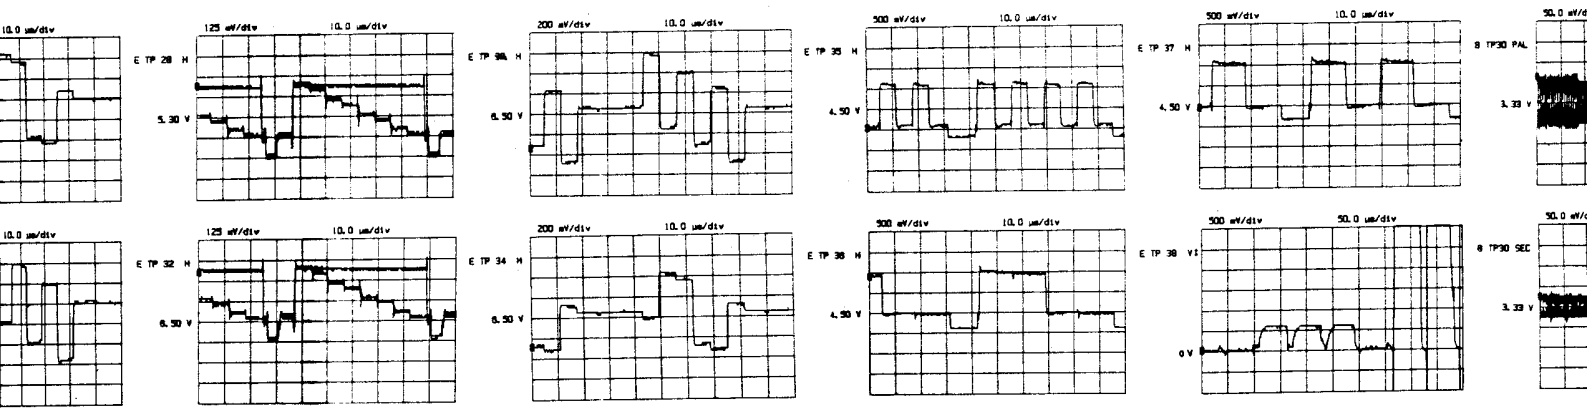





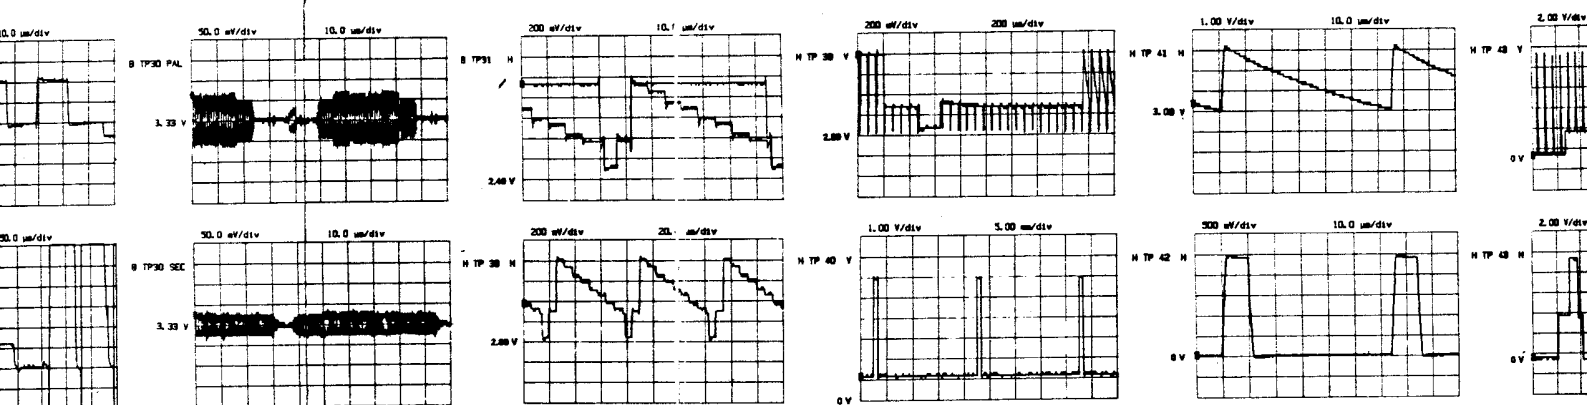
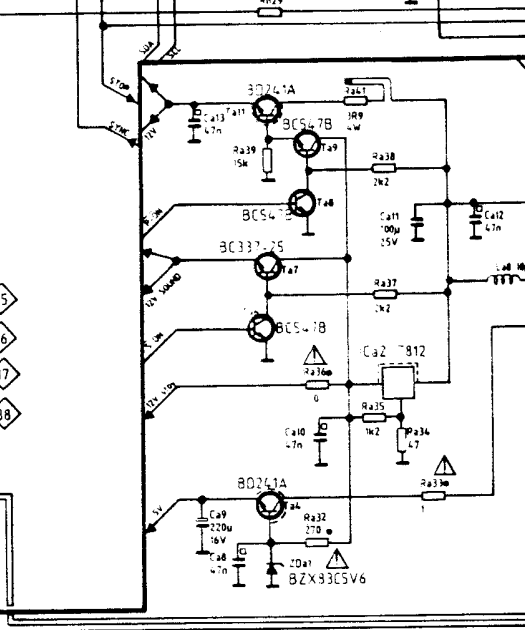
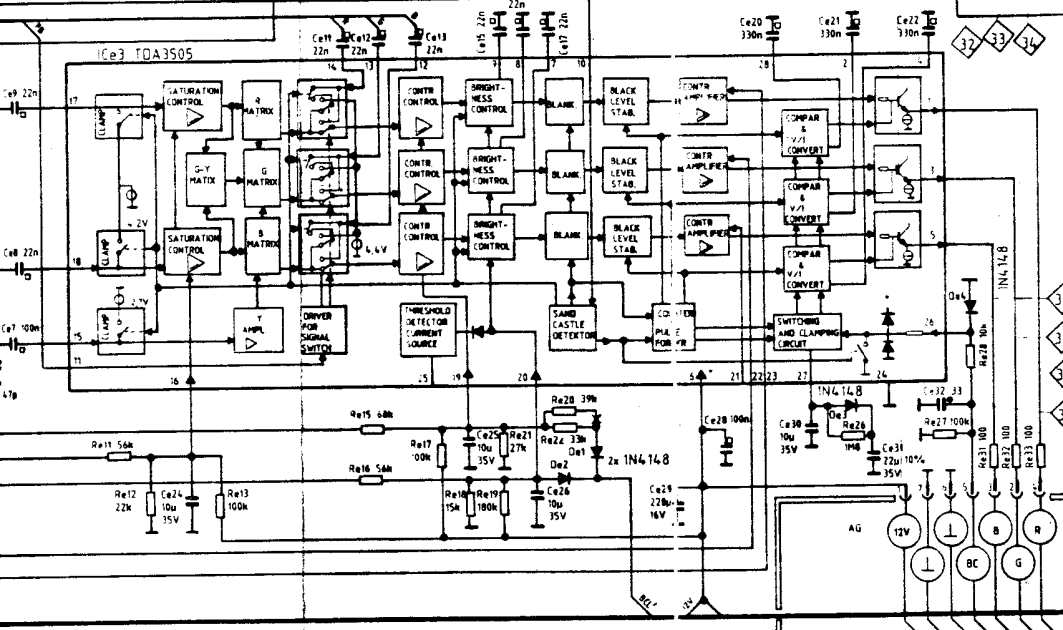
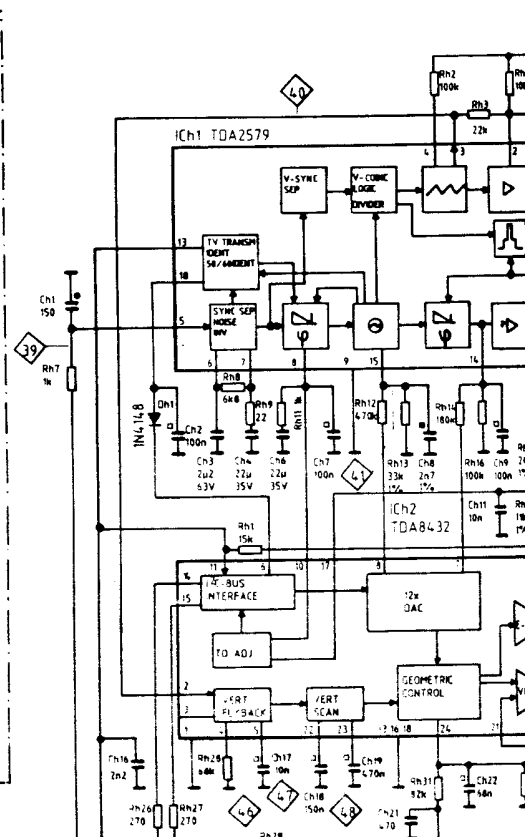
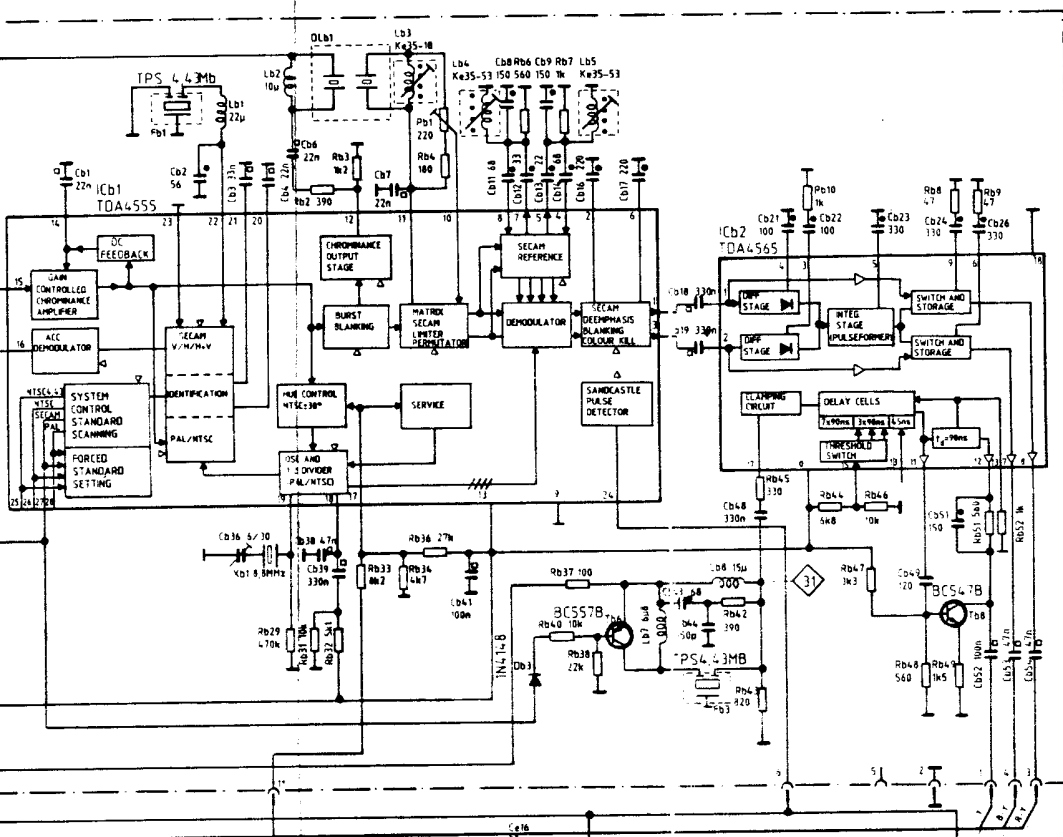


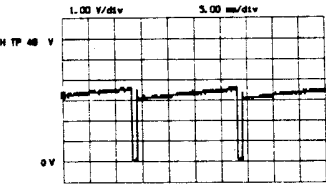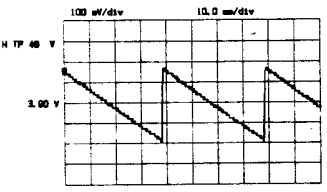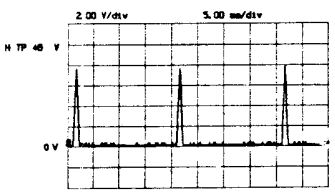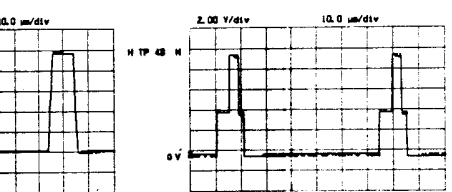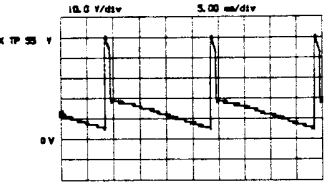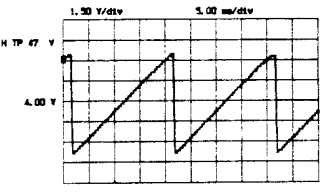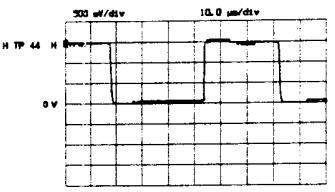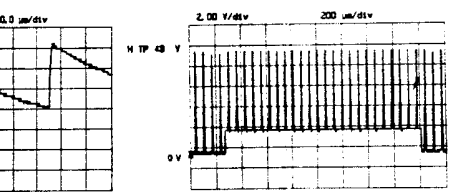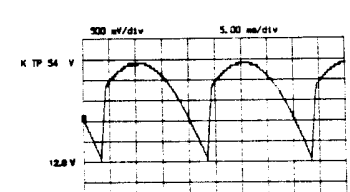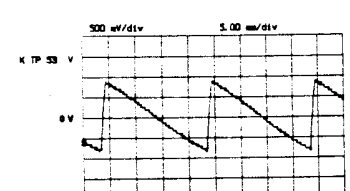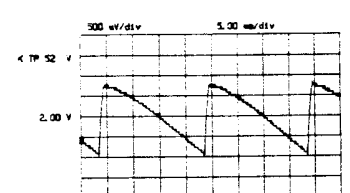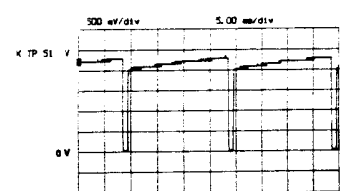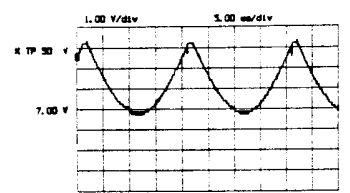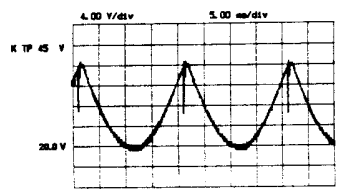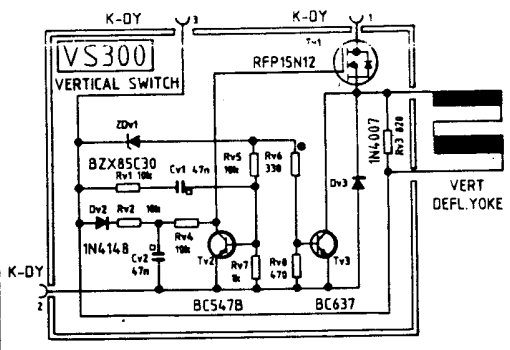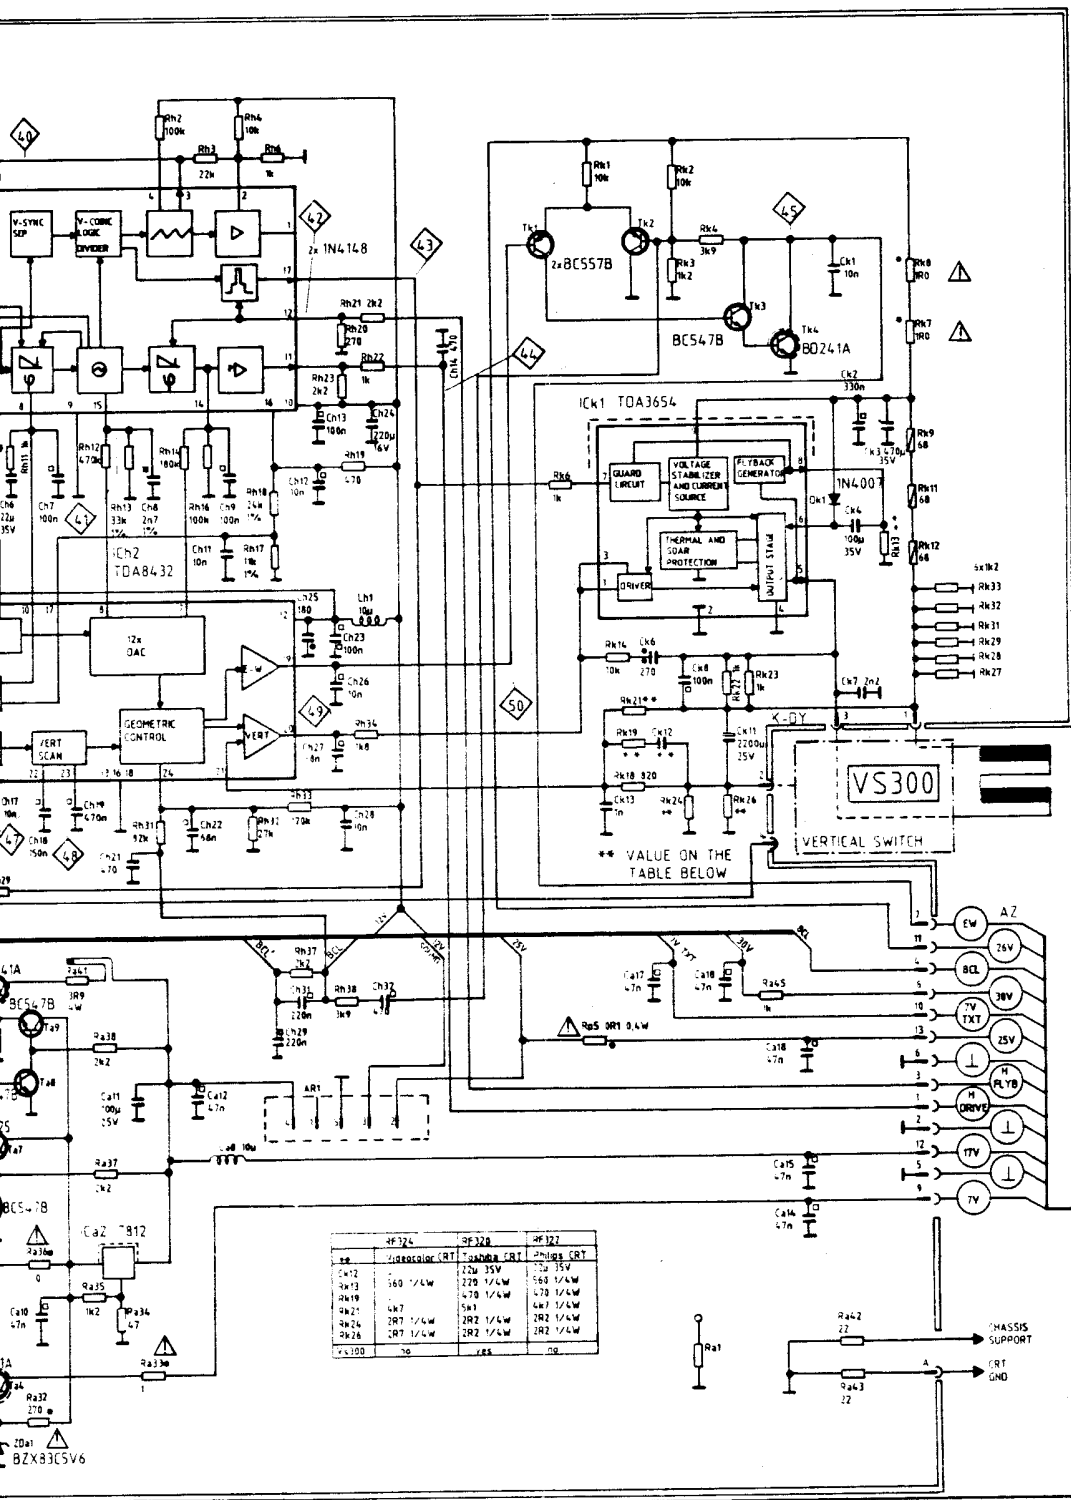

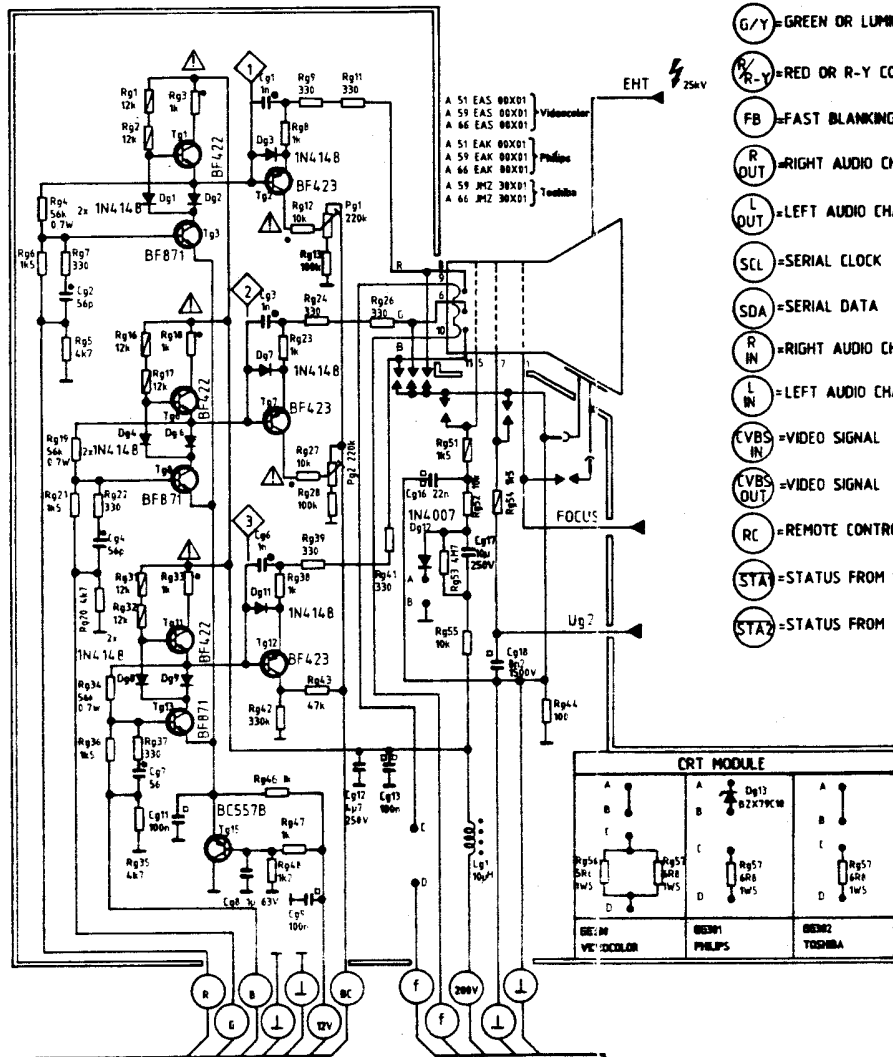




- (B/Y) = BLUE OR B-Y COLOUR DIFFERENCE SIGNAL
- (G/Y) = GREEN OR LUMINANCE SIGNAL
- (R/Y) = RED OR R-Y COLOUR DIFFERENCE SIGNAL
- (FB) = FAST BLANKING SIGNAL
- (R OUT) = RIGHT AUDIO CHANNEL
- (L OUT) = LEFT AUDIO CHANNEL
- (SCL) = SERIAL CLOCK
- (SDA) = SERIAL DATA
- (R IN) = RIGHT AUDIO CHANNEL
- (L IN) = LEFT AUDIO CHANNEL
- (CVBS IN) = VIDEO SIGNAL
- (CVBS OUT) = VIDEO SIGNAL
- (RC) = REMOTE CONTROL
- (STAT) = STATUS FROM SCART 1
- (STAT2) = STATUS FROM SCART 2

         - (L HP) = LEFT AUDIO
- (R HP) = RIGHT AUDIO
- (SAT OP) = SATELLITE
- (MODE) = MODE INFO
- (MODE 1) = MODE INFO
- (MODE 2) = MODE INFO
- (RGB INV) = RGB INVERT
- (HOLD) = PROCESSOR
- (P-ON) = PICTURE ON
- (S-ON) = SOUND ON
- (BC) = BLACK CURR
- (EW) = EAST-WEST
- (BCL) = BEAM CURR
- (7V TXT) = SUPPLY VO
- (H FLYB) = LINE FLYBA
- (H DRIVE) = DRIVE PULS
- (f) = FILAMENT V




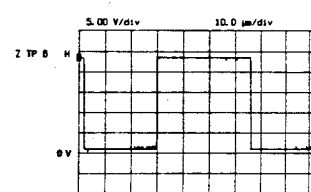
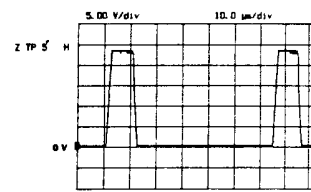
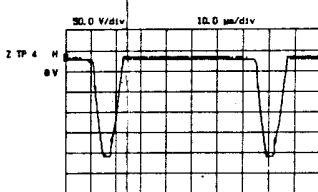
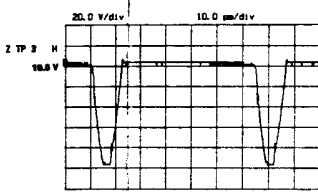
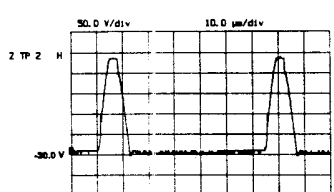
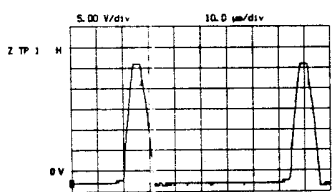
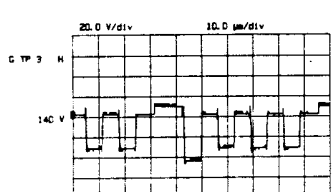
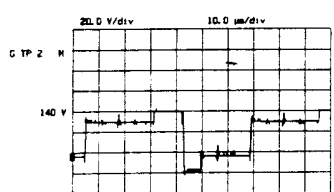
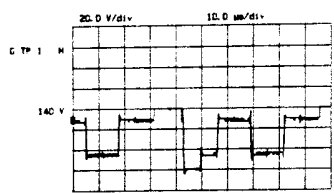


REFERENCE SIGNAL  
AL  
REFERENCE SIGNAL

 
 
 
- (L HP) = LEFT AUDIO CHANNEL FOR HEADPHONES
- (R HP) = RIGHT AUDIO CHANNEL FOR HEADPHONES
- (SAT COP) = SATELLITE COPYING
- (MODE 1) = MODE INFORMATION 1
- (MODE 2) = MODE INFORMATION 2
- (RGB INV) = RGB INVERTING
- (HOLD) = PROCESSOR DISCONNECTING FROM I<sup>2</sup>C-BUS
- (P-ON) = PICTURE ON DRIVING VOLTAGE 12 V
- (S-ON) = SOUND ON DRIVING VOLTAGE 12 V
- (BC) = BLACK CURRENT
- (EW) = EAST-WEST RASTER CORRECTION
- (BCL) = BEAM CURRENT LIMITING VOLTAGE
- (TV TXT) = SUPPLY VOLTAGE FOR TELETEXT MODULE
- (H FLYB) = LINE FLYBACK
- (H DRIVE) = DRIVE PULSES FOR LINE OUTPUT STAGE
- (f) = FILAMENT VOLTAGE FOR CRT

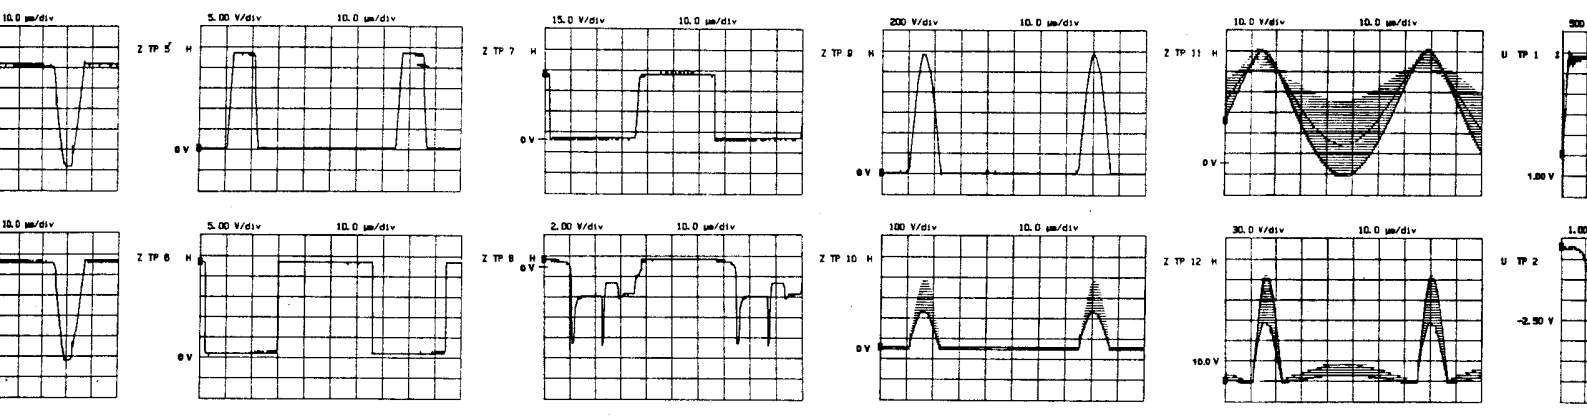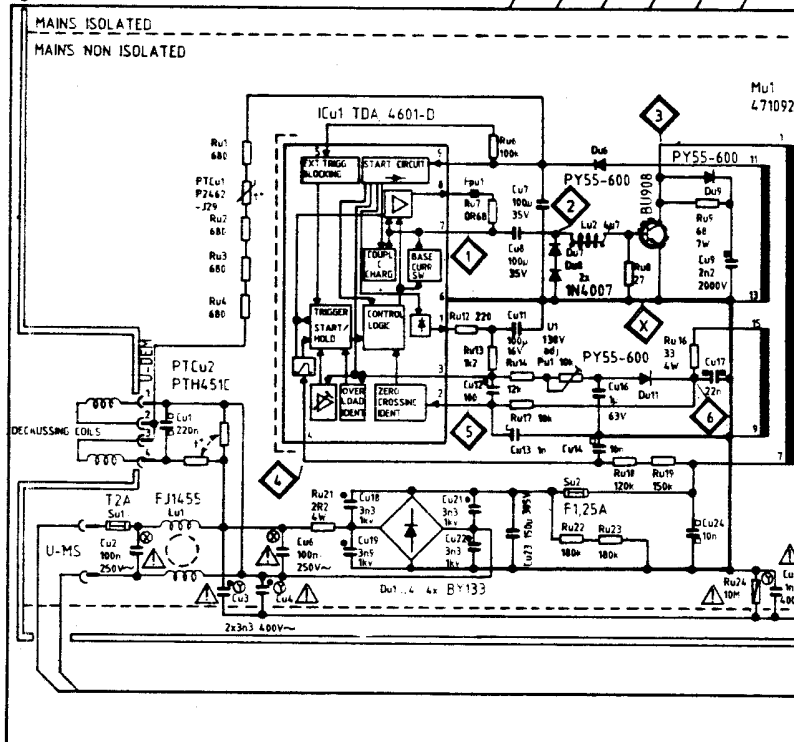
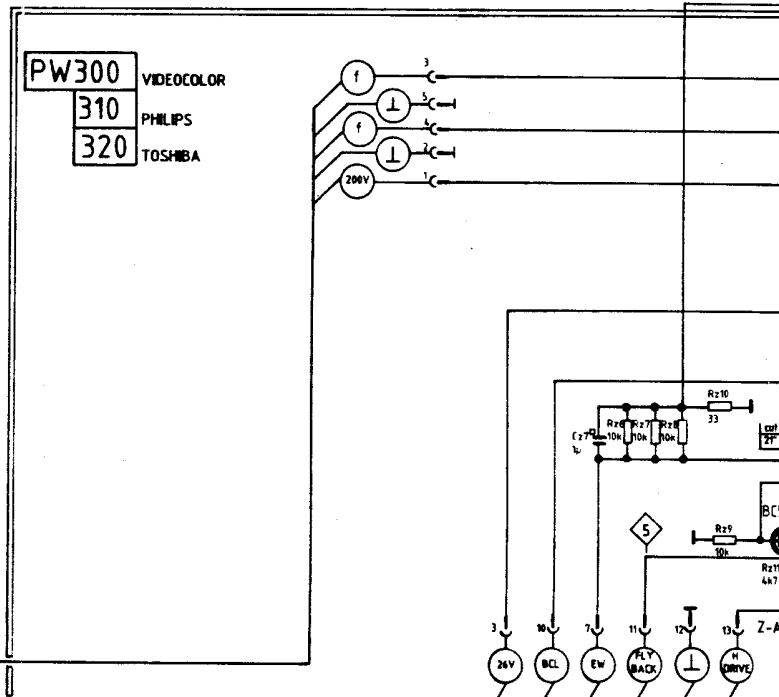


to LL-mod.

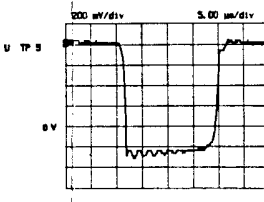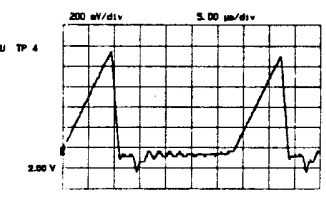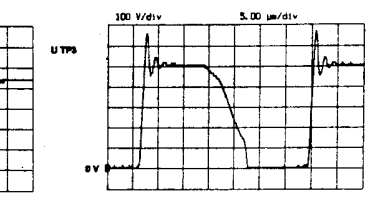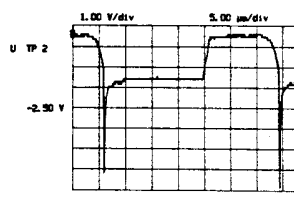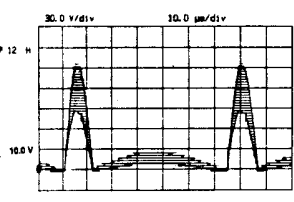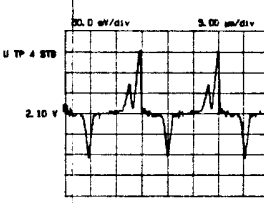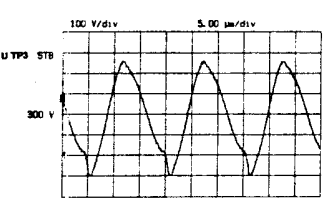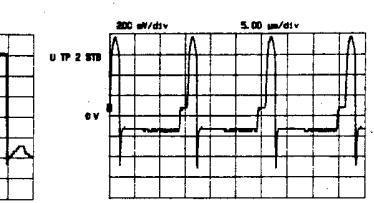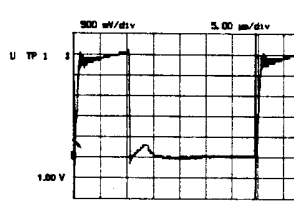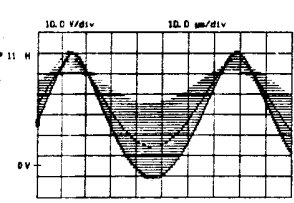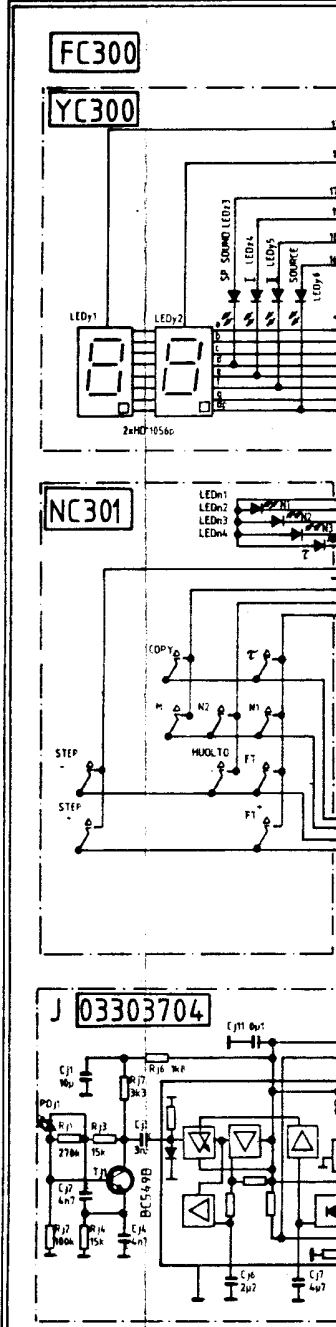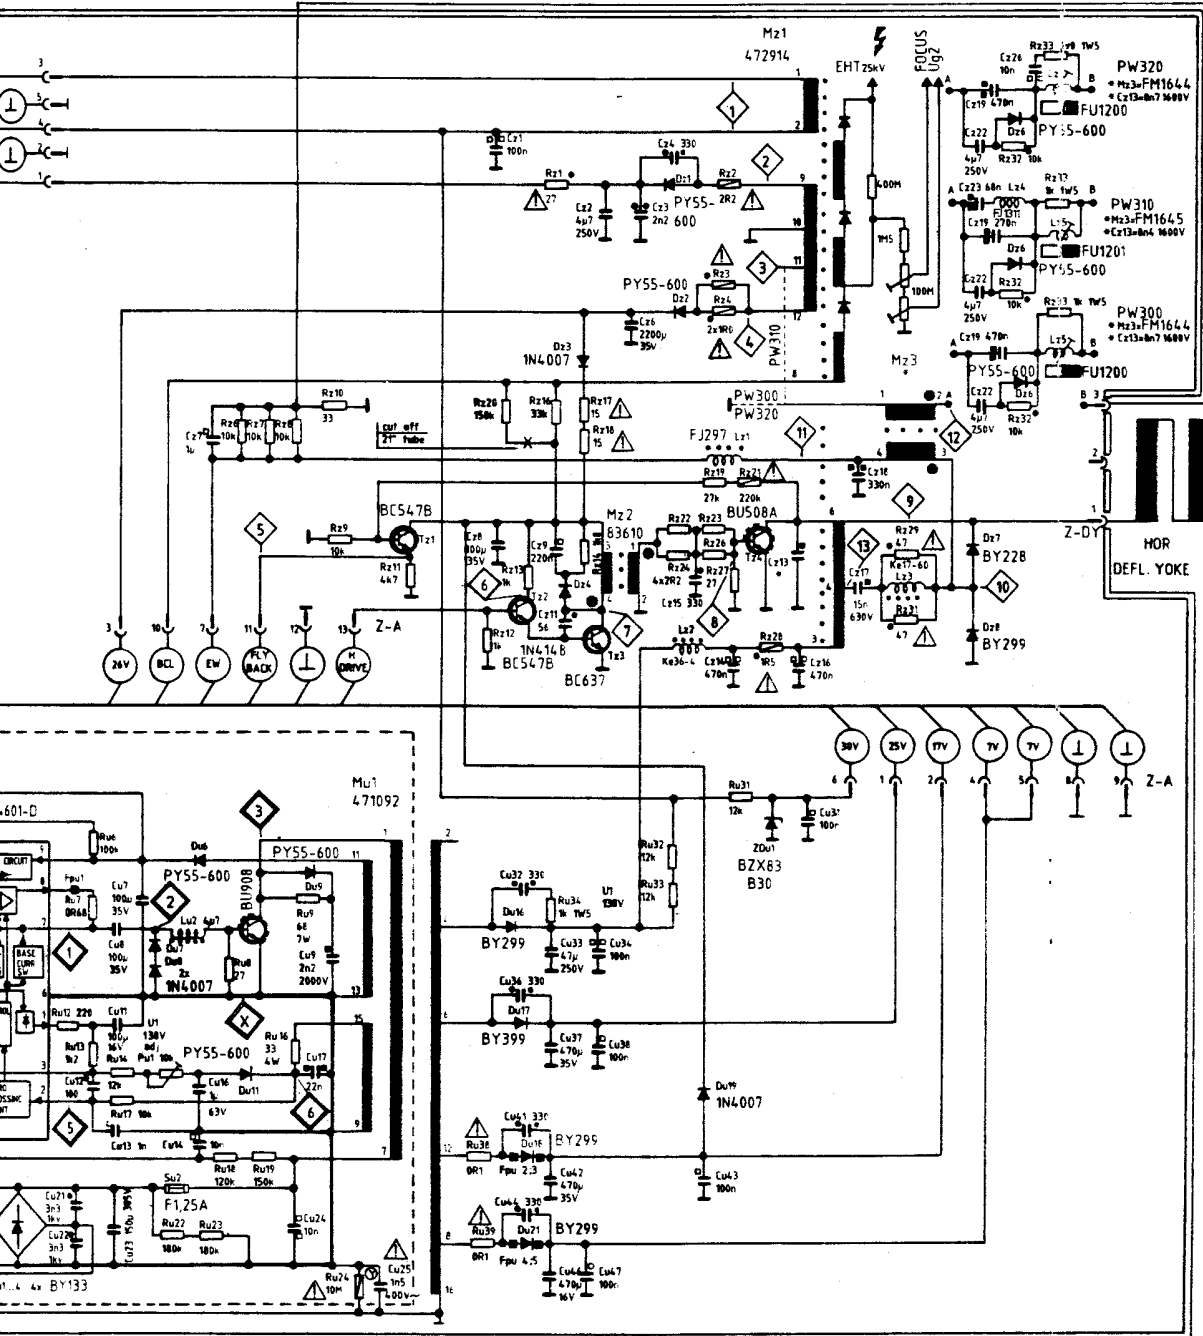            



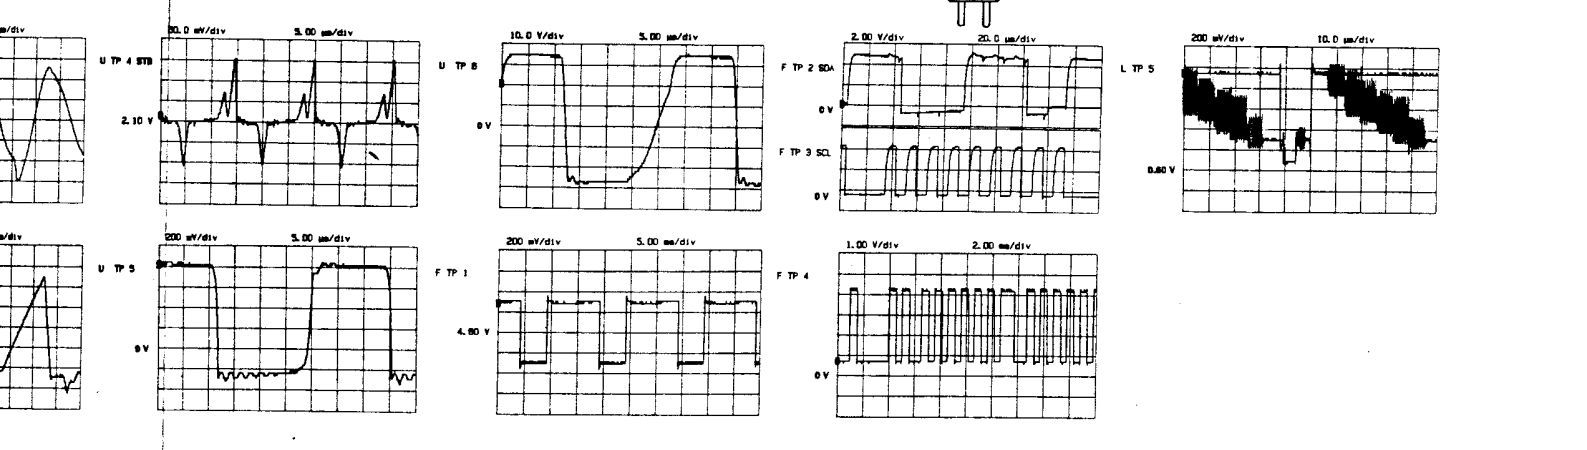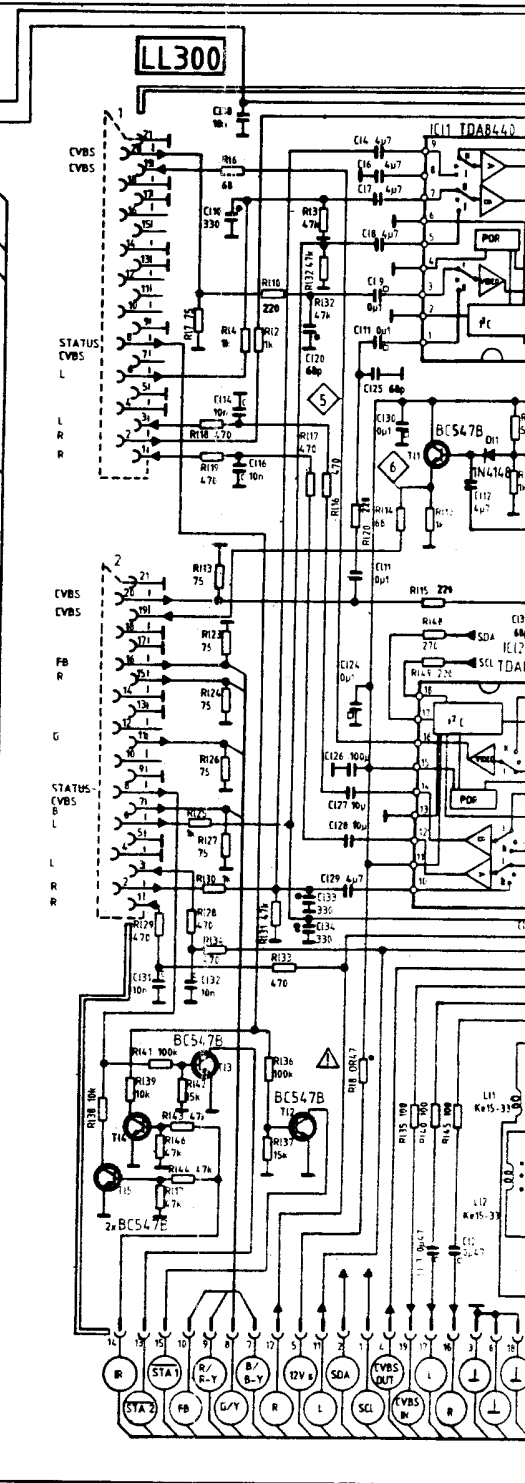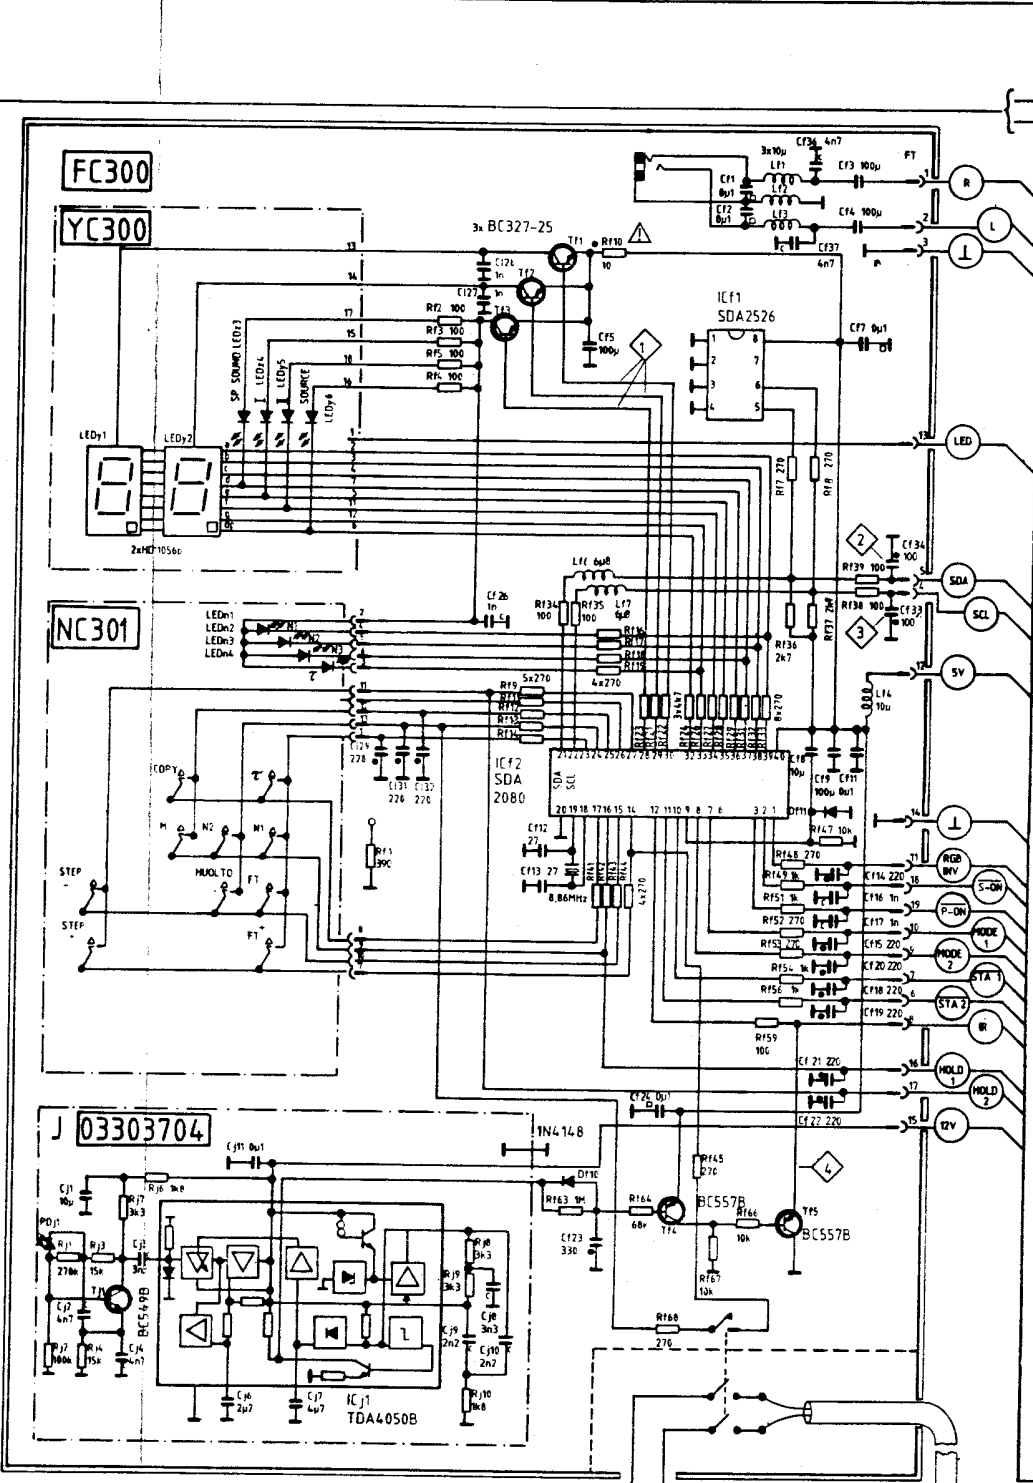   

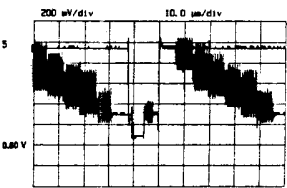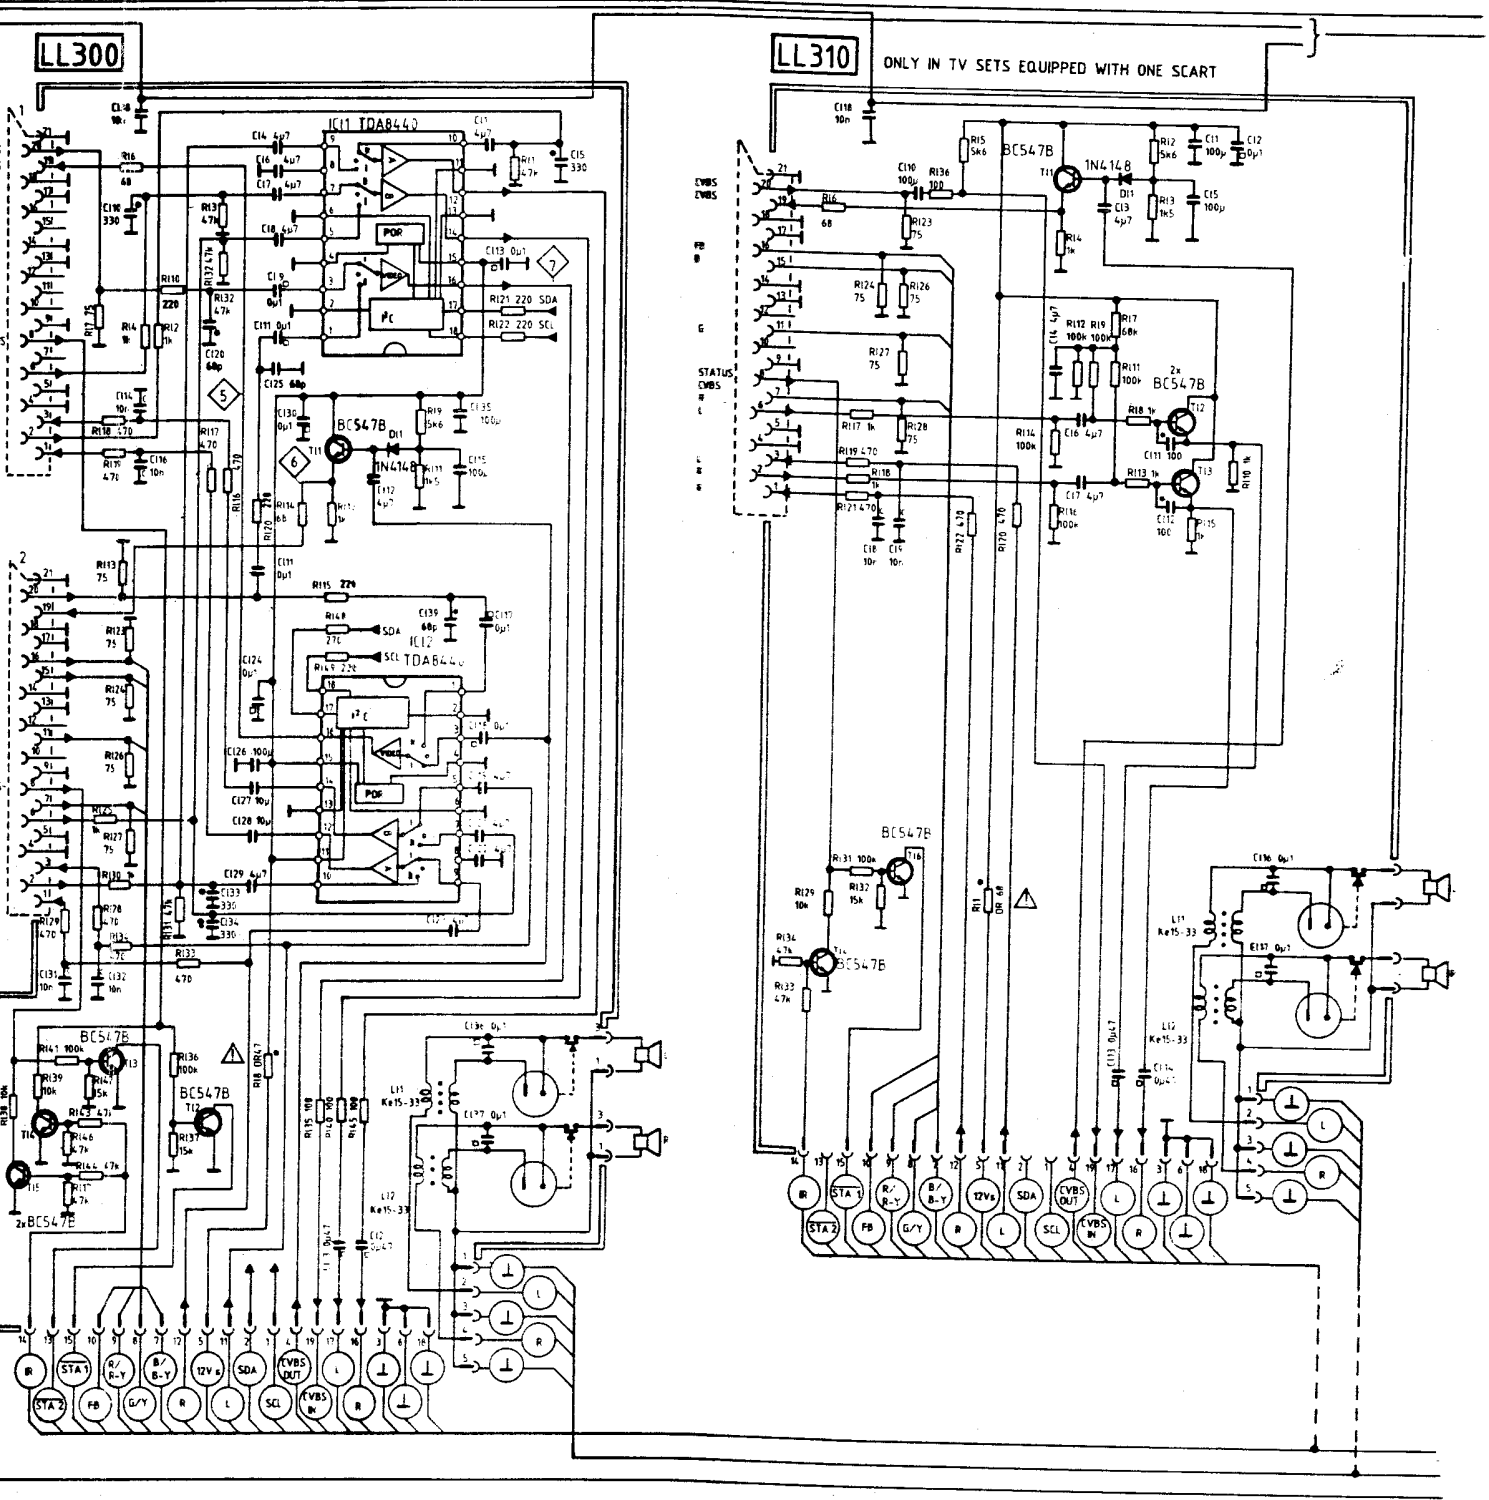  

## RTV servis Horvat

Tel: ++385-31-856-637

Tel/fax: ++385-31-856-139

Mob: 098-788-319

[www.rtv-horvat-dj.hr](http://www.rtv-horvat-dj.hr)