


MEMORY IC REPLACEMENT (Important Notice)

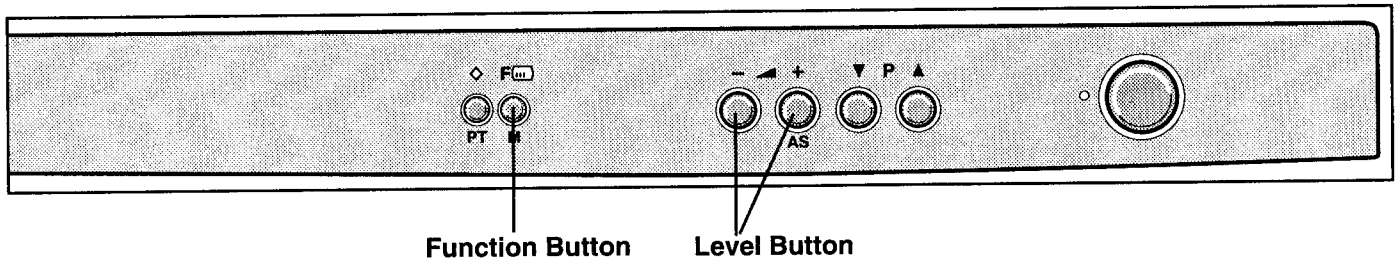

When you replace a memory IC (IC790), it is necessary to initialise the IC as follows.


A. Initialisation of Memory IC

1. When you press and hold the Function button on the TV set and then press the Recall button on the RC transmitter, the following picture will appear on the screen.




2. Confirm SET number of all items is "0" by pressing the Function button.
3. If it is not "0", change to "0" by the Level (+/-) button. (Changing the SET number, automatically memorised.)
4. Press the Recall button to return the TV mode.

For more information, please refer to "special functions" on the instruction manual.

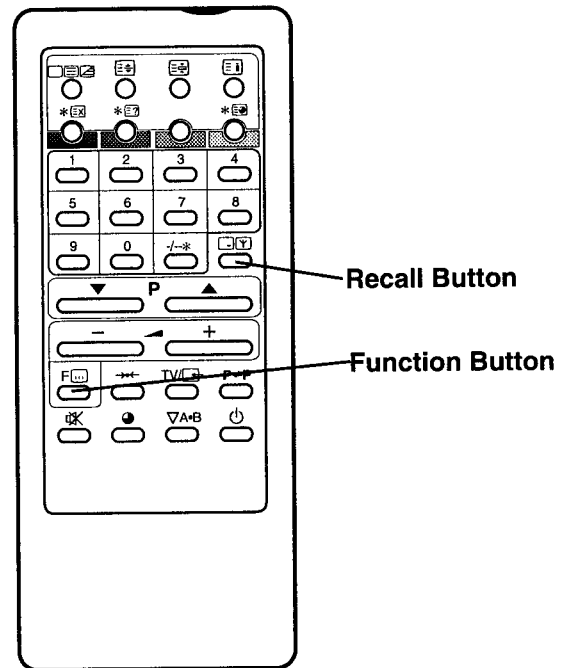

B. Stereo separation setting

1. To enter the SERVICE mode, press and hold Function button on the TV set and then press the Function button on the RC transmitter. The following picture will appear on the screen.

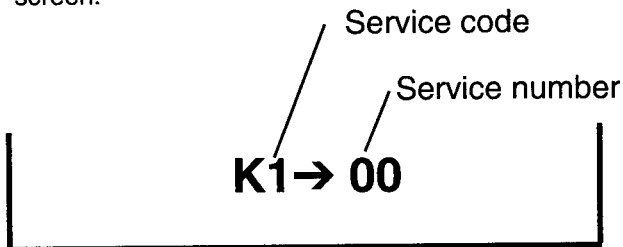

2. Set the service codes and numbers as below;

K1 → 10

K2 → 20

To change the service code, press the Function button.

To change the service number, press the Level (+/-) button.

3. Press the Recall button to return to the TV mode.
4. Confirm the sound quality with stereo signal receiving.