



Names of the Components

[Front View]

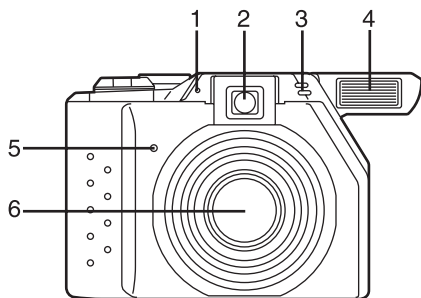


- 1 Flash Sensor
- 2 Optical Finder
- 3 Microphone
- 4 Flash
- 5 Self-timer Indicator
- 6 Lens

[Up View]

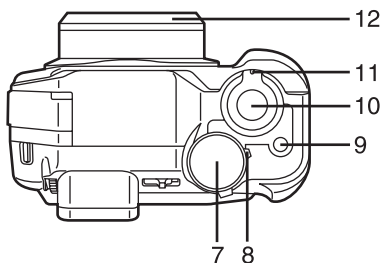

- 7 REC Mode Dial
- 8 Operational Mode Dial
- 9 Flash Mode Button
- 10 Shutter Button
- 11 Zoom Lever
- 12 Lens Ring


[Back View]

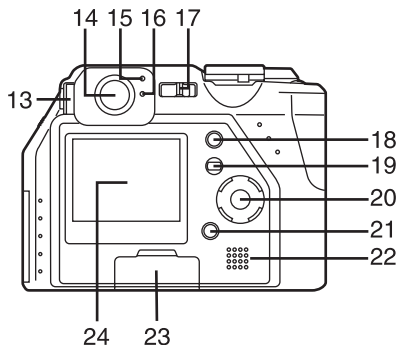

- 13 Diopter Adjustment Dial
- 14 Optical Finder
- 15 Status Indicator
- 16 Flash/Access Indicator
- 17 Power Switch
- 18 DISPLAY Button
- 19 MENU Button
- 20 Cursor (▲/▼/◀/▶) Buttons
- 21 REVIEW/SET Button
- 22 Speaker
- 23 Memory Card Door
- 24 LCD Monitor


[Left View]

- 25 Flash Open Lever
- 26 A/V OUT Socket
- 27 DC IN Socket
- 28 USB Socket (5pin)
- 29 Terminal Door

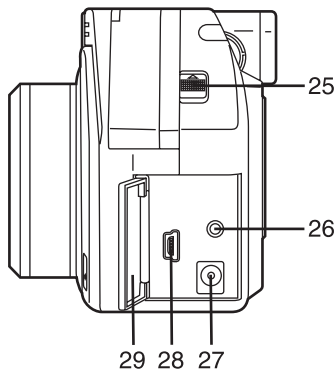

[Right View]

- 30 Strap Hole

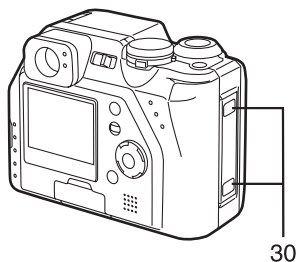

[Bottom View]

- 31 Battery Door Open/Lock Lever
- 32 Battery Door
- 33 Tripod Receptacle

