


Remote control

The remote control handset supplied with your DVD recorder is a 3 in 1 type remote control. It allows 3 devices to be controlled: your DVD recorder, a television set and a satellite or cable receiver. Thus you have remote control of all these devices by using the 3 modes: DVD, TV or SAT.CABLE that are accessed by 3 corresponding keys. This page describes the keys that control your DVD recorder (in DVD mode).

Note: the functions described below depend on the discs and/or the files read.

For description of the TV and SAT.CABLE functions, see the following page.

Description of keys in DVD mode

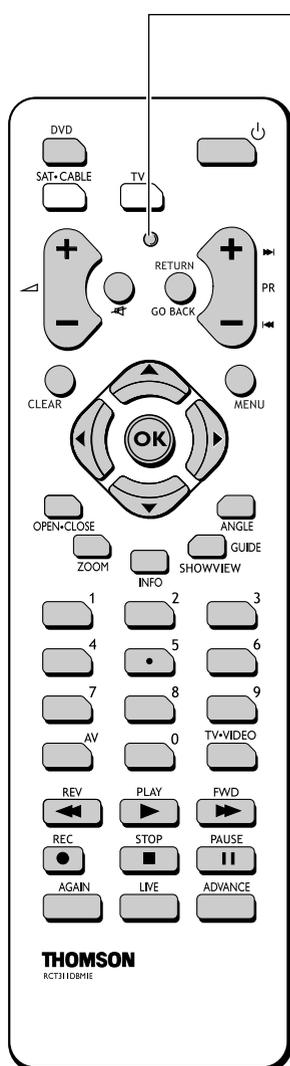


Signal lamp - this shows the status of the remote control when it is being used to program or to control another device. It also indicates that the batteries level is low by flashing several times when a key is pressed.

-  Switches the DVD recorder on or off.
- DVD Sets the remote control unit in DVD mode (by pressing once), enabling you to control your DVD recorder.
- PR   Skips forward or backward a chapter (DVD) or track (CD).
- RETURN Returns to the previous menu.
- MENU Displays the DVD disc menu while a disc is being played.
- CLEAR Removes the menu or banner showing on the TV screen.
- OPEN-CLOSE Opens and closes the disc holder of the DVD recorder.
- ZOOM Enlarges the picture during playback, slow motion or pause mode.
- INFO Displays the DVD recorder information banner on the TV screen while a disc is being played.
- SHOWVIEW Display programming screen with guide number.
- ANGLE To access a choice of angles of an image if available on the disc. (JPEG) To rotate an image through 90°.
- 0 to 9 Keys used to enter information such as a chapter or track number; or to make choices from menus.
- TV-VIDEO Passes DVD images to the television set connected to AVI.
- REV Fast backward while a disc is being played.
- PLAY Plays a disc.
- FWD Fast forward while a disc is being played.
- REC To record the TV program watched onto the recordable disc (DVD+R / DVD+RW).
- STOP Stops disc playing or recording and displays the DVD player menu.
- PAUSE Pause during playback (CD) or pause on an image (DVD).
- AGAIN Skips backward – each press replays the last seconds during DVD playback.
- ADVANCE To skip forward approximately 30 seconds (DVD) or to play another track (audio CD).

Using the remote control handset to control your television and satellite or cable receiver


The DVD recorder remote control handset is a 3 in 1 device that allows you to control the operation of 3 devices: your DVD recorder, a television set, or satellite receiver. This page describes the keys that control your television set and your satellite or cable receiver if they have the same functions.

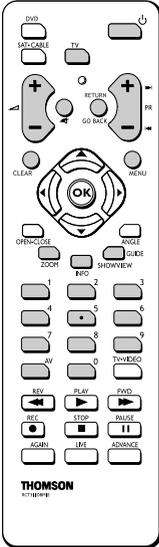

Controlling a TV set

- TV Sets the remote control unit in TV mode (by pressing once) and enables you then to control your TV set.
- Switches the TV set on or off.
- Volume control.
- Switches sound off or on again.
- PR Switches channel or selects an AV socket.
- AV Selects an AV socket.
- 0 to 9 Keys enter digital values or change channel.
- MENU Displays main TV set menu.
- RETURN Returns to the previous menu.
- CLEAR Removes menu or other information displayed on the screen.

Note: colour keys enable one to use the teletext function on THOMSON TV sets.

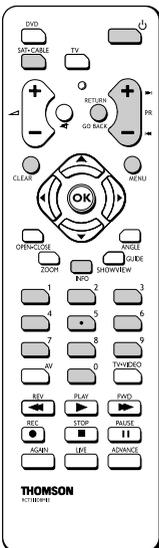

Controlling a satellite or cable receiver

- SAT-CABLE Places the remote control in the SAT-CABLE mode (press once) and then enables you to control your satellite or cable receiver.
- To turn on or off the satellite or cable receiver.
- PR Switches channel.
- 0 to 9 Keys enter digital values or change channel.
- MENU To display the main menu of the satellite or cable receiver.
- RETURN Returns to the previous menu.
- CLEAR Removes menu or other information displayed on the screen.


Note: the colour keys allow access to the same functions as colour keys on the remote control.

Remote control - Code A-B

With certain devices (combined TV/DVD or other DVD player) it may happen that your DVD recorder controls the DVD player of the other device. In this case you can adjust your remote control and the DVD recorder on another code known as code B (adjustment shown on page 58).

Programming the remote control


If your remote control does not control your satellite receiver (or cable) or your television set you will need to configure it using one of the two methods proposed: automatic code search or manual programming.

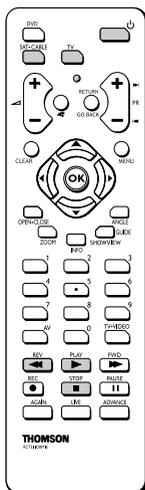

Automatic code search

This method can be used to automatically find the most appropriate code for your appliance.

1. Switch on the appliance you wish to use the remote control with.
2. Press the relevant button for this appliance on the remote control, and while holding this button down, press the **⏻** standby button until the remote control light comes on. Release the two buttons.
3. Point the remote control at the appliance and press **PLAY**. Wait until the light stops flashing. If the appliance has not gone into standby mode after five seconds, press the **PLAY** button again to continue the search for the next set of codes. Repeat this operation until the appliance goes into standby mode. There are 20 sets of codes.
4. When the appliance goes into standby mode, press the **⏻** button on the front to switch it on again. Then press the **REV** button to put it back in standby mode, and if necessary, keep pressing until the appliance goes into standby.
5. Press the **STOP** button and hold it down until the remote control light goes off.

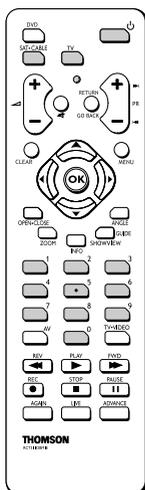

Manual programming

This method involves carrying out a manual search for the codes to be used for controlling your other appliances.

1. Switch on the appliance you wish to use the remote control with.
2. Press the corresponding key on the remote control, while holding it pressed down, enter one of the codes corresponding to the make of the device (Thomson Group codes on the bottom left of this page, other brands can be found in the "Related documents" leaflet).

If the remote control light flashes you have entered the wrong code or it is not possible to program the remote control.

3. Point the remote control at the appliance and press the relevant button. Press the **⏻** standby button. If the appliance does not go into standby mode, try another code.

Depending on the year of manufacture and the type of appliance, some functions may not be available.

Certain codes may cover more functions than others. Test the functions you can control and, if appropriate, try other codes.


Note here the code(s) which work best.

SAT Codes: 5000, 5001, 5031, 5037, 5043, 5064, 5065, 5066, 5058, 5084.

TV Codes: 1000, 1001, 1002, 1016, 1024, 1033, 1041, 1051, 1089, 1096, 1127, 1128, 1129, 1130, 1134, 1135, 1148, 1151.

TV			
SAT-CABLE			

 *Note: when you **change** the remote control's **batteries**, remember to **reprogram** it.*



TV

Admiral.....	1016, 1092, 1120, 1128
Aiko.....	1088, 1089, 1116, 1149, 1150
Akai.....	1029, 1088, 1089, 1097, 1103, 1108, 1116, 1120, 1136, 1144, 1150, 1157
Akura.....	1030, 1039, 1088, 1089, 1097, 1100, 1141
Alba.....	1003, 1030, 1032, 1058, 1088, 1089, 1097, 1111, 1149
Amplivision.....	1062, 1131, 1150, 1152
Amstrad.....	1003, 1023, 1054, 1058, 1064, 1088, 1089, 1097, 1120, 1141, 1144
Anglo.....	1088
Anitech.....	1003, 1012, 1015, 1088, 1089, 1120
Ansonic.....	1088, 1089
Apollo.....	1155
Arcam.....	1131, 1149, 1150
Aristona.....	1089, 1157
ASA.....	1016, 1018, 1047
Asberg.....	1015, 1089
Astra.....	1120
Atlantic.....	1028, 1089, 1149, 1152
Atori.....	1088
Audiosonic.....	1089, 1097, 1101, 1116, 1120, 1150
AudioTon.....	1120, 1150
Autovox.....	1015, 1016, 1028, 1033, 1047, 1145, 1150, 1153
Awa.....	1120
Baird.....	1113, 1148, 1150
Bang & Olufsen.....	1016
Barco.....	1147
Baur.....	1004, 1075, 1077, 1081, 1083, 1089, 1096, 1135, 1145, 1153
Beko.....	1057, 1073, 1089
Beon.....	1089
Best.....	1101
Binatone.....	1131, 1150
Blaupunkt.....	1025, 1027, 1037, 1048, 1081, 1083, 1096, 1117
Boots.....	1131, 1150
BPL.....	1040, 1089, 1100
Brandt.....	1051, 1129, 1130
Brionvega.....	1016, 1089
Bruns.....	1016
BSR.....	1046
BTC.....	1030, 1097
Bush.....	1003, 1030, 1032, 1040, 1046, 1055, 1058, 1060, 1079, 1088, 1089, 1097, 1100, 1111, 1135, 1140, 1147, 1150, 1153
Cascade.....	1003, 1088, 1089
Cathay.....	1089
Centurion.....	1089
Century.....	1016
CGE.....	1015, 1120, 1147
Cimline.....	1003, 1032, 1088, 1097
Clatronic.....	1015, 1057, 1088, 1089, 1097, 1116, 1150, 1152
Condor.....	1057, 1088, 1089, 1100, 1120, 1149, 1152
Contec.....	1003, 1088, 1120, 1149
Continental Edison.....	1051, 1124, 1129, 1130
Cosmel.....	1088, 1101, 1120
Crosley.....	1015, 1016, 1134
Crown.....	1003, 1015, 1057, 1059, 1065, 1088, 1089, 1116, 1120
CS Electronics.....	1097, 1116, 1149
Daewoo.....	1003, 1060, 1088, 1089, 1097, 1116, 1120, 1149, 1150, 1156
Dainichi.....	1030, 1097, 1149
Dansai.....	1089, 1149
Daytron.....	1003, 1088
Decca.....	1014, 1035, 1036, 1089, 1126, 1144, 1150
Desmet.....	1089, 1152
Diamond.....	1120
Dixi.....	1003, 1088, 1089
Dual.....	1079, 1089, 1120, 1145, 1150, 1153
Dumont.....	1013, 1016, 1018, 1047, 1134, 1150
Dynatron.....	1089
Elbe.....	1038, 1089, 1097, 1107, 1151
Elektra.....	1100
Elin.....	1018, 1088, 1089, 1120, 1146, 1149, 1153
Elite.....	1030, 1089, 1097
Elta.....	1003, 1088, 1120
Emerson.....	1016, 1089
Erres.....	1005, 1089
Euromphon.....	1089, 1133, 1144, 1150
Expert.....	1028
Fenner.....	1088, 1120
Ferguson.....	1024, 1041, 1151
Fidelity.....	1089, 1140, 1145, 1149
Finlandia.....	1029, 1139, 1140
Finlux.....	1013, 1014, 1016, 1018, 1019, 1047, 1089, 1095, 1134, 1144, 1150
Firstline.....	1003, 1032, 1046, 1049, 1080, 1088, 1089, 1111, 1131, 1149, 1150, 1151, 1153
Fisher.....	1018, 1029, 1057, 1084, 1131, 1145, 1150, 1153
Formenti.....	1016, 1134, 1147, 1149, 1152
Frontech.....	1039, 1088, 1120, 1128, 1140, 1142, 1153
Fujitsu.....	1014, 1028, 1116, 1150
Funai.....	1039, 1046, 1095, 1120
Galaxi.....	1089
Galaxis.....	1089
GBC.....	1088, 1097, 1116, 1120, 1147
GEC.....	1008, 1014, 1089, 1131, 1144, 1148, 1150, 1153
Geloso.....	1003, 1088, 1116, 1120, 1134
Genexxa.....	1030, 1089, 1097, 1128
GoldHand.....	1120
Goldline.....	1089
GoldStar.....	1044, 1088, 1089, 1120, 1131, 1140, 1149, 1150
Goodmans.....	1014, 1032, 1058, 1060, 1088, 1089, 1095, 1103, 1120, 1131, 1150, 1156, 1157
Gorenje.....	1057
GPM.....	1030, 1097, 1116, 1120
Graetz.....	1128, 1134, 1148
Granada.....	1010, 1014, 1029, 1053, 1089, 1093, 1131, 1136, 1139, 1140, 1144, 1150, 1154, 1155
Grandin.....	1040, 1100, 1114
Grundig.....	1013, 1025, 1027, 1033, 1081, 1083, 1089, 1096, 1114, 1115, 1116, 1117, 1124, 1143, 1157
Hanseatic.....	1067, 1085, 1088, 1089, 1100, 1115, 1145, 1150, 1152, 1153
Hantarex.....	1088, 1089, 1120, 1144
Harwood.....	1088, 1089
HCM.....	1003, 1040, 1064, 1088, 1089, 1097, 1100, 1120, 1150
Hemmermann.....	1153
Hinari.....	1003, 1030, 1032, 1063, 1088, 1089, 1095, 1097, 1120
Hisawa.....	1040, 1062, 1070, 1097, 1100, 1102
Hitachi.....	1008, 1009, 1019, 1031, 1069, 1086, 1089, 1090, 1094, 1098, 1104, 1119, 1122, 1128, 1129, 1130, 1131, 1134, 1135, 1137, 1140, 1146, 1148, 1150, 1153, 1154, 1155, 1156
Hornophone.....	1089
Hoshai.....	1097, 1102, 1116
Huanyu.....	1060, 1149
Hyper.....	1088, 1116, 1120, 1149, 1150
ICE.....	1039, 1058, 1088, 1089, 1097, 1116, 1131, 1149, 1150
Imperial.....	1015, 1057, 1065, 1089, 1147, 1153
Indesit.....	1033
Ingersol.....	1088
Inno Hit.....	1014, 1078, 1088, 1089, 1097, 1116, 1120, 1144, 1150
Interbuy.....	1012, 1088



Interfunk.....	1077, 1089, 1128, 1148
Intervision.....	1012, 1039, 1089, 1097, 1100, 1102, 1131, 1150
IRradio.....	1088, 1089, 1097, 1116, 1120
ITC.....	1147, 1150
ITS.....	1058, 1089, 1097, 1100, 1149
ITT.....	1095, 1103, 1128, 1134, 1136, 1145, 1146, 1148, 1153, 1155
ITV.....	1089
JVC.....	1011, 1024, 1026, 1058, 1091, 1097, 1106, 1110, 1112
Kaisui.....	1003, 1030, 1040, 1088, 1089, 1097, 1100, 1102, 1116, 1120, 1131, 1149, 1150
Kamp.....	1149
Kapsch.....	1018, 1028, 1128, 1148
Karcher.....	1089, 1100, 1107, 1120
Kathrein.....	1085
Kendo.....	1032, 1089, 1107, 1120
Kennedy.....	1147
Kneissel.....	1038, 1068, 1089, 1151
Kolster.....	1089
Konka.....	1097
Korting.....	1016, 1042, 1152
Kosmos.....	1089
Lenco.....	1018, 1088
Lenoir.....	1088, 1120
LG.....	1088, 1089, 1149, 1150
Liesenkotter.....	1089
Lloyds.....	1088
Loewe.....	1016, 1043, 1077, 1089, 1127
Luma.....	1028, 1088, 1089, 1140
Lumatron.....	1089, 1150
Luxor.....	1033, 1103, 1105, 1113, 1135, 1137, 1138, 1140, 1153, 1154
M Electronic.....	1003, 1012, 1018, 1019, 1041, 1060, 1072, 1088, 1089, 1103, 1105, 1128, 1131, 1149, 1150
Magnadyne.....	1016, 1120, 1133, 1134, 1144, 1145
Magnafon.....	1015, 1144, 1149
Marantz.....	1085, 1089
Matsui.....	1003, 1007, 1014, 1023, 1029, 1032, 1046, 1054, 1055, 1058, 1088, 1089, 1096, 1102, 1120, 1131, 1140, 1143, 1144, 1145, 1150, 1153, 1157
Medion.....	1089, 1111
Memorex.....	1003, 1088
Metz.....	1016, 1056, 1081, 1096, 1115
MGA.....	1116
Minerva.....	1013, 1033, 1081, 1083, 1096, 1143
Minoka.....	1064, 1089, 1141
Mitsubishi.....	1006, 1016, 1020, 1033, 1054, 1077, 1081, 1089, 1093, 1120, 1121
Mivar.....	1044, 1045, 1078, 1133, 1144, 1149
MTC.....	1077, 1135, 1153
Multitech.....	1003, 1015, 1088, 1089, 1116, 1120, 1140, 1149, 1150, 1153
Murphy.....	1018, 1149
National.....	1033
NEC.....	1022, 1120, 1152
Neckermann.....	1016, 1025, 1075, 1083, 1085, 1089, 1115, 1135, 1140, 1150, 1153, 1157
NEI.....	1052, 1089, 1101, 1142
Nesco.....	1095
Network.....	1101
Neufunk.....	1088, 1089, 1157
Nikkai.....	1007, 1014, 1030, 1039, 1052, 1088, 1089, 1097, 1101, 1149, 1150
NOBLEX.....	1120
Nokia.....	1072, 1103, 1105, 1108, 1146, 1153, 1155
Nordmende.....	1096
Novatronic.....	1089
Oceanic.....	1113, 1128, 1134
Okano.....	1089
Onwa.....	1097
Orbit.....	1089
Orion.....	1032, 1046, 1049, 1055, 1088, 1089, 1115, 1144, 1145, 1152
Osaki.....	1014, 1030, 1039, 1064, 1089, 1097, 1131, 1150
Oso.....	1030, 1097
Osume.....	1014, 1021, 1097
Otto Versand.....	1004, 1025, 1032, 1075, 1077, 1081, 1083, 1085, 1089, 1092, 1096, 1115, 1120, 1131, 1134, 1135, 1147, 1150, 1152, 1153, 1157
Pael.....	1149
Palladium.....	1057, 1065, 1089, 1140, 1150, 1153, 1157
Panasonic.....	1033, 1037, 1056, 1087, 1089, 1099, 1109, 1115, 1118, 1128, 1134, 1148
Panavision.....	1089
Pathe Cinema.....	1147, 1149, 1151, 1152, 1153
Pathe Marconi.....	1051, 1129, 1130
Perdio.....	1089, 1152
Philco.....	1015, 1016, 1089, 1147
Philips.....	1005, 1008, 1016, 1050, 1060, 1083, 1085, 1089, 1114, 1157
Phoenix.....	1016, 1089, 1149, 1152
Phonola.....	1005, 1016, 1089, 1149, 1157
Pioneer.....	1041, 1089, 1128
Precision.....	1150
Prima.....	1088, 1120
Prinz.....	1153
Profex.....	1003, 1015, 1088, 1120, 1140
Profi-Tronic.....	1089
Proline.....	1049, 1089
Protech.....	1003, 1039, 1052, 1065, 1131, 1142, 1147
Provision.....	1089, 1156
Pye.....	1005, 1089, 1157
Quelle.....	1004, 1013, 1018, 1047, 1075, 1077, 1081, 1083, 1089, 1096, 1120, 1145, 1147, 1150, 1153
Radiola.....	1005, 1089, 1157
Radiomarelli.....	1016, 1089, 1133, 1144
RadioShack.....	1089
Radiotone.....	1088, 1089
Recor.....	1089
Rediffusion.....	1136
Revox.....	1089
Rex.....	1028, 1038, 1039, 1128
RFT.....	1016, 1067
Roadstar.....	1003, 1030, 1039, 1065, 1088, 1097, 1116, 1120
Saba.....	1016, 1041, 1127, 1128, 1129, 1130, 1134, 1148
Sagem.....	1102, 1107
Saisho.....	1003, 1006, 1023, 1032, 1039, 1054, 1088, 1116, 1142, 1144, 1145, 1150
Salora.....	1071, 1113, 1128, 1135, 1137, 1139, 1140, 1146, 1153, 1154
Sambers.....	1015, 1078, 1144
Samsung.....	1003, 1039, 1044, 1057, 1078, 1085, 1088, 1089, 1120, 1125, 1131, 1149, 1150, 1157, 1158
Sansui.....	1089
Sanyo.....	1010, 1014, 1018, 1021, 1029, 1053, 1088, 1113, 1120, 1149, 1150
SBR.....	1005, 1008, 1089, 1157
Schaub Lorenz.....	1134, 1148, 1153
Schneider.....	1030, 1058, 1061, 1089, 1097, 1111, 1116, 1120, 1145, 1150, 1153, 1157
SEG.....	1015, 1039, 1088, 1089, 1093, 1111, 1131, 1147, 1149, 1150
SEI.....	1004, 1016, 1023, 1046, 1089, 1134, 1144, 1145, 1153
Seleco.....	1028, 1038, 1128
Sentra.....	1007, 1088, 1097
Sharp.....	1017, 1091, 1092
Shorai.....	1046, 1095
Siarem.....	1016, 1089, 1096, 1134, 1144
Siemens.....	1021, 1025, 1027, 1081, 1083, 1115, 1134
Sierra.....	1089, 1157
Singer.....	1016, 1120
Sinudyne.....	1004, 1016, 1023, 1032, 1089, 1116, 1134, 1144, 1145, 1153
Skantic.....	1137, 1138, 1154

Codes

Solavox 1128, 1136
Sonitron 1029, 1150
Sonoko 1003, 1088, 1089, 1100, 1116, 1120, 1150
Sonolor 1029, 1128
Sontec 1089
Sony 1004, 1075, 1112, 1123
Star Lite 1088, 1089
Starlite 1120
Stern 1028, 1038, 1128
Sunkai 1032, 1046, 1049, 1055, 1097, 1102
Sunstar 1088, 1089
SuperTech 1088, 1089, 1120, 1149, 1157
Supra 1088, 1120
Susumu 1030
Tandberg 1047, 1101
Tandy 1014, 1030, 1092, 1097, 1128, 1131, 1132, 1150
Tashiko 1008, 1131, 1139, 1140, 1149, 1150
Tatung 1014, 1035, 1036, 1089, 1131, 1144, 1150
Teac 1089, 1102
Tec 1088, 1101, 1120, 1131, 1147, 1150
Technics 1037, 1087
Televia 1051
Telecor 1089, 1097, 1150
Telefunken 1089
Telegazi 1089, 1097
Telemeister 1089, 1152
Telesonic 1089
Telestar 1089
Teletech 1003, 1088, 1089, 1101
Teleton 1028, 1131, 1135, 1140, 1150, 1153
Televideon 1149, 1152
Tensai 1018, 1030, 1046, 1088, 1089, 1097, 1116, 1120, 1150, 1152
Texet 1030, 1088, 1150
Thomson 1000, 1001, 1002, 1033, 1041, 1051, 1089, 1129, 1130, 1135
Thorn 1007, 1014, 1018, 1024, 1026, 1075, 1077, 1081, 1082, 1089, 1113, 1115, 1151, 1156
Toshiba 1007, 1013, 1034, 1076, 1082
Towada 1147, 1153
Trident 1150
Tristar 1097
Triumph 1023, 1034, 1089, 1144, 1157
Uher 1028, 1089, 1152
Ultra 1026
Ultravox 1089, 1136, 1149
Universum 1018, 1019, 1039, 1057, 1066, 1074, 1081, 1089, 1096, 1101, 1103, 1105, 1108, 1115, 1120, 1147, 1150, 1153, 1155
Univox 1089, 1101, 1151
Vestel 1089, 1150
VideoSystem 1089
Videoton 1154
Visiola 1149
Vision 1089, 1152
Vortec 1089
Voxson 1016, 1089, 1128
Waltham 1089, 1131, 1137, 1150, 1154
Watson 1089, 1097, 1152
Watt Radio 1145, 1147, 1149, 1153
Vega 1016, 1089
Weltblick 1089, 1152
White Westinghouse 1089, 1101, 1149, 1152
Windstar 1100
Yoko 1039, 1088, 1089, 1097, 1120, 1131, 1142, 1150
Yorx 1097, 1116, 1120
Zanussi 1028, 1140, 1150

SAT

AB Sat 5073
Akai 5082
Alba 5057, 5084
Allsat 5031, 5037, 5082
Alltech 5060
Alpha 5082
Altai 5046
Ampere 5046
Amstrad 5040, 5046, 5061, 5063, 5067, 5083
Ankaro 5038, 5041, 5085
Antron 5037, 5057
Arcon 5065
Armstrong 5082
ASA 5047
Asat 5082
AST 5042
Astra 5044, 5051
Astro 5035, 5057, 5085, 5086
AudioTon 5057
Best 5085
Blaupunkt 5035
Brain Wave 5043, 5065
BT Satellite 5066
Bush 5031, 5037, 5084
Cambridge 5062
Canal Satellite 5087
Channel Master 5084
CityCom 5071
Clatronix 5043
Comtec 5041, 5045
Condor 5085
Conrad 5054, 5055, 5085
Contec 5045, 5055
Dansat 5031, 5037
D-Box 5076
DNR 5065
DNT 5046, 5082
Echostar 5046, 5075, 5087
Einhell 5040, 5041
Elsat 5063
Elta 5082, 5085
Emme Esse 5075, 5085
Europa 5038, 5055, 5082
Eurosky 5085
Eurostar 5077
Ferguson 5031, 5037, 5058
Fidelity 5040, 5061
Finlux 5049, 5054
Fracarro 5075
Freesat 5060
FTE 5055, 5062, 5085
Fuba 5046, 5085
Galaxis 5041, 5045, 5051, 5074, 5085
Grandin 5032
Grundig 5034, 5035, 5068, 5070, 5083
G-Sat 5037
Hanseatic 5056
Hinari 5037, 5084
Hirschmann 5035, 5046, 5047, 5048, 5050, 5054
Hisawa 5043
Huth 5038, 5041, 5043, 5044, 5045, 5055
Intervision 5059
ITT/Nokia 5047, 5054, 5076
Johansson 5043
Kathrein 5035, 5050, 5057, 5071, 5079, 5082, 5086
Kosmos 5050
KR 5057, 5060
Kreiselmeyer 5035



Kyostar	5057
Lasat	5045, 5062, 5085
Lemon.....	5065
Lenco.....	5038, 5051, 5065, 5085
Lexus.....	5082
Lorenzen.....	5038, 5065, 5067
Luxor	5054, 5076, 5083
Manata	5066
Manhattan	5066
Mascom	5050
Maspro.....	5033, 5035, 5060, 5065, 5068
Matsui	5035, 5066, 5084
Mediabox.....	5087
Mediasat.....	5051, 5087
Medion	5085
Metronic.....	5032, 5041, 5057, 5071
Metz	5035
Micro Technology.....	5051
Morgan's.....	5055, 5062, 5082
NEC	5036
Network	5037
Neuhaus.....	5038, 5051, 5055, 5065
Neusat.....	5065
Nokia.....	5047, 5054, 5076
Nordmende.....	5043, 5058, 5084
Novis.....	5043
Octagon	5038, 5045, 5057
Ondigital.....	5039, 5080, 5081
Orbitech.....	5052, 5053, 5055
Pace.....	5031, 5037, 5039, 5069
Palcom.....	5084
Panda.....	5031
Philips.....	5035, 5037, 5038, 5055, 5057, 5066, 5068, 5070, 5071, 5079, 5080, 5081, 5082, 5087
Phoenix	5037, 5045
Phonotrend.....	5041, 5074
Pioneer	5087
Predki.....	5043
Premiere.....	5087
Prosat.....	5041, 5059, 5084
Quadral	5041, 5055, 5059, 5066, 5084, 5085
Quelle.....	5040
Radiola.....	5082
Radix	5046, 5060, 5078
Redpoint	5051
RFT.....	5038, 5041, 5052, 5082
Rover	5059
Saba.....	5037, 5058, 5064, 5065, 5066
Sagem.....	5072
Sakura	5045
Satcom.....	5044, 5056
Satelco	5085
Satford	5044
Satline	5059
SatPartner.....	5043
Schneider	5070
Seemann.....	5051, 5085
SEG.....	5043, 5056, 5067, 5085
Seleco	5075
Siemens	5035, 5062
Skardin.....	5051
Skymaster.....	5041, 5056, 5059, 5077
SL	5065
Strong.....	5085
Sunny Sound.....	5085
Sunstar.....	5085
Techniland.....	5044
TechniSat.....	5030, 5052, 5053, 5082
Telasat.....	5056
Teleciel.....	5057
Telefunken.....	5066
Teleka	5046, 5050, 5057, 5065, 5068
Telesat.....	5056
Teletech.....	5077
Thomson.....	5000, 5001, 5058
Tonna	5044
Triad.....	5042
Triasat.....	5049
Triax.....	5049
Uniden.....	5061
Unisat.....	5045, 5082
Universum	5035, 5047, 5061, 5067
Variosat	5035
Vestel	5067
Visiosat	5064
Viva.....	5038
Vortec.....	5039
Wela	5055
Winersat.....	5043
Wisi.....	5035, 5042, 5046, 5055, 5064
World	5043
Zaunkonig.....	5065
Zehnder	5042, 5067, 5071, 5085
CABLE	
Alcatel.....	5025, 5026
BT Cable.....	5004
Cabletime	5007, 5010, 5014, 5019, 5021, 5023
Filmnet Cablecrypt.....	5022
France Telecom.....	5024, 5027, 5029
General Instrument.....	5020
Grundig	5013
Jerrold.....	5002, 5008, 5017, 5020
Macab.....	5024
M-Net.....	5022
Nokia	5015
Philips.....	5024, 5028, 5029
Pioneer	5005
Sagem.....	5016, 5024
Salora.....	5011
Scientific Atlanta.....	5003, 5009
Tele+1	5012, 5022
Telepiu	5022
United Cable.....	5002, 5017
Videoway.....	5006, 5018
Visiopass.....	5024, 5029
Westminster Cable.....	5004