


TX-2170T / TC-2170R

Контроллер пульта ДУ EUR51971, EUR51916

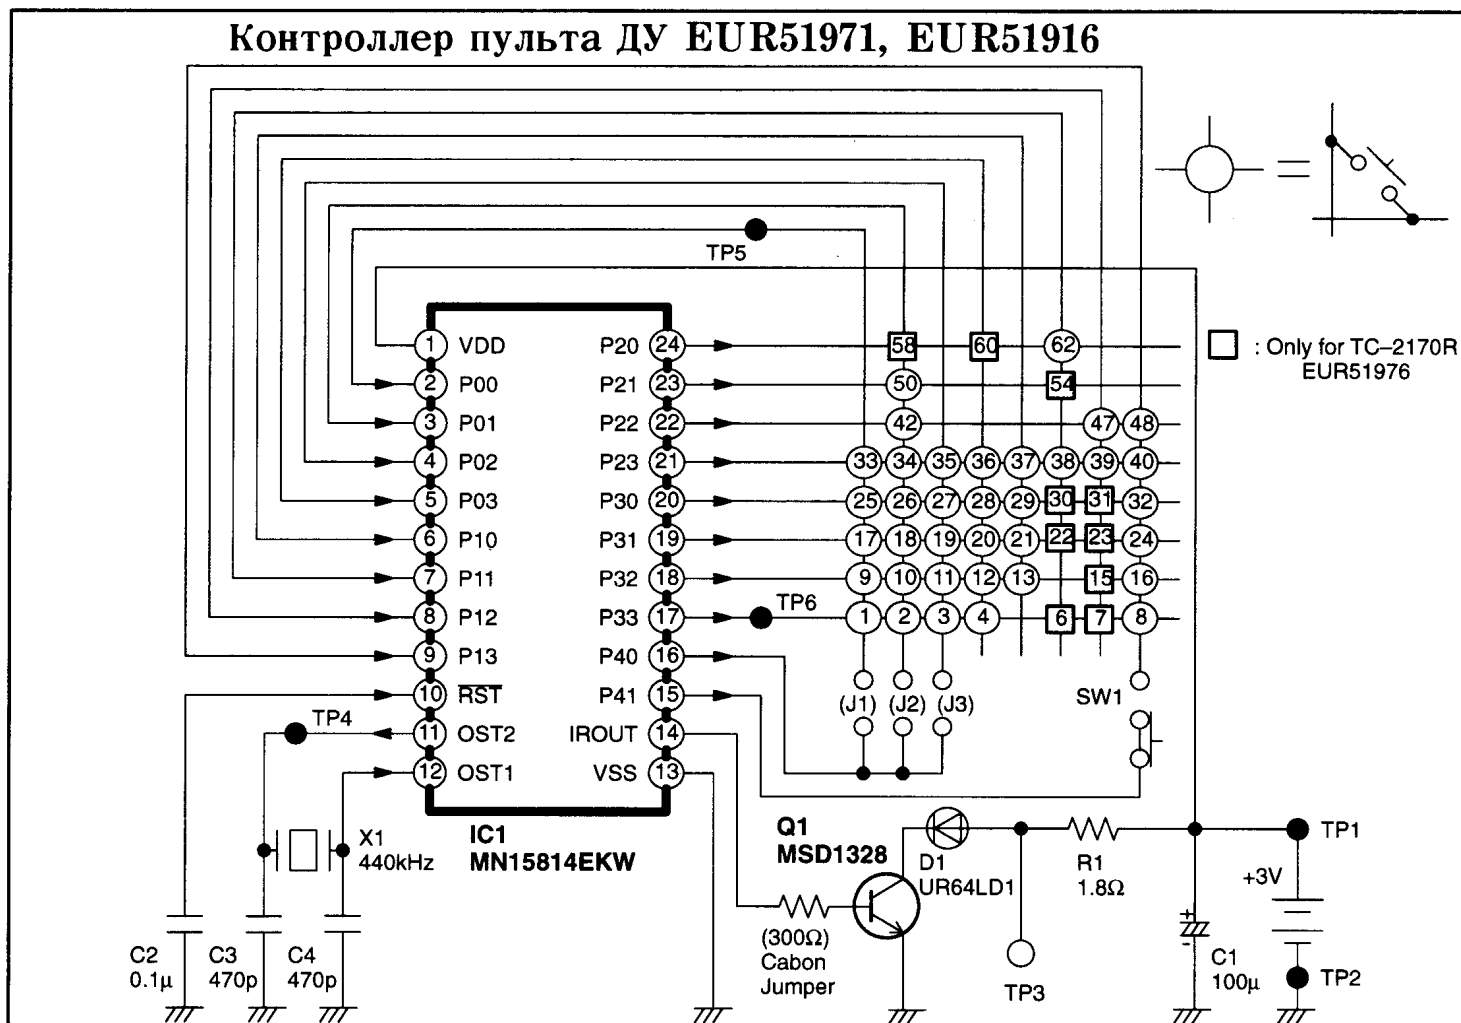

Функциональная таблица клавишей

Key No.	Function	Key No.	Function	Key No.	Function
1	POWER ON/OFF	23	YELLOW	45	----
2	1	24	VCR-STOP	46	----
3	4	25	TV/AV	47	NORMAL
4	7	26	POS. UP	48	▼
5	----	27	POS. DOWN	49	----
6	TEXT / TV	28	VOL UP	50	OFF TIMER
7	RED	29	VOL DOWN	51	----
8	VCR-REW	30	HOLD	52	----
9	RECALL	31	CYAN	53	----
10	2	32	VCR-F.F	54	TIME TEXT
11	5	33	VCR-POWER	55	----
12	8	34	VCR-TV/VCR	56	----
13	0	35	VCR-PAUSE	57	----
14	----	36	VCR-ADVANCE	58	REVEAL
15	GREEN	37	VCR-REC	59	----
16	VCR-PLAY	38	VCR-REC	60	SIZE(F/T/B)
17	MUTE	39	VCR-CH UP	61	----
18	3	40	VCR-CH DOWN	62	F (P)
19	6	41	----	63	----
20	9	42	▲	64	----
21	2 DIGIT	43	----	65	----
22	INDEX	44	----	66	----