

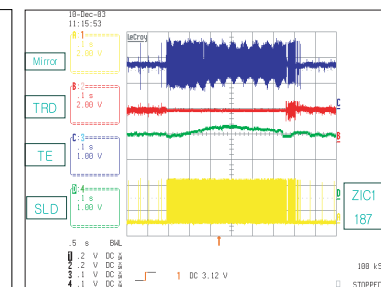



7-8 Decoder (Main PCB)

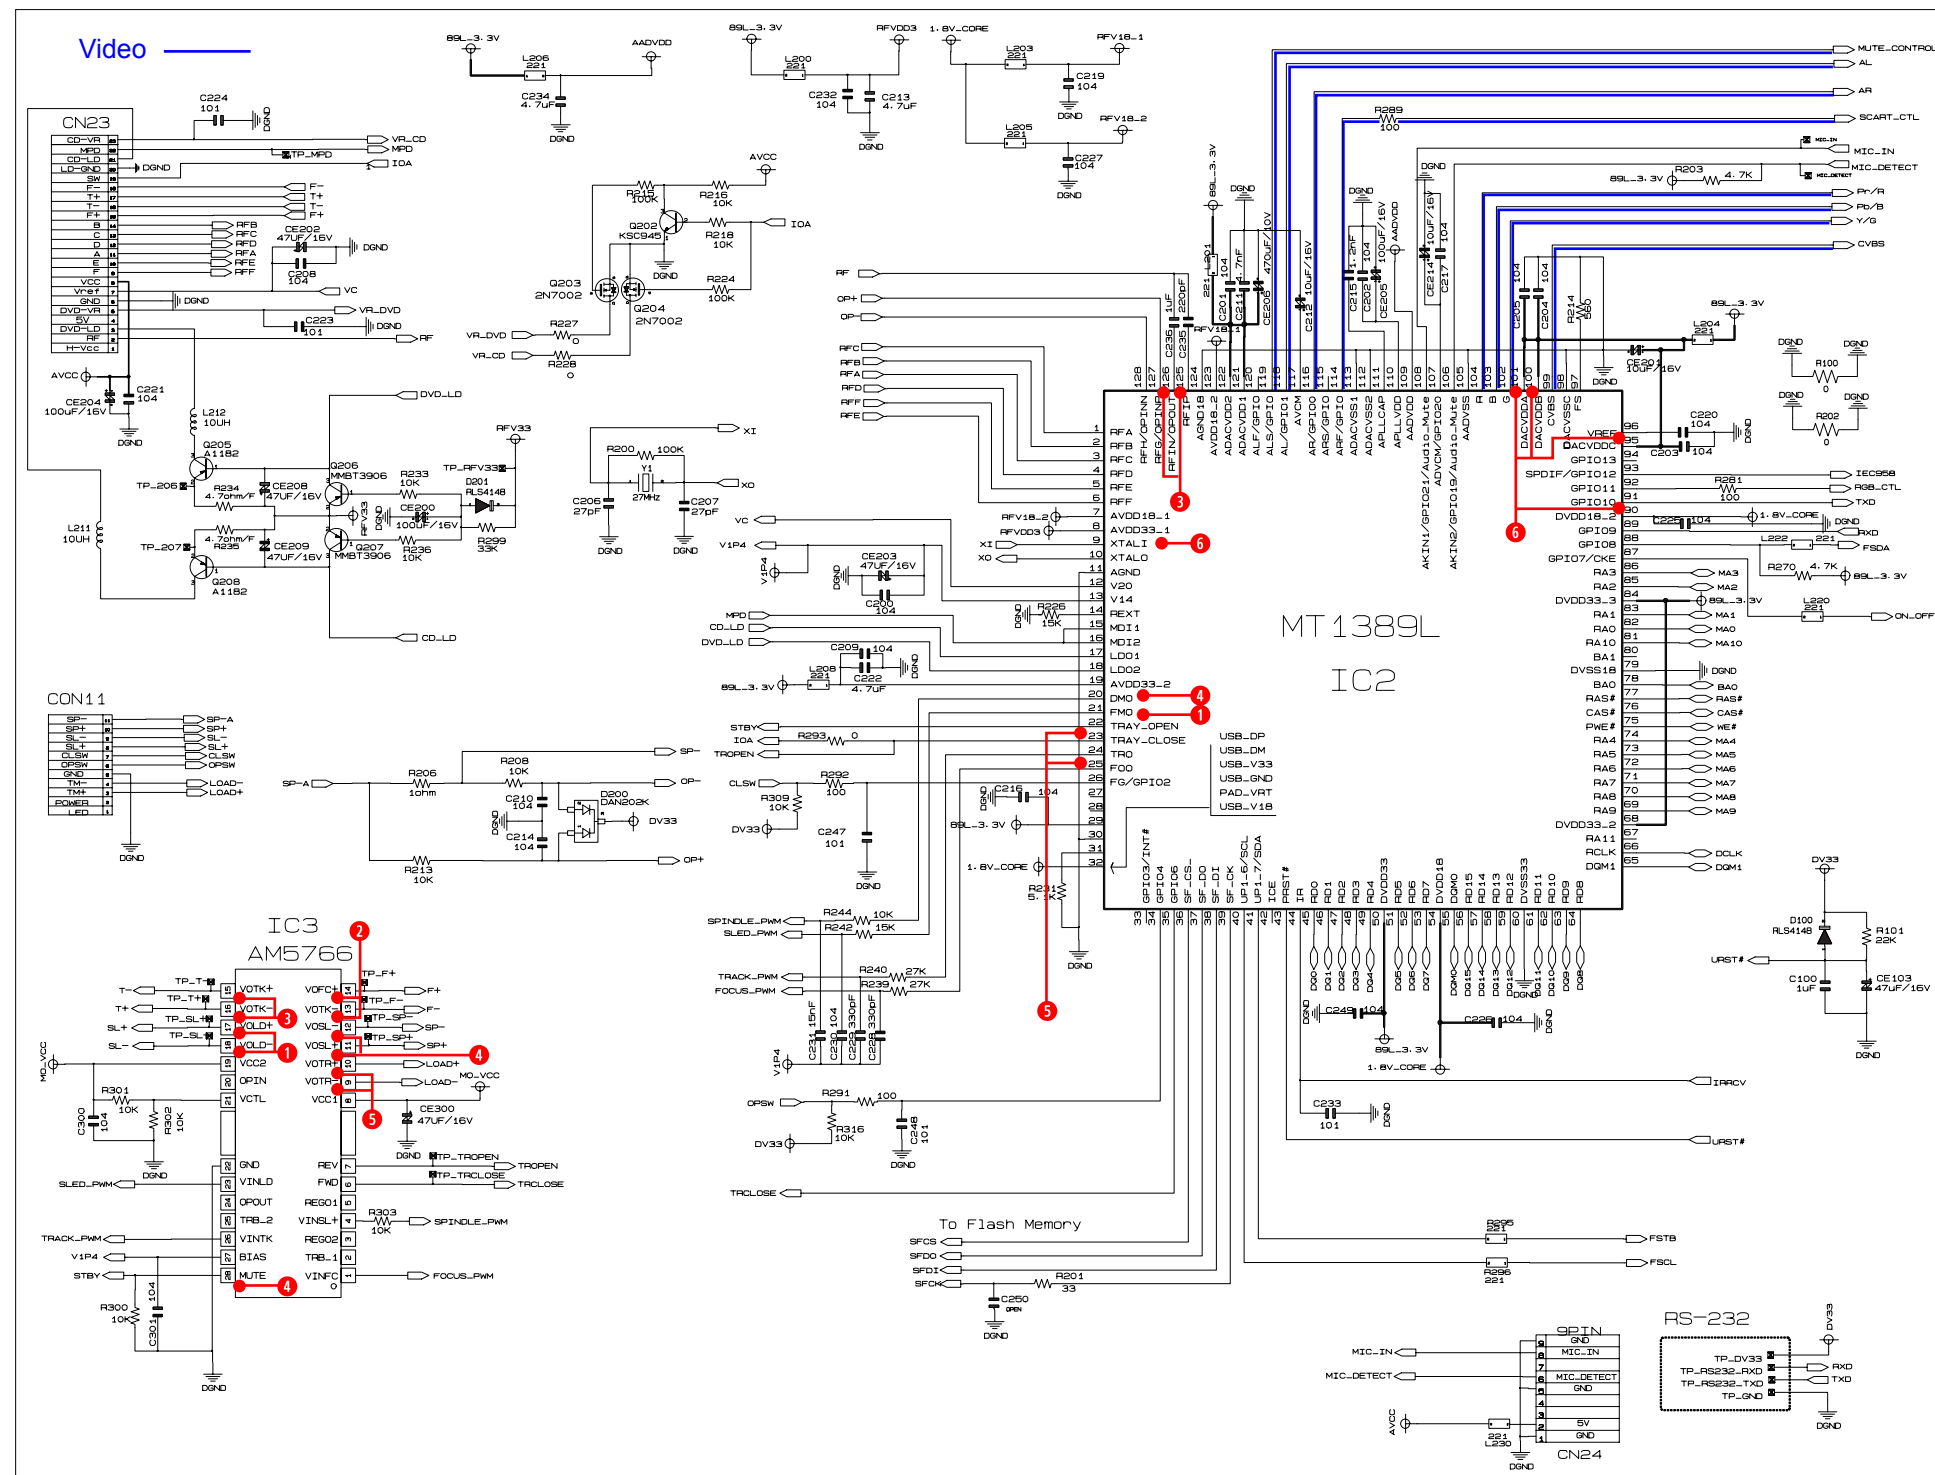


① IC2 Pin(21), IC3 Pin(17,18)

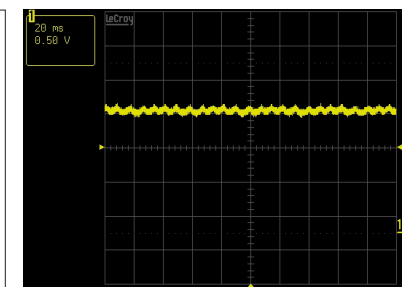


④ SPD Waveform
IC2 Pin(20), IC3(11,12,28)

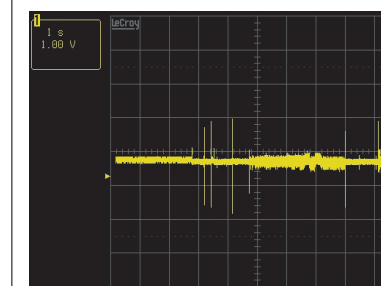

② FE Waveform
IC3 Pin(13,14)

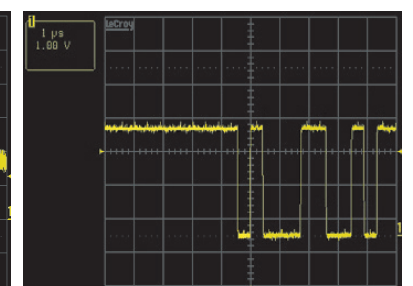

⑤ OPEN, CLOSE WAVEFORM
IC2 Pin(23,25), IC3(9,10)

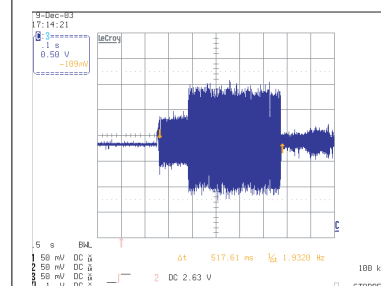

③ IC2 Pin(125,126), IC3 Pin(15,16)



⑥ CVBS Waveform
IC2 Pin(9,90,95,100,101)

◆ These are the waveforms of DVD-P181K.
Caution There can be some differences (Voltage, Frequency, etc.) among cameras.