


# Elenberg MX-327

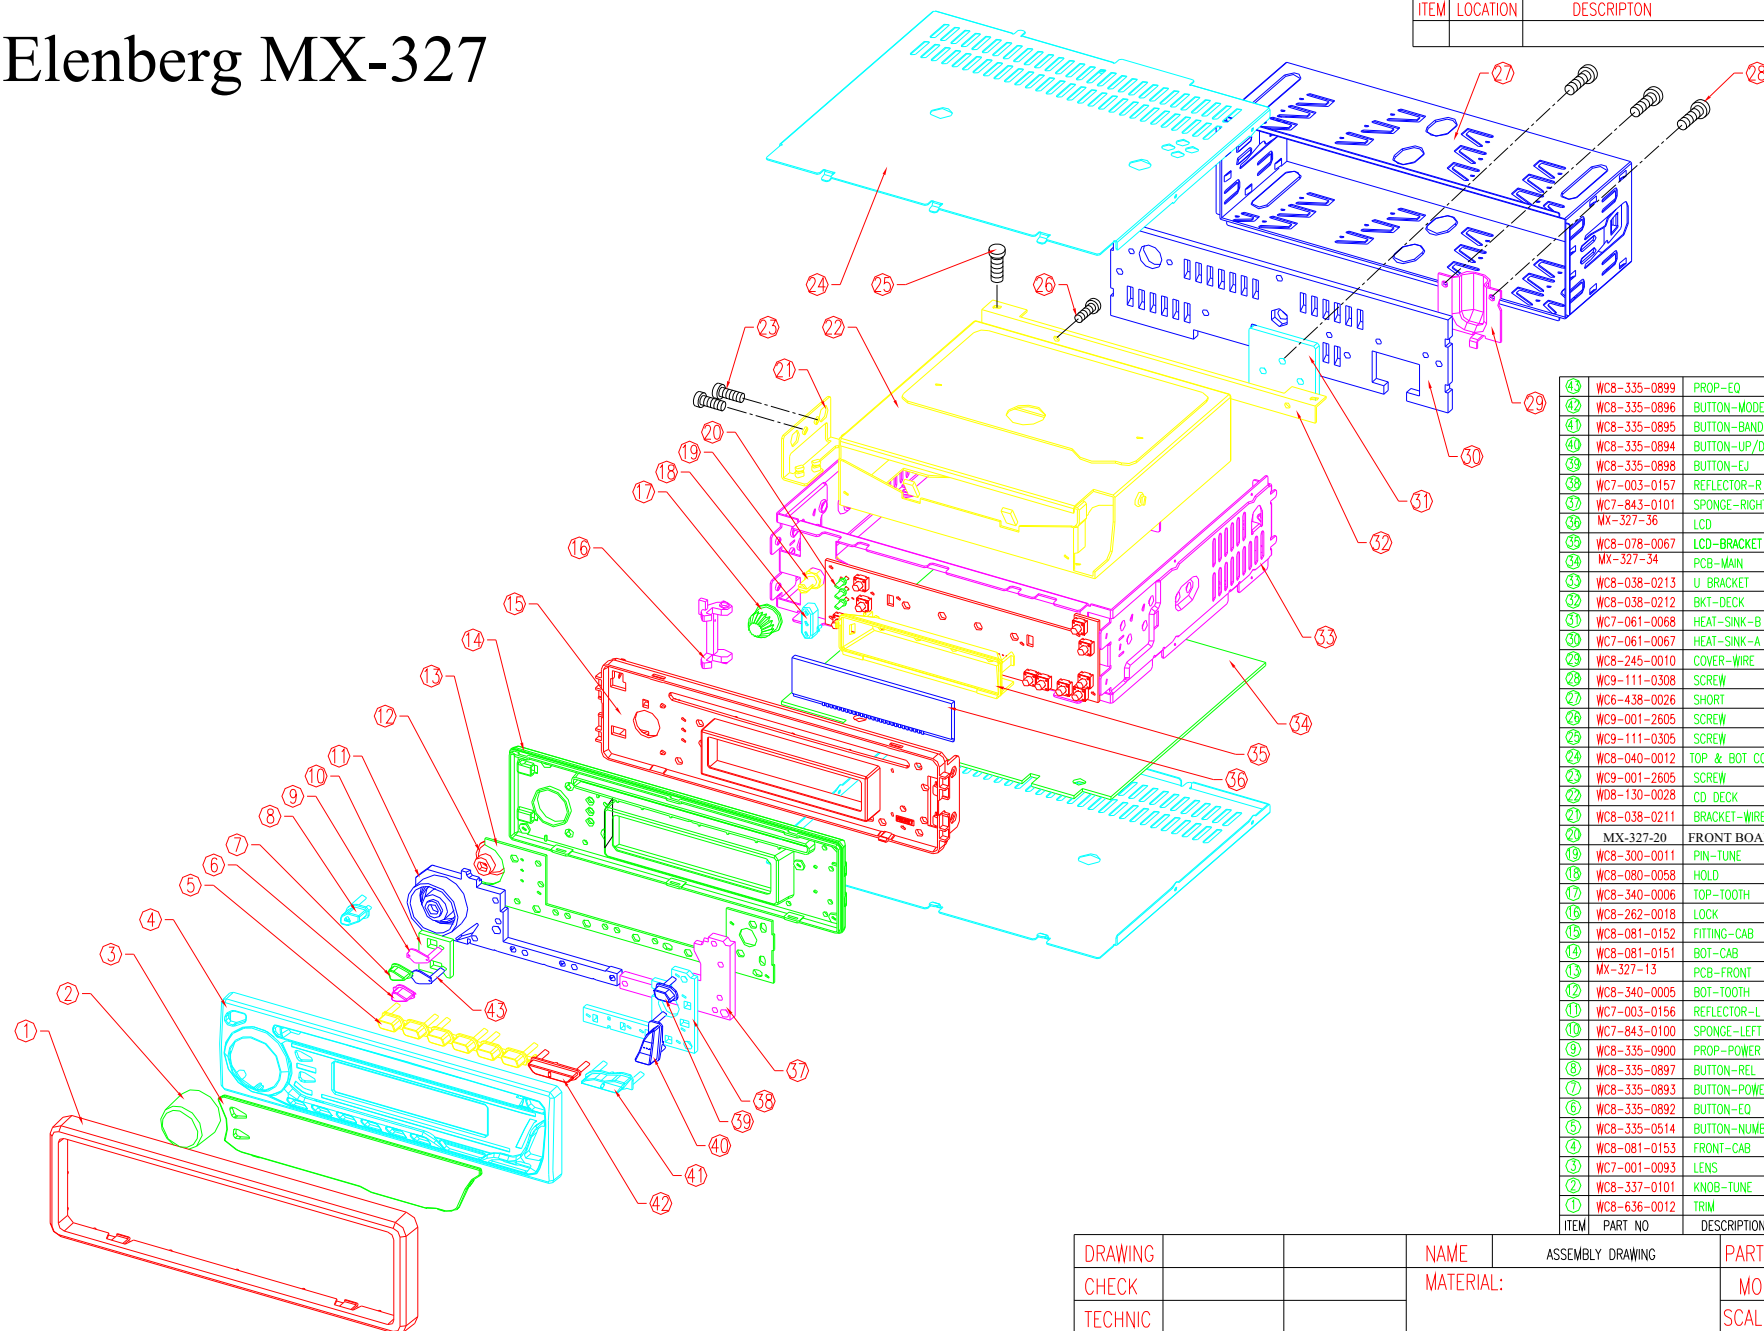

43	WC8-335-0899	PROP-EQ	1	ABS	
42	WC8-335-0896	BUTTON-MODE	1	ABS	
41	WC8-335-0895	BUTTON-BAND	1	ABS	
40	WC8-335-0894	BUTTON-UP/DN	1	ABS	
39	WC8-335-0898	BUTTON-EJ	1	ABS	
38	WC7-003-0157	REFLECTOR-R	1	PMMA	
37	WC7-843-0101	SPONGE-RIGHT	1	SPONGE	
36	MX-327-36	LCD	1		
35	WC8-078-0067	LCD-BRACKET	1	ABS	
34	MX-327-34	PCB-MAIN	1		
33	WC8-038-0213	U BRACKET	1	STEEL	
32	WC8-038-0212	BKT-DECK	1	STEEL T=1.0	
31	WC7-061-0068	HEAT-SINK-B	1	AL	
30	WC7-061-0067	HEAT-SINK-A	1	AL	
29	WC8-245-0010	COVER-WIRE	1	STEEL	
28	WC9-111-0308	SCREW	6		
27	WC6-438-0026	SHORT	1	STEEL	
26	WC9-001-2605	SCREW	4		2.6X5
25	WC9-111-0305	SCREW	6		
24	WC8-040-0012	TOP & BOT COVER	2	STEEL	
23	WC9-001-2605	SCREW	10		2.6X5
22	WC8-130-0028	CD DECK	1		
21	WC8-038-0211	BRACKET-WIRE	1	STEEL	
20	MX-327-20	FRONT BOARD	1		
19	WC8-300-0011	PIN-TUNE	1	BRASS	
18	WC8-080-0058	HOLD	1	ABS	
17	WC8-340-0006	TOP-TOOTH	1	ABS	
16	WC8-262-0018	LOCK	1	ABS	
15	WC8-081-0152	FITTING-CAB	1	ABS	
14	WC8-081-0151	BOT-CAB	1	ABS	
13	MX-327-13	PCB-FRONT	1		
12	WC8-340-0005	BOT-TOOTH	1	ABS	
11	WC7-003-0156	REFLECTOR-L	1	PMMA	
10	WC7-843-0100	SPONGE-LEFT	1	SPONGE	
9	WC8-335-0900	PROP-POWER	1	ABS	
8	WC8-335-0897	BUTTON-REL	1	ABS	RELEASE
7	WC8-335-0893	BUTTON-POWER	1	PMMA	POWER
6	WC8-335-0892	BUTTON-EQ	1	PMMA	EQ
5	WC8-335-0514	BUTTON-NUMBER	1	ABS	
4	WC8-081-0153	FRONT-CAB	1	ABS	DECROTATION
3	WC7-001-0093	LENS	1	PMMA	
2	WC8-337-0101	KNOB-TUNE	1	ABS	
1	WC8-636-0012	TRIM	1	ABS	DECROTATION

DRAWING		NAME	ASSEMBLY DRAWING	PART NO.:	
CHECK		MATERIAL:		MODEL	HS-C1168
TECHNIC				SCALE	REVISION A0 Q'TY 1
STANDARD		TREATMENT			
APPROVAL		THE THIRD VIEW:	UNIT mm	SHENZHEN HANGSHENG ELECTRONICS Co.LTD	

## ***Spare Parts List (MX-327)***

<b>Item</b>	<b>Description</b>	<b>QTY</b>	<b>Part № (Код ЗЧД)</b>
1	TRIM (PANEL FRAME)	1	WC8-636-0012
2	KNOB-TUNE	1	WC8-337-0101
3	LENS	1	WC7-001-0093
4	FRONT-CAB	1	WC8-081-0153
5	BUTTON-NUMBER (NUM KNOB)	1	WC8-335-0514
6	BUTTON-EQ (EQ KNOB)	1	WC8-335-0892
7	BUTTON-POWER (PWR KNOB)	1	WC8-335-0893
8	BUTTON-REL (REL KNOB)	1	WC8-335-0897
9	PROP-POWER (SUPPORT-PWR)	1	WC8-335-0900
10	SPONGE-LEFT	1	WC7-843-0100
11	REFLECTOR-L	1	WC7-003-0156
12	BOT-TOOTH	1	WC8-340-0005
13	PCB-FRONT	1	MX-327-13
14	BOT-CAB	1	WC8-081-0151
15	FITTING-CAB	1	WC8-081-0152
16	LOCK	1	WC8-262-0018
17	TOP-TOOTH	1	WC8-340-0006
18	HOLD	1	WC8-080-0058
19	PIN-TUNE	1	WC8-300-0011
20	FRONT BOARD ASS'Y (LCD & KEY board)	1	MX-327-20
21	BRACKET-WIRE	1	WC8-038-0211
22	CD DECK (without Servo Board)	1	WD8-130-0028
22	SERVO BOARD (for CD Deck)	1	MX-327-50
23	SCREW	10	WC9-001-2605
24	TOP & BOT COVER	2	WC8-040-0012
25	SCREW	6	WC9-111-0305
26	SCREW	4	WC9-001-2605
27	SHORT	1	WC6-438-0026
28	SCREW	6	WC9-111-0308
29	COVER-WIRE	1	WC8-245-0010
30	HEAT-SINK-A	1	WC7-061-0067
31	HEAT-SINK-B	1	WC7-061-0068
32	BKT-DECK	1	WC8-038-0212
33	U BRACKET	1	WC8-038-0213
34	PCB-MAIN BOARD	1	MX-327-34
35	LCD-BRACKET	1	WC8-078-0067
36	LCD	1	MX-327-36

37	SPONGE-RIGHT	1	WC7-843-0101
38	REFLECTOR-R	1	WC7-003-0157
39	BUTTON-EJ (EJ KNOB)	1	WC8-335-0898
40	BUTTON-UP/DN (UP/DN KNOB)	1	WC8-335-0894
41	BUTTON-BAND (BAND KNOB)	1	WC8-335-0895
42	BUTTON-MODE (MODE KNOB)	1	WC8-335-0896
43	PROP-EQ (SUPPORT-EQ)	1	WC8-335-0899
	FRONT PANEL ASS'Y	1	MX-327-44
	IC	1	WD8-000-2004

