




 
CD-307MP/CD-317MP

 
Maintenance manual

 
Contents


KB(Top)	3
KB(Bottom)	4
MB(Top)	5
MB(Bottom)	6
SB(Top)	7
SB(Bottom)	8
KB(SCH)	9
MB(SCH)	10
SB(SCH)	11
Simple Troubleshooting Guide	12

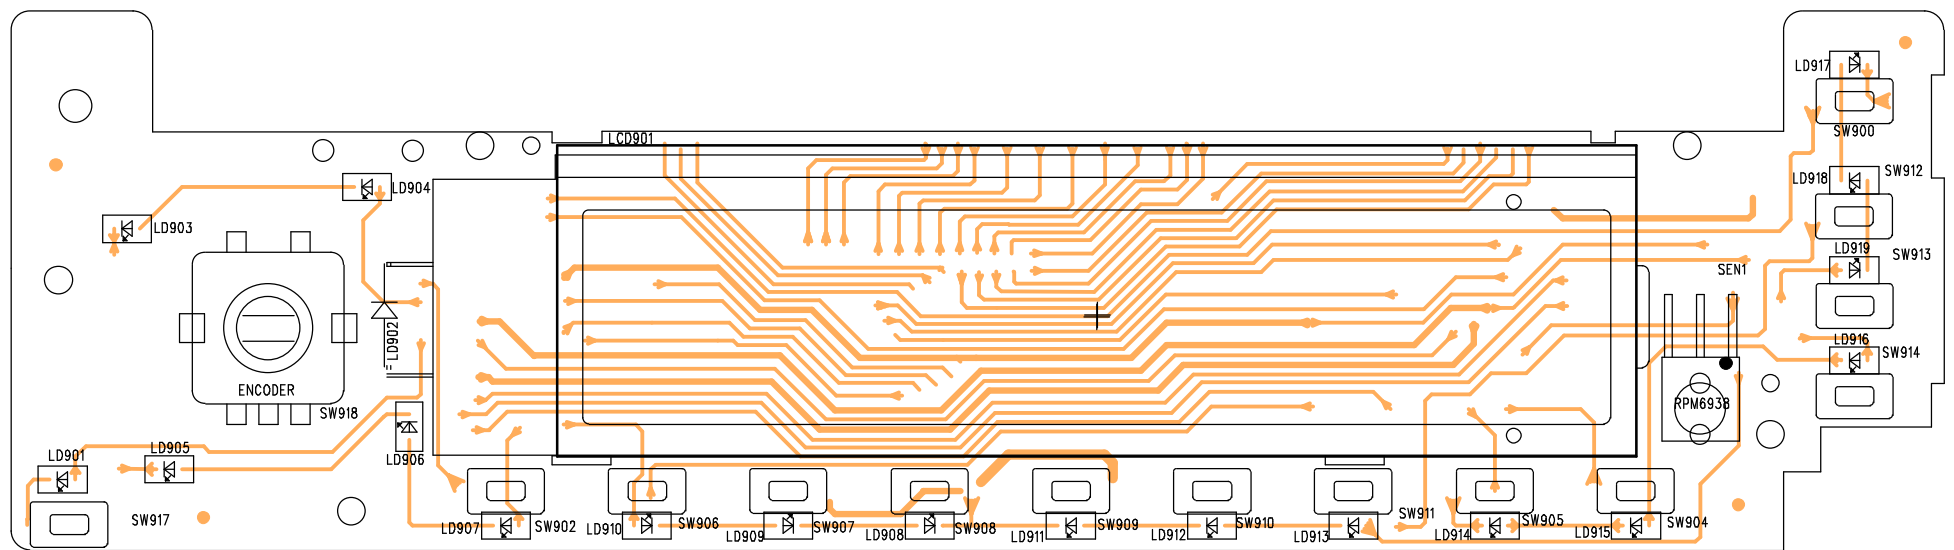








 


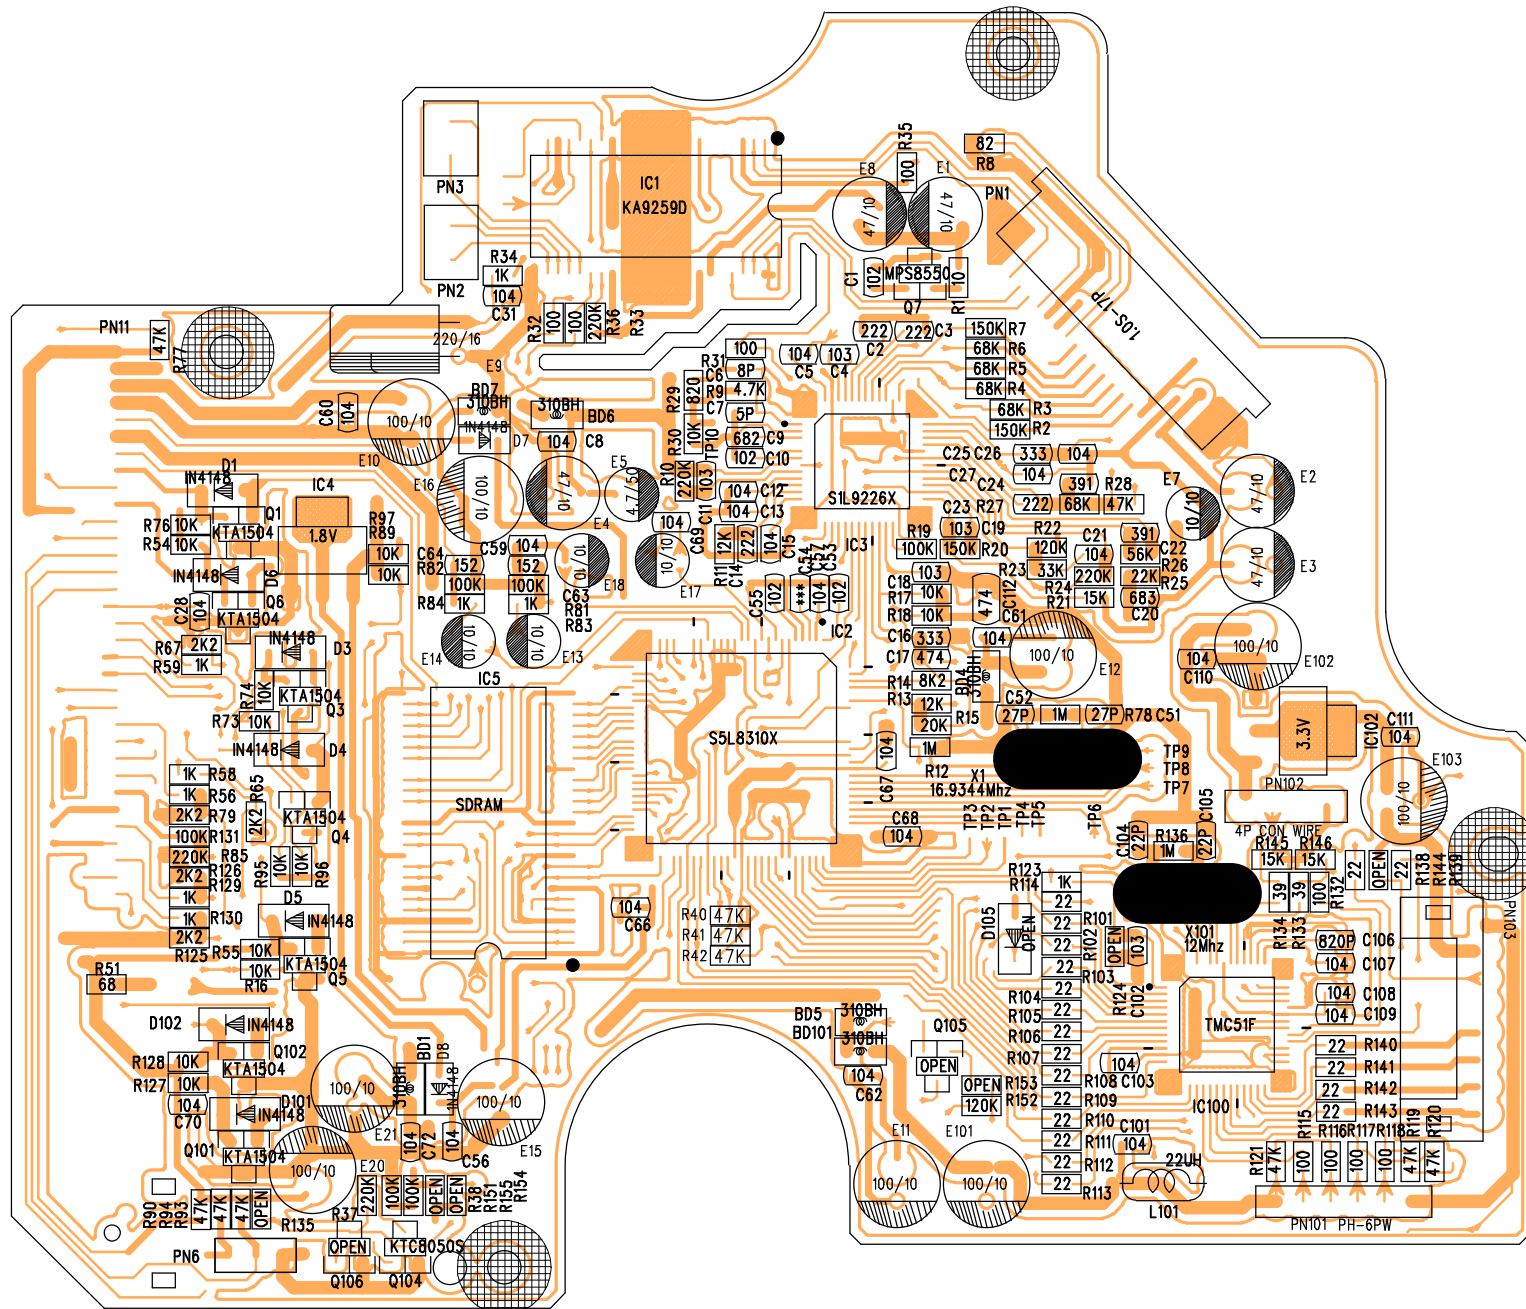

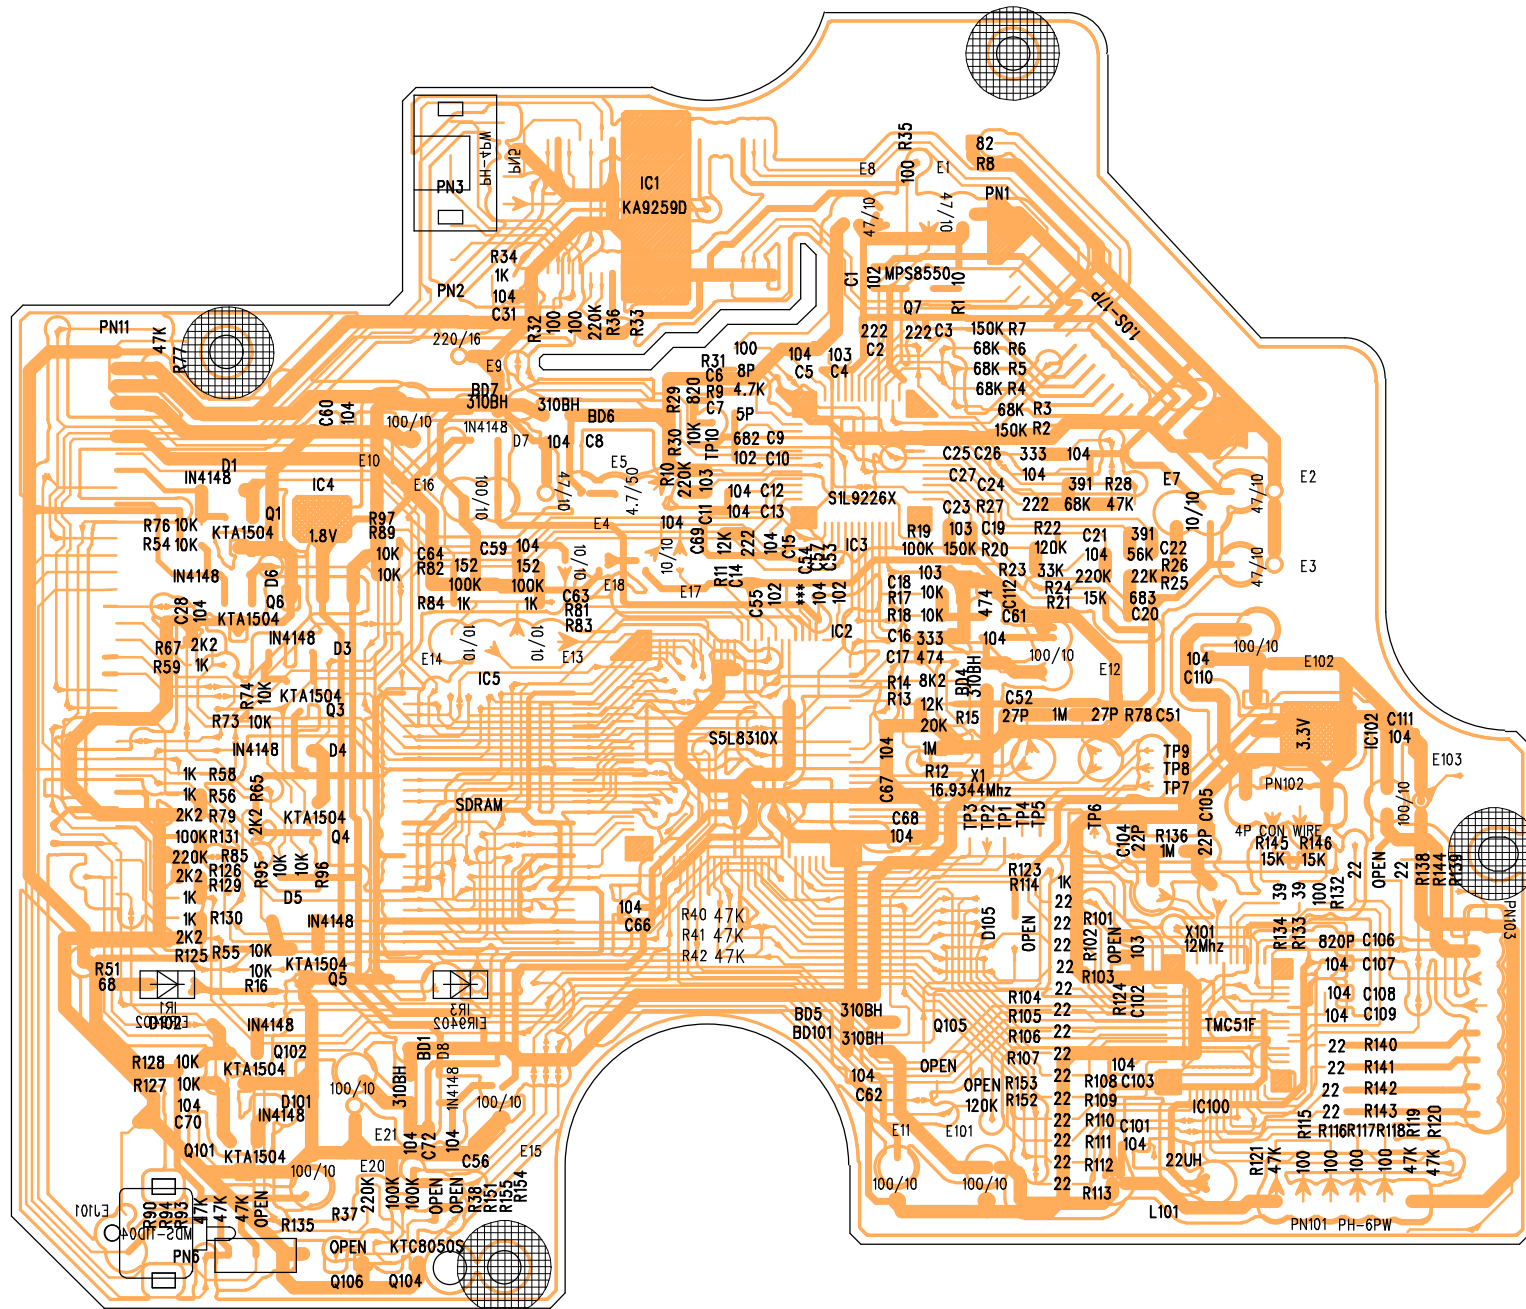

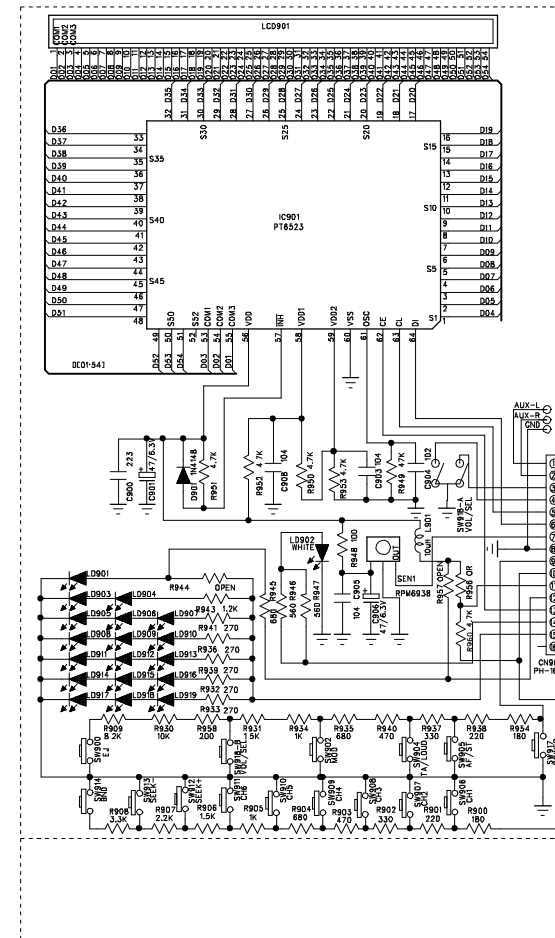

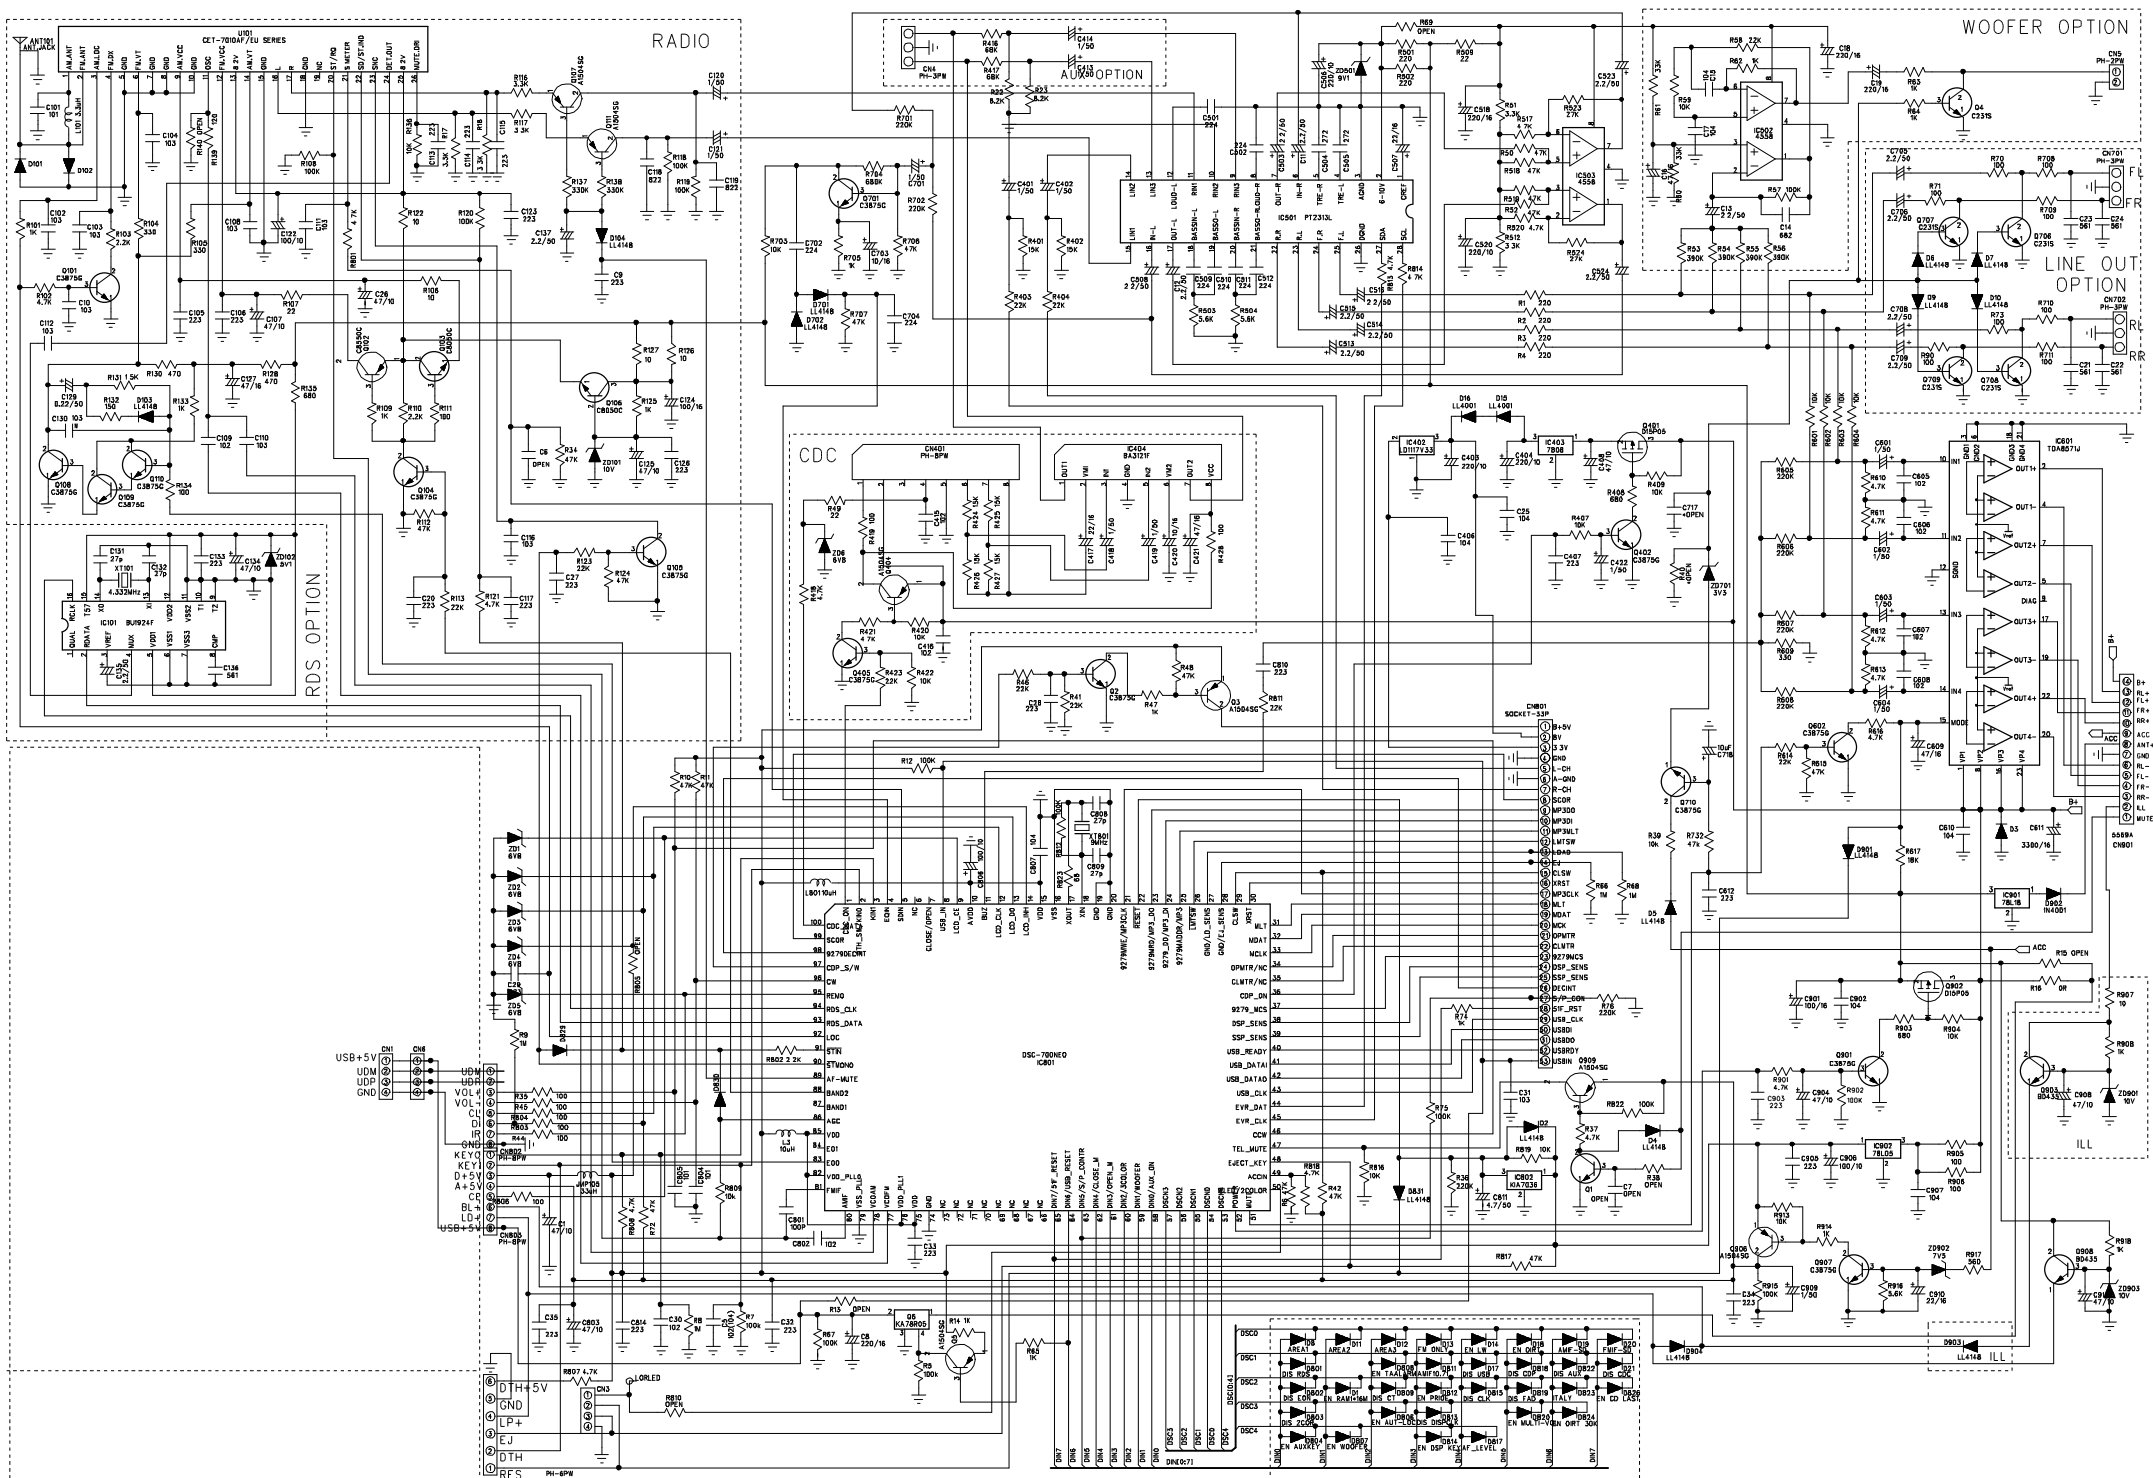



Simple Troubleshooting Guide

Problem	Cause/Solution
No power.	★Check and make sure whether the fuse is blown,replace with the proper value if necessary.
Some errors occur in the LCD or no function when pressing the button.	★Press the RESET button.
Unable to receive stations.	★Check and make sure whether the antenna is inserted or the antenna is properly connected;if so,insert the antenna or connect it properly.
Poor effect on receiving a station.	<p>★Antenna may not be the proper length.Make sure the antenna is fully extended or broken;if broken,replace the antenna with a new one.</p> <p>★The antenna is poorly grounded,check and make sure the antenna is properly grounded at its mounting location.</p>
CDs cannot be loaded.	★A CD is loaded in the mechanism.
Sound skips.	★The CD is dirty or damaged.
No images.	★The Video line from main to the TV is not connected properly.
Images skip.	★Improper setting of the color system.Set the color system to PAL or NTSC according to the connections of the TV.