


Blocking individual channels

- 1 Press »P-«, »P+« or »1...0« to select the channel to be blocked.
- 2 Open the »CHILD LOCK« menu by pressing »LOCK« and holding it down for three seconds.
– CHILD LOCK is already selected.
- 3 Press »V-« or »V+« to select »ON«. The channel is now blocked.
- 4 Press »LOCK« again to finish the setting.

Notes:

To unblock the channel, select it using »1...0« and repeat steps 2 to 4, selecting »OFF« during step 3.

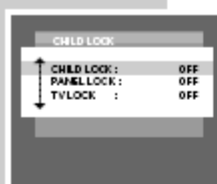


Blocking operation on the device

- 1 Open the »CHILD LOCK« menu by pressing »LOCK« and holding it down for three seconds.
- 2 Select »PANEL LOCK« by pressing »P-« or »P+«.
- 3 Press »V-« or »V+« to select »ON«. Operation on the device is now blocked.
- 4 Press »LOCK« again to finish the setting.

Notes:

To reverse the block, repeat steps 1 to 4 and select »OFF« in step 3.

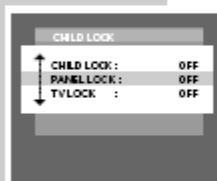

Blocking all functions

- 1 Open the »CHILD LOCK« menu by pressing »LOCK« and holding it down for three seconds.
- 2 Select »TV LOCK« by pressing »P-« or »P+«.
- 3 Press »V-« or »V+« to select »ON«. All channels are now blocked.
- 4 Press »LOCK« again to finish the setting.

Notes:

To reverse the block, repeat steps 1 and 4.

