



RM-C462-1H

KEY NO.	FUNCTION	KEY NO.	FUNCTION	KEY NO.	FUNCTION	KEY NO.	FUNCTION
1	POWER	10	2	19	7	28	PICTURE MODE
2		11	1	20	OFF TIMER	29	MUTE
3		12	DISPLAY	21	- / - -	30	
4	TV/VIDEO	13	6	22	0	31	
5		14	5	23		32	
6	SOUND SYSTEM	15	4	24		33	VOLUME +
7	COLOUR SYSTEM	16	CH PRESET	25	+ (FUNCTION)	34	VOLUME -
8		17	9	26	PICTURE ADJUST	35	CHANNEL +
9	3	18	8	27	- (FUNCTION)	36	CHANNEL -