


***SERVICE* Manual**

COLOR TELEVISION RECEIVER

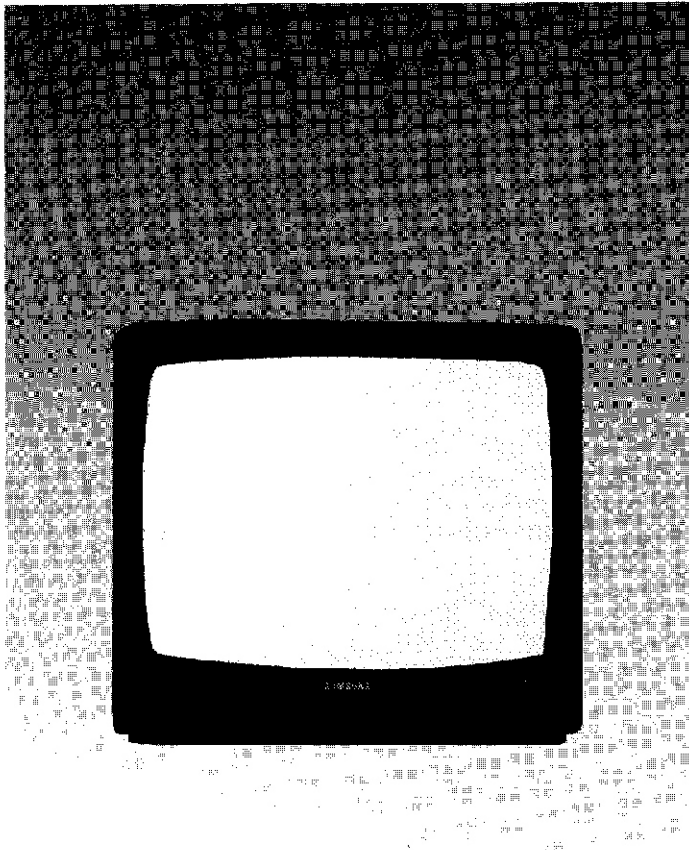

CONTENTS

- 1. Precautions**
- 2. Reference Information**
- 3. Specifications**
- 4. Disassembly and Reassembly**
- 5. Alignment and Adjustment**
- 6. Troubleshooting**
- 7. Exploded Views and Parts List**
- 8. Electric Parts List**
- 9. Block Diagrams**
- 10. Schematic Diagrams**

SCHEMATIC DIAGRAM

CHASSIS: P69SA1

SYSTEM: PAL/SECAM - B/G, D/K, PAL-I,

NT4.43, NT3.58(MVP), SECAM-L/L'

RTV servis Horvat


Tel: ++385-31-856-637

Tel/fax: ++385-31-856-139








Mob: 098-788-319

www.rtv-horvat-dj.hr





PWB-MAIN

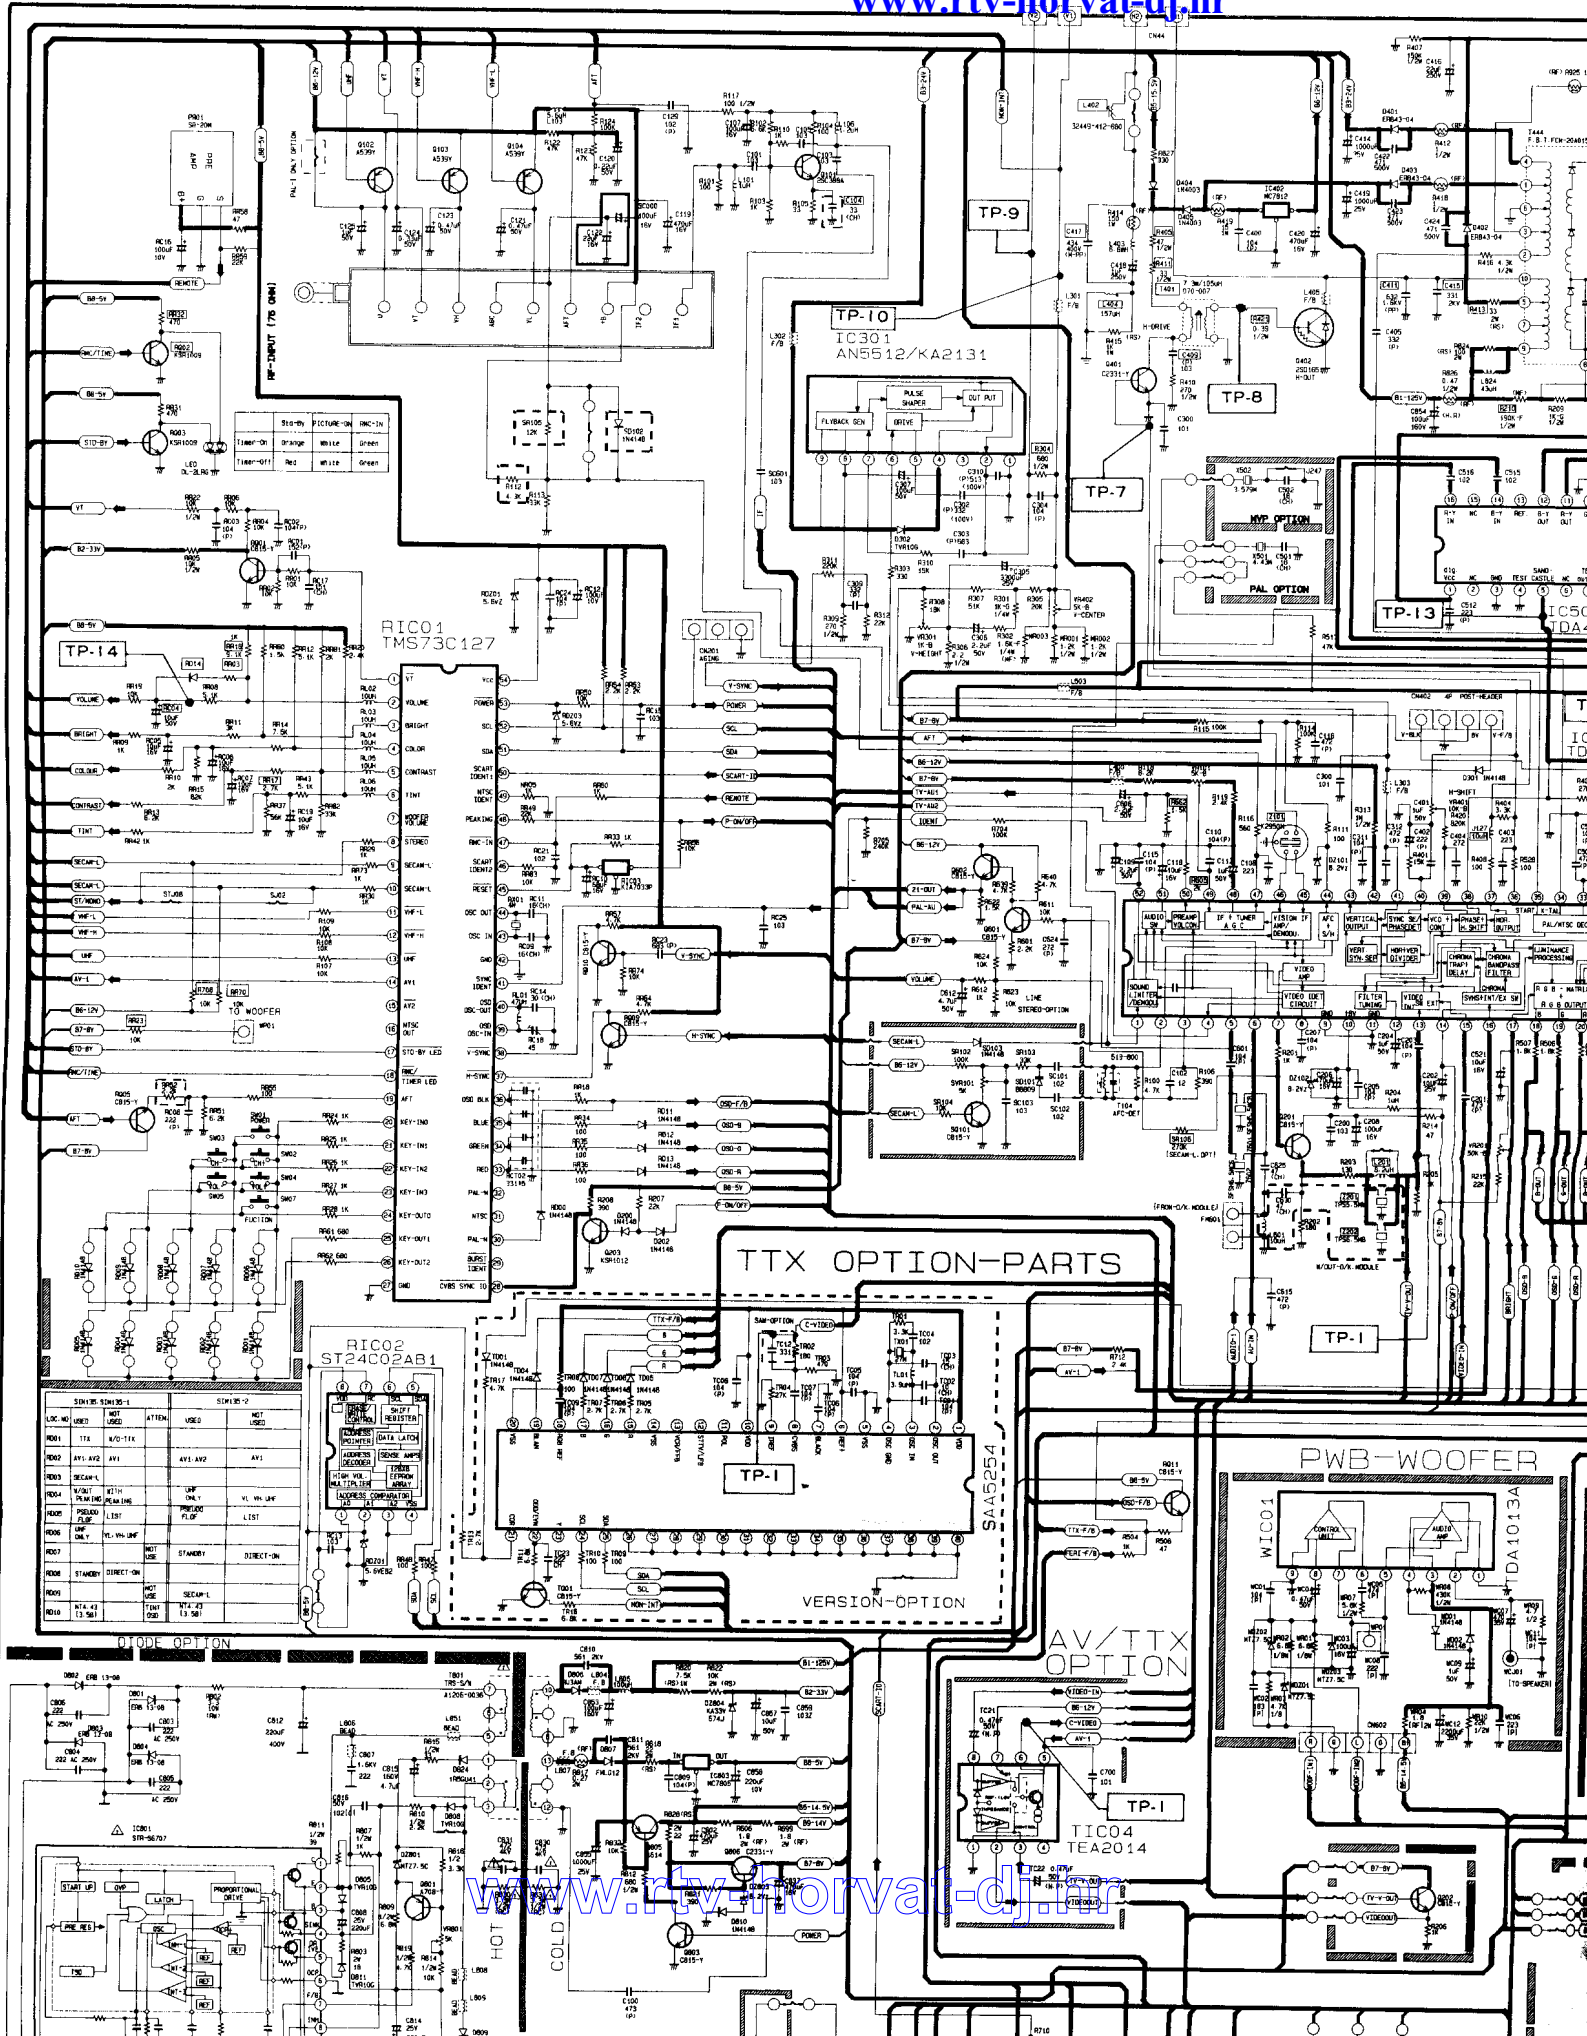

LOC. NO.	USED	MKT. CODE	ATTN.	USED	MKT. CODE
R001	17A	S10-T1A			
R002	AV1-AV2	AV1		AV1-AV2	AV1
R003	SECAM-L				
R004	AV-OUT	AV1		AV1	AV1
R005	PROG	LIST			
R006	AV-OUT	AV1		AV1	AV1
R007	STANDBY				
R008	STANDBY				
R009	NT4.43	SECAM-L			
R010	NT3.58	SECAM-L			

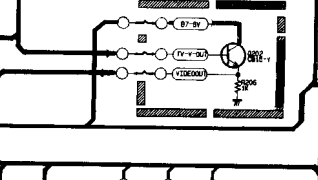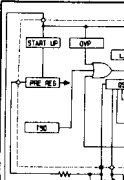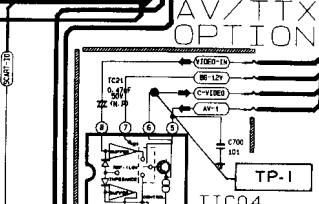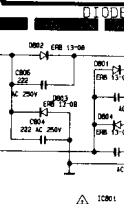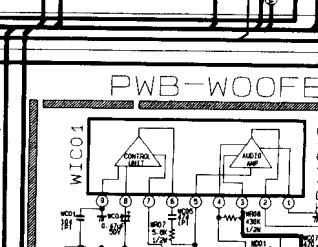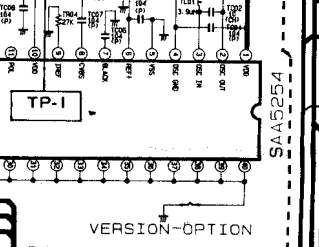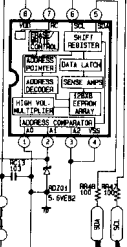


www.rtv-horvat-dj.hr

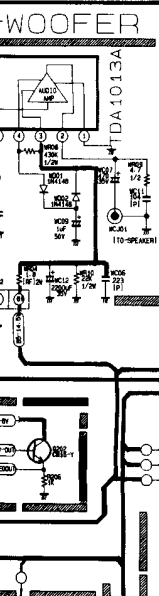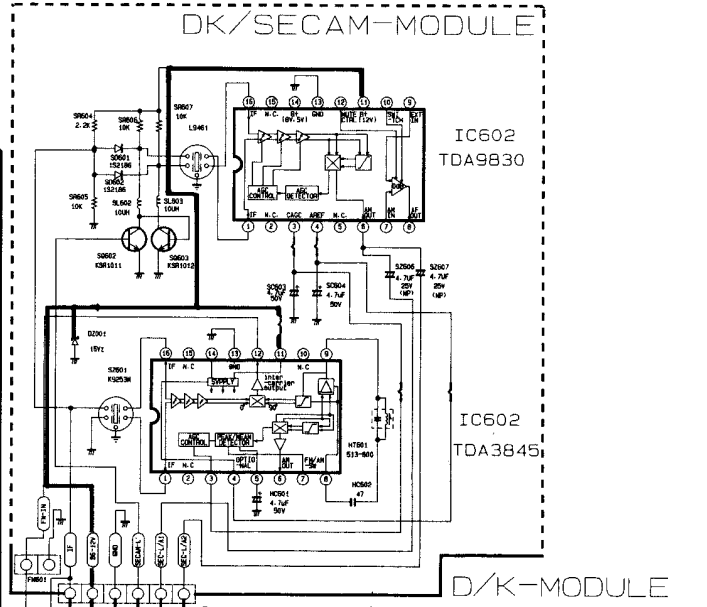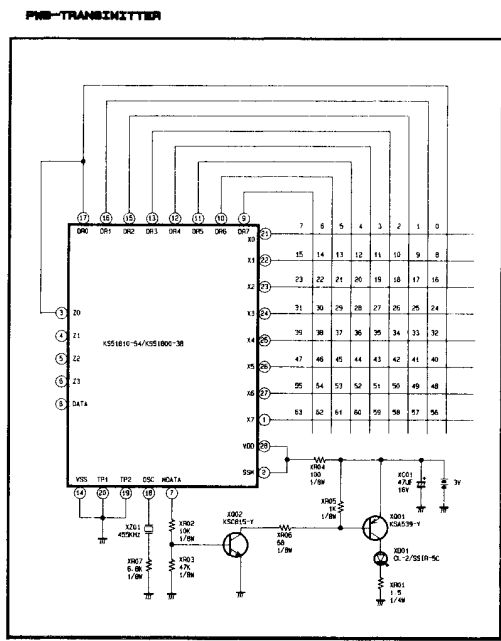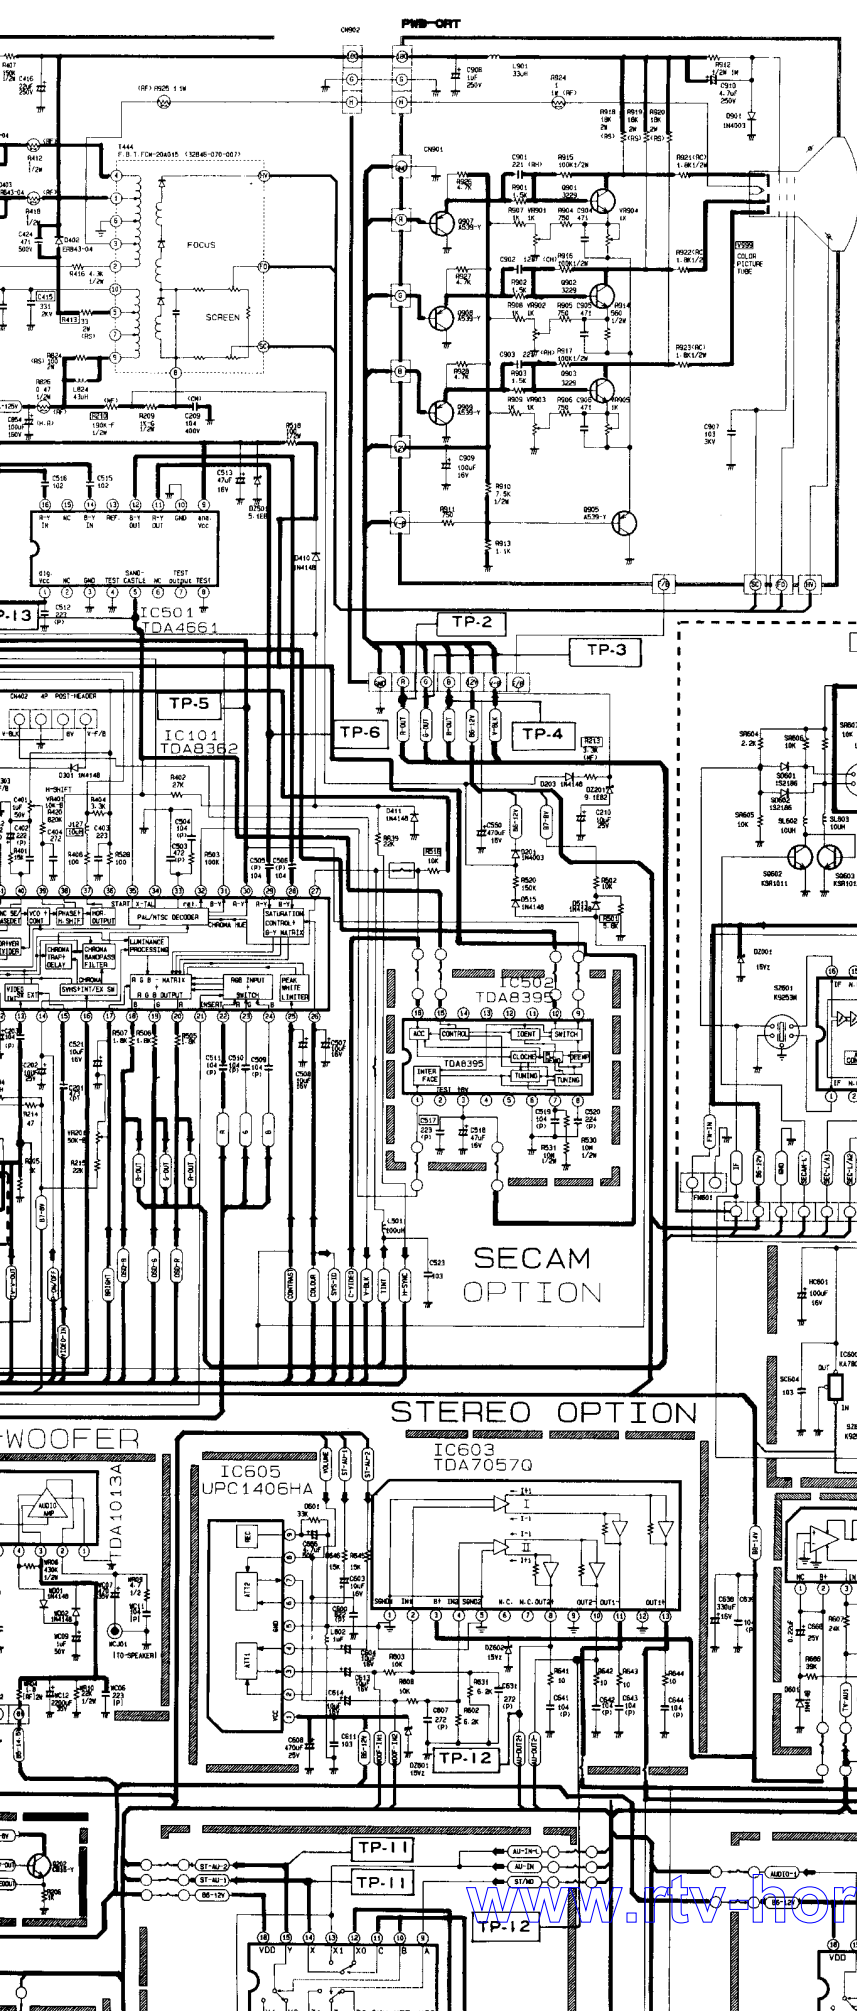



DIFER

IC001	A
IC003	A
IC005	A
IC004	A
CS05	C
0801	D1C
R806	L
0803	T
CS06	5

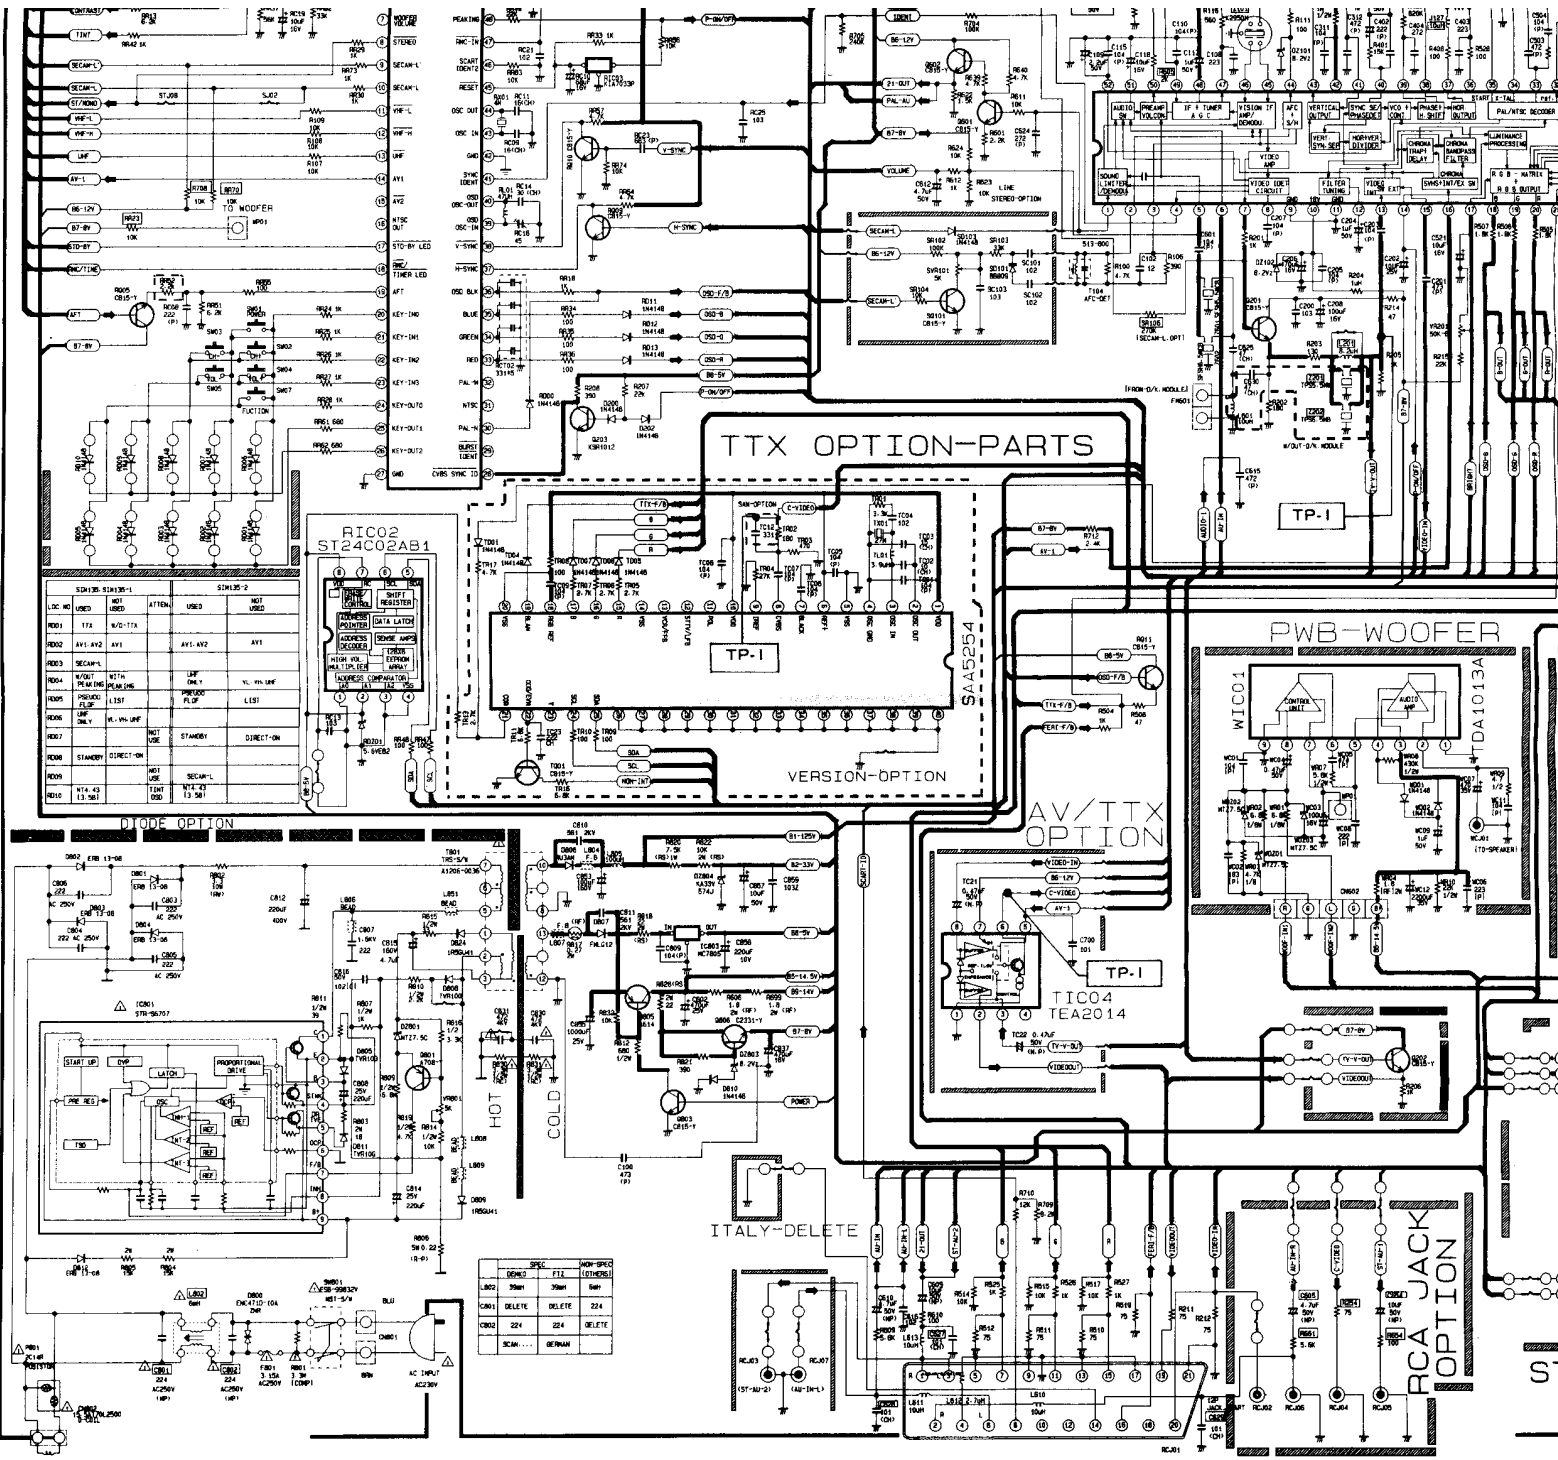

TESTPOINT WAVEFORM

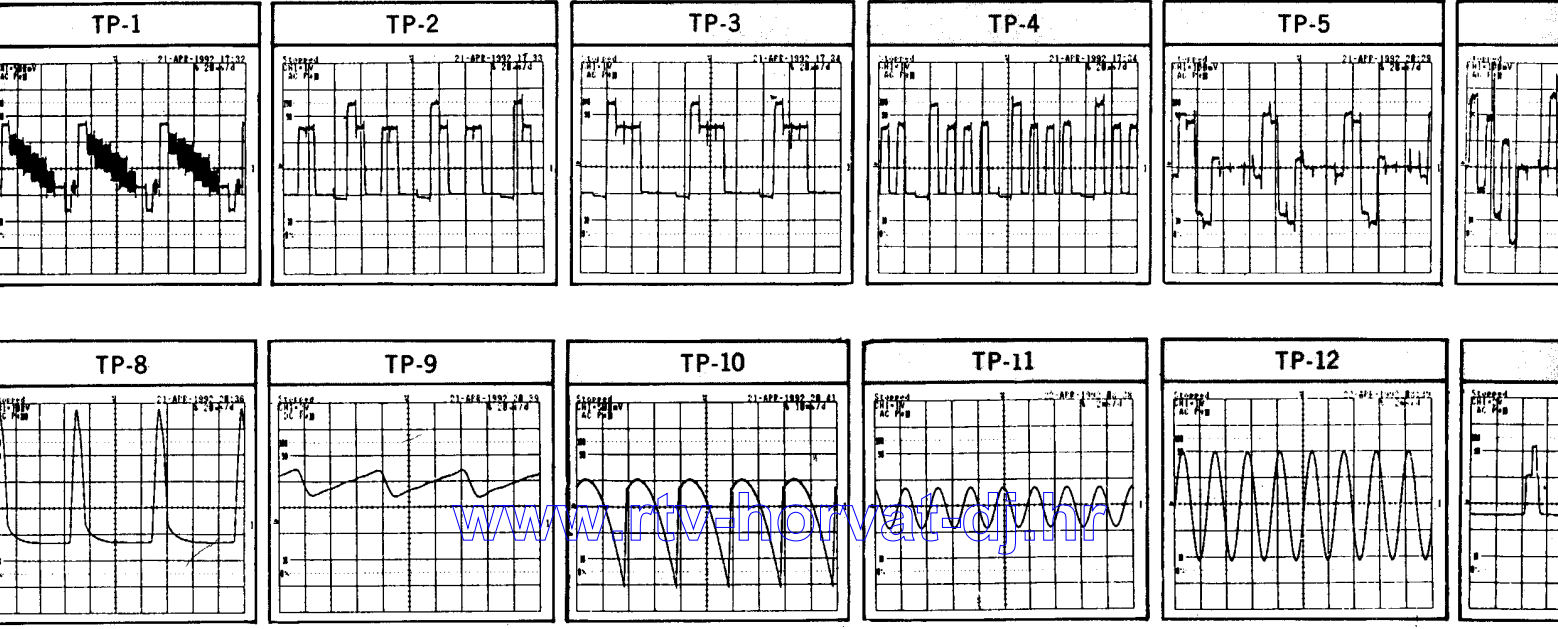

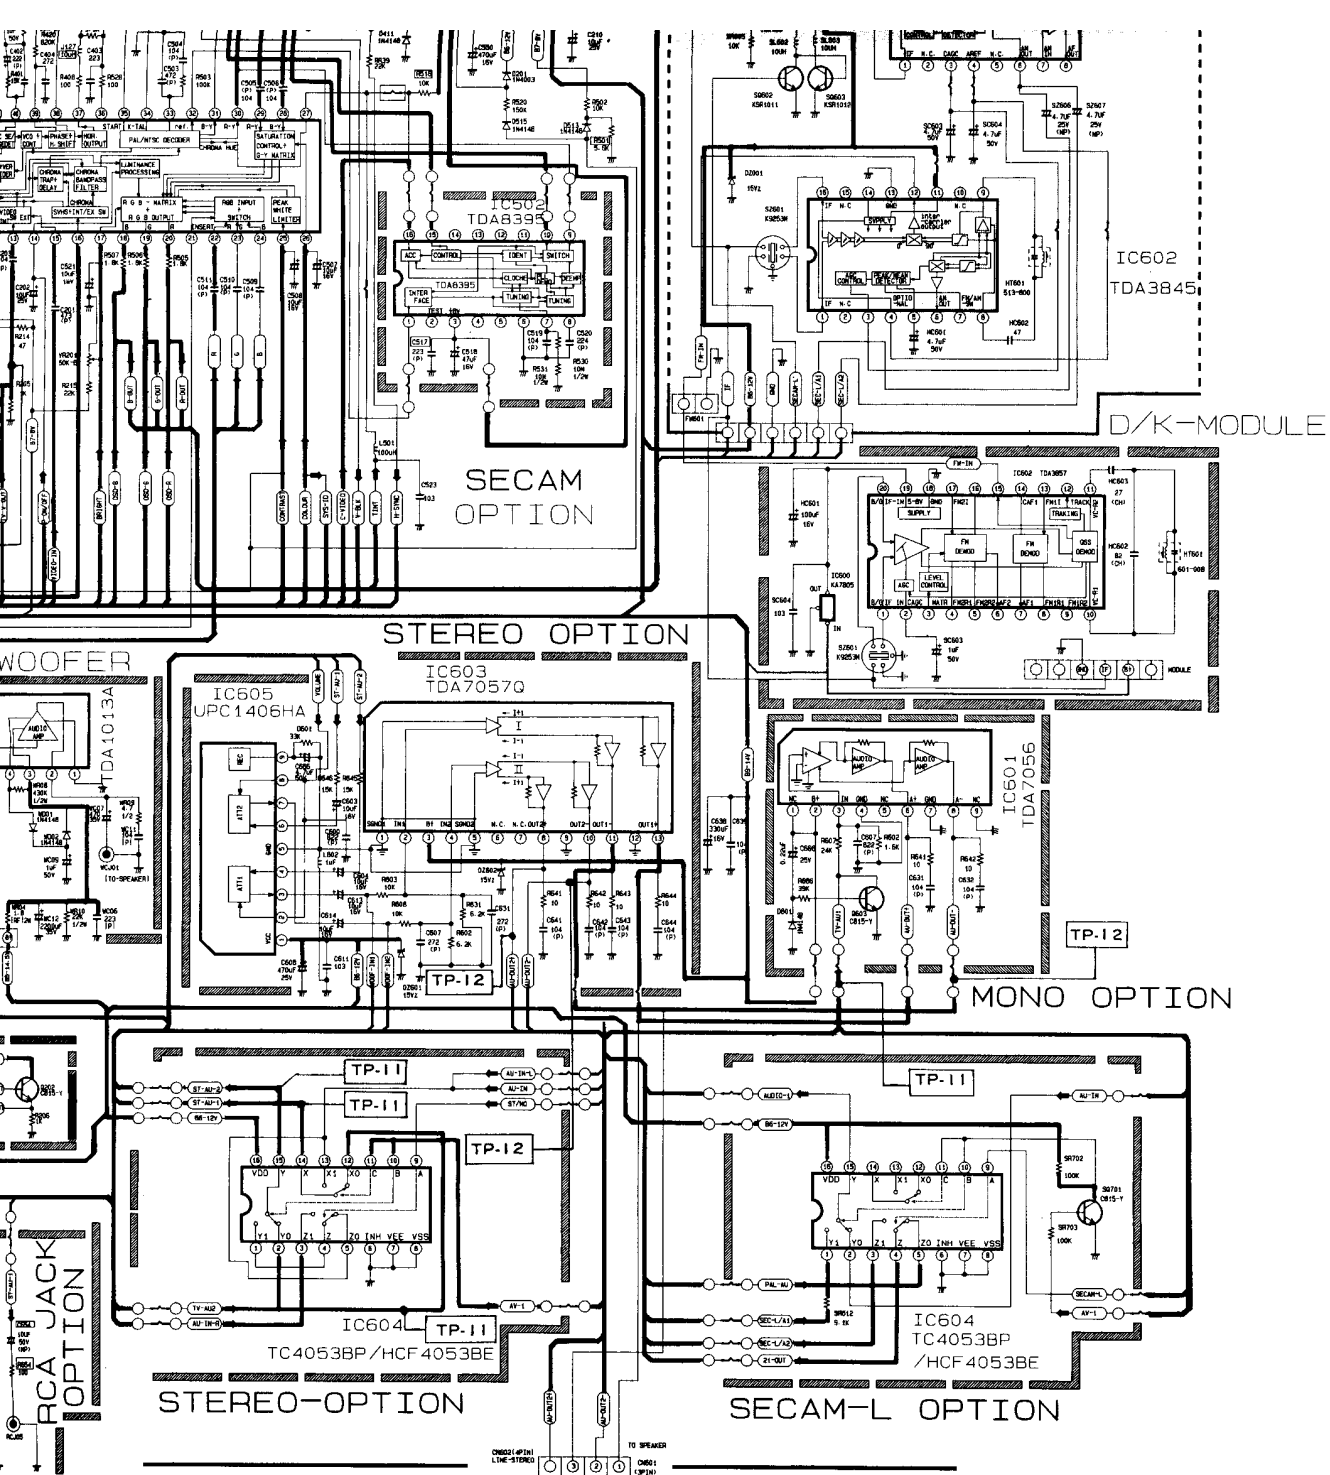

DIFER

IC501	A
IC603	A
IC605	A
IC604	A
CS66	A
D601	D
R666	A
Q603	T
C606	A
R607	L
C604	A
CS63	A
CS14	A
R608	A
R603	A
R621	A
CS31	A
D2602	A
D2601	A
CS66	A
CS11	A
R643	A
R644	A
CS43	A
CS44	A
CS601	P
CS602	L
R623	A
R624	A
CS12	C
R629	C
RR16	L
R661	D
CS65	D
CS54	D
R611	1/8
R639	1/8
R640	1/8
Q601	TR
Q602	TR
R622	1/8T
R670	D
R602	A
R645	D

