

ОПЦИИ PANASONIK TX-29FX50T GP41

| | | <u>7</u> | <u>6</u> | <u>5</u> | <u>4</u> | <u>3</u> | <u>2</u> | <u>1</u> | <u>0</u> |
|-----------|----|----------|----------|----------|----------|----------|----------|----------|----------|
| Option 1 | 0F | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 |
| Option 2 | FF | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Option 3 | FA | 1 | 1 | 1 | 1 | 1 | 0 | 1 | 0 |
| Option 4 | EE | 1 | 1 | 1 | 0 | 1 | 1 | 1 | 0 |
| Option 5 | 01 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 |
| Option 6 | 90 | 1 | 0 | 0 | 1 | 0 | 0 | 0 | 0 |
| Option 7 | C2 | 1 | 1 | 0 | 0 | 0 | 0 | 1 | 0 |
| Option 8 | 0C | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| Option 9 | FF | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Option 10 | A1 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 1 |
| Option 11 | 00 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Option 12 | FD | 1 | 1 | 1 | 1 | 1 | 1 | 0 | 1 |
| Option 13 | 01 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 |
| Option 14 | 08 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 |
| Option 15 | 01 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 |