



## 8 ASSEMBLING AND DISASSEMBLING THE MECHANISM UNIT

### 8.1. Disassembly Procedure

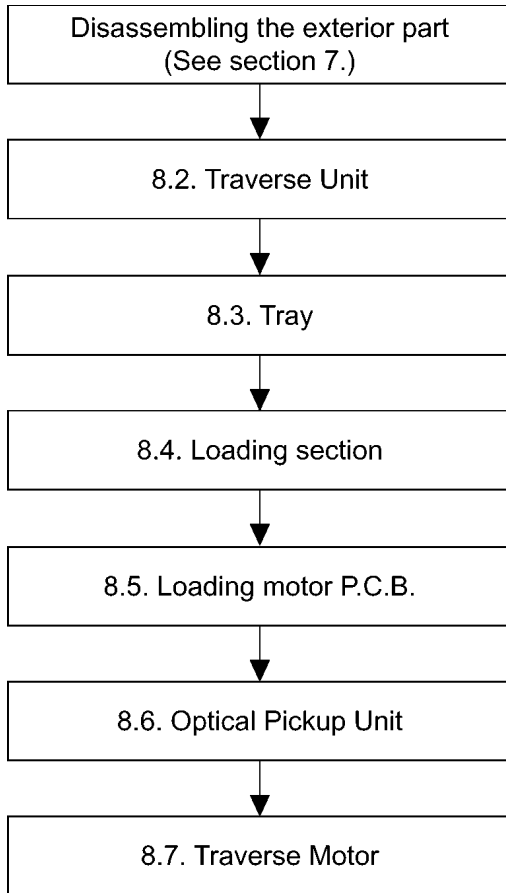


### 8.2. Traverse Unit

1. Slide the lever (A) in the arrow direction (to the opposite side) till it stops.
2. Slide the lever (A) further by bending the tab at the right side of the lever A in the right direction. (The right groove opens and the boss becomes seen.)
3. Open the lever (B) to left. (The 2 grooves at the left side open.)

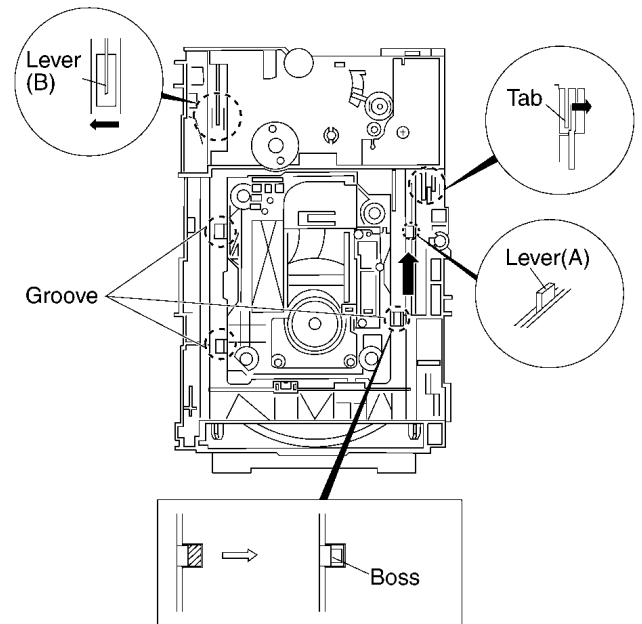


#### 4. Remove the traverse unit

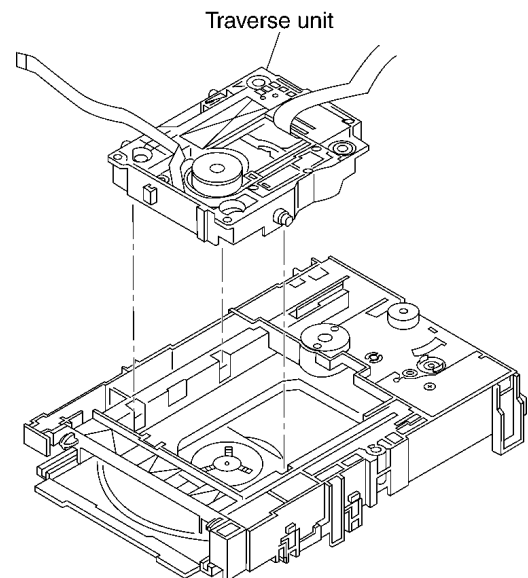


### 8.3. Tray

1. Slide the guide tray unit while pressing the stopper in the arrow direction, and remove the guide tray unit.

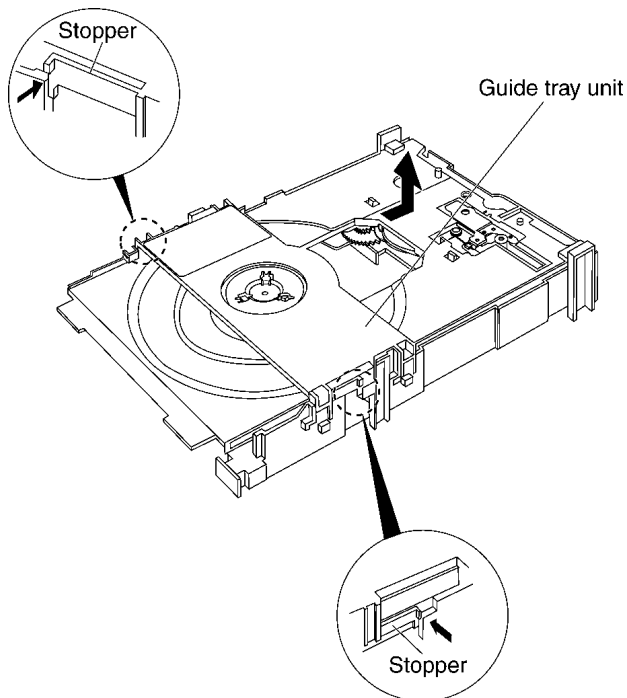


2. Raise the loading unit.



3. Slide the lever in the arrow direction till it stops and pull the tray out.

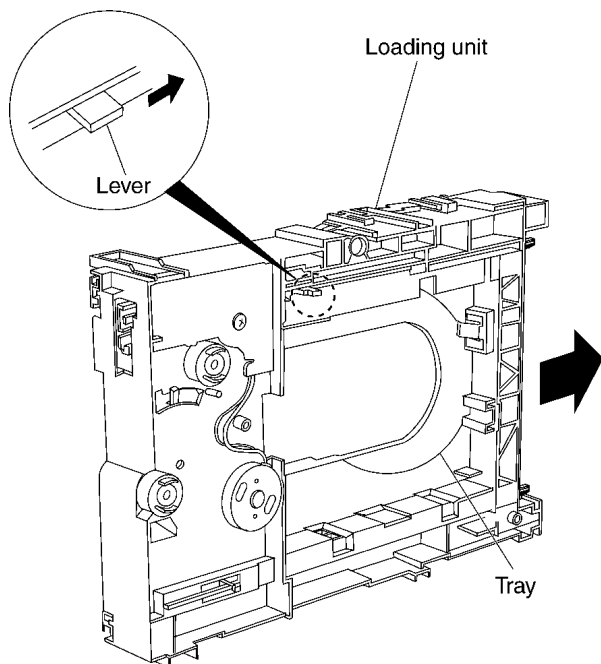

4. Spread the tabs at the both sides and pull the tray out. (The tray slides a little forward and stops.)

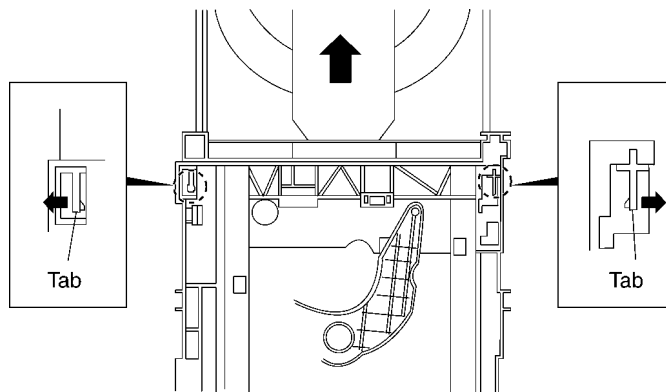


5. Remove the drive arm concave phase from the tray slider and tray.

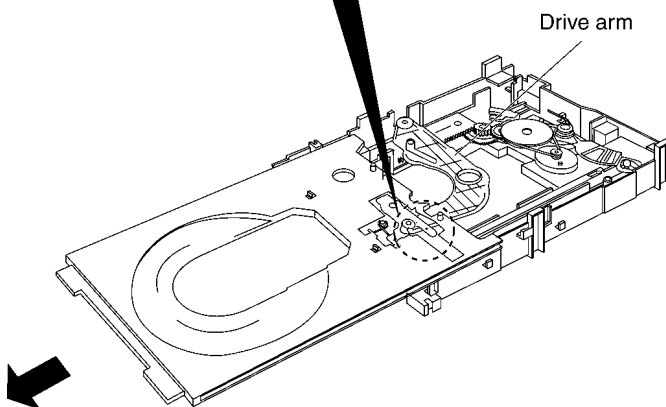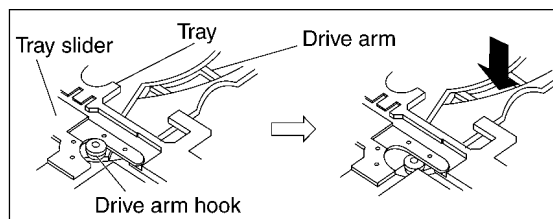

#### <Assembling the tray unit>

1. Insert a part of the tray into the unit sliding over the groove on the mechanical chassis unit.



2. Insert the tray to the point before the tab of the mechanical chassis unit.

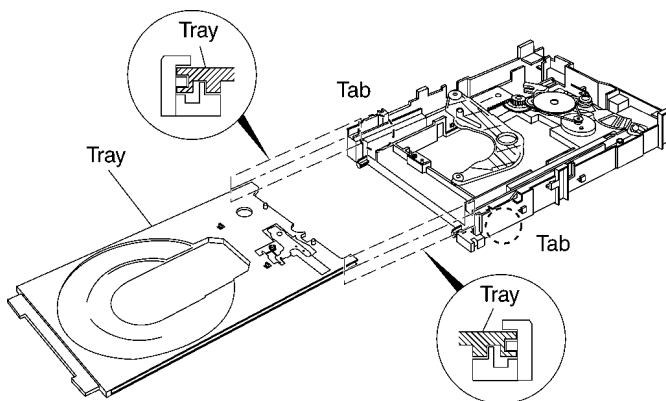

3. Hook the drive arm concave phase over the tray and the tray slider.

4. Press in the tray.



5. Make sure that the tray and the drive arm move smoothly.

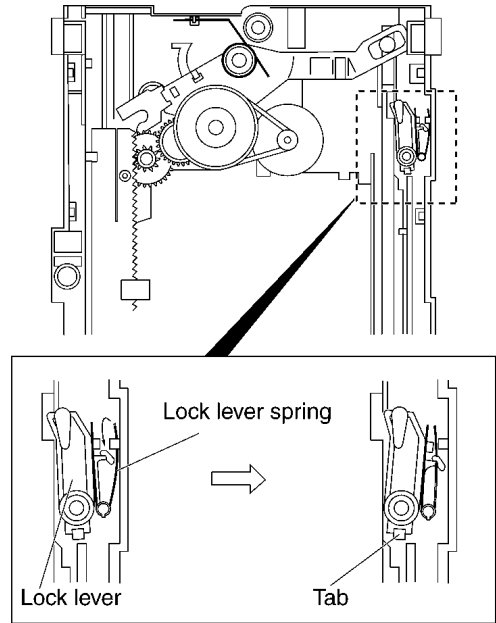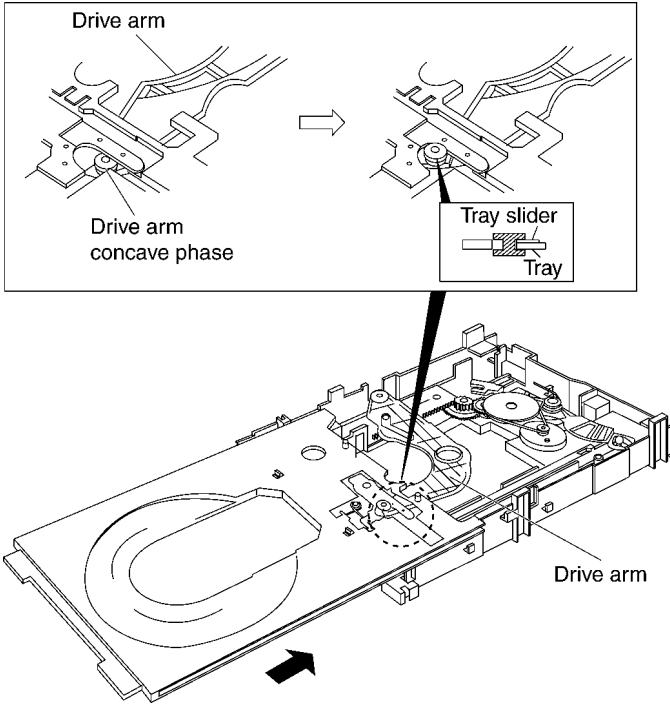

4. Remove the belt.
5. Unlock the tab and remove the pulley.
6. Remove the relay gear.

### 8.4. Loading section

1. Spread the tabs at the both sides and push out the drive arm shaft.

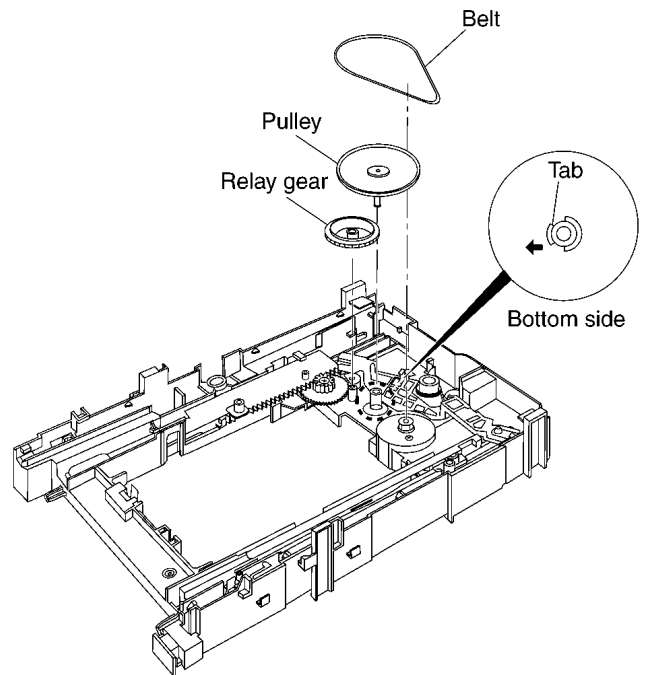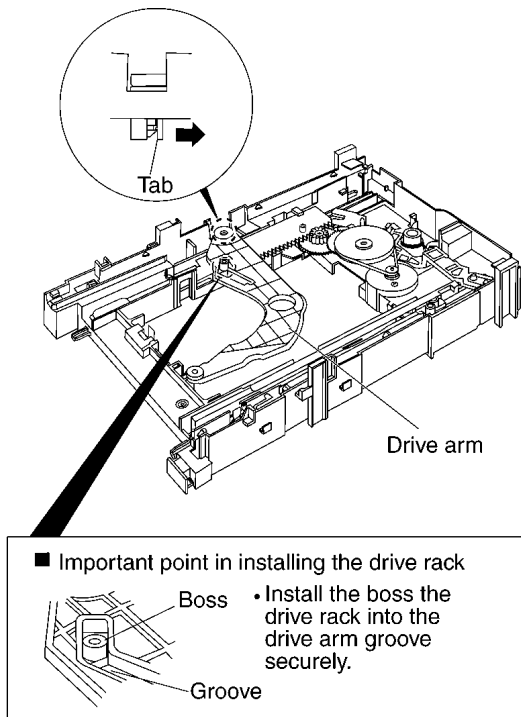


7. Turn the change lever in the arrow direction till it stops.
8. Hook the change lever spring on the change lever project part temporarily.




2. Hook the lock lever spring on the lock lever projection part temporarily.
3. Unlock the tab and remove the lock lever.

## 8.5. Loading motor P.C.B.

1. Unscrew the screws.

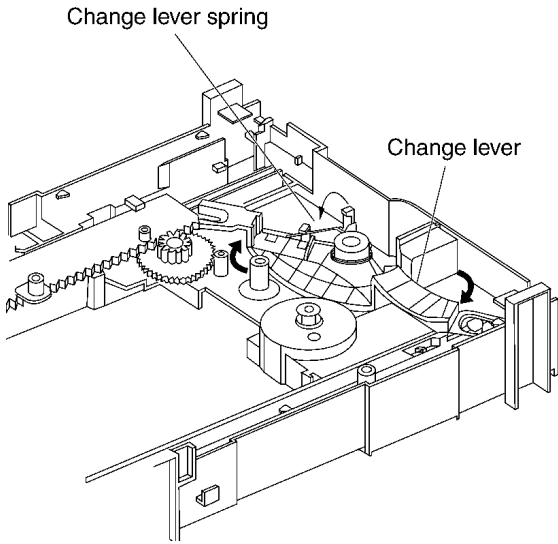

9. Pull the lever (B) in the bottom side to your side and remove the change lever.

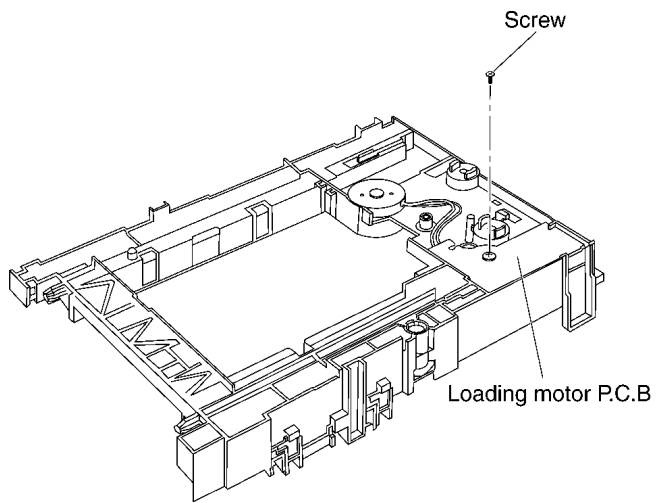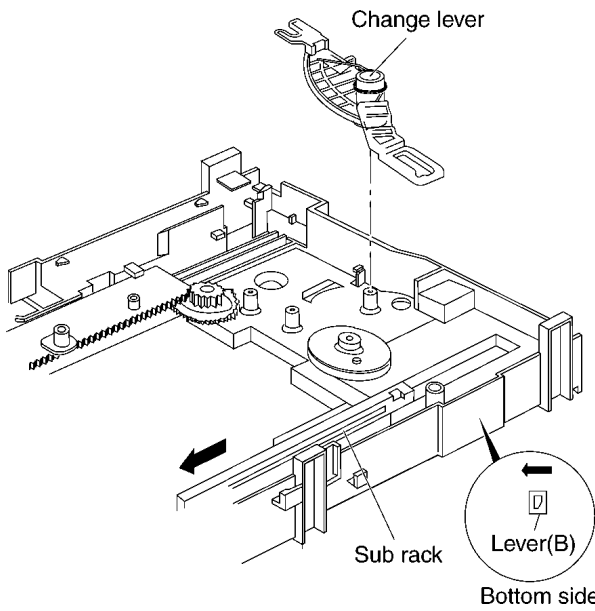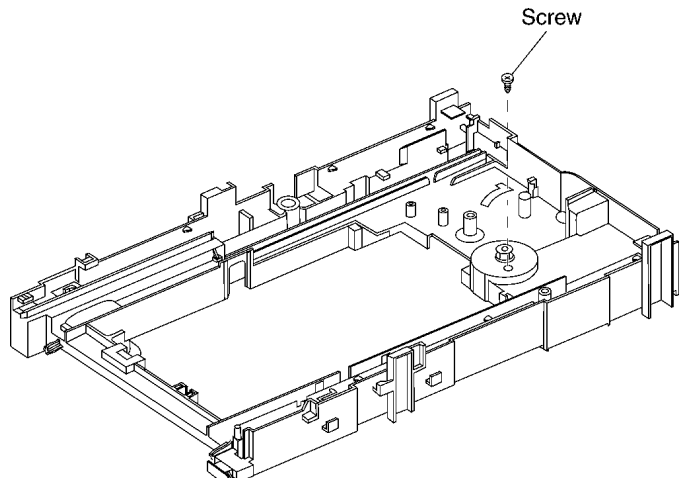

10. Remove the drive rack, the sub rack and the drive gear.

