

## CHAP 9. Alignment and Adjustment

### 9-4 VCR Block Adjustment –NVRAM Setting- Continued

- 1) Intermittently short-circuit the two Test Points on VCR Main PCB. (See Fig. 3-2)
- 2) Press the “1, 4” button on the remote control. The option setting appears. (See Fig. 3-3)
- 3) Select the option number (See table 3-1) of corresponding model with “ , , , ” buttons on the remote control.
- 4) After selecting the option number is completed, press the “ ” button of remote control. (If “ ” button is pressed, the selected number is changescolor. ; See Fig. 3-4)
- 5) Press the “ENTER” button of remote control again to store the option number.
- 6) Turn the Power off.

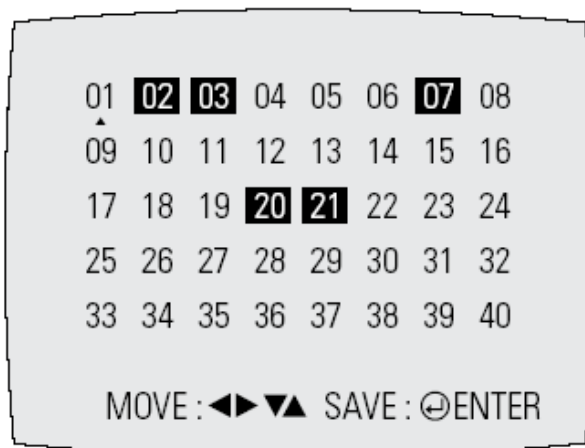


Fig.3-3

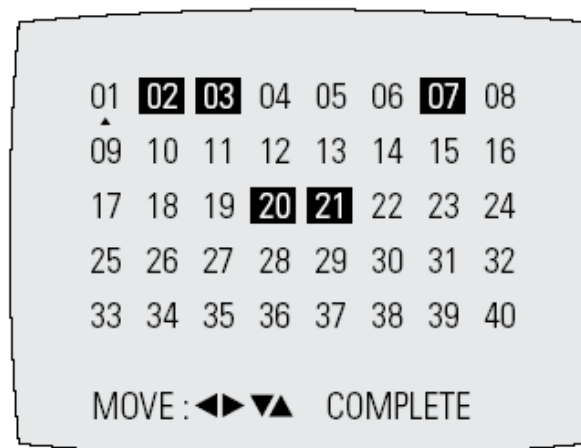


Fig.3-4

## CHAP 9. Alignment and Adjustment

### 9-4 VCR Block Adjustment –NVRAM Setting- Model Option

MODEL	OPTION NUMBERS
DVD-V5600/XEF	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 21, 26, 33, 34, 35, 36, 38, 40, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V6600/XEF	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 21, 26, 33, 34, 35, 36, 38, 40, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V5600/XEB	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 21, 26, 33, 34, 35, 36, 38, 40, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V6600/XEB	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 21, 26, 33, 34, 35, 36, 38, 40, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V5600/XEU	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 17, 18, 25, 26, 34, 38, 40, 41, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V6600/XEU	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 17, 18, 25, 26, 34, 38, 40, 41, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V5600/XEN, XEC, XEE	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 34, 36, 38, 40, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V6600/XEN, XEC, XEE	4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 34, 36, 38, 40, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V5600/XEG, COM, XET	4, 5, 6, 7, 9, 10, 11, 12, 13, 15, 16, 17, 18, 34, 36, 38, 40, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V6600/XEG, COM, XET	4, 5, 6, 7, 9, 10, 11, 12, 13, 15, 16, 17, 18, 34, 36, 38, 40, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V5600/EUR, XEO, XEH	4, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 33, 34, 36, 38, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V6600/EUR, XEO, XEH	4, 6, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 33, 34, 36, 38, 42, 44, 47, 48, 49, 50, 51, 58, 61, 63, 65, 69, 72
DVD-V5600/XEV	12, 17, 18, 20, 21, 26, 27, 33, 34, 36, 37, 39, 42, 44, 47, 48, 49, 50, 51, 52, 54, 58, 61, 63, 65, 66, 69