



Assistenza Tecnica

After Sales Service

Service Apres Vente

Kundendienst

Servicio Post-Venta




W.MACHINE/WASHER-DRYER


31001299 CTY1046SY

Service Manual


## Dibujo despiece mueble

**Candy** PR 2003  
CTG - CTY (Chrono...)

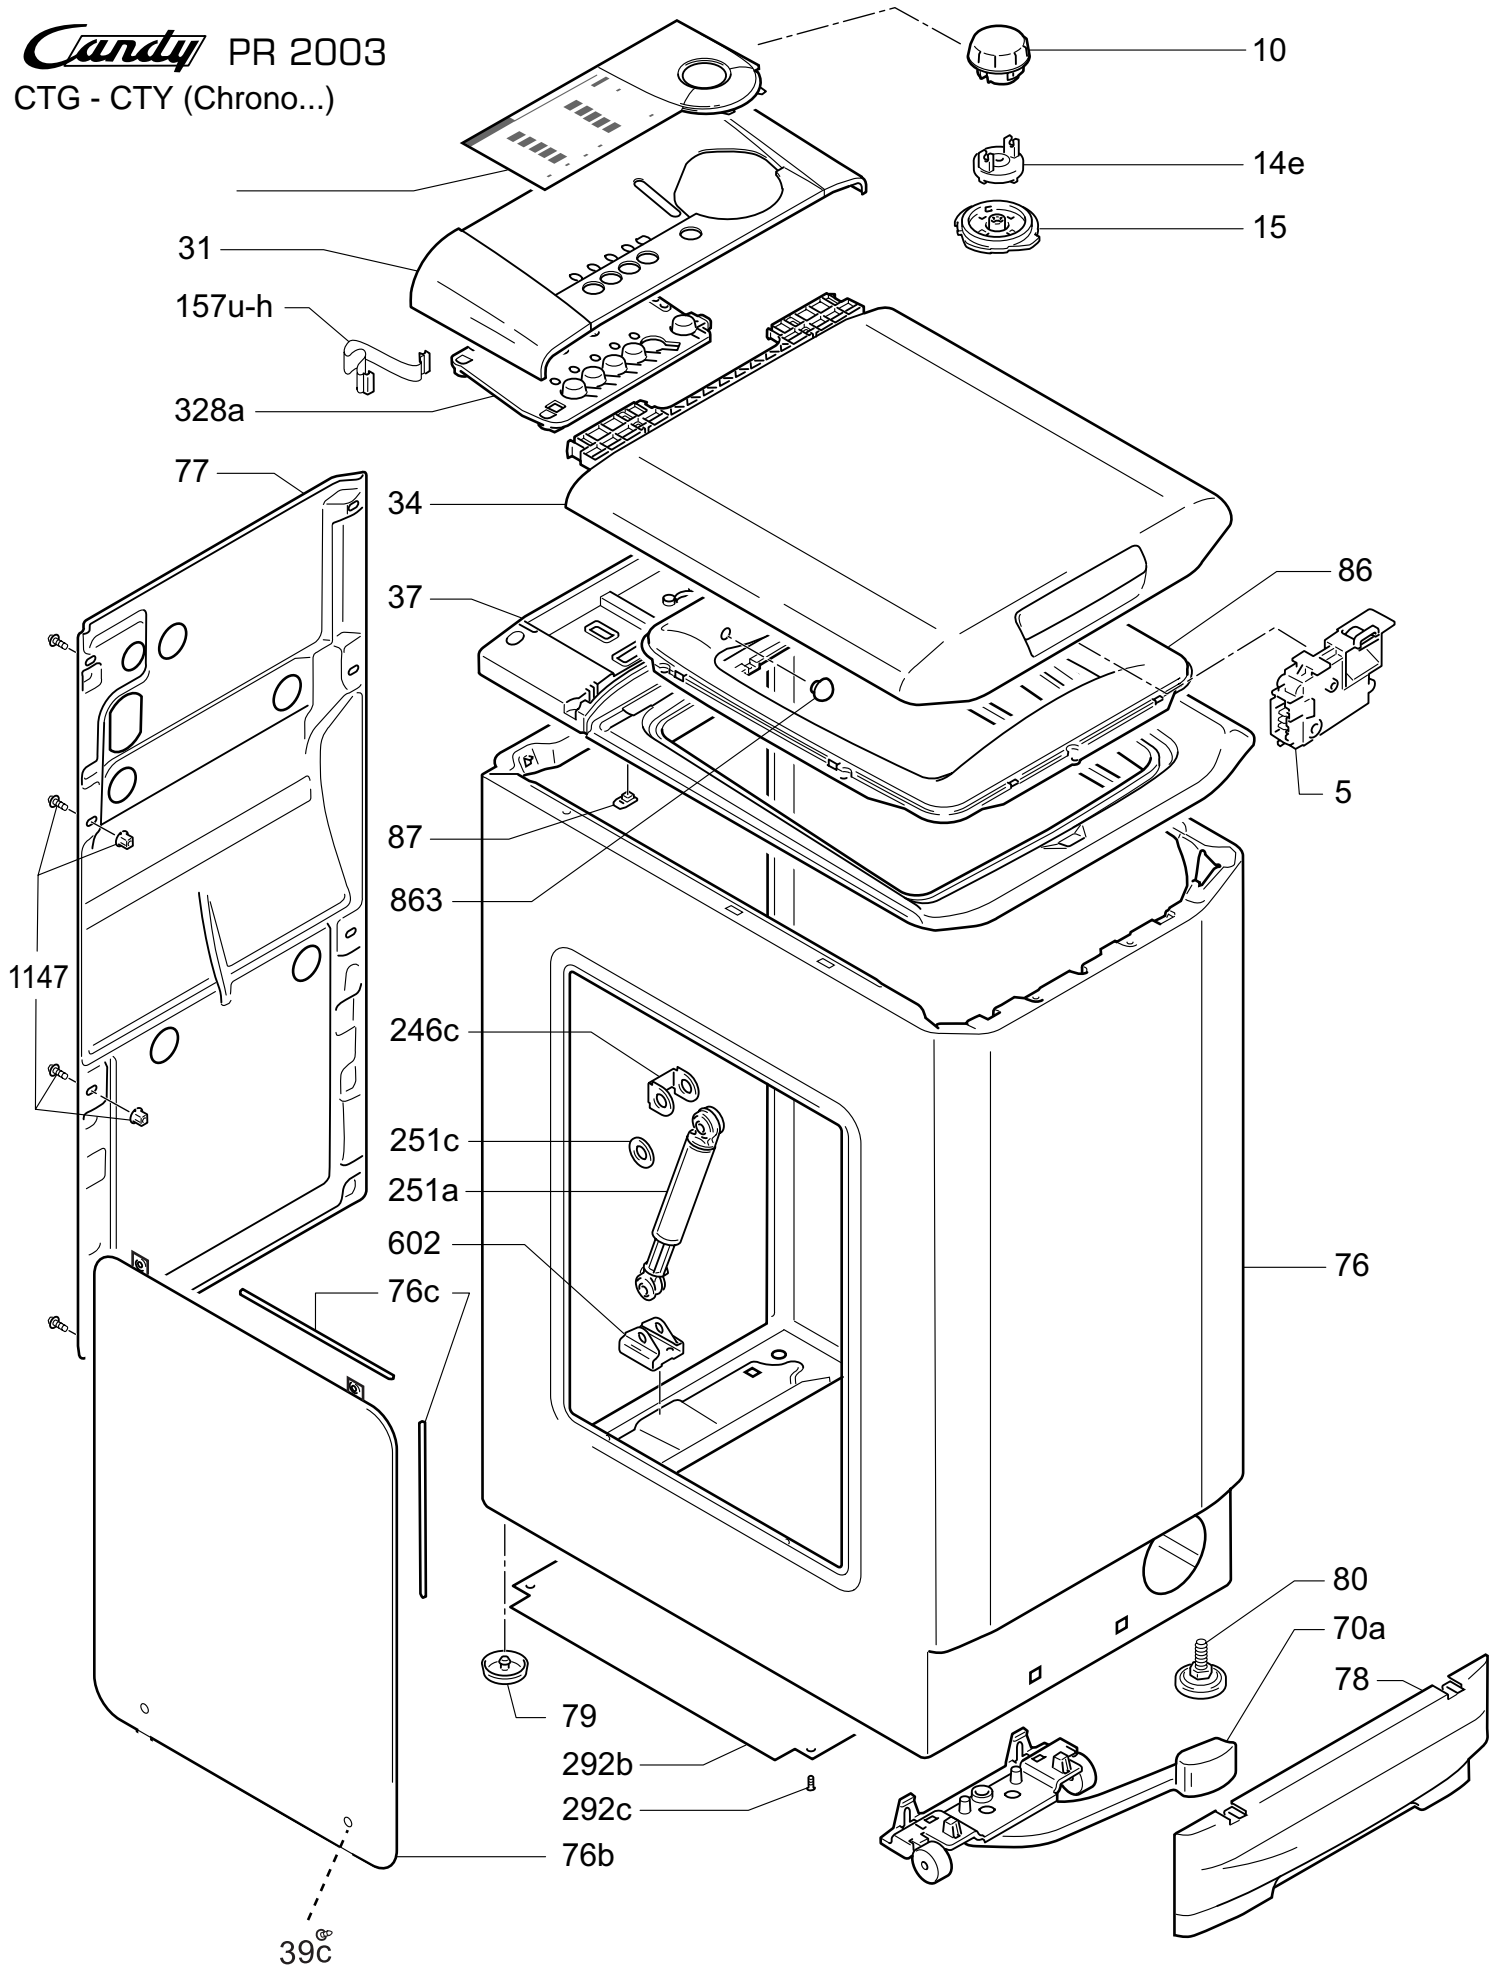

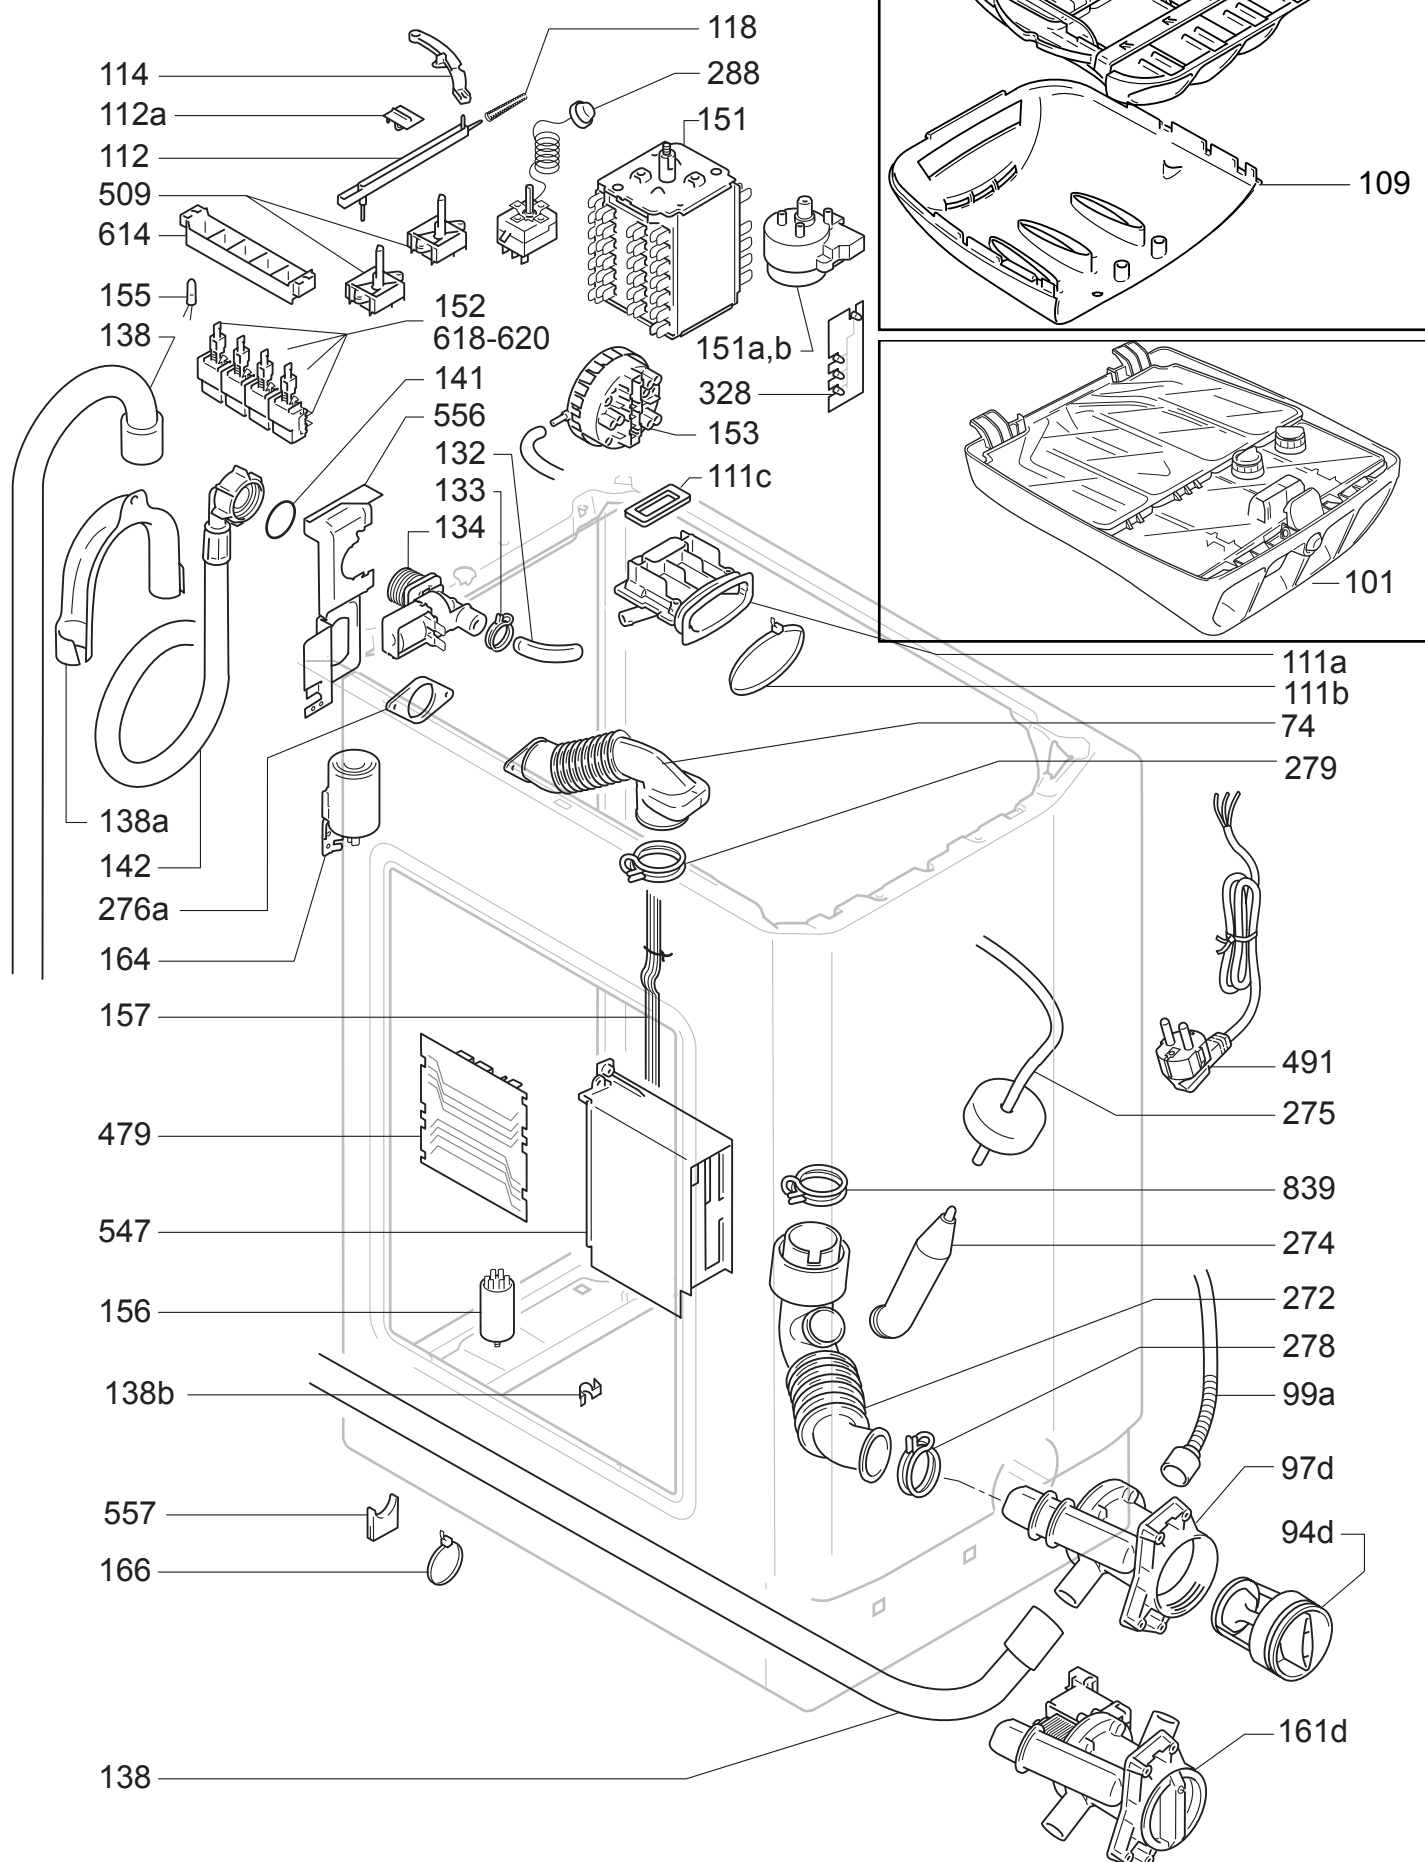

PR 2003

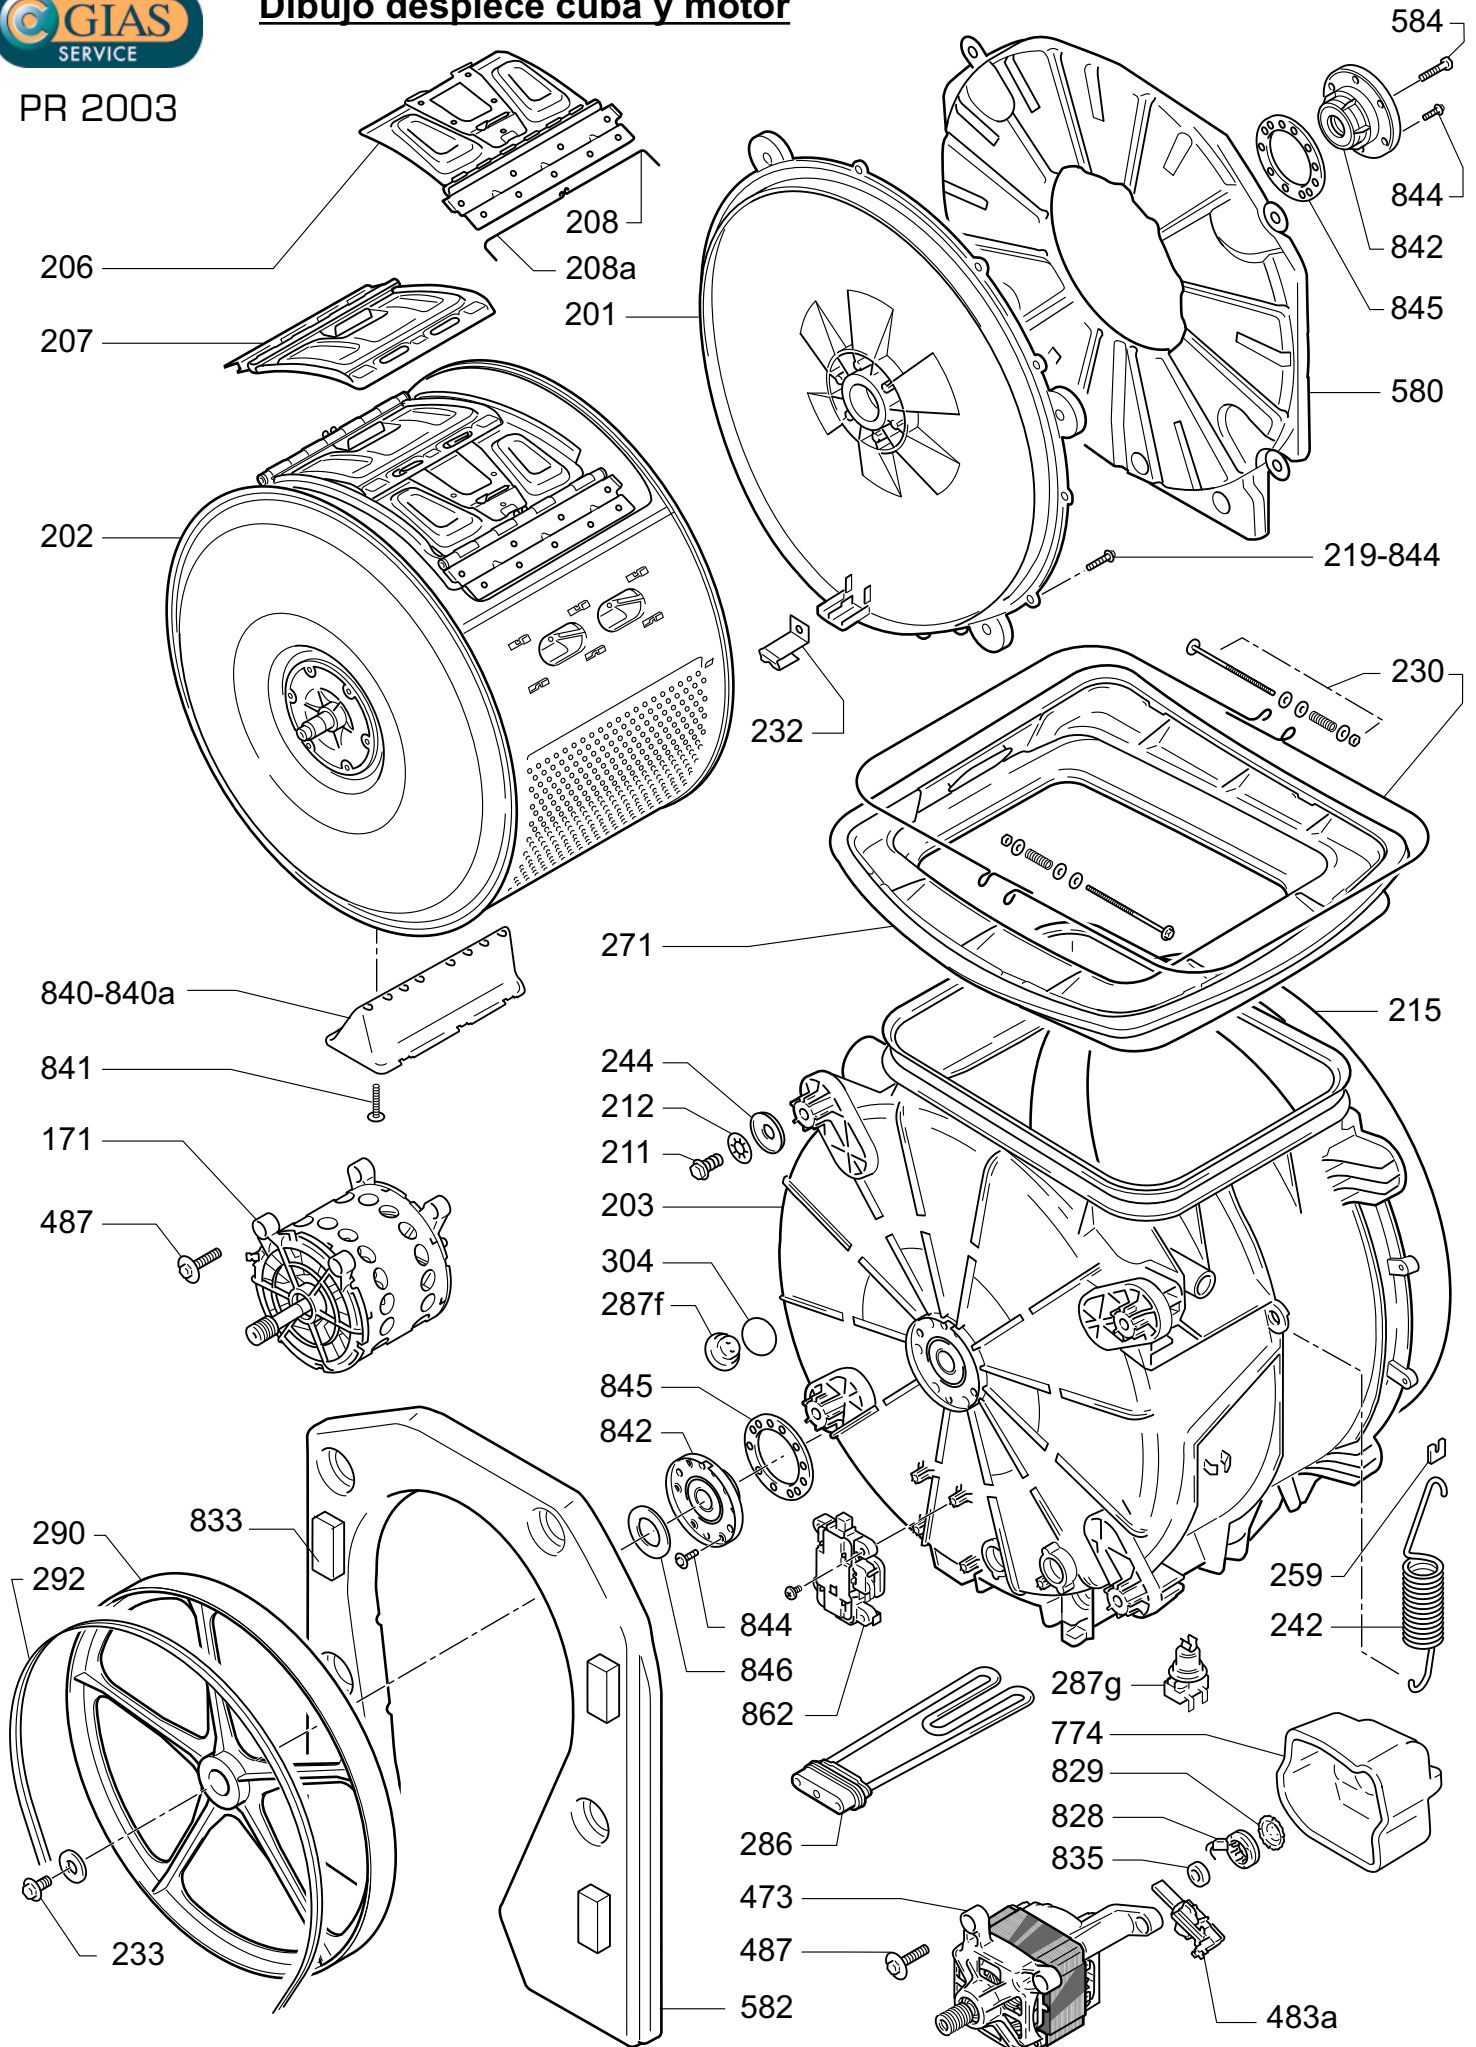



31001299 CTY1046SY 0613 (29/03/2006)

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
5	Door safety device	80049349		
10	Timer/select. knob	46001958		
14e	Timer knobs support	46002104	0641 (09/10/2006)	0641 (09/10/2006)
14e	Timer knobs support	46003068		
15	Cam disc	80051897		0641 (09/10/2006)
31	Control panel	46002911		
34	White cover	46002320		
37	Upper frame	46000994	0641 (09/10/2006)	0641 (09/10/2006)
37	Upper frame	46002849		
39c	self-threading screw for metal	80007321		
74	Steam drain hose	46000786		
76	Cabinet assy	46000307		
76b	Cabinet side cover	80049583		
76c	Cabinet side cover gasket	80007172		
77	Rear panel	80049269		
78	Socle	80049377		
79	Rear foot	46000878		
80	Front foot	92692300		
86	Upper frame	46002622		
87a	Adhesive bumper	46001044		
94d	Filter w/knob without screw	41004157		
97d	Filt hous w/filter cartridge	41005965		
99a	Hose	46000804		
101	Dispenser drawer	46002165	0641 (09/10/2006)	0641 (09/10/2006)
101	Dispenser drawer	46002836		
111a	Water inject.nozzle assy	46002054	0641 (09/10/2006)	0641 (09/10/2006)
111a	Water inject.nozzle assy	46002848		
111c	Water inject assy gasket	80051088		
112	Distribution connecting rod	46002145		0641 (09/10/2006)
112a	Direction control bridle	80051225		0641 (09/10/2006)
114	Driving lever	80016595		0641 (09/10/2006)
118	Spring	80050321		0641 (09/10/2006)
132	Hose	46002053		



31001299 CTY1046SY 0613 (29/03/2006)

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
133	Hose clip	80034762		
134	Solenoid valve	90450750		0641 (09/10/2006)
134	Solenoid valve	41020418	0641 (09/10/2006)	
138	Drain hose	80034556		
138a	Drain house elbow	80001787		
142	Fill hose	92250869		
151b	Motorized selector 22 settings	41003735		0641 (09/10/2006)
151g	selector 22 settings	41014503	0641 (09/10/2006)	
153	Pressure switch	46002532		0641 (09/10/2006)
153	Pressure switch	41019606	0641 (09/10/2006)	
157	Wiring harness	46002060		0641 (09/10/2006)
157	Wiring harness	46003127	0641 (09/10/2006)	
157u	16 Way flat cable	41008245		
158	Mains block	91623678		
161	Drain/recycle pump	46000636		0641 (09/10/2006)
161	Drain/recycle pump	46002971	0641 (09/10/2006)	
164	Anti jamming filter radio	91212795		0641 (09/10/2006)
164	Anti jamming filter radio	91200098	0641 (09/10/2006)	
201	Front flange	46000262		
202	Drum	46001969		
203	Tub	46002141		
206a	Kit drum flap doors	81452905		
211a	Bolt right	46001345		
215	Tub gasket	46000063		
219	Bolt	46000590		
225a	Gasket	92445626		
230	Tub gasket clip	46000125		
232	Heater holder	92736578		
242	Support spring.	46000762		
244	Washer	80000664		
251a	Telescopic shock absorber	46001949		
251e	Shoch absorber pin	46001948		
259	Support	92673961		



31001299 CTY1046SY 0613 (29/03/2006)

		Ricambio Part No. Piec E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
271	Door gasket	46001221		
272	Discharge pipe	46000016		
274	Pressure switch air chamber	91611202		
275	5x8 hose	80024987	0641 (09/10/2006)	0641 (09/10/2006)
275	5x8 hose	46003087		
276a	Grid steam hose	80049867		
286	Heater	91201638		
287m	NTC probe	92743616	0641 (09/10/2006)	0641 (09/10/2006)
287m	NTC probe	41020334		
290	Drum pulley	46000319		
292a	Extensible belt	46000003		
292b	Bottom panel	46001486		
292c	Clips	80050373		
328	Control panel electronic module	41015190	0641 (09/10/2006)	0641 (09/10/2006)
328	Control panel electronic module	41021250		
473a	Commutator motor SOLE-ACC	46000183		
479i	Coreboard 32K programmed	81452655		0641 (09/10/2006)
479m	Electronic control 32K not programmed	41013959		0641 (09/10/2006)
479u	Coreboard INVENSYS programmed	81452804	0641 (09/10/2006)	
483a	Brush with brush holder	81451998		
487	Special bolt	46000559		
491	Mains cable	91200206		
547	Module protection	80051617		0641 (09/10/2006)
556	Electric valve support	80050450		
557	Hose support hook	80001753		
580	Front counterweight	46000020		
582	Pulley side count.weight	46000027		
586	Counter cover pin	80049343		
828b	Tach.coil	49000464		
832	Discharge pipe circlip	91408004		
833a	Sponge balance weight	46002841		
834	Lower counterweight supp.	92898923		



Assistenza Tecnica

After Sales Service

Service Apres Vente

Kundendienst

Servicio Post-Venta

31001299 CTY1046SY 0613 (29/03/2006)

		Ricambio Part No. Piece E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
Ref.	Descrizione - Description - Beschreibung - Descripcion			
835a	Magnet	49000465		
840	Drum paddle	46000165		
842	Tub bearing disk	46000260		
845	Gasket	46000255		
863	Rubber door stop	46000692		
999	Wiring diagram	46002062		
999	Wiring diagram	46003241	0641 (09/10/2006)	0641 (09/10/2006)
1147	Transit bolt kit	81452279		
1147a	Rear pannel fixing kit	81452281		




## 31001299 CTY1046SY 0613 (29/03/2006) - Modifications History -

Ref.	Descrizione - Description - Beschreibung - Descripcion	Ricambio Part No. Piec E-Teil Pieza	Inizio Beginning Debut Begin Inicio	Fine Ending Fin End Fin
	<b>NEW WATER DISTRIBUTION</b>			
112a	Direction control bridle	80051225		0641 (09/10/2006)
112	Distribution connecting rod	46002145		0641 (09/10/2006)
287m	NTC probe	92743616		0641 (09/10/2006)
287m	NTC probe	41020334	0641 (09/10/2006)	
153	Pressure switch	46002532		0641 (09/10/2006)
153	Pressure switch	41019606	0641 (09/10/2006)	
151b	Motorized selector 22 settings	41003735		0641 (09/10/2006)
151g	selector 22 settings	41014503	0641 (09/10/2006)	
157	Wiring harness	46002060		0641 (09/10/2006)
157	Wiring harness	46003127	0641 (09/10/2006)	
161	Drain/recycle pump	46000636		0641 (09/10/2006)
161	Drain/recycle pump	46002971	0641 (09/10/2006)	
164	Anti jamming filter radio	91212795		0641 (09/10/2006)
164	Anti jamming filter radio	91200098	0641 (09/10/2006)	
134	Solenoid valve	90450750		0641 (09/10/2006)
134	Solenoid valve	41020418	0641 (09/10/2006)	
111a	Water inject.nozzle assy	46002054		0641 (09/10/2006)
111a	Water inject.nozzle assy	46002848	0641 (09/10/2006)	
37	Upper frame	46000994		0641 (09/10/2006)
37	Upper frame	46002849	0641 (09/10/2006)	
114	Driving lever	80016595		0641 (09/10/2006)
999	Wiring diagram	46002062		0641 (09/10/2006)
999	Wiring diagram	46003241	0641 (09/10/2006)	
118	Spring	80050321		0641 (09/10/2006)
15	Cam disc	80051897		0641 (09/10/2006)
14e	Timer knobs support	46002104		0641 (09/10/2006)
14e	Timer knobs support	46003068	0641 (09/10/2006)	
328	Control panel electronic module	41015190		0641 (09/10/2006)
328	Control panel electronic module	41021250	0641 (09/10/2006)	
101	Dispenser drawer	46002165		0641 (09/10/2006)
101	Dispenser drawer	46002836	0641 (09/10/2006)	
547	Module protection	80051617		0641 (09/10/2006)
275	5x8 hose	80024987		0641 (09/10/2006)
275	5x8 hose	46003087	0641 (09/10/2006)	
479m	Electronic control 32K not programmed	41013959		0641 (09/10/2006)
479i	Coreboard 32K programmed	81452655		0641 (09/10/2006)
479u	Coreboard INVENSYS programmed	81452804	0641 (09/10/2006)	

M O D E L L I - MODELS - MODELES - MODELLE - MODELOS

CODICE CODE CODE CODE CODIGO	DENOMINAZIONE DESCRIPTION DESCRIPTION BESCHREINBUNG DENOMINACION	STOCK STOCK STOCK STOCK STOCK	COMPOSIZIONE COMPOSITION COMPOSITION KOMPOSITION COMPOSICION	SCHEDA CUORE CORE BOARD
31000946	CANDY CTH 1270 AA	FRANCIA	CRONO 15 LED	41013959
31000948	CANDY CTG 122 AA	FRANCIA	CRONO 14 LED	41013959
31000949	CANDY CTY 10 AA	FRANCIA	CRONO 14 LED	41013959
31001000	CANDY CTH 125 AA	FRANCIA	CRONO 14 LED	41013959
31001029	CANDY CTG 100-37	ESPANA	CRONO 14 LED	41013959
31001034	CANDY CTY 113-SY	ESPANA	CRONO 14 LED	41013959
31001033	CANDY CTY 103-SY	ESPANA	CRONO 14 LED	41013959
31001035	CANDY CTY 93-SY	ESPANA	CRONO 14 LED	41013959
31001030	CANDY CTG 85-01	Italia	CRONO 14 LED	41013959
31001054	CANDY CTG 125 SY	EXPORT	CRONO 14 LED	41013959
31001053	CANDY CTG 105 SY	EXPORT	CRONO 14 LED	41013959
31001052	CANDY CTG 85 SY	EXPORT	CRONO 14 LED	41013959
31001051	CANDY CTY 104 SY	EXPORT	CRONO 14 LED	41013959
31001050	CANDY CTY 84 SY	EXPORT	CRONO 14 LED	41013959
31001090	CANDY CTG 145-84	ALEMAN.	CRONO 14 LED	41015597
31001124	CANDY CTG 95 SY	EXPORT	CRONO 14 LED	41013959
31001091	CANDY CTG 125-84	ALEMAN.	CRONO 14 LED	41013959
31001288	CANDY CTY 1250-47 AA	FRANCIA	CRONO 14 LED	41013959
31001289	CANDY CTY 12-47 AA	FRANCIA	CRONO 14 LED	41013959
31001290	CANDY CTG 136-47 AA	FRANCIA	CRONO 14 LED	41013959
31001251	CANDY CTG 1056-01	ITALIA	CRONO 14 LED	41013959
31001252	CANDY CTY 114 SY	ITALIA	CRONO 14 LED	41013959
31001292	CANDY CTG 1456 SY	EXPORT	CRONO 14 LED	41015597
31001293	CANDY CTG 1256 SY	EXPORT	CRONO 14 LED	41013959
31001294	CANDY CTG 1056 SY	EXPORT	CRONO 14 LED	41013959

CODICE CODE CODE CODE CODIGO	DENOMINAZIONE DESCRIPTION DESCRIPTION BESCHREINBUNG DENOMINACION	STOCK STOCK STOCK STOCK STOCK	COMPOSIZIONE COMPOSITION COMPOSITION KOMPOSITION COMPOSICION	SCHEDA CUORE CORE BOARD
31001295	CANDY CTG 1156 SY	EXPORT	CRONO 14 LED	41013959
31001296	CANDY CTG 1166 SY	EXPORT	CRONO 14 LED	41013959
31001297	CANDY CTY 8546 SY	EXPORT	CRONO 14 LED	41013959
31001298	CANDY CTY 1246 SY	EXPORT	CRONO 14 LED	41013959
31001299	CANDY CTY 1046 SY	EXPORT	CRONO 14 LED	41013959
31001314	CANDY CTG 956 SY LINE	EXPORT	CRONO 14 LED	41013959
31001315	CANDY CTG 856 SY	EXPORT	CRONO 14 LED	41013959
31001317	CANDY CTY 1035-07 AA	EXPORT	CRONO 14 LED	41013959
31001318	CANDY CTY 835-07 AA	EXPORT	CRONO 14 LED	41013959
31001127	OTSEIN OHNT 7-37AA	ESPANA	CRONO 14 LED	41013959
31001162	HOOVER HNT 412 SY	EUROPA	CRONO 14 LED	41013959
31001334	OTSEIN OHNT 776 AA	ESPANA	CRONO 14 LED	41013959
31001335	OTSEIN LTS 756 H	ESPANA	CRONO 14 LED	41013959
31001336	OTSEIN LTD 826 H	ESPANA	CRONO 14 LED	41013959
31001337	OTSEIN LTD 1026 H	ESPANA	CRONO 14 LED	41013959
31001338	OTSEIN 876 CSH	ESPANA	CRONO 14 LED	41013959
31001339	OTSEIN 1076 CSH	ESPANA	CRONO 14 LED	41013959
31001340	OTSEIN LTC 766 H	ESPANA	CRONO 14 LED	41013959
31001341	OTSEIN LTC 966 H	ESPANA	CRONO 14 LED	41013959
31001342	OTSEIN LTC 1166 H	ESPANA	CRONO 14 LED	41013959
31001373	HOOVER HNT 5146-80 AAA	INGLATERRA	CRONO 15 LED	41015597
31001451	CANDY CTG 1276-47 AA	FRANCIA	CRONO 14 LED	41013959
31001452	CANDY CTG 126-47 AA	FRANCIA	CRONO 14 LED	41013959
31001453	CANDY CTY 13-47 AA	FRANCIA	CRONO 14 LED	41013959
31001454	CANDY CTG 146-47 AAA	FRANCIA	CRONO 14 LED	41015597
31001521	OTSEIN HOOVER OHTC 9/1 AA	ESPANA	CRONO 14 LED	41013959



VARIANTI SIGNIFICATIVE  
SIGNIFICANT VARIATIONS  
VARIATIONS SIGNIFICATIVES  
BEZEICHNENDE VARIANTEN  
VARIANTES SIGNIFICATIVAS

DATA-DATE-DATE  
DATUM - FECHA

INDEX-INDEX-INDEX  
ANZEIGER-INDEX

LAVATRICI - WASHINGMACHINES  
MACHINES A LAVER-WASHMASCHINEN-LAVADORA

DIAGRAMMA TIMER  
TIMER DIAGRAM - SCHEMA TIMER - TIMER-SCHEMA  
DIAGRAMA TIEMPOS PROGRAMADOR

CODICE DISEGNO - DRAWING CODE - CODE SCHEMA ELECTRIQUE - ELEKTRISCHE SCHEMA CODE - CODIGO DISEÑO


9, 1, 2, 0, 1, 3, 3, 8

04.12.2000

A00

RIPRODUZIONE VIETATA - FORBIDDEN REPRODUCTION - REPRODUCTION INTERDITE - NACHDRUCK VERBOTEN - REPRODUCCION PROHIBIDA


The diagram illustrates the electrical control system for a washing machine. It begins with the main power supply (L, N, U) entering through a switch (UP) and a fuse (F). The circuit includes a thermal fuse (ZW), a motor (SEL MOT), a timer (K12, K7, K11), a motor (MOT. 230V), a relay (K8), a motor (MOT. 230V), a relay (BLOC), a relay (RR), a relay (PS), a relay (PN), a relay (RL2), a relay (RL3), a relay (MP), a relay (MR), a relay (EUF), a relay (NTC2), a relay (NTC1), a relay (DT), a relay (SC), a relay (DT2), a relay (DT1), a relay (STA1), a relay (STA2), a relay (ROT1), a relay (ROT2), a relay (MC), a relay (R), a relay (S), a relay (L), a relay (PB). The diagram is labeled 'SCHEDA Cronovision 41015190' and 'SCHEDA CUORE'.

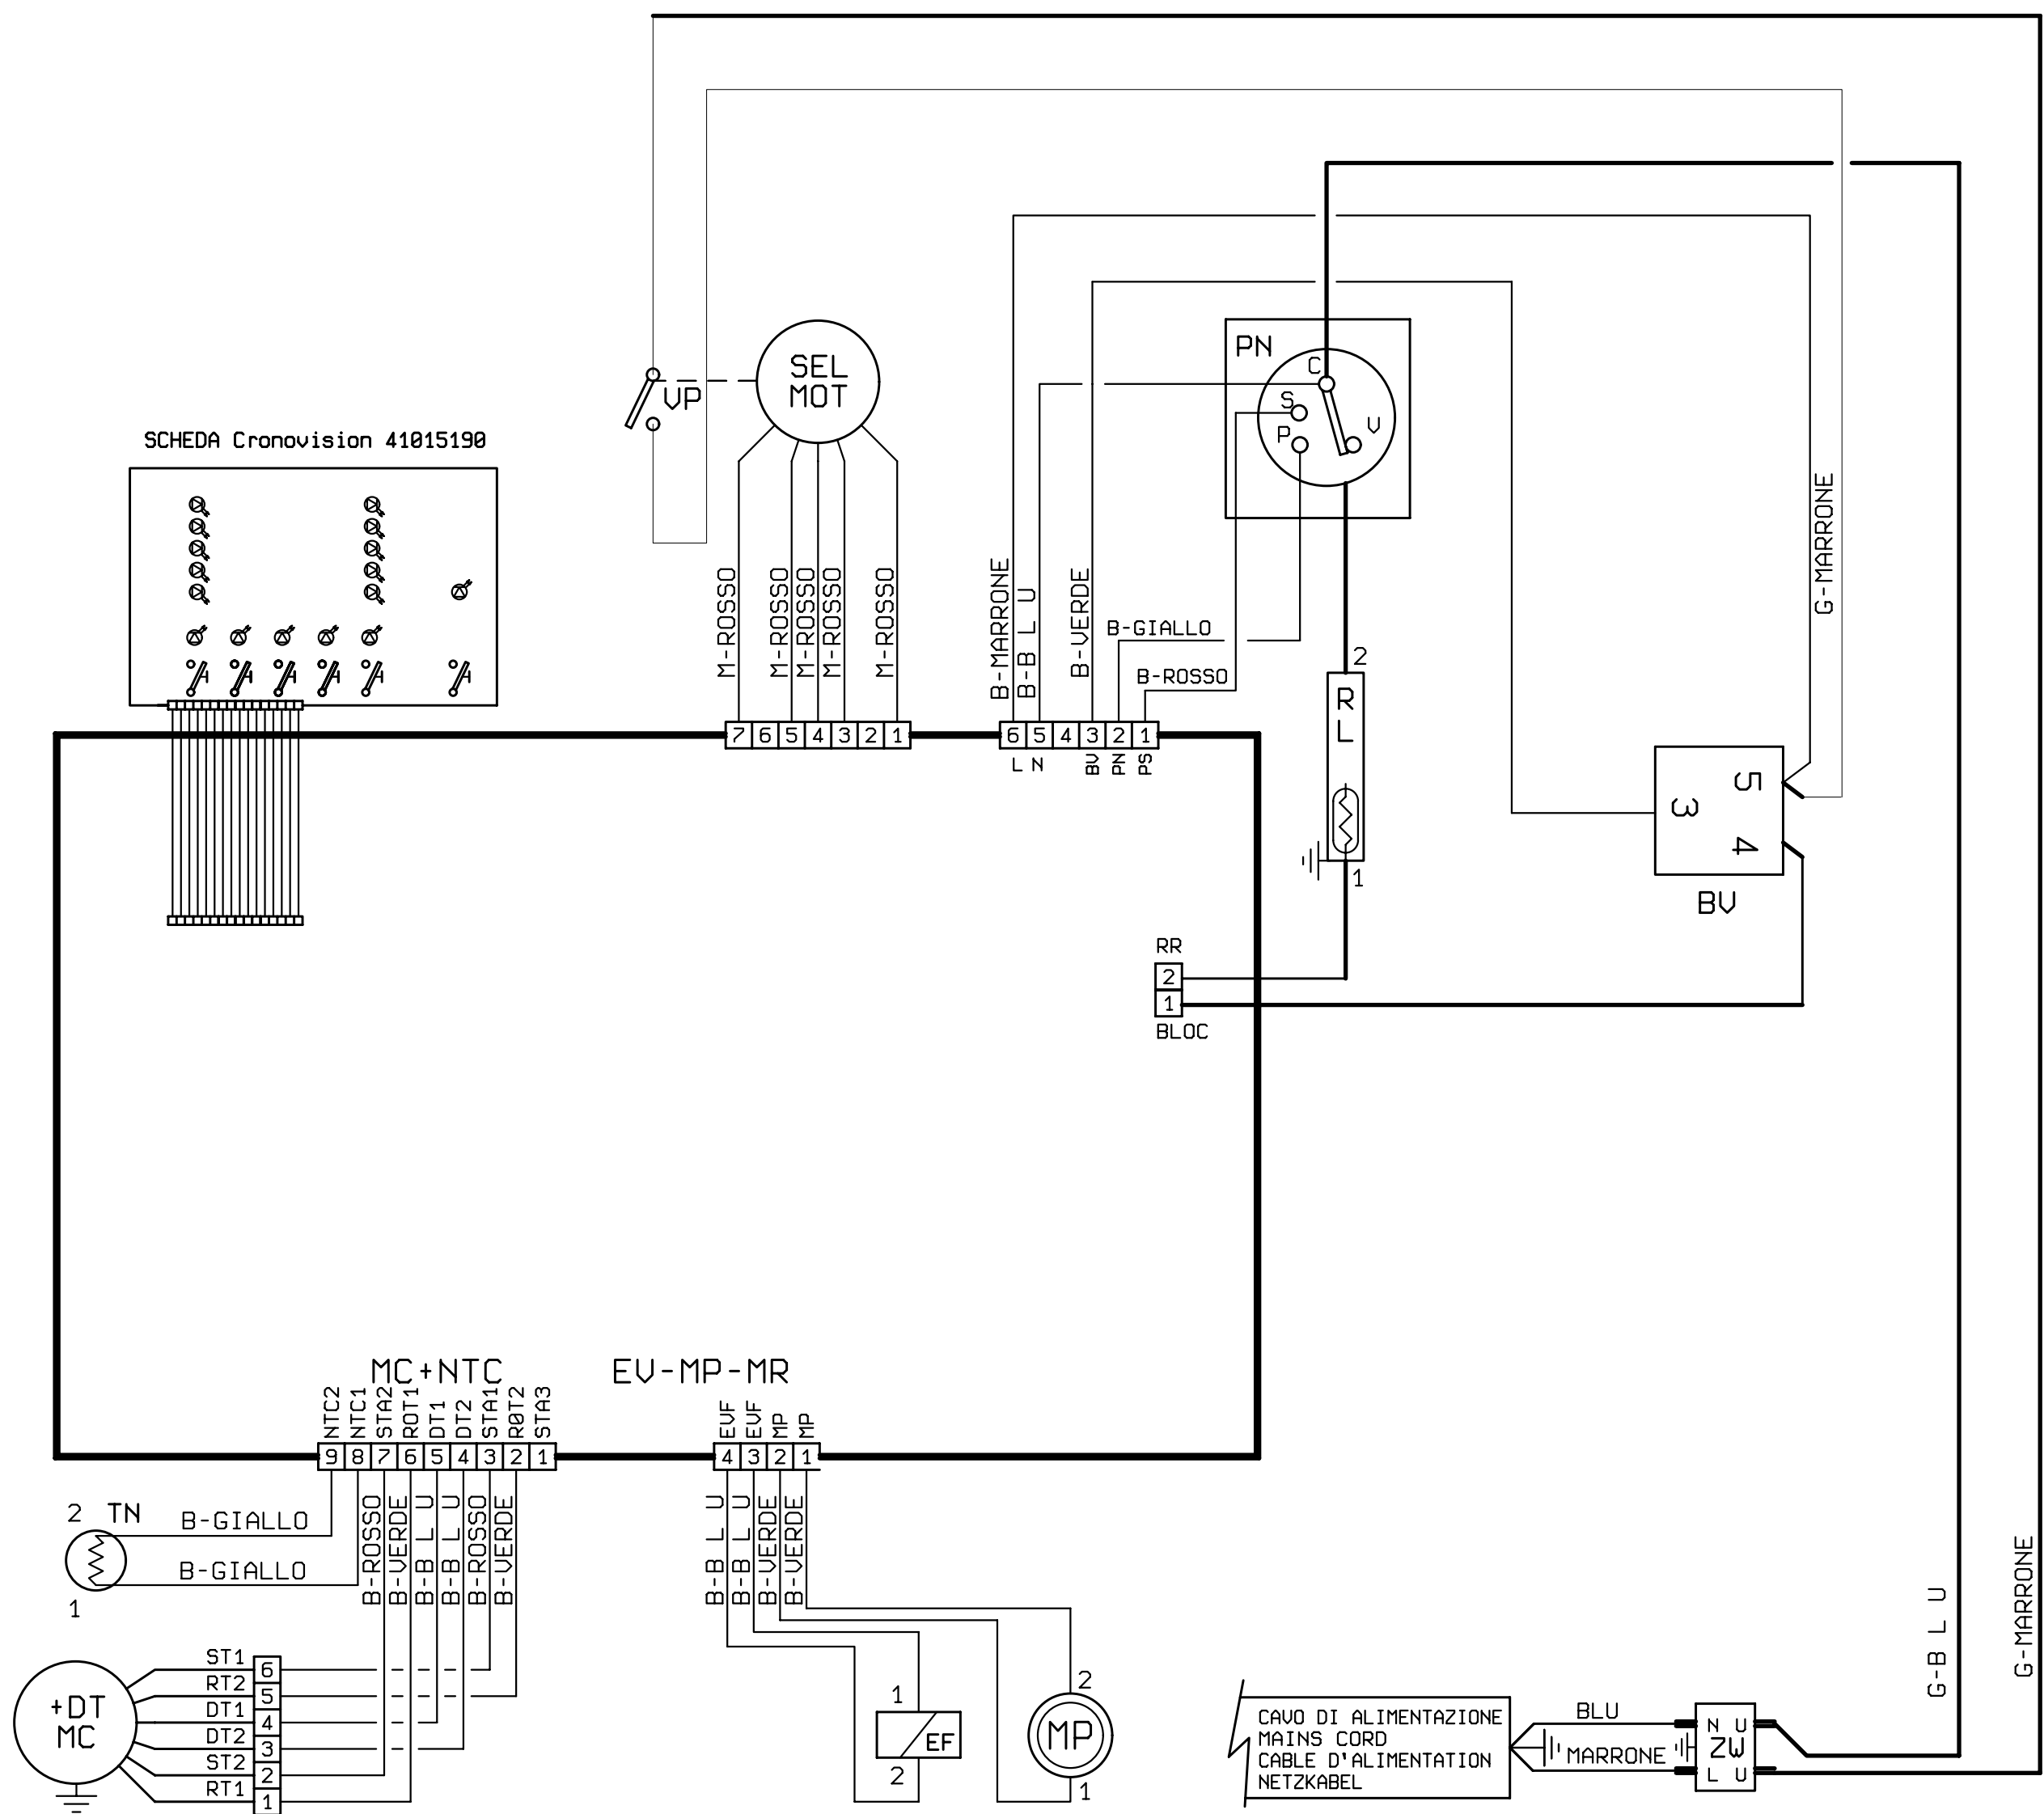

ARANCIO - ORANGE - ORANGE - ORANGE - NARANJA  
 AZZURRO - AZURE - AZUR - HELLBLAU - AZUL  
 BIANCO - WHITE - BLANC - WEISS - BLANCO  
 BLU - BLUE - BLEU - BLAU - AZUL CARGADO  
 GIALLO - YELLOW - JAUNE - GELB - AMARILLO  
 B - 0,5 mm2      G - 1 mm2      M - 0,35 mm2  
 — — — CAVALLOTTI - LINKS - PONTS - HALTER - PUENTES

GRIGIO - GREY - GRIS - GRAU - GRIS  
 MARRONE - BROWN - MARRON - BRAUN - MARRON  
 NERO - BLACK - NOIR - SCHWARZ - NEGRO  
 ROSA - PINK - ROSE - ROSA - ROSA  
 ROSSO - RED - ROUGE - ROT - ROJO  
 VERDE - GREEN - VERT - GRÜN - VERDE

### ST3 - PRESA DI CAMPO - TAPPED FIELD

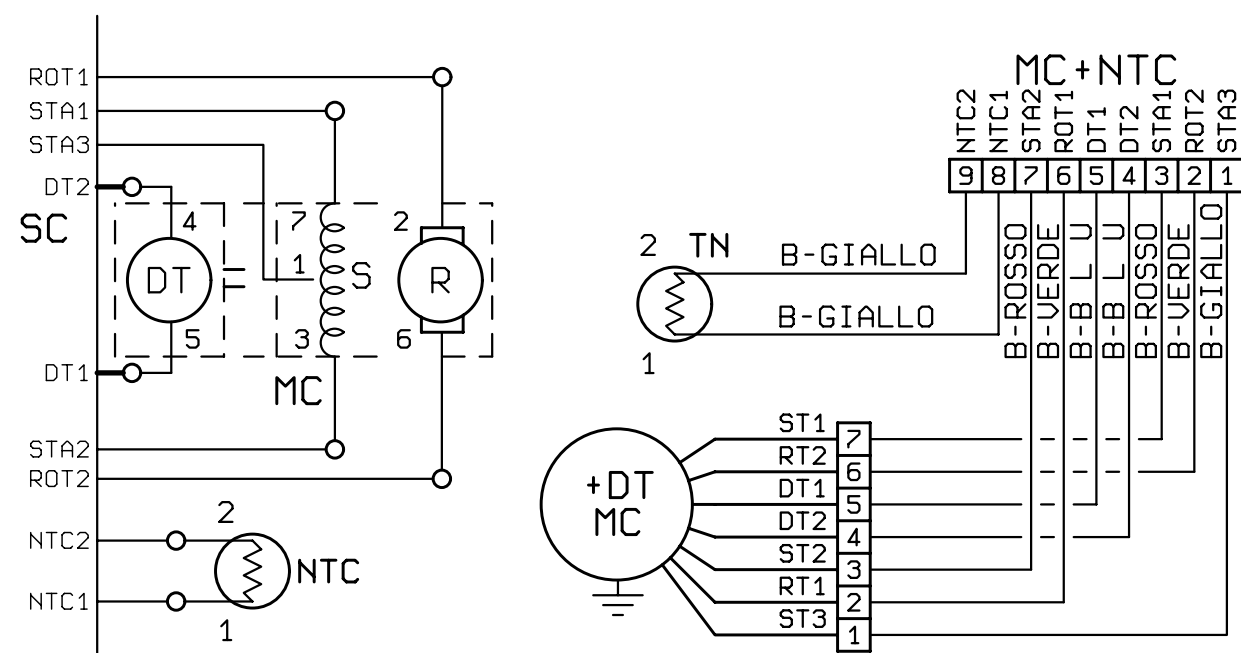

**Versione 22/04/2009**

- 4** Centrifuga lenta - Slow speed spin - Essorage lent - Langsame Zentrifuge - Centrifugado bajo – Düşük hızda sıkma
- 8** Centrifuga veloce - Fast speed spin - Essorage vite - Schnelle Zentrifuge - Centrifugado rapido – Yüksek hızda sıkma
- AN** Antitrabocco - Anti-overflow - Dispositif anti debordement - Antiüberlaufener - Antidesbordamento – Taşma önleyici
- AT** Timer asciugatura - Dryer timer - Programmeur sechage - Trochner timer - Programador secado – Kurutucu zamanlayıcı
- BL** Basetta di linea - Terminal box - Boite a liesons - Klemmbrett - Placa de linea – Terminal kutusu
- BR** Ritardatore apertura amperometrico - Amperometric opening delayer - Retardateur ouverture amperemetrique - Stromverzögerungsrelais - Placa retardadora amperimetrica – Akımsal kapı kilit mekanizması
- BV** Ritardatore apertura voltmetrico - Voltmetric opening delayer - Retardateur ouverture voltmetrique - Voltmeter-Verzögerungsrelais - Placa retardadora voltmetrica – Gerilimsel kapı kilit mekanizması
- C** Carico acqua calda - Hot water filling - Chargement eau chaude - Warmtwasserfüllung - Entrada agua caliente – Sıcak su giri
- CA** Condensatore - Capacitor - Condensateur - Kondensator - Condensador - Kondansatör
- CB** Condensatore aggiunto - Additional capacitor - Condensateur supplementaire - Beifuegende Kondensator - Condensador suplementario –lave kapasitör
- CC** Condensatore centrifuga - Spin capacitor - Condensateur centrifuge - Zentrifuge Kondensator - Condensador centrifugado – Sıkma kapasitörü
- CL** Condensatore lavaggio - Washing capacitor - Condensateur lavage - Waschen - Kondensator - Condensador lavado – Yıkama kapasitörü
- D** Lavaggio delicato - Soft tumble - Mouvement delicat - Delikate Waschung - Lavado delicado – Hassas kurutma

- DT** Dinamo tachimetrica - Tachometric dynamo - Bobine tachymetrique - Regel Dynamo - Dinamo taquimetrica – Takometrik dinamo
- EA** Elettrovalvola asciugatura - Drying solenoid valve - Electrovanne sechage - Trochen - Elektroventil - Electrovalvula secado – Kurutucu solenoid valfi
- EC** Elettrovalvola acqua calda - Solenoid valve for hot water - Electrovanne eau chaude - Warmes Wasser Elektroventil - Electrovalvula agua caliente – Sıcak su solenoid valfi
- EF** Elettrovalvola acqua fredda - Solenoid valve for cold water - Electrovanne eau froid - Kaltes Wasser Elektroventil - Electrovalvula agua fria – Soğuk su solenoid valfi
- F** Lavaggio forte - Strong tumble - Mouvement intensif - Stark Washung - Lavado energico
- FA** Centrifuga alta velocità - High speed spin - Centrifuge haute vitesse - Hochgeschwindigkeit Schleuderung - Centrifugado alta velocidad – Yüksek hızda sıkma
- FB** Centrifuga bassa velocità - Low speed spin - Centrifuge basse vitesse - Geschwindigkeit Schleuderung - Centrifugado baja velocidad – Düşük hızda sıkma
- FD** Funzione 4° risciacquo - 4th rinse function - Fonction 4eme rincage - 4 Spülung Funktion - Funcion cuarto enjuague – 4'üncü durulama fonksiyonu
- FG** Funzione lavaggio 35 giri - 35 rpm washing function - Fonction 35 tours lavage - 35 Abwashung Funktion - Funcion lavado 35 giros – 35 dev/dak yıkama fonksiyonu
- FN** Variante stock nord - Northern Europe market variation - Variation pour l'Europe du Nord - Anderung Nord Europa - Variante stock nortico – Kuzey Avrupa pazarı farklılığı
- FP** Protezione termostato di consenso - Protection for N.O. thermostat - Protection pour thermostat N.O. - Schutz fuer N.O. Thermostat - Protezione termostato de paso 30°C – N.A. termostat koruma
- FR** Rigenero - Regenerating rinse - Rincage avec regeneration - Ausspuelung - Aclarado – Rejeneratif durulama
- FS** Funzione salto "stop con acqua in vasca" - Function for "jumping" over the "stop with water in tub" - Fonction pour "sauter" le "stop avec l'eau dans la cuve" - Funktion für "springen" die "stop mit wasser in wanne" - Funcion salto de "parada con agua en cuba" – “Suda bekletme” fonksiyonu için durdurma fonksiyonu
- FT** Termofusibile - Thermal fuse - Fusible thermique - Thermosicherung - Termofusibile – Termal sigorta
- G** Rigenero - Water exchange - Régénération d'eau - Wasser-Austausch – Regeneracion de agua – Su çevrimi

- GT** Morsetto generale di terra - Earth connection - Serre cable de sol - Erdklemme - Toma general tierra – Topraklama ba lantısı
- GV** Morsetto messa a terra vasca - Tub earth connection - Serre cable de sol cuve - Waschbottich Erdklemme - Toma tierra cuba **L1** Lampada spia alimentazione elettrica - Net pilot lamp - Lampe témoin - Kontrollampe - Piloto alimentacion electrica – Tambur topraklama ba lantısı
- H** Carico acqua fredda - Cold water filling - Chargement eau froid - Kaltwasserfuellung - Entrada agua fria – So uk su alma
- L** Alto livello - High water level - Haut niveau d'eau - Hoch Wasser Pegel - Nivel alto – Yüksek su seviye
- L2** Lampada spia fine asciugatura - End of drying pilot lamp - Lampe témoin du fin sechage - Ende-Trochnen -Kontrollampe - Piloto fin ciclo secado – Kurutma bitti lambası
- L3** Lampada spia raffreddamento - Cool down pilot lamp - Lampe témoin refroidissement - Abkuehlung-Kontrollampe - Piloto enfriamiento – So uma pilot lambası
- L4** Lampada spia cassetto acqua pieno - Pilot lamp for full water container - Lampe témoin boîte eau plein - Wasser Behaelter Voll Kontrollampe - Piloto nivel maximo agua – Su haznesi dolu lambası
- L5** Lampada spia filtro intasato - Clogged filter pilot lamp - Lampe filtre engorgé - Verstopfter Filter Kontrollampe - Piloto filtro sucio – Filte tıkalı lambası
- LA** Spia asciugatura - Drying cycle pilot lamp - Lampe témoin sechage - Trochen-Kontrollampe Piloto secado – Kurutma pilot lambası
- LD** Spia LED - LED pilot lamp - Lampe témoin LED - LED Kontrollampe - Piloto LED – LED lamba
- LF** Spia asciugatura forte - Intensive drying pilot lamp - Lampe témoin sechage intensif - Starktrochen Lampe – Hassas kurutma lambası
- LS** Spia generale - Pilot lamp - Lampe témoin - Kontrollampe – Pilot lambası
- M** Carico acqua miscelata - Mixed water filling-up - Chargement eau mélangé – Gemischte Wasserfüll. -Entrada agua mezclada – Karı m suyu alma
- MA** Timer asciugatura - Drying timer - Timer sechage - Trochen Timer - Timer secado – Kurutma zamanlayıcı
- MC** Motore a collettore - Brushes and collector motor - Moteur collecteur - Kollektor Motor - Motor a collector – Kömürlü (fırçalı) motor

- MD** Motore centrifuga - Spin motor - Moteur essorage - Schleuderung Motor - Motor secado – sıkma motoru
- ML** Motore lavaggio - Washing motor - Moteur lavage - Waschung motor - Motor lavado – Yıkama motoru
- MP** Elettropompa di scarico - Discharge electric pump - Pompe de vidange - Auslauf pompe - Electrobomba vaciado – Tahliye pompası
- MR** Elettropompa di ricircolo - Electric pump for water recycling- Pompe de recyclage - Rezirkulation Pumpe - Electrobomba de recirculo – Su çevrim pompası
- MT** Motorino timer - Timer motor - Moteur timer - Timer motor - Motor programador – Zamanlayıcı motoru
- MV** Motoventilatore asciugatura - Drying motor ventilator - Helice sechage - Trochen Fluegel - Motoventilador secado – Kurutma fanı
- P** Spull stop - Stop with water in tub - Arret avec eau dans la cuve - Spüllstop - Stop cuba llena(flot) – Suda bekletme
- PA** Pressostato alto livello - High level pressure switch - Pressostat du haut niveau - Hoch Pegel Druckwaechter - Presostato nivel alto – Yüksek seviye basınç alteri
- PB** Pressostato basso livello - Low level pressure switch - Pressostat du bas niveau - Niedrig Pegel Druckwaechter - Presostato nivel bajo – Düşük seviye basınç alteri
- PD** Potenziometro tempo lavaggio - Potenziometer adj length of cycle - Potenziometre temps de lavage - Washzeit potentiometer - Potenciometro tiempo lavado – Yıkama süresi potansiyometresi
- PH** Potenziometro temperatura - Potenziometer adj temperature - Potenziometre temperature - Temperatur potentiometer - Potenciometro temperatura – Sıcaklık potansiyometresi
- PN** Pressostato - Pressure switch - Interrupteur niveau - Druckwaechter - Presostato – Basınç alteri
- PR** Pressostato sicurezza resistenza- Heating element security pressure switch - Interrupteur niveau protection resistance - Heizwiderstand Sicherheit Druckwaechter - Presostato seguridad resistencia lavado – Isıtıcı emniyet basınç alteri
- PS** Pressostato sicurezza - Security pressure switch - Interrupteur niveau de securité - Sicherheit Druckwaechter - Presostato seguridad – Emniyet basınç alteri

- PT** Potenziometro velocità centrifuga - Potentiometer adj spin speed - Potentiometre vitesse essorage - Schleuderung geschwindigkeit potentiometer - Potenciometro velocidad centrifugado – Sıkma hızı ayar potansiyometresi
- PV** Pressostato variabile - Adjustable pressure switch - Pressostat variable - Varierbarer pressostat - Presostato variable – Ayarlanabilir basınç alteri
- RA** Resistenza asciugatura - Drying heating element - Resistance sechage - Trockenheizung - Resistencia secado – Kurutma rezistansı
- RF** Resistenza asciugatura forte - Intensive drying heating element - Resistance sechage fort - Starktrocken Heizwiderstand - Resistencia secado energetico. – Hassas kurutma rezistansı
- RL** Resistenza lavaggio - Washing heating element - Resistance lavage - Waschung Heizwiderstand - Resistencia lavado – Yıkama rezistansı
- RT** Regolatore di temperatura a tempo - Timer for temperature regulation - Reglage temperature au temps - Zeit-Temperatur-Regler - Regulacion temperatura por tiempo – Isı ayarı için zamanlayıcı
- S** Scarico - Discharge - Vidange - Ablauf – Vaciado - Tahliye
- SC** Modulo motore a collettore - Collector motor electronic module - Platine electroni que moteur collecteur - Modulo motor a colector – Motor sürücü elektronik kart
- SD** Ritardatore di partenza - Start delay - Retardateur de depart - Start-Verspaeter - Placa retardadora – Ba lama geciktirme
- SF** Modulo funzioni – Function module – Module fonctions – Funktions modul - Modulo funciones – Fonksiyon modülü
- SM** Selettore motorizzato – Motorised selector – Selecteur motorise – Programmselektor - Selector motorizado – Motorlu seçici
- ST** Sonda termostato regolabile - Adjustable thermostat probe - Sonde pour thermostat réglable -Einstellbar Thermostat Sonde - Sonda termostato regulable – Ayarlanabilir termostat probu
- ST3** Presa di campo – Tapped field coil – Modulation de champ - Conexion velocidad maxima – Kollu sargı
- SV** Velocità regolabile (potenziometro) - Adjustable speed (potentiometer) - Vitesse réglable (potentio-metre) - Einstellbar Geschwindigkeit (potentiometer) - Velocidad regulable (potenciometro) – Hız ayarlama (potansiyometre)



- T** Resistenza con consenso termostato - Heater with thermostatic consent - Resistence avec consentement thermostatique - Heizung mit Thermostat Erlaubnis - Resistencia con paso termostato – Termostatlı ısıtıcı
- TA** Termostato di sicurezza asciugatura - Drying cycle safety thermostat - Thermostat de securité sechage - Sicherheits-Thermostat Trocknung - Termostato seguridad secado – Kurutma emniyet termostatı
- TB** Termostato bassa temperatura - Low temperature thermostat - Thermostat pour basse temperature - Niedrige temperatur thermostat - Termostato baja temperatura – Düşük sıcaklık termostatı
- TC** Termostato di consenso N.A. - Timer feed through N.O. thermostat - Alimentation timer par thermostat N.O. - N.O. thermostat timer speisung - Termostato de paso – N.A. kontak üzerinden zamanlayıcı beslemesi
- TF** Termostato sicurezza asciugatura forte - Strong drying safety thermostat - Thermostat de securité essorage fort - Starke Abtrocknen Sicherheit Thermostat - Termostato seguridad secado energico – Güçlü kurutma emniyet termostatı
- TM** Termostato di massima (84°C+/-2°) - Limit thermostat (84°C+/-2°) - Thermostat de securité (84°C+/-2°) - Sicherheits-Thermostat (84°C+/-2°) - Termostato de maxima (84°C+/-2°) – Emniyet termostatı (84°C+/-2°)
- TN** Termostato NTC - NTC thermostat - Thermostat NTC - NTC thermostat - Termostato NTC – Termostat NTC
- TP** Termostato di sicurezza ricircolo - Water recycling safety thermostat - Thermostat de securité recirculation eau sechage - Sicherheits-Thermostat für Rezirkulation - Termostato de seguridad recirculo – Su çevrim emniyet termostatı
- TR** Termostato regolabile - Adjustable thermostat - Thermostat réglable - Regulierbarer-Thermostat - Termostato regulable – Ayarlı termostat
- TS** Termostato di sicurezza - Safety thermostat - Thermostat de securité - Sicherheits Thermostat Termostato de seguridad – Emniyet Termostatı
- V** Raffreddamento - Cool down - Refroidissements - Abkühlung – Enfriamiento - Soğutma
- V6** Tasto 6 Kg – 6 Kg push button – Pousoir 6 Kg – 6 Kg taste – Tecla 6 Kg – 6kg butonu
- VA** Tasto ammollo - Soak button - Pousoir trempage Einweichen Taste - Tecla remoio – Suda bırakma butonu

- VB** Tasto bassa temperatura (60°C) - Low temperature (60°C) button - Touche basse temperature (60°C) - Niedrige Temperatur (60°C) Taste - Tecla baja temperatura (60°C) – Düşük sıcaklık (60°C) butonu
- VC** Tasto ciclo freddo - Cold washing button - Bouton lavage froid - Taste Kaltes Wasche - Tecla lavado frio – Soğuk yıkama butonu
- VD** Tasto extrarisciacquo - Super rinse pushbutton - Touche extra rincage - Extra spuelung taste - Tecla de superaclarado – Ekstra durulama butonu
- VE** Tasto esclusione centrifuga - Spin cut-out button - Touche exclusion centrifuge - Schleuderans Taste - Tecla exclusion centrifugado - Sıkma kesme butonu
- VF** Tasto asciugatura forte – Intensive drying pilot lamp - Touche sechage fort - Starke Trocknungstatste - Tecla secado energico – Hassas kurutma lambası
- VG** Tasto lavaggio 35 giri - 35 rpm washing pushbutton - Touche 35 tours lavage - 35 Abwaschung Drehzahl - Tecla 35 r.p.m. lavado **VH** Tasto start delay-Star delay pushbutton-Touche start delay-Start delay taste - Tecla start delay – 35 dev/dak yıkama butonu
- VI** Tasto centrifuga istantanea - Sudden spin button -Touche essorage instantané - Taste Augenblick-licher-Schleuderung - Tecla centrifugado istantaneo – Sıkma butonu
- VK** Tasto 90° - 90° pushbutton - Touche 90° - 90° taste - Tecla 90° - 90° butonu
- VL** Tasto "Plus" - "Plus" pushbutton - Poussoir "Plus" - "Plus" taste - Tecla "Plus" – “Plus” butonu
- VM** Tasto mezzo carico elettrico - Switch for electric half load - Touche demi chargement electrique - Elektrische Halb-Einladen Taste - Tecla media carga electrico – Elektrikli yarı yük butonu
- VN** Tasto mezzo carico meccanico - Switch for mechanical half load - Touche demi chargement mecanique - Mechanische Halb-Einladen Taste - Tecla media carga mecanico – Mekanik yarı yük butonu
- VO** Tasto prelavaggio - Prewash pushbutton - Touche prelavage - Vorwaschung taste - Tecla prelavado – Ön yıkama butonu
- VP** Tasto marcia/arresto - On/Off button - Touche marche/arret - Ein/Aus Schalter - Tecla marcha / parada - On/Off butonu
- VQ** Tasto unidirezionale cesto – Unidirectional tumbling pushbutton - Touche rotation tambour unidirectionel - Taste für einseitige Trommeldrehung -Tecla unidireccional del tambor – ki yöne sıkma butonu

- VR** Tasto economia - Economic washing pushbutton - Poussoir lavage economique - Billigwasche Taste - Tecla economico – Ekonomik yıkama fonksiyonu
- VS** Tasto fermo con acqua in vasca (spull stop) - Stop with water in tub button (spull stop) - Poussoir arret avec eau dans la cuve (spull stop) - Spull stop taste - Tecla flot – “Suda bekletme” tu u (sıkma durdurma)
- VT** Tasto 4° risciacquo - 4th rinse pushbutton - Touche de rincage - Spueltaste - Tecla aclarado – 4’üncü durulama butonu
- VU** Tasto super rapido - Rapid program button - Touche super rapide - Super schnellteste - Tecla super rapido – Hızlı program butonu
- VV** Tasto cambio velocità - Speed change button - Poussoir changement de vitesse. - Geschwindigkeitsaenderung Taste - Tecla cambio velocidad – Hız de i tirme butonu
- VW** Tasto "Softwasher" - "Softwasher" pushbutton - Poussoir "Softwasher" - "Softwasher" Taste -Tecla "Softwasher" – “Softwasher” butonu
- ZR** Relè - Relay - Relais - Relais - Rele - Röle
- ZT** Trasformatore - Transformer - Transformateur - Transformator - Transformador - Trafo
- ZW** Filtro antidisturbi radio - Radio interference suppressor - Filtre anti-bruit radio - Entstoerungsfilter - Filtro antiparasitario – Antiparazit filtre

- **TABELLA CORRISPONDENZA CONTATTI PRESSOSTATO E BLOCCAPORTA**
- **REFERENCE LIST FOR CONNECTIONS TO PRESSURE SWITCH AND DOOR INTERLOCK**
- **TABLEAU DE CORRESPONDENCE POUR LES CONTACTS DU PRESSOSTAT ET RETARDATEUR OVERTURE**
- **REFERENZEN LISTE FÜR DIE DRUCHWÄCHTER KONTAKTS UND OEFFNUNGS VERSPATER**
- **TABLA DE CORRESPONDENCIA DE LOS CONTACTOS DEL PRESOSTATO Y BLOCCAPUERTA**
- **BASINÇ ALTER VE KAPI EMN YET ALTER NE BA LANTI Ç N REFERANS L STES**

<b>C</b>	Contatto comune - Common lead - Contactct comun - Gemeinkontakt - Contacto comun – Ortak uç
<b>V</b>	Vuoto - Tub without water - Sans eau dans la cuve - Ohne wasser in dem Waschbottich - Sin agua en la cuba – Tamburda su yok
<b>P</b>	Pieno - Tub full of water - Avec eau dans la cuve - Mit wasser in dem Washbottich - Con agua en la cuba – Tambur su dolu
<b>A</b>	Antitrabocco - Anti-overflow device - Antidebordage - Antiüberlaufener - Antidesbordamiento – Ta ma önleyici alter

	<b>A</b>	<b>B</b>	
<b>C</b>	<b>11</b>	<b>11</b>	• Il contatto 16 della versione "A" corrisponde al contatto 24 della versione "B".
<b>V</b>	<b>12</b>	<b>12</b>	• Contact 16 of "A" version corresponds to contact 24 of "B" version.
<b>P</b>	<b>14</b>	<b>13</b>	• Le contact 16 de la version "A" correspond au contact 24 de la version "B".
<b>A</b>	<b>16</b>	<b>/</b>	• Der Kontakt 16 von "A" Version bezhalt der Kontakt 24 von "B" Version.
<b>C</b>	<b>21</b>	<b>21</b>	• El contacto 16 de la version "A" corre-sonde al contacto 24 de la version "B".
<b>V</b>	<b>22</b>	<b>22</b>	• 16 kontaklı A versiyonu 24 kontaklı B versiyonuna kar ılık gelmektedir.
<b>P</b>	<b>24</b>	<b>23</b>	
<b>A</b>	<b>/</b>	<b>24</b>	

<b>C</b>	<b>1</b>
<b>V</b>	<b>2</b>
<b>P</b>	<b>3</b>
<b>A</b>	<b>4</b>

- Il contatto L della versione "A" corrisponde al contatto 3 della versione "B".
- Contact L of "A" version corresponds to contact 3 of "B" version.
- Le contact L de la version "A" correspond au contact 3 de la version "B".
- El contacto L de la version "A" corresponde al contacto 3 de la version "B".
- Der Kontakt L von "A" Version bezhalt der Kontakt 3 von "B" Version.
- "A" versiyonunun L konta ı "B" versiyonunun 3 konta ına kar ılık gelmektedir.

A	B
L	3
N	1
C	2

A	AZZURRO	AÇIK MAV
B	BLU	MAV
C	CREMA	KREM
F	ROSA	PEMBE
G	GRIGIO	GR
K	PONTE	KÖPRÜ
M	MARRONE	KAHVERENG
N	NERO	S YAH
O	ARANCIO	TURUNCU
P	VERDE	YE L
R	ROSSO	KIRMIZI
V	VIOLA	MOR
Y	GIALLO	SARI
W	BIANCO	BEYAZ

M O D E L L I - MODELS - MODELES - MODELLE - MODELOS

CODICE CODE CODE CODE CODIGO	DENOMINAZIONE DESCRIPTION DESCRIPTION BESCHREINBUNG DENOMINACION	COMPOSIZIONE COMPOSITION COMPOSITION KOMPOSITION COMPOSICION	SCHEDA CUORE CORE BOARD	CABLAGGIO HARNES CABLAGE KABELVERBINDUNG CABLEADO
31001842	CANDY CTG 146/1-47	CHRONO 14 LED	41019983	41021249
31001839	CANDY CTY 11-47	CHRONO 14 LED	41019982	41021249
31001840	HOOVER HNT 513.6/1-47	CHRONO 14 LED	41019982	41021249
31001841	CANDY CTG 116/1-47	CHRONO 14 LED	41019982	41021249
31001843	CANDY CTY 136/1-47	CHRONO 14 LED	41019982	41021249
31001844	CANDY CTG 1276/1-47	CHRONO 14 LED	41019982	41021249
31001846	CANDY CTG 126/1-47	CHRONO 14 LED	41019982	41021249
31001874	CANDY CTY 835/1 -37	CHRONO 14 LED	41019982	41021249
31001875	CANDY CTG 1056/1-37	CHRONO 14 LED	41019982	41021249
31001876	CANDY CTG 1256/1-37	CHRONO 14 LED	41019982	41021249
31001881	CANDY CTY 1035/1-01 S	CHRONO 14 LED	41019982	41021249
31001882	CANDY CTG 1056/1-01	CHRONO 14 LED	41019982	41021249
31001884	CANDY CTY 85/1-01	CHRONO 14 LED	41019982	41021249
31001913	CANDY CTY 10/1-47 AA	CHRONO 14 LED	41019982	41021249
31001914	CANDY CTY 93/1-37 S	CHRONO 14 LED	41019982	41021249
31001915	CANDY CTY 84/1-03 S	CHRONO 14 LED	41019982	41021249
31001916	CANDY CTY 104/1-03 S	CHRONO 14 LED	41019982	41021249
31001917	CANDY CTG 105/1-03 S	CHRONO 14 LED	41019982	41021249
31001918	CANDY CTG 125/1-03 S	CHRONO 14 LED	41019982	41021249
31001919	CANDY CTG 1456/1-16 S	CHRONO 14 LED	41019983	41021249
31001920	CANDY CTG 1256/1-03 S	CHRONO 14 LED	41019982	41021249
31001921	CANDY CTG 1056/1-03 S	CHRONO 14 LED	41019982	41021249
31001922	CANDY CTG 1156/1-LE-16	CHRONO 14 LED	41019982	41021249
31001923	CANDY CTG 1166/1 GOLD	CHRONO 14 LED	41019982	41021249
31001924	CANDY CTY 1246/1-03 S	CHRONO 14 LED	41019982	41021249
31001925	CANDY CTY 1046/1-03 S	CHRONO 14 LED	41019982	41021249
31001928	CANDY CTG 856/1-06 S	CHRONO 14 LED	41019982	41021249
31001933	QHNT 7.6/1 -37	CHRONO 14 LED	41019982	41021249
31001937	OTSEIN HOOVER LTS 756/1 H-37	CHRONO 14 LED	41019982	41021249
31001938	OTSEIN-HOOVER LTD 826/1 H-37	CHRONO 14 LED	41019982	41021249
31001939	OTSEIN-HOOVER LTD 1026/1 H-37	CHRONO 14 LED	41019982	41021249
31001940	OTSEIN-HOOVER 876/1 CSH-37	CHRONO 14 LED	41019982	41021249
31001941	OTSEIN-HOOVER 1076/1 CSH-37	CHRONO 14 LED	41019982	41021249
31001942	OTSEIN-HOOVER LTC 766/1 H-37	CHRONO 14 LED	41019982	41021249
31001943	OTSEIN HOOVER LTC 966/1 H-37	CHRONO 14 LED	41019982	41021249
31001944	OTSEIN-HOOVER LTC 1166/1 H	CHRONO 14 LED	41019982	41021249
31001945	OTSEIN-HOOVER OHTC 9/1 AA-37	CHRONO 14 LED	41019982	41021249
31001979	CANDY CTG 125/1-84	CHRONO 14 LED	41019982	41021249
31001980	CANDY CTG 145/1-84	CHRONO 14 LED	41019983	41021249
31001981	CANDY CTY 8546/1-06 S	CHRONO 14 LED	41019982	41021249
31001983	CANDY CTY 835/1-06 S	CHRONO 14 LED	41019982	41021249
31002004	HOOVER HNT 412/1-16 S	CHRONO 14 LED	41019982	41021249
31002008	HOOVER HNT 5146/1 -80	CHRONO 14 LED	41019983	41021249
31002014	HOOVER HNT 409.6/1-30 S	CHRONO 14 LED	41019982	41021249
31002113	CANDY CTD 1466-84	DIGIT	41024410	41021249
31002114	CANDY CTD 1266-84	DIGIT	41024160	41021249
31002116	CANDY CTY 1005-84	CHRONO 14 LED	41019982	41021249
31002117	HOOVER HNT 5012-84	CHRONO 14 LED	41019982	41021249
31002155	CANDY CTY 8546-12 S	CHRONO 14 LED	41019982	41021249
31002156	CANDY CTG 856-12 S	CHRONO 14 LED	41019982	41021249

CODICE CODE CODE CODE CODIGO	DENOMINAZIONE DESCRIPTION DESCRIPTION BESCHREINBUNG DENOMINACION	COMPOSIZIONE COMPOSITION COMPOSITION KOMPOSITION COMPOSICION	SCHEDA CUORE CORE BOARD	CABLAGGIO HARNES CABLAGE KABELVERBINDUNG CABLEADO
31002149	CANDY CTD 1165-16 S	DIGIT	41024160	41021249
31002150	CANDY CTD 1365-12 S	DIGIT	41024160	41021249
31002151	PHILCO PTL 8 E	CHRONO 14 LED	41019982	41021249
31002152	PHILCO PTL 11 E	CHRONO 14 LED	41019982	41021249
31002201	OTSEIN HOOVER OHNT 6609 D	DIGIT	41024160	41021249
31002204	OTSEIN HOOVER 1276 CSH	CHRONO 14 LED	41019982	41021249
31002205	OTSEIN HOOVER LTS 1053 H	CHRONO 14 LED	41019982	41021249
31002206	OTSEIN HOOVER 1366 H	CHRONO 14 LED	41019982	41021249
31002432	CANDY CTY 103/1-04 S	CHRONO 14 LED	41026399	41021249
31002485	HOOVER HNT 6414-80	CHRONO 14 LED	41026400	41021249
31002486	CANDY CTG 1226-47	CHRONO 14 LED	41026399	41021249
31002487	CANDY CTG 1326-47	CHRONO 14 LED	41026399	41021249
31002488	CANDY CTG 1426-47	CHRONO 14 LED	41026400	41021249
31002490	CANDY CTG 1226L-47	CHRONO 14 LED	41026399	41021249
31002608	CANDY CTY 105-01 S	CHRONO 14 LED	41026399	41021249
31002611	CANDY CTY 11/1-47	CHRONO 14 LED	41026399	41021249
31002609	CANDY CTD 14662-84	DIGIT	41026400	41021249
31002610	CANDY CTD 12662-84	DIGIT	41026399	41021249
31002627	CANDY CTD 1462-47	DIGIT	41026400	41021249
31002628	CANDY CTD 8662-07 S	DIGIT	41026399	41021249
31002629	CANDY CTD 87662-07 S	DIGIT	41026399	41021249
31002630	CANDY CTD 10662-07 S	DIGIT	41026399	41021249
31002631	CANDY CTD 10762-07 S	DIGIT	41026399	41021249
31002632	CANDY CTD 12662-07 S	DIGIT	41026399	41021249
31002633	CANDY CTD 13652-16 S	DIGIT	41026399	41021249
31002634	CANDY CTD 11652-16 S	DIGIT	41026399	41021249
31002635	CANDY CTD 12762-86 S	DIGIT	41026399	41021249
31002636	CANDY CTD 14662-03 S	DIGIT	41026400	41021249
31002637	CANDY CTD 1066/1-01	DIGIT	41026399	41021249
31002668	CANDY CTD 1462-86 S	DIGIT	41026400	41021249
31002725	Hanseatic TOP 1300C	CHRONO 14 LED	41026399	41021249
31002726	CANDY CTF 855-01	FUZZY TOP	41026399	41021249
31002727	CANDY CTF 955-01	FUZZY TOP	41026399	41021249
31002728	CANDY CTF 1055-01	FUZZY TOP	41026399	41021249
31002729	CANDY CTF 1005-84	FUZZY TOP	41026399	41021249
31002730	HOOVER HFT 5012-84	FUZZY TOP	41026399	41021249
31002745	CANDY CTF 855-37	FUZZY TOP	41026399	41021249
31002746	CANDY CTF 1055-37	FUZZY TOP	41026399	41021249
31002761	CANDY CTF 1105-47	FUZZY TOP	41026399	41021249
31002762	CANDY CTF 1155-47	FUZZY TOP	41026399	41021249
31002763	CANDY CTF 1205-47	FUZZY TOP	41026399	41021249
31002764	CANDY CTG 116/2-47	CHRONO 14 LED	41026399	41021249
31002765	PHILCO PTL 8E/1-31	CHRONO 14 LED	41026399	41021249
31002766	DeLonghi DTL 600-31	CHRONO 14 LED	41026399	41021249
31002767	DeLonghi DTL 820-31	CHRONO 14 LED	41026399	41021249
31002768	DeLonghi DTL 1020-31	CHRONO 14 LED	41026399	41021249
31002769	CANDT CTY 1105-84	CHRONO 14 LED	41026399	41021249



VARIANTI SIGNIFICATIVE  
SIGNIFICANT VARIATIONS  
VARIATIONS SIGNIFICATIVES  
BEZEICHNENDE VARIANTEN  
VARIANTES SIGNIFICATIVAS

 
DATA-DATE-DATE  
DATUM - FECHA


INDICE-INDEX-INDEX  
ANZEIGER-INDICE

LAVATRICI -WASHINGMACHINES  
MACHINES A LAVER-WASHMASCHINEN-LAVADORA

SCHEMA ELETTRICO  
ELETRICAL DIAGRAMS - SCHEMAS ELETRIQUES  
ELEKTRISCHE SCHALTPLASE - ESQUEMA ELECTRICO


CODICE DISEGNO - DRAWING CODE - CODE SCHEMA ELECTRIQUE - ELEKTRISCHE SCHEMA CODE - CODIGO DISEÑO



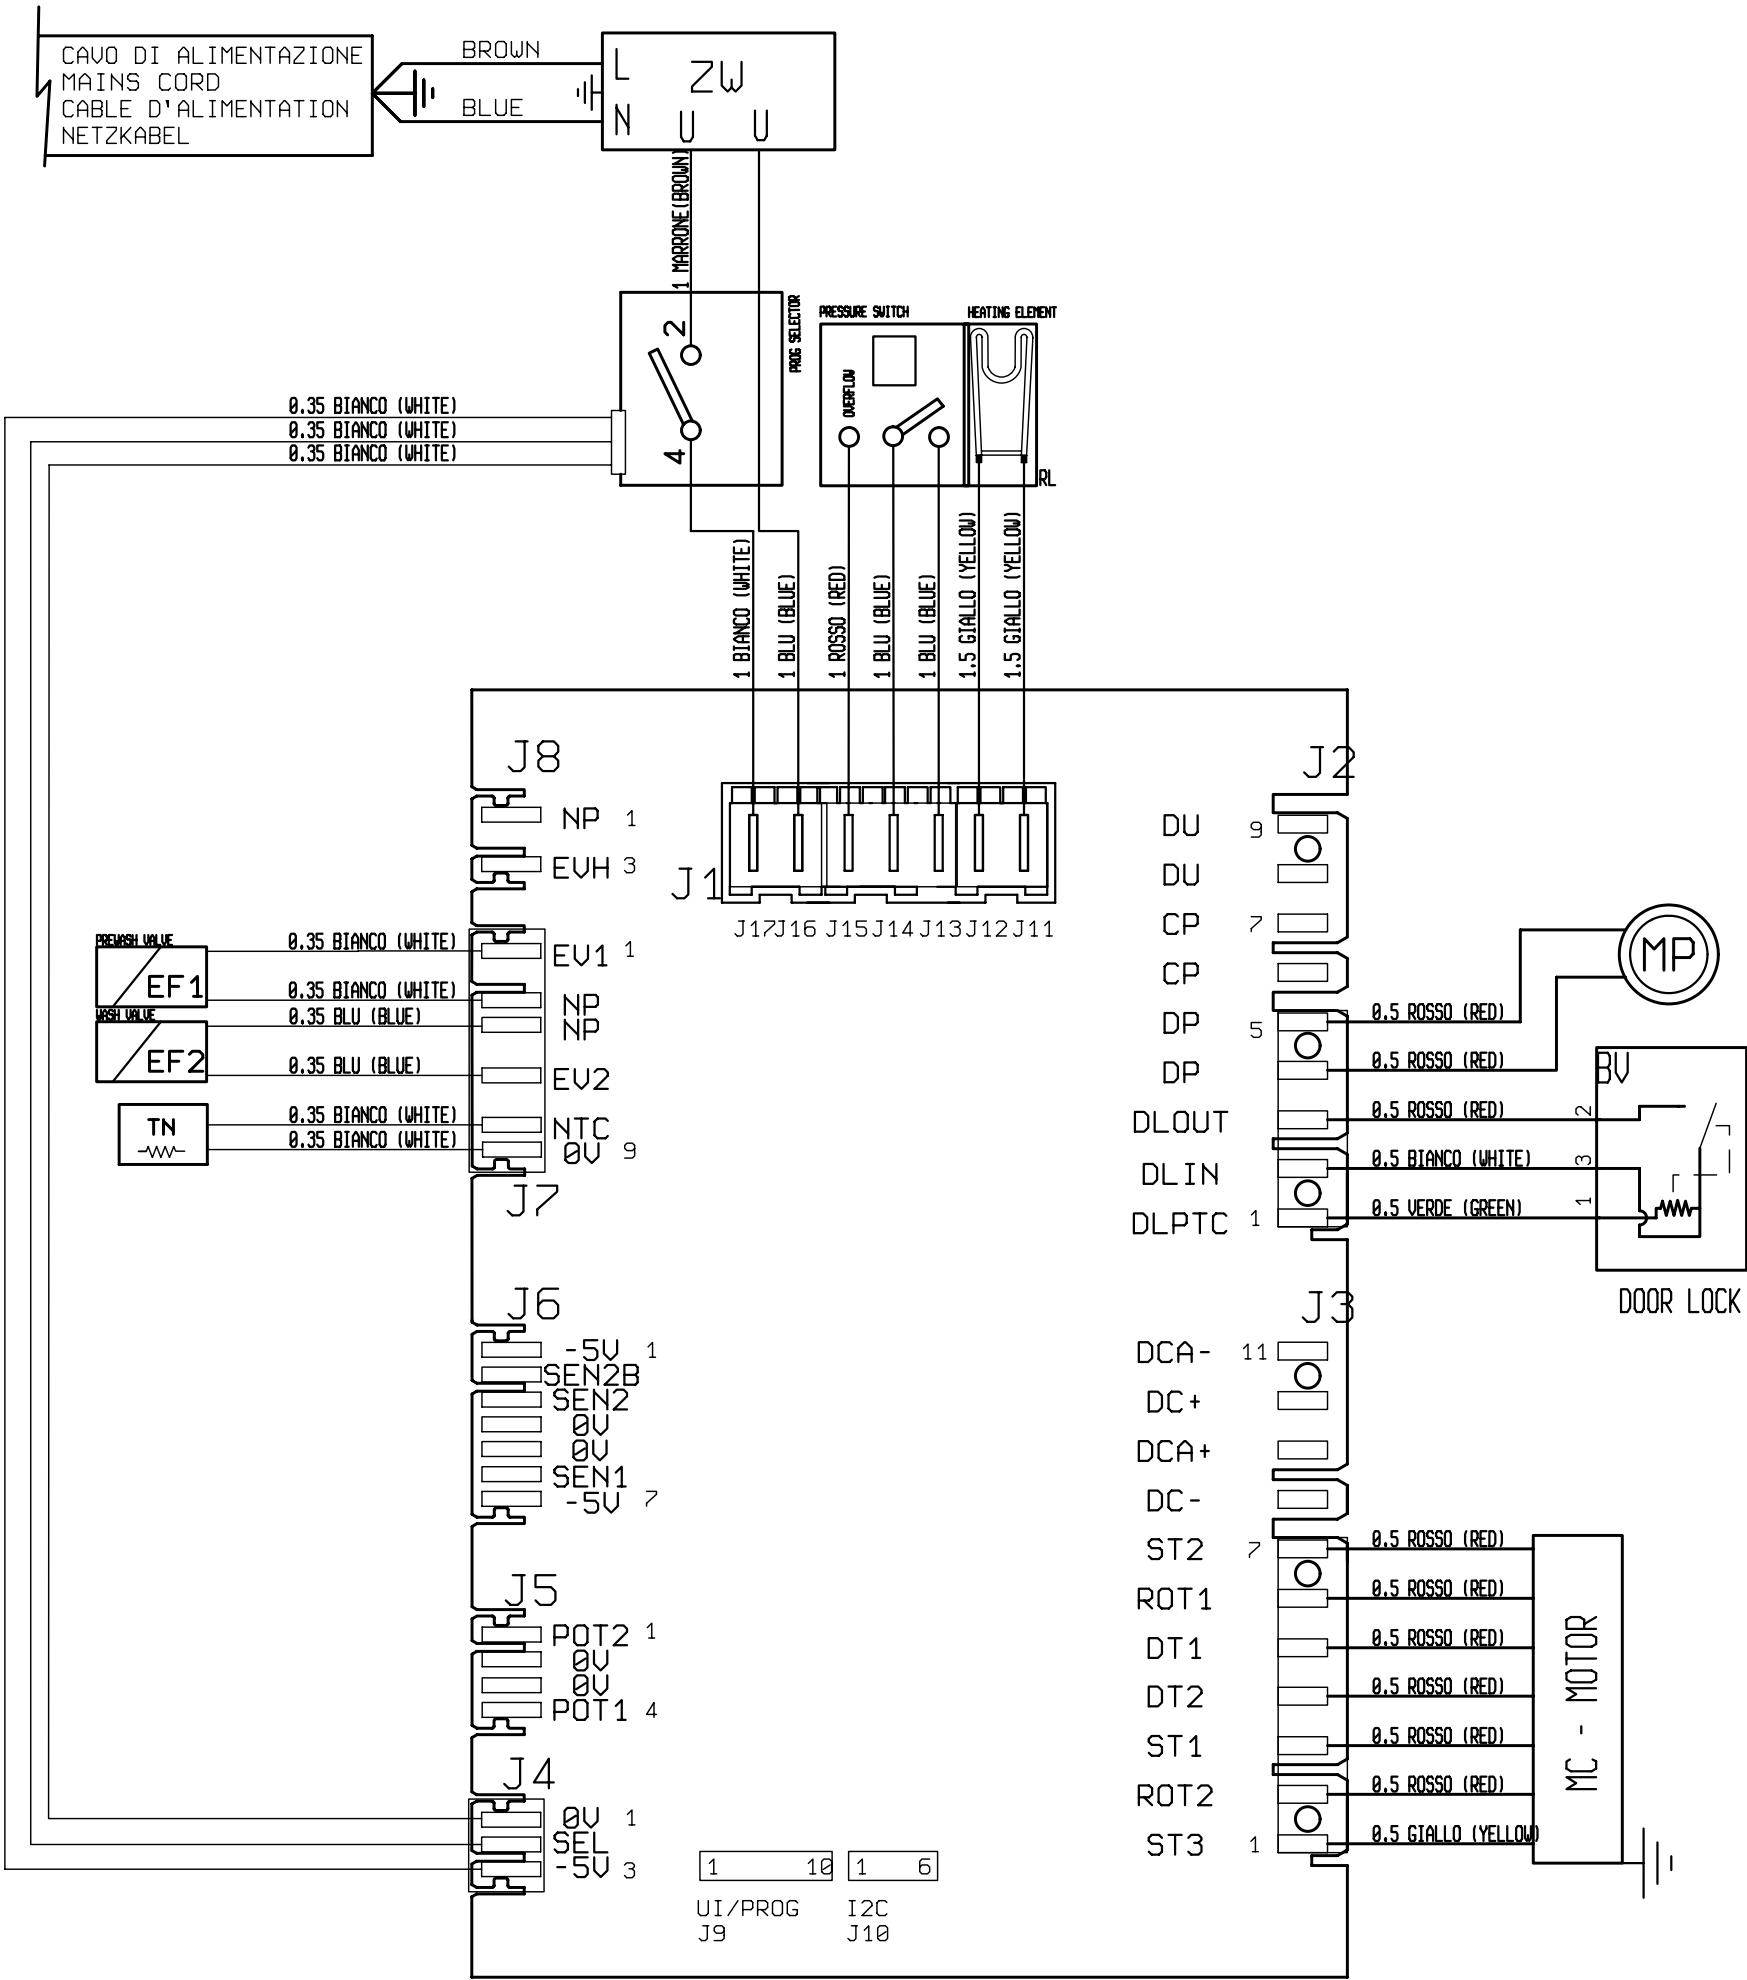


- |  |   |
|--|---|
| ARANCIO - ORANGE - ORANGE - ORANGE - NARANJA | GRIGIO - GREY - GRIS - GRAU - GRIS        |
| AZZURRO - AZURE - AZUR - HELLBLAU - AZUL     | MARRONE - BROWN - MARRON - BRAUN - MARRON |
| BIANCO - WHITE - BLANC - WEISS - BLANCO      | NERO - BLACK - NOIR - SCHWARZ - NEGRO     |
| BLU - BLUE - BLEU - BLAU - AZUL CARGADO      | ROSA - PINK - ROSE - ROSA - ROSA          |
| GIALLO - YELLOW - JAUNE - GELB - AMARILLO    | ROSSO - RED - ROUGE - ROT - ROJO          |
|  | VERDE - GREEN - VERT - GRUN - VERDE       |

TXT - TXT VERSION

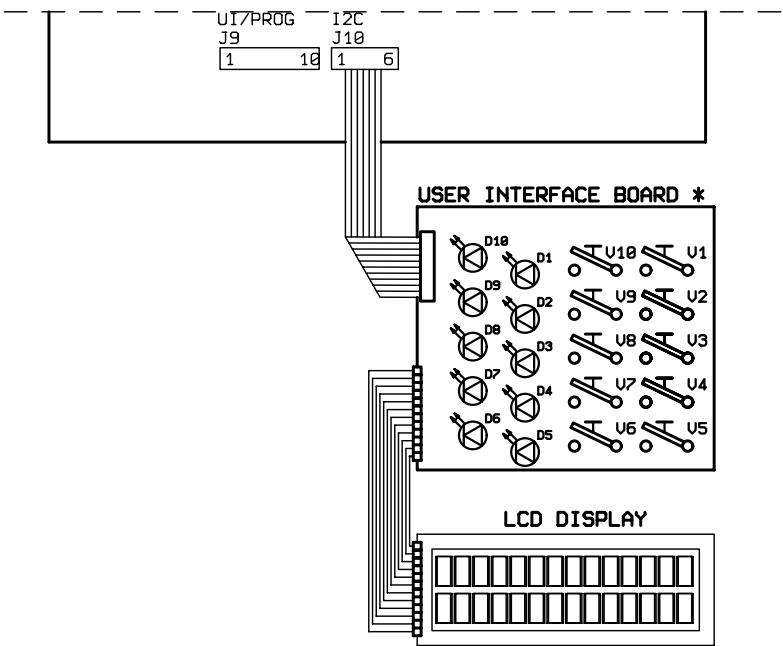


SWITCH AND LED NUMBER ACCORDING TO MODEL

LED - LOGIC VERSION

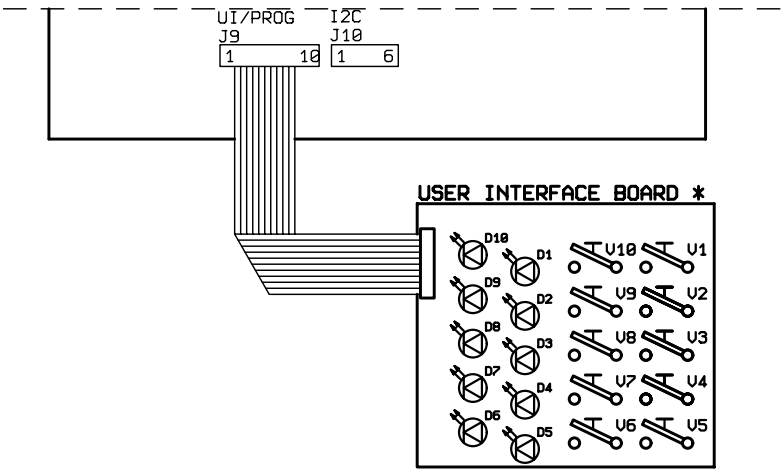


SWITCH AND LED NUMBER ACCORDING TO MODEL

POT1

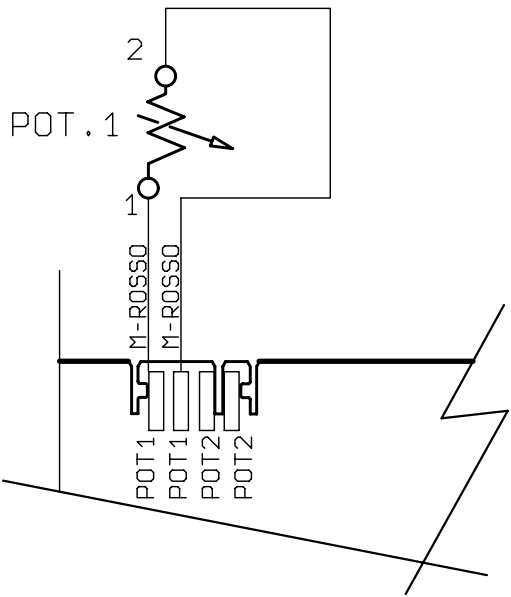


POT2

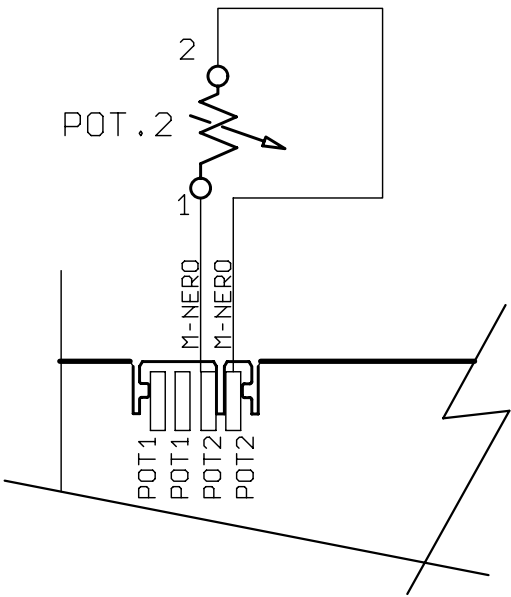



REVOLUCIONES | TEMPERATURA  
POTENCIOMETROS

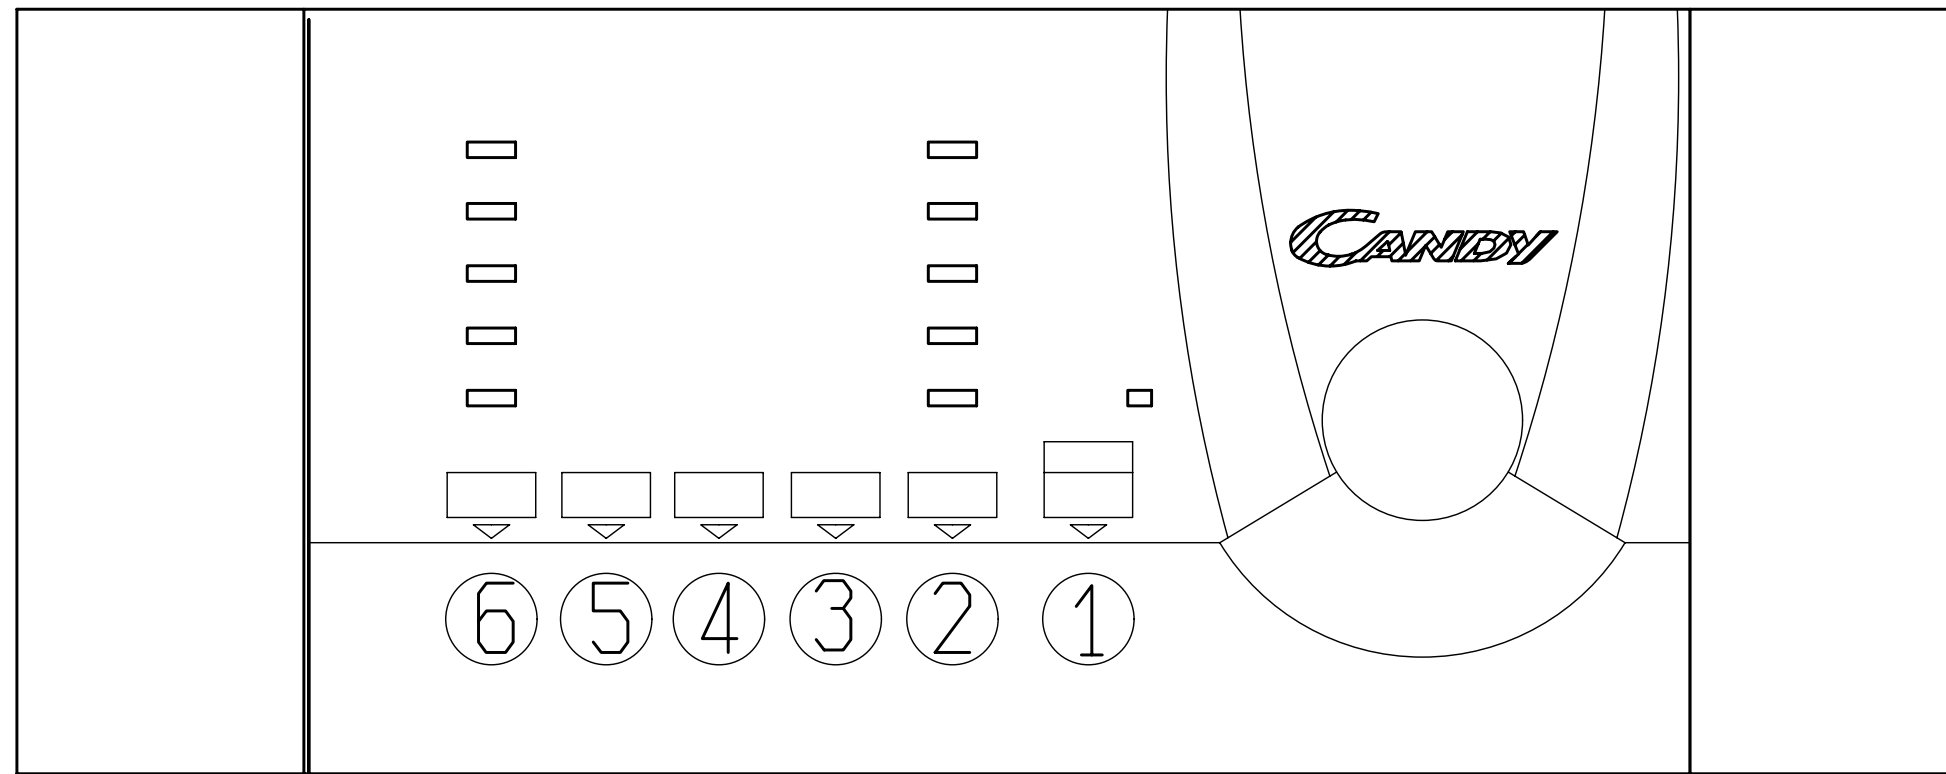

Description "modelo BASE"

Ejemplo:  $UV - 40824$

# Aparato

LV	lavadora
S	secadora

Nº esquem

Principio
Conex.

08 levas

13 levas

14 levas (Progr.E.S.)

TT Timer Temp

## EL SELECTOR EJE LARGO


EC SELECTOR EJE CORTO


DIG AUTOMATISMO DIGIT


4-400 rpm  
6-600 rpm  
8-800 rpm  
10-1000 rpm  
12-1200 rpm

R. P. M.



Codigo N.Comercial	SEL. E.L.  Modelo BASE	TECLAS						PILOTOS LED	Tambor+Cuba	WATER BLOCK	 R.P.M.	OMEGA CONTRAPESO	Freno Tambor	APERTURA SOFT	Amortiguadores telescopicos	Carro Rued.	FLOT Automat.	Capac.Var. Automatic	LIBRO DE INSTRUCCIONES																CABLE ENT. CORRIENTE TIPO	Fecha de Introducc.	Fecha de Anulacion			
		6	5	4	3	2	1												14	R0	HU	UK	ES	IT	FR	DE	NL	PT	SV	FI	NO	DA	RU	PL					CZ	EL
31001252 CANDY CTY 114-SY AAC	11LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	ANTIPIEGA		DEPART PAUSE	14		/	1100	/	/	SI	SI	/	/	SI						o													EUROPEO	22.12.05		ELECTRONICA LOGIC
31001288 CANDY CTY 1250-47 A+AB	12LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14		/	1200	SI	/	SI	SI	/	/	SI							o												EUROPEO	22.12.05		
31001289 CANDY CTY 12-47 AA	12LOG04	SPIN SELECTION	STAIN BUSTER	ANTIPIEGA	START DELAY		DEPART PAUSE	14		/	1200	SI	/	SI	SI	/	/	SI							o												EUROPEO	22.12.05		
31001290 CANDY CTG136-47 AA	13LOG04	SPIN SELECTION	STAIN BUSTER	ANTIPIEGA	START DELAY		DEPART PAUSE	14		/	1300	SI	/	SI	SI	SI	/	SI							o												EUROPEO	22.12.05		
31001292 CANDY CTG1456 SY	14LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14	1400	/	1400	SI	/	SI	SI	SI	/	SI			o											o	o	o		EUROPEO	22.12.05			
31001293 CANDY CTG1256 SY	12LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14		/	1200	SI	/	SI	SI	SI	/	SI		o	o	o						o	o	o	o	o	o	o	o		EUROPEO	22.12.05		
31001294 CANDY CTG 1056 SY	10LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14		/	1000	/	/	SI	SI	SI	/	SI		o	o	o						o		o	o	o	o	o		EUROPEO	22.12.05			
31001251 CANDY CTG 1056-01	10LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14		/	1000	/	/	SI	SI	SI	/	SI					o													EUROPEO	22.12.05			
31001295 CANDY CTG 1156 LE	11LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14		/	1100	/	/	SI	SI	SI	/	SI														o	o	o		EUROPEO	22.12.05			
31001296 CANDY CTG 1166 GOLD	11LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	START DELAY		DEPART PAUSE	14		/	1100	/	/	SI	SI	SI	/	SI														o	o	o		EUROPEO	22.12.05			
31001297 CANDY CTY 8546-SY	85LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	ANTIPIEGA		DEPART PAUSE	14		/	850	/	/	SI	SI	/	/	SI				o									o				o	EUROPEO	22.12.05			
31001298 CANDY CTY 1246-SY	12LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	ANTIPIEGA		DEPART PAUSE	14		/	1200	SI	/	SI	SI	/	/	SI		o	o											o			o	EUROPEO	22.12.05			
31001299 CANDY CTY 1046-SY	10LOG04	SPIN SELECTION	STAIN BUSTER	AQUA +	ANTIPIEGA		DEPART PAUSE	14		/	1000	/	/	SI	SI	/	/	SI			o	o									o	o			o	EUROPEO	22.12.05			
31001839 CANDY CTY 11-47	11LOG04	SPIN SELECTION	STAIN BUSTER	SUPER RAPIDE	START DELAY		DEPART PAUSE	14		/	1100	/	/	SI	SI	/	/	SI						o											EUROPEO	01.02.07		TAMBOR DE 43 LITROS PANEL : CANDY 2005 ABS		

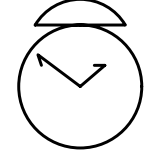DEPART  
PAUSE  


R.P.M.  




REVOLUCIONES/TEMPERATURA  
POTENCIOMETROS

000000

654321

000000

654321

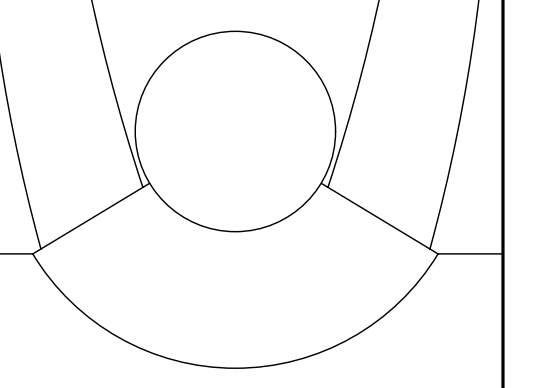Descripcion "modelo BASE":  
Ejemplo: LV-40824

4-400 rpm  
6-600 rpm  
8-800 rpm  
10-1000 rpm  
12-1200 rpm

R.P.M.

Aparato  
LV lavadora  
S secadora


TIMER/SELECTOR

Nº esquema

Principio  
Conex.

08 levas  
13 levas  
14 levas (Progr.E.S.)  
TT Timer Tempo  
EL SELECTOR EJE LARGO  
EC SELECTOR EJE CORTO  
DIG AUTOMATISMO DIGIT

NOTAS:  
-Caja productos: 4 tomas  
-Resistencia 1850 W/220 V

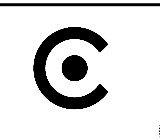01.02.07  GRUPOCANDY  
Candy Hoover Electrodomésticos, S.A.

Hoja Nº 10 46900049

6kg

1000 Rpm AA

Smart

CTY 1046

CANDY

Rpm  
1000  
800  
600  
400



START  
60'  
30'  
15'  
STOP

