

Service Service Service



Service Manual

CONTENTS

- Block diagram
- Wiring diagram
- Circuit diagram - Volume & EQ part
 - Power amplifier part
 - Power supplier part
 - CD servo part
 - MCU & displaypart
 - Keyboard part
 - Rectifier part
 - Tape part
 - Tuner part
- PCB Layout diagram - Audio board
 - CD Servo board
 - MCU and key board
 - Tuner & Rectifier boards

Service parts list:

9940 000 00167	ROD ANTENNA NC-2433 2 SEC
9940 000 01383	BATTERY DOOR AZ3067
9940 000 01384	REMOTE CONTROL AZ3067
9940 000 00165	CASS DECK TK20FX-V690-001
9940 000 01385	CD MECHANISM DA12B3
9940 000 01387	TRANSFORMER EI48 120/230V (/01)
9940 000 00161	5 FEET VDE POWER CORD



**CLASS 1
LASER PRODUCT**

© Copyright 2005 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by YM 0518 Service Audio Subject to modification


GB 3141 785 30310

Version 1.0




PHILIPS


Block Diagram

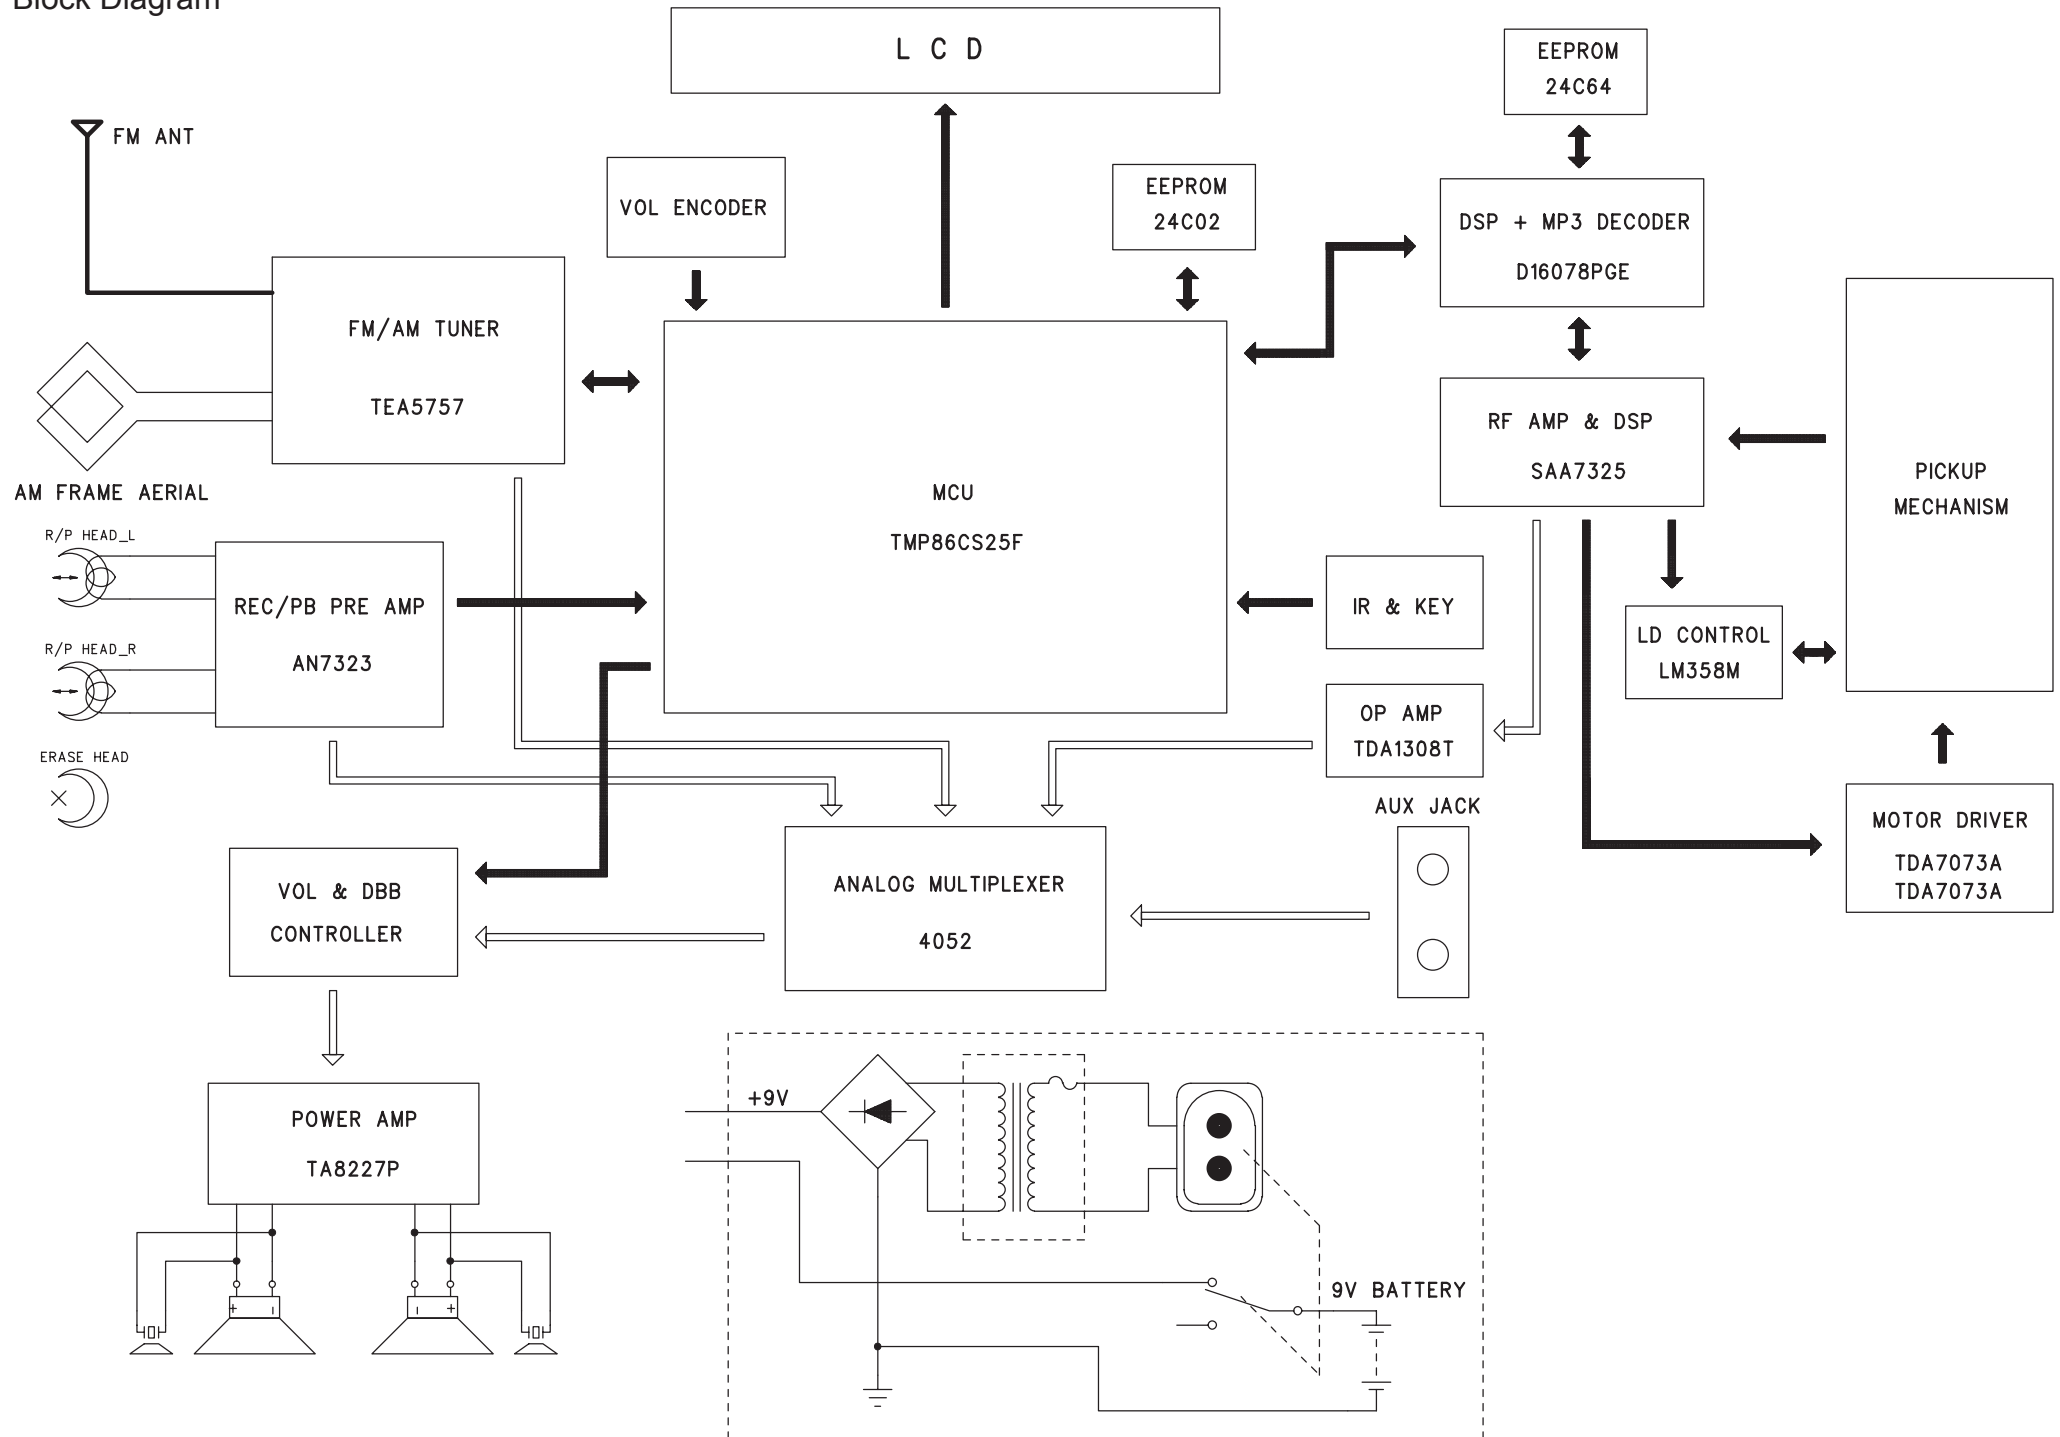


Wiring diagram

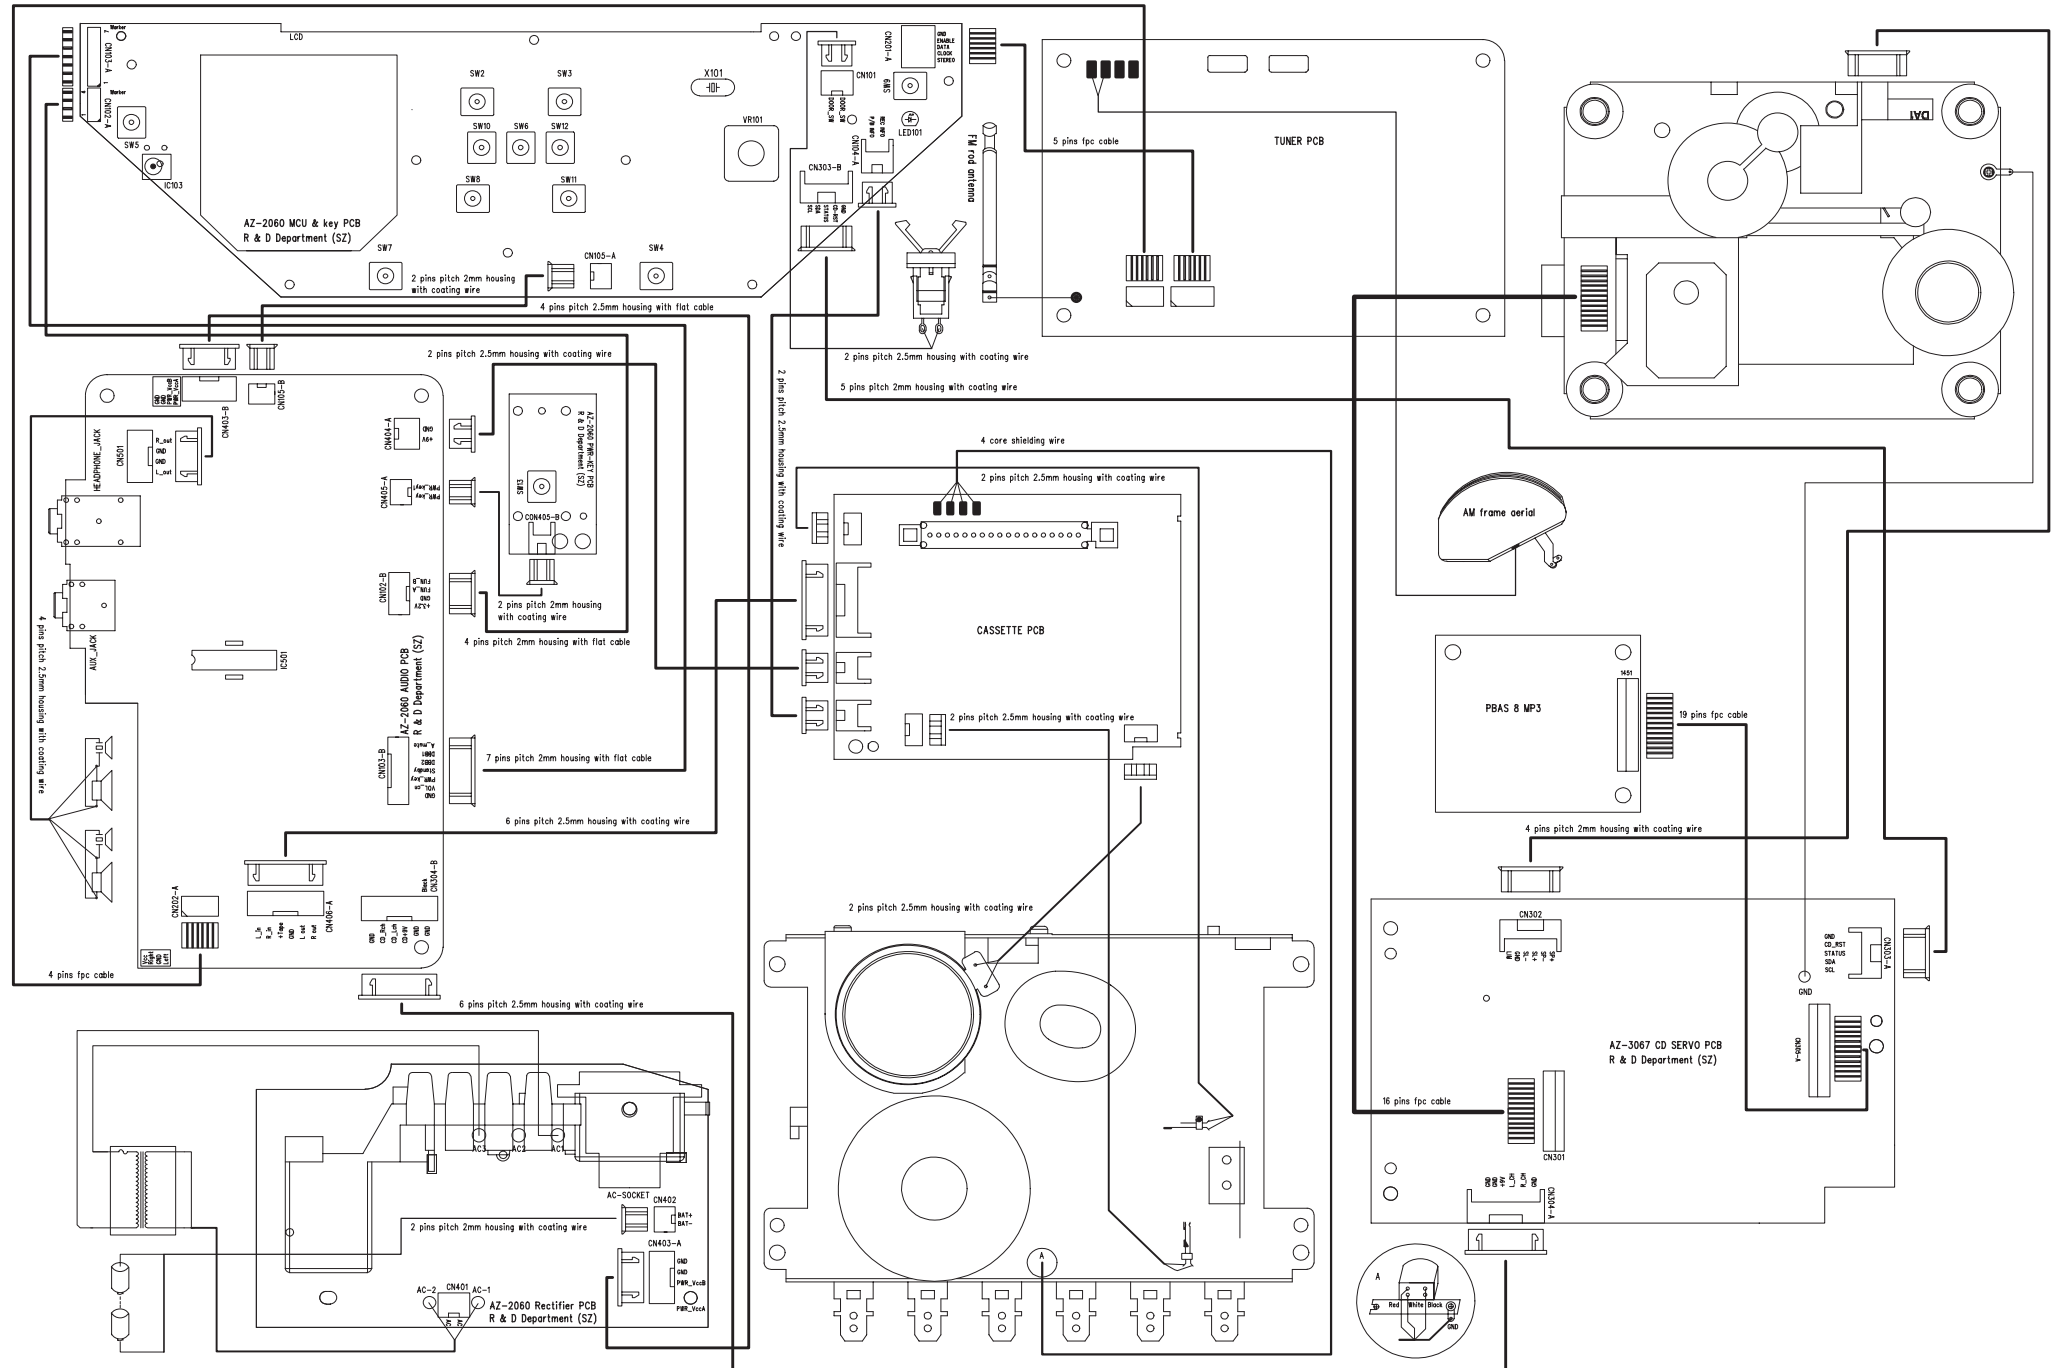


Circuit diagram - Volume & EQ

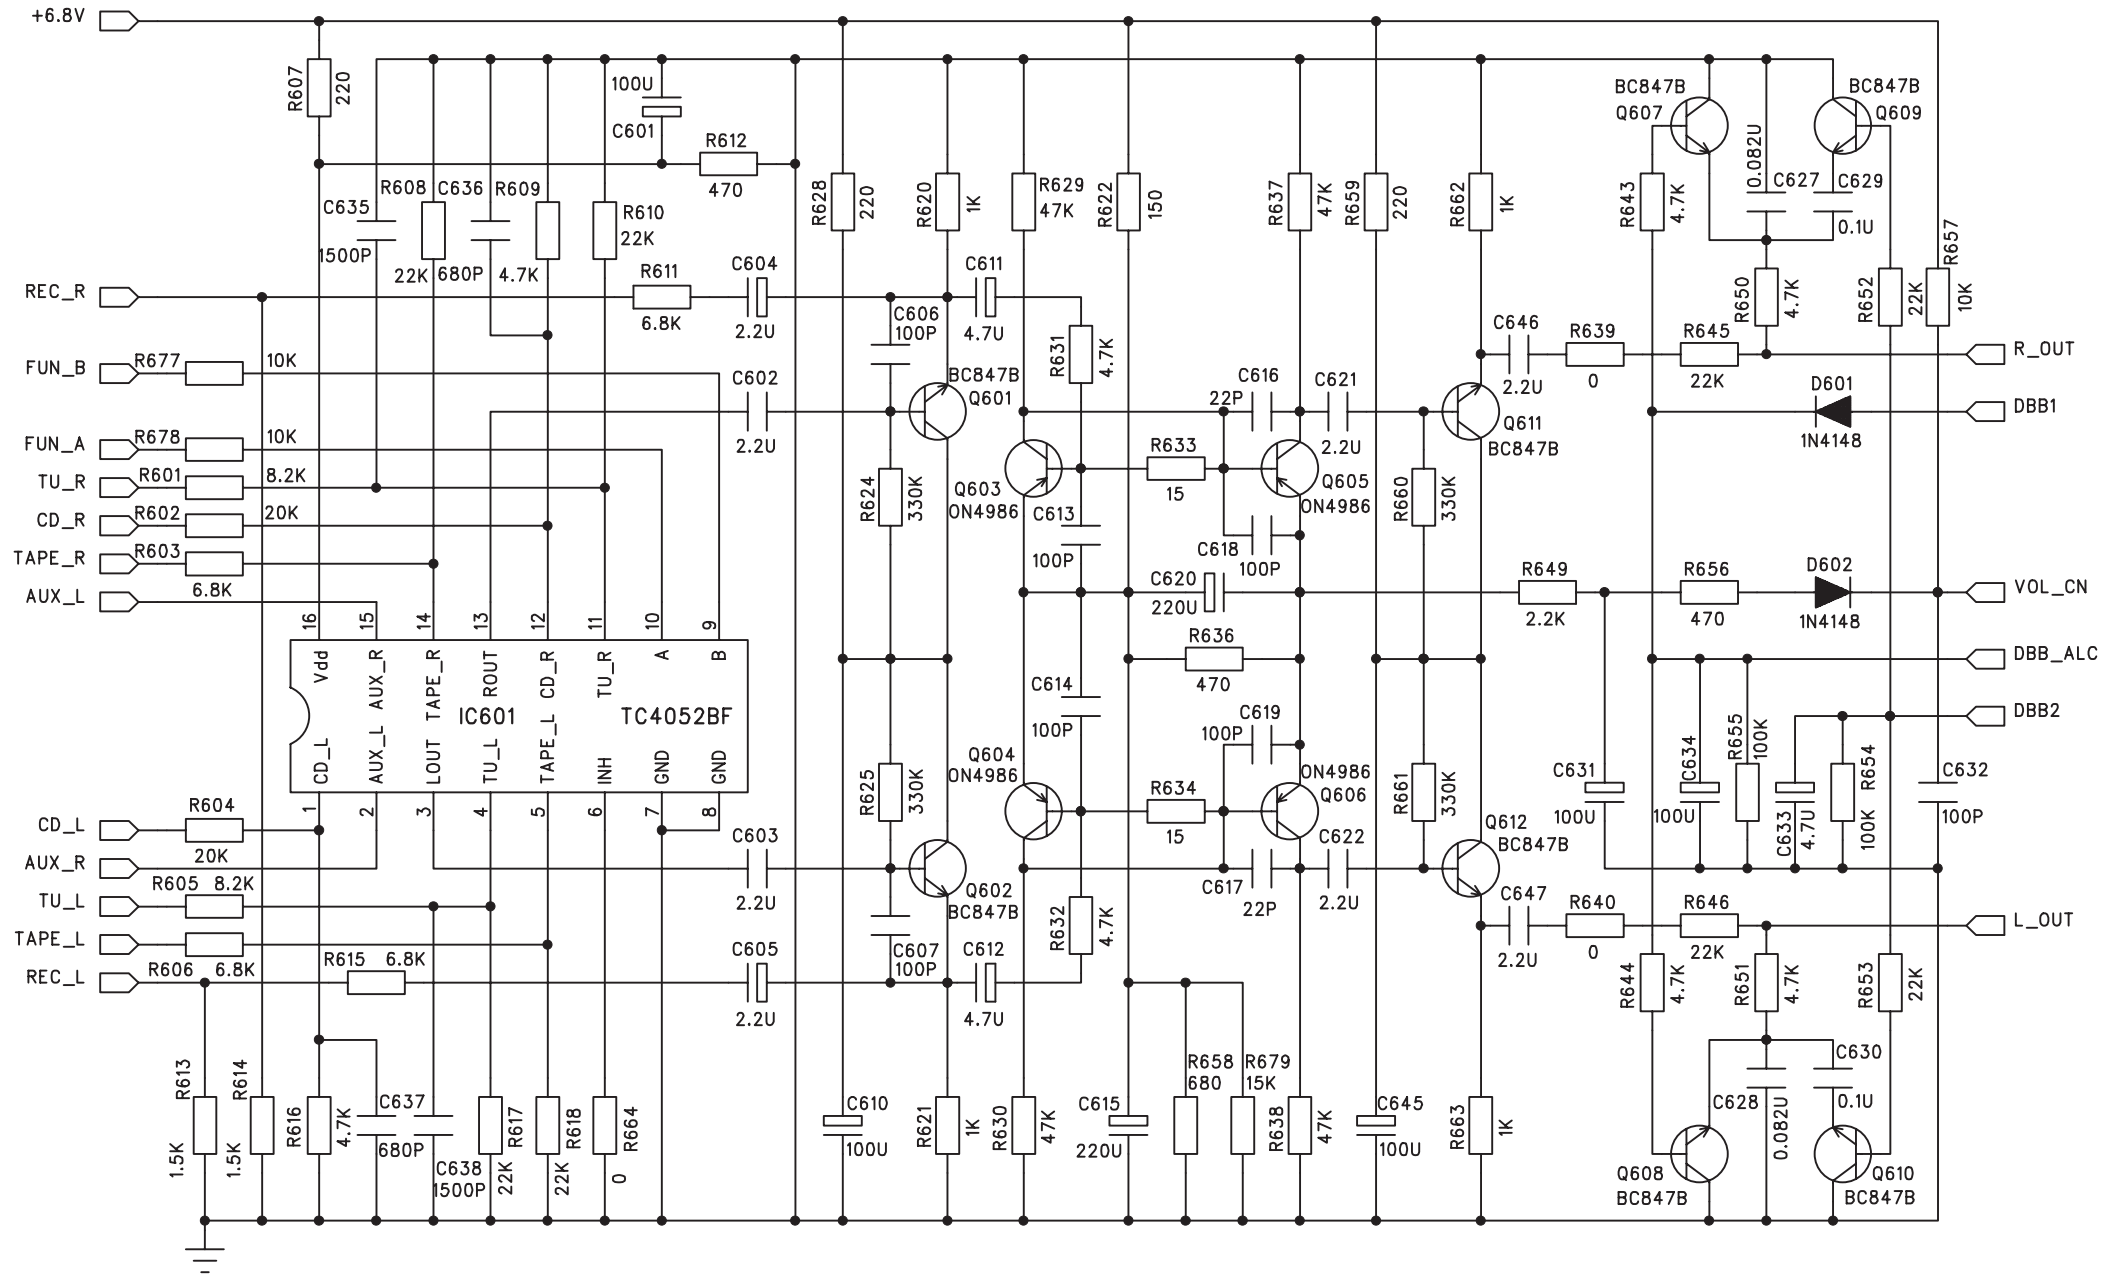


Circuit diagram - Power Amplifier

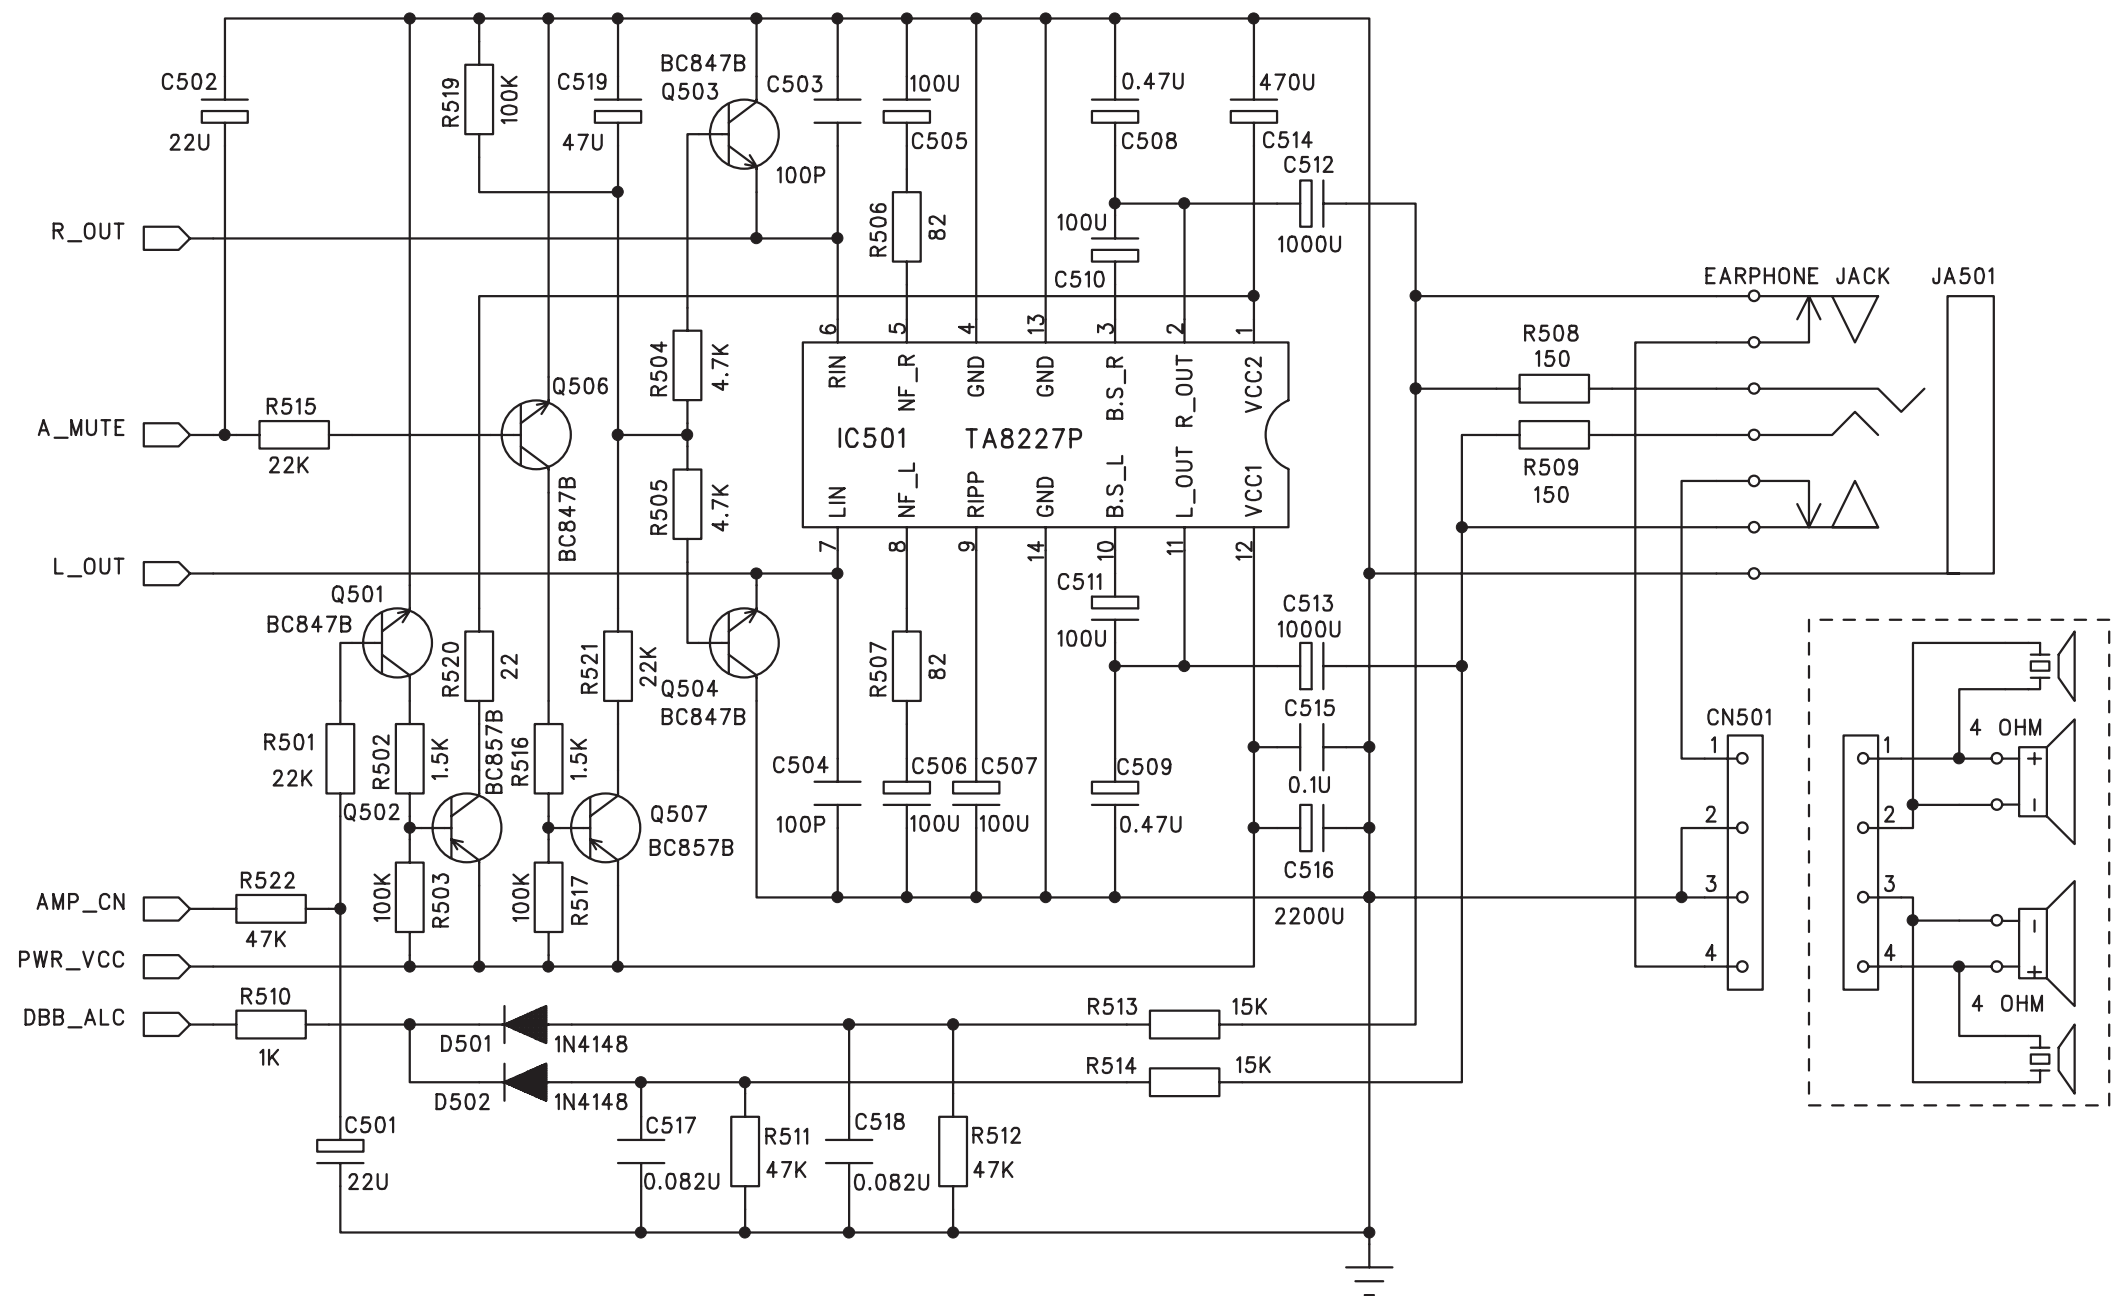


Circuit diagram - Power supply

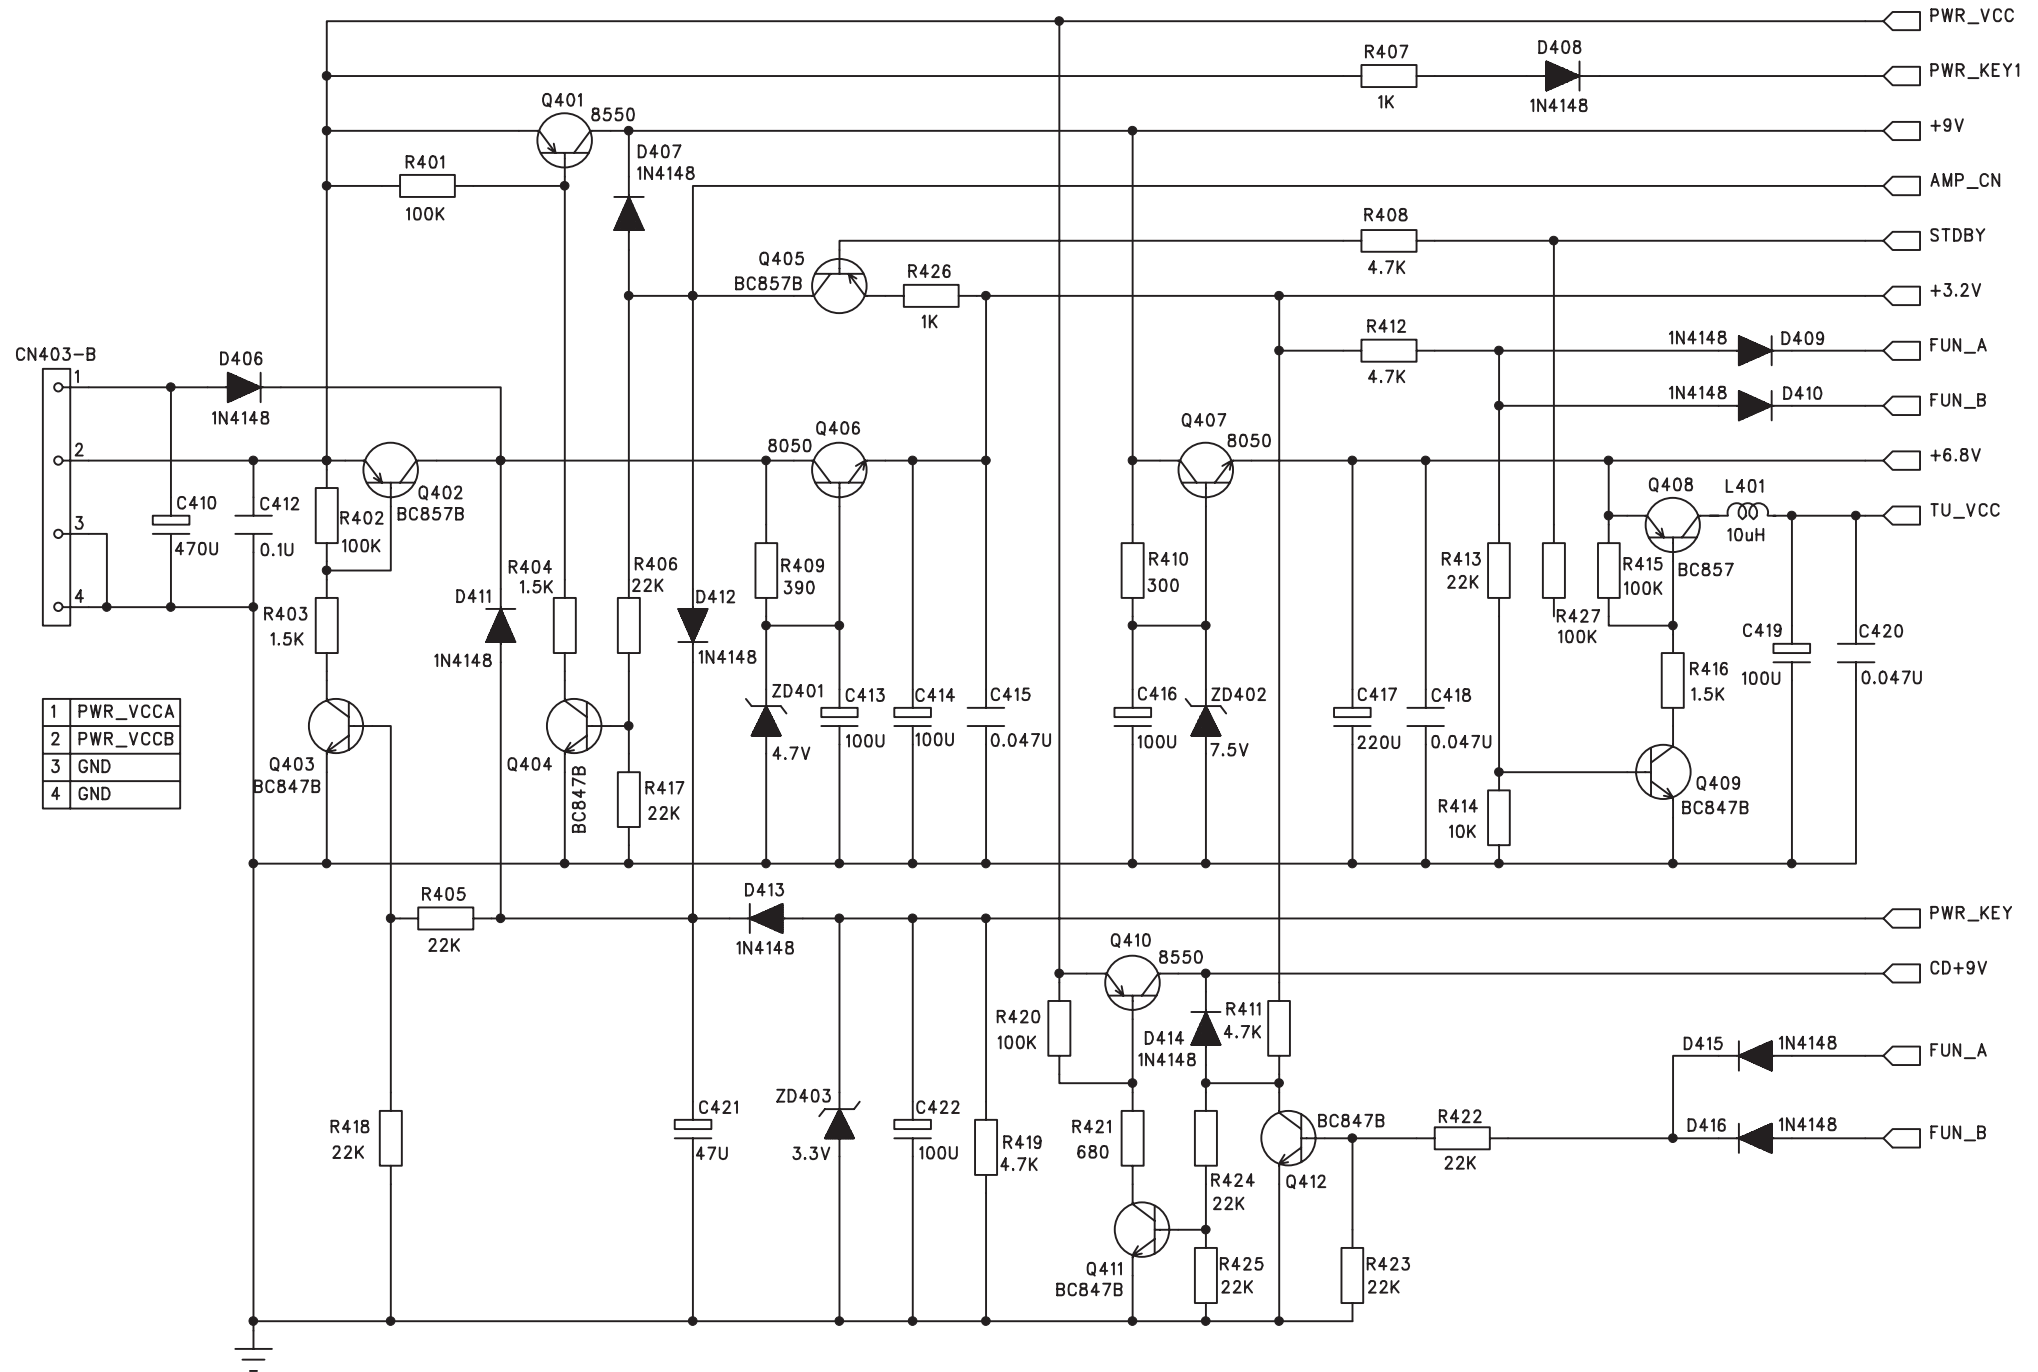


Circuit diagram - Audio interface

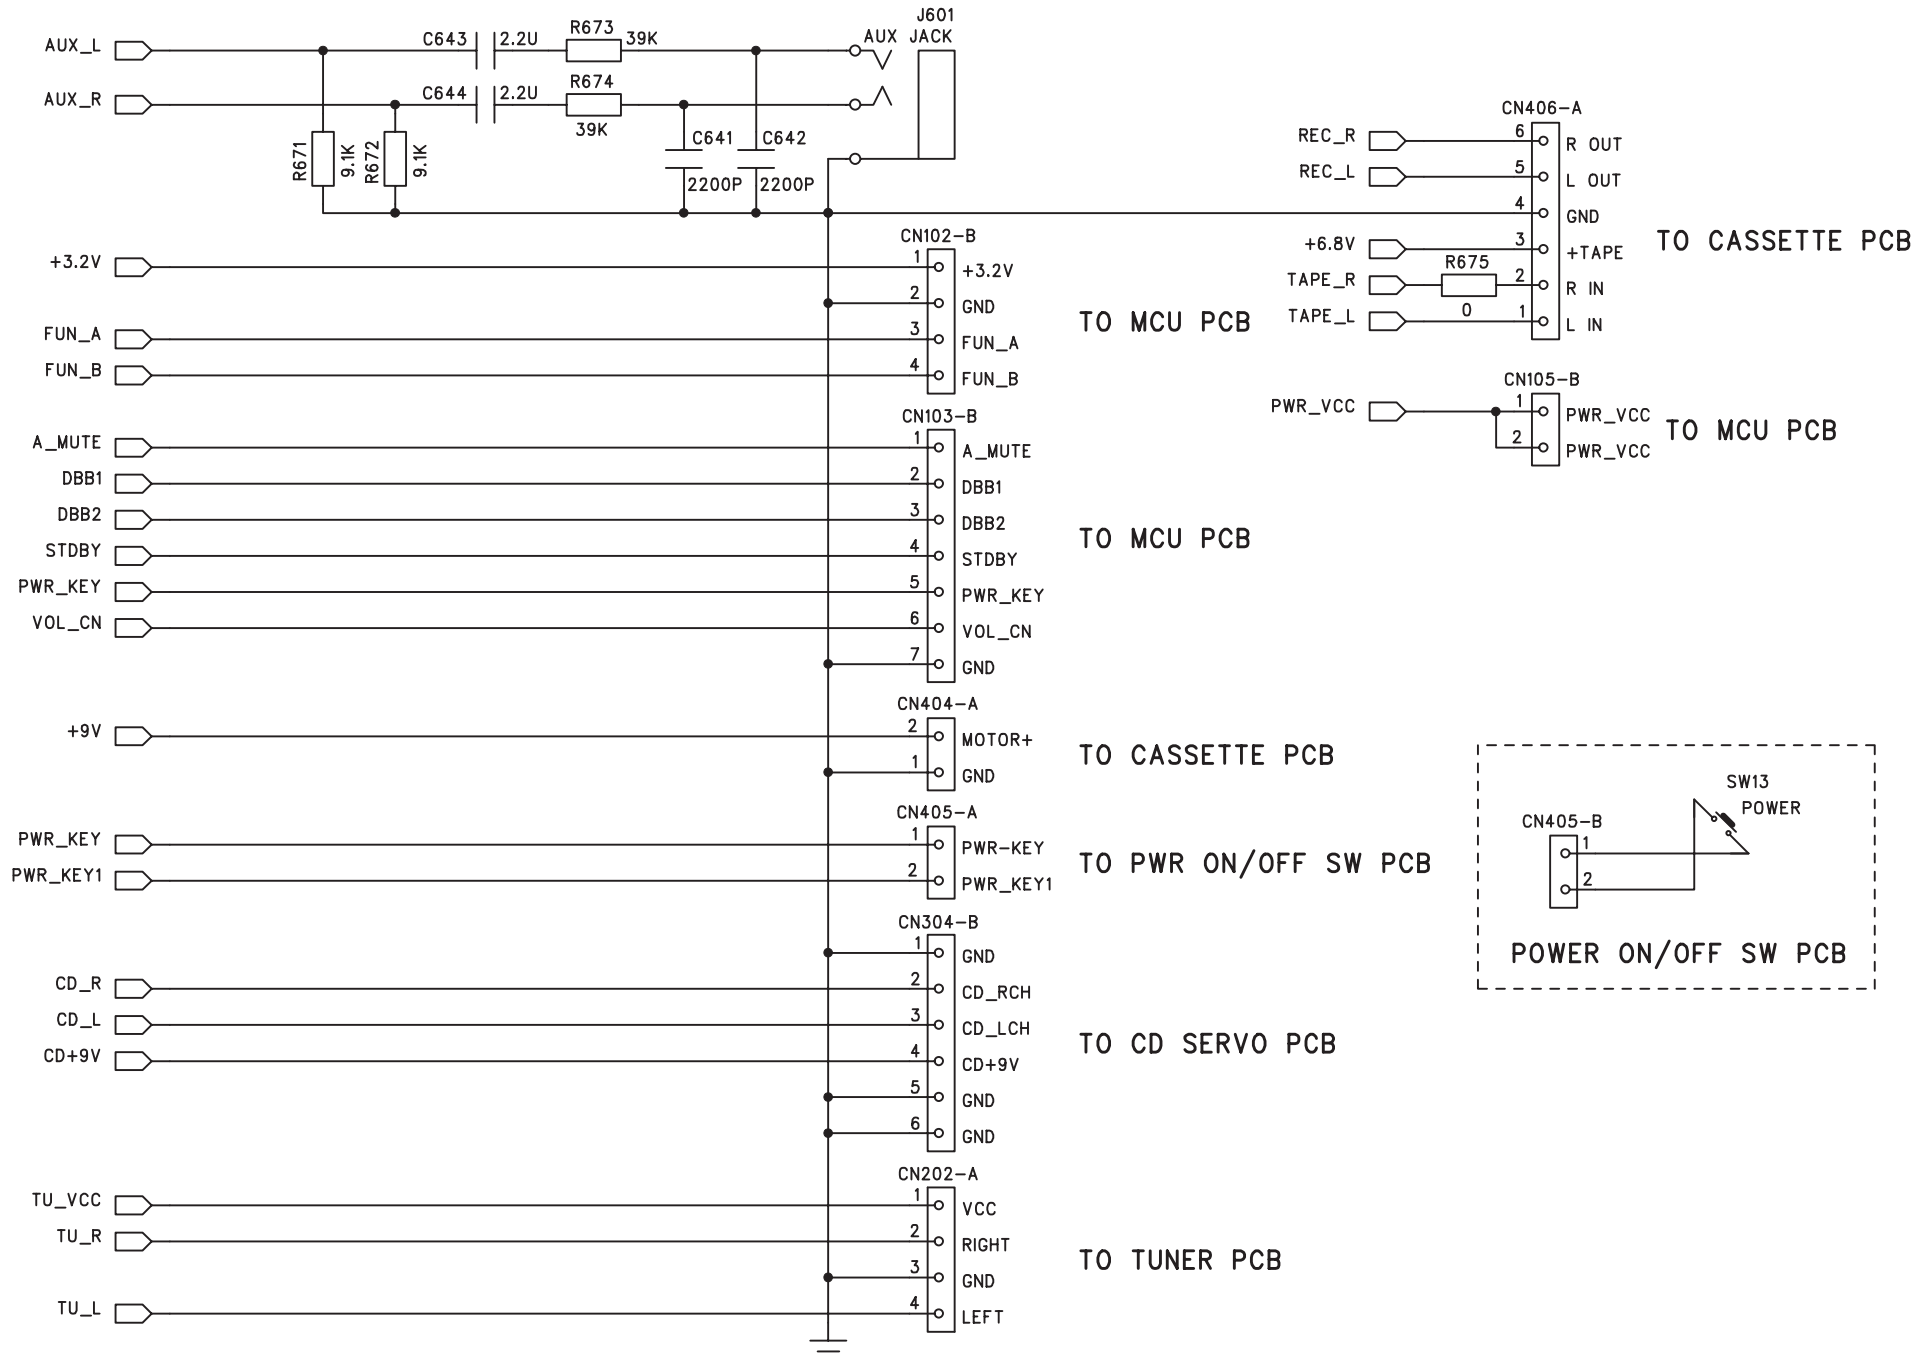


Circuit diagram - CD Servo

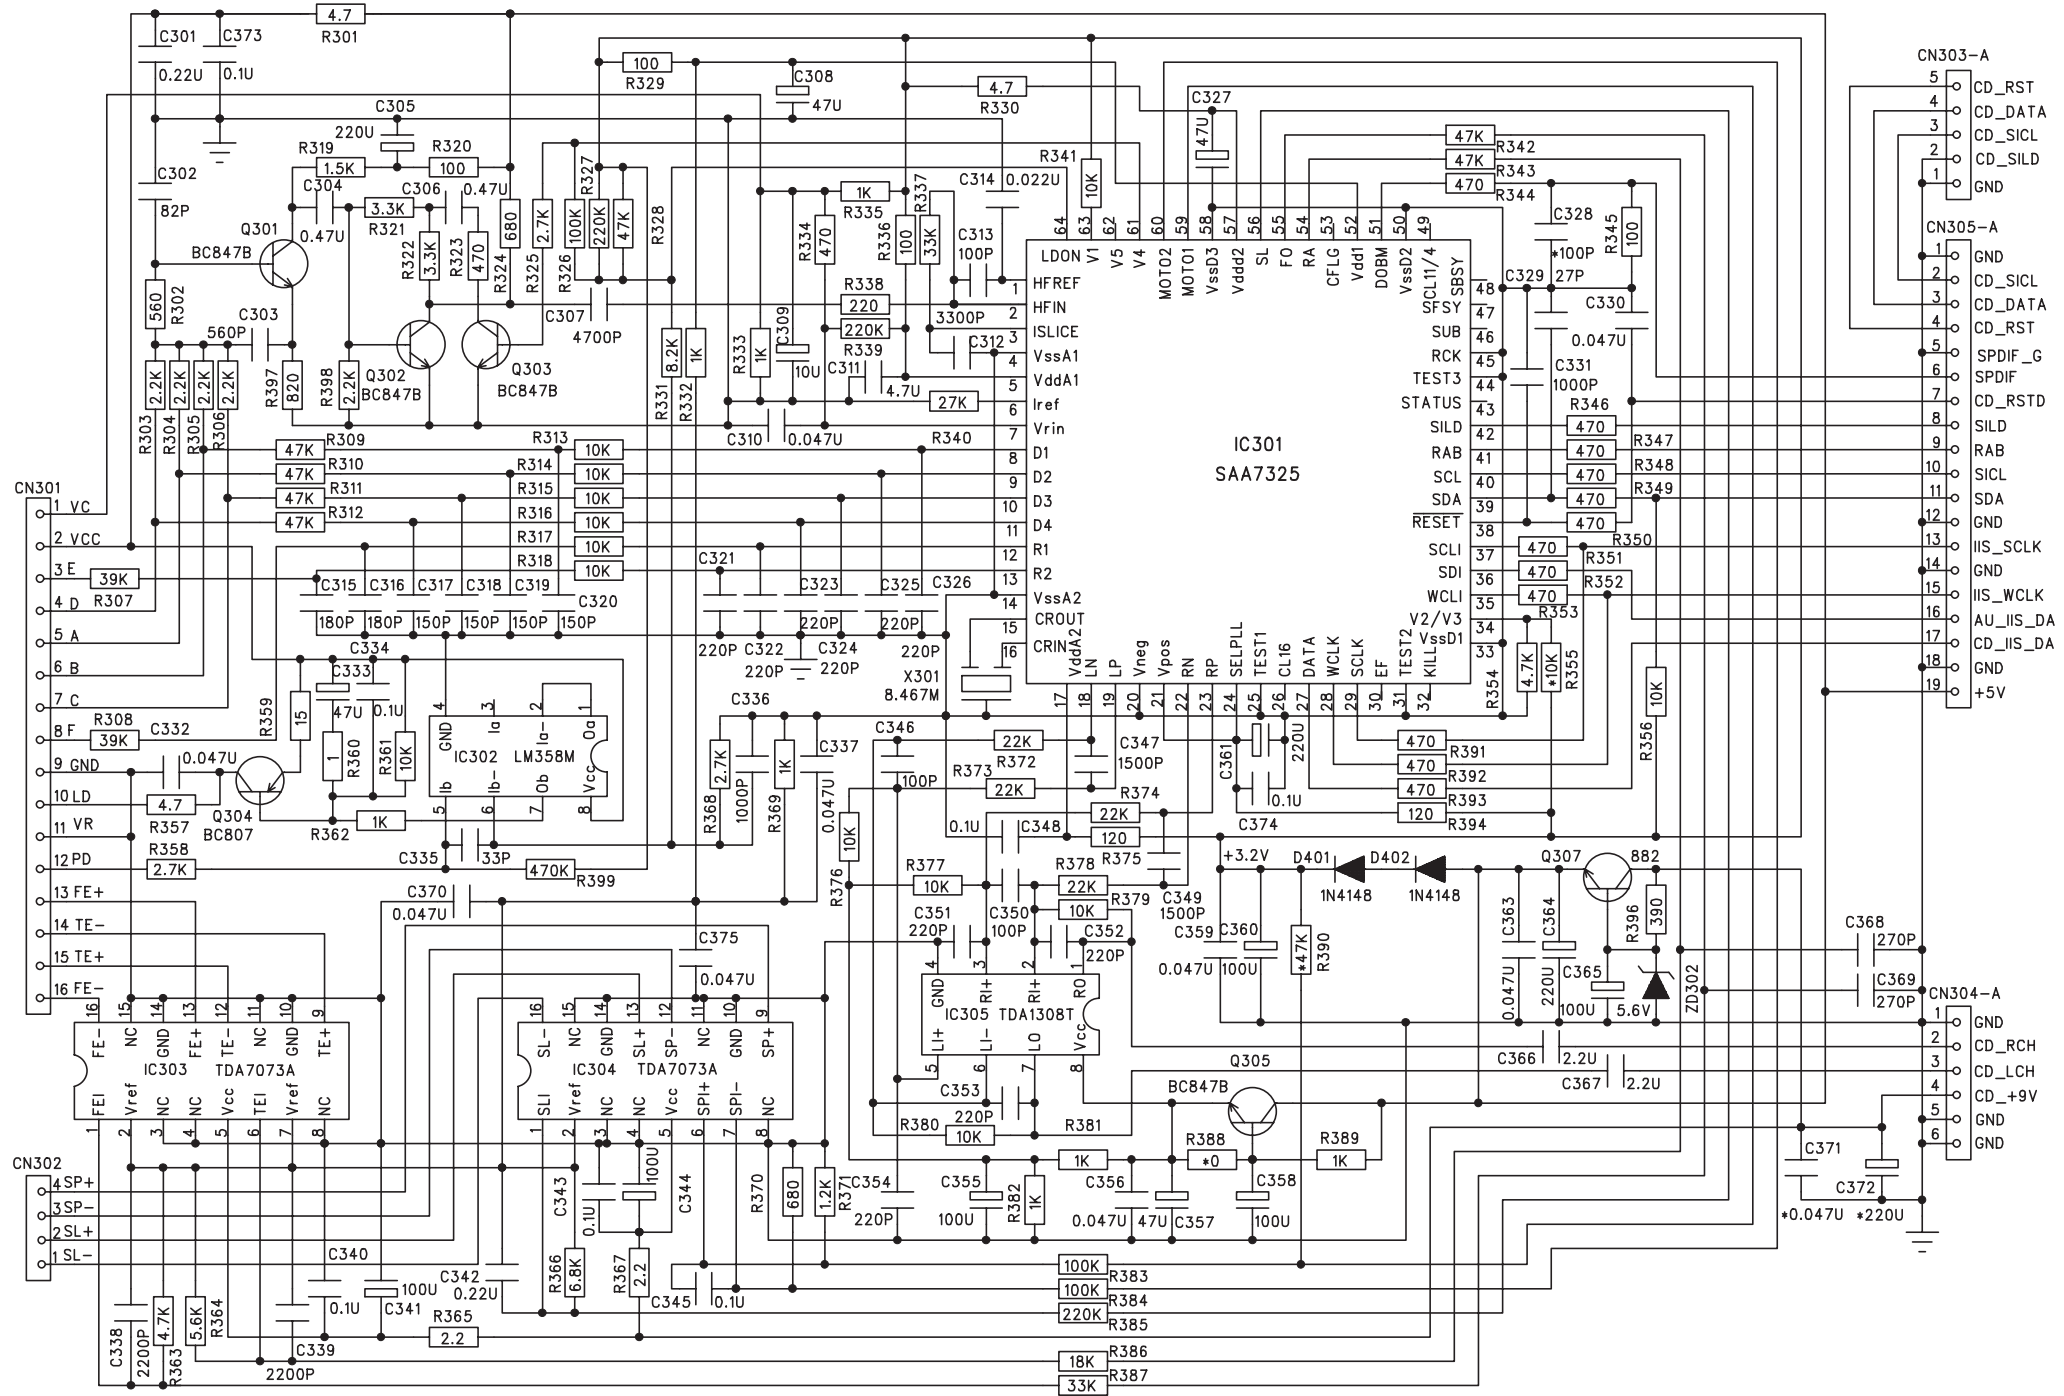



Circuit diagram - MCU board

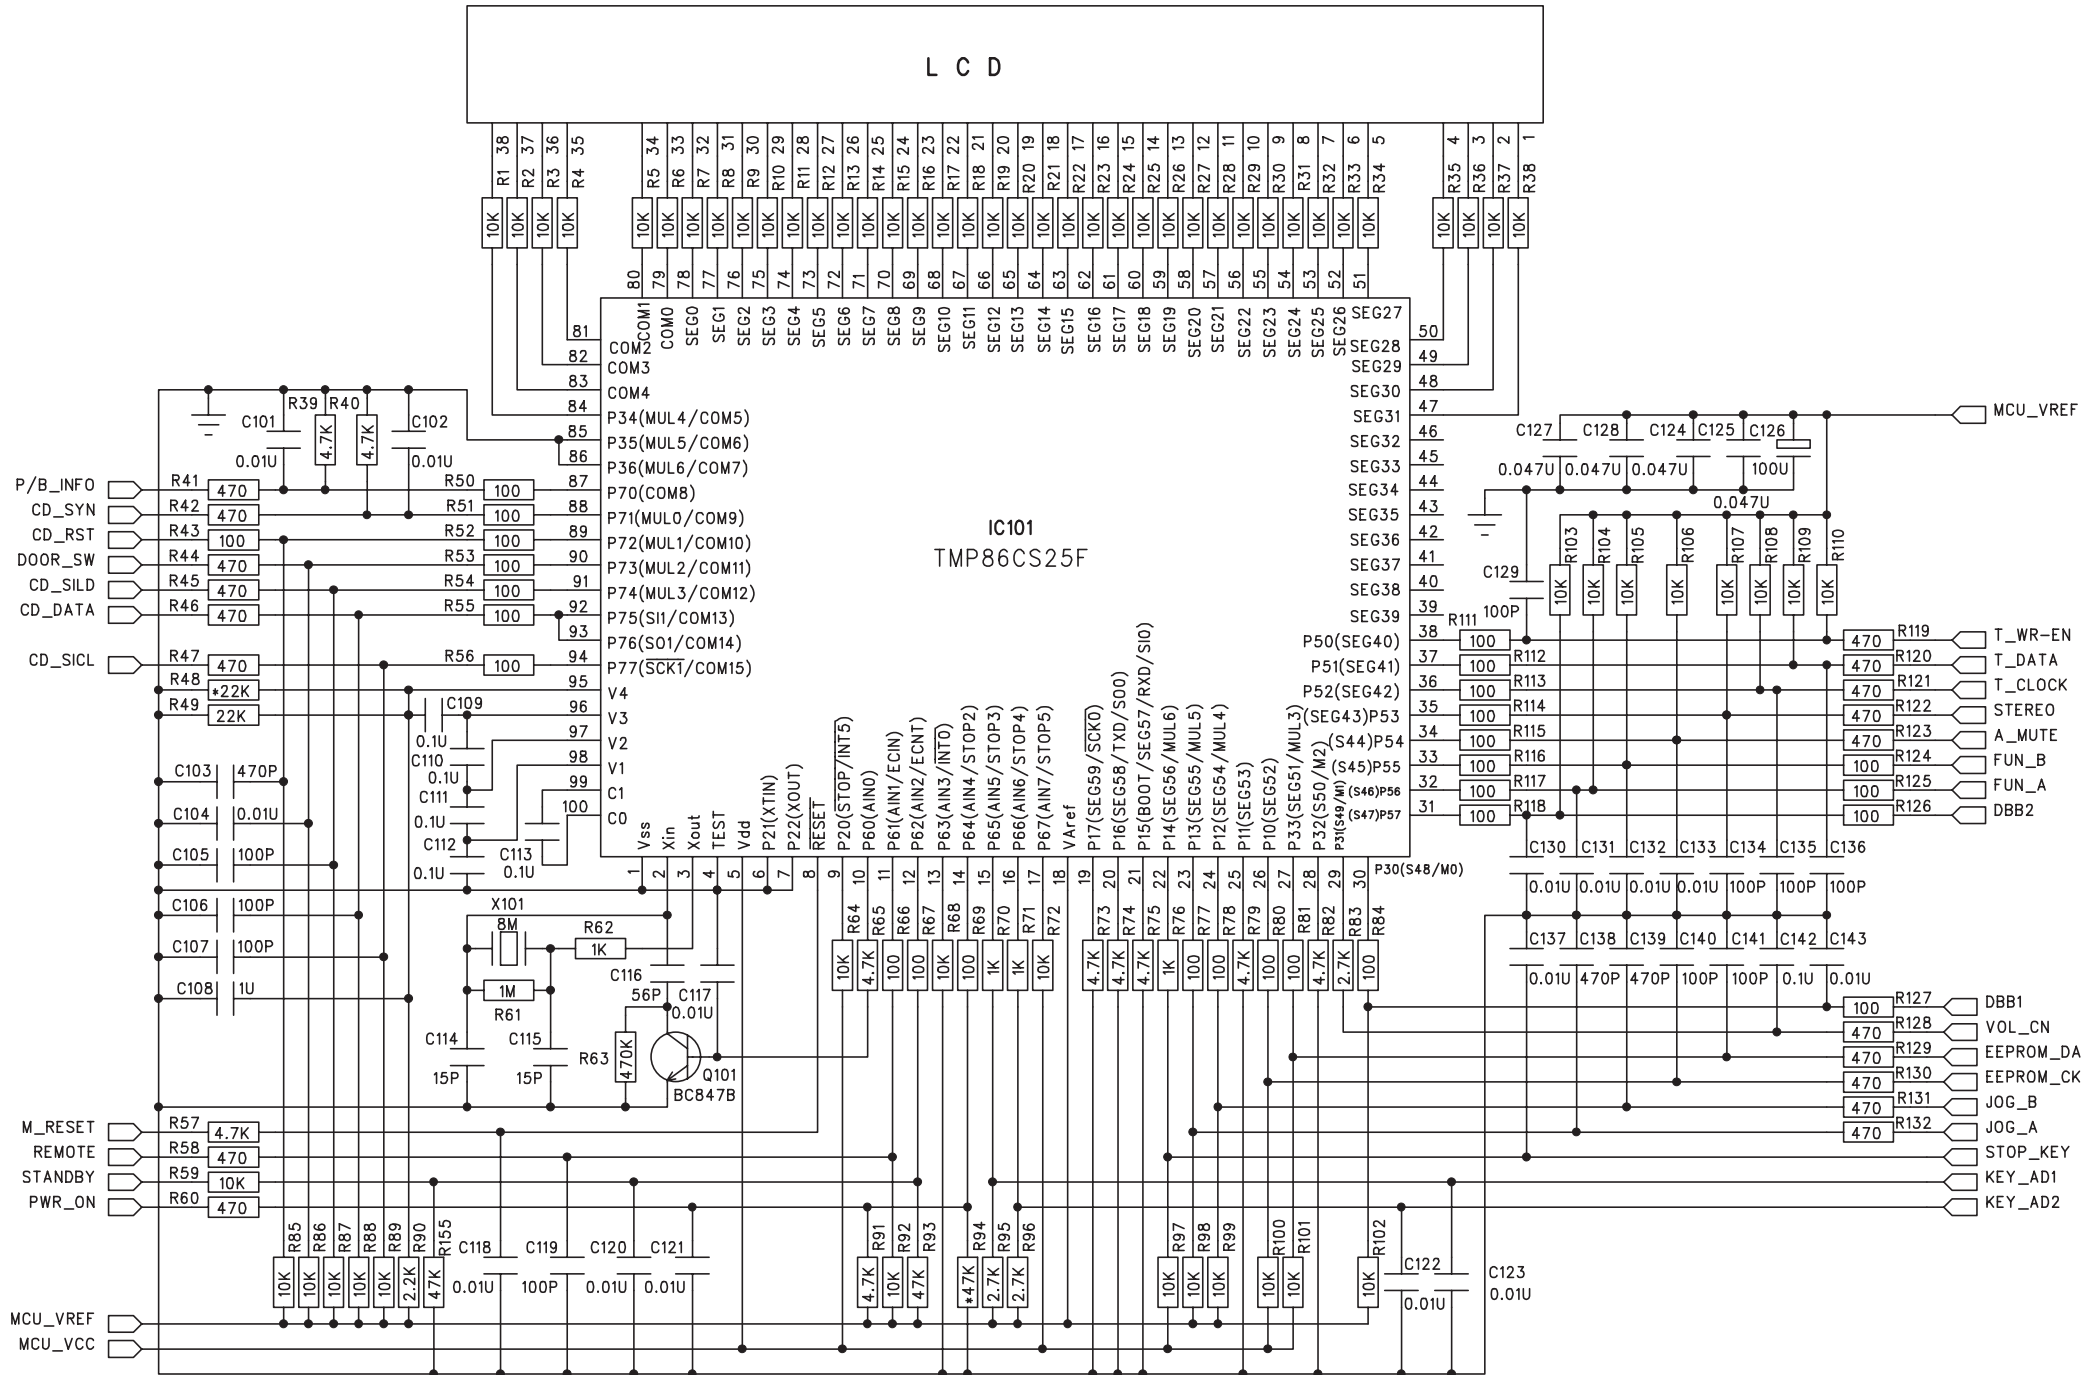


Circuit Diagram - Key board

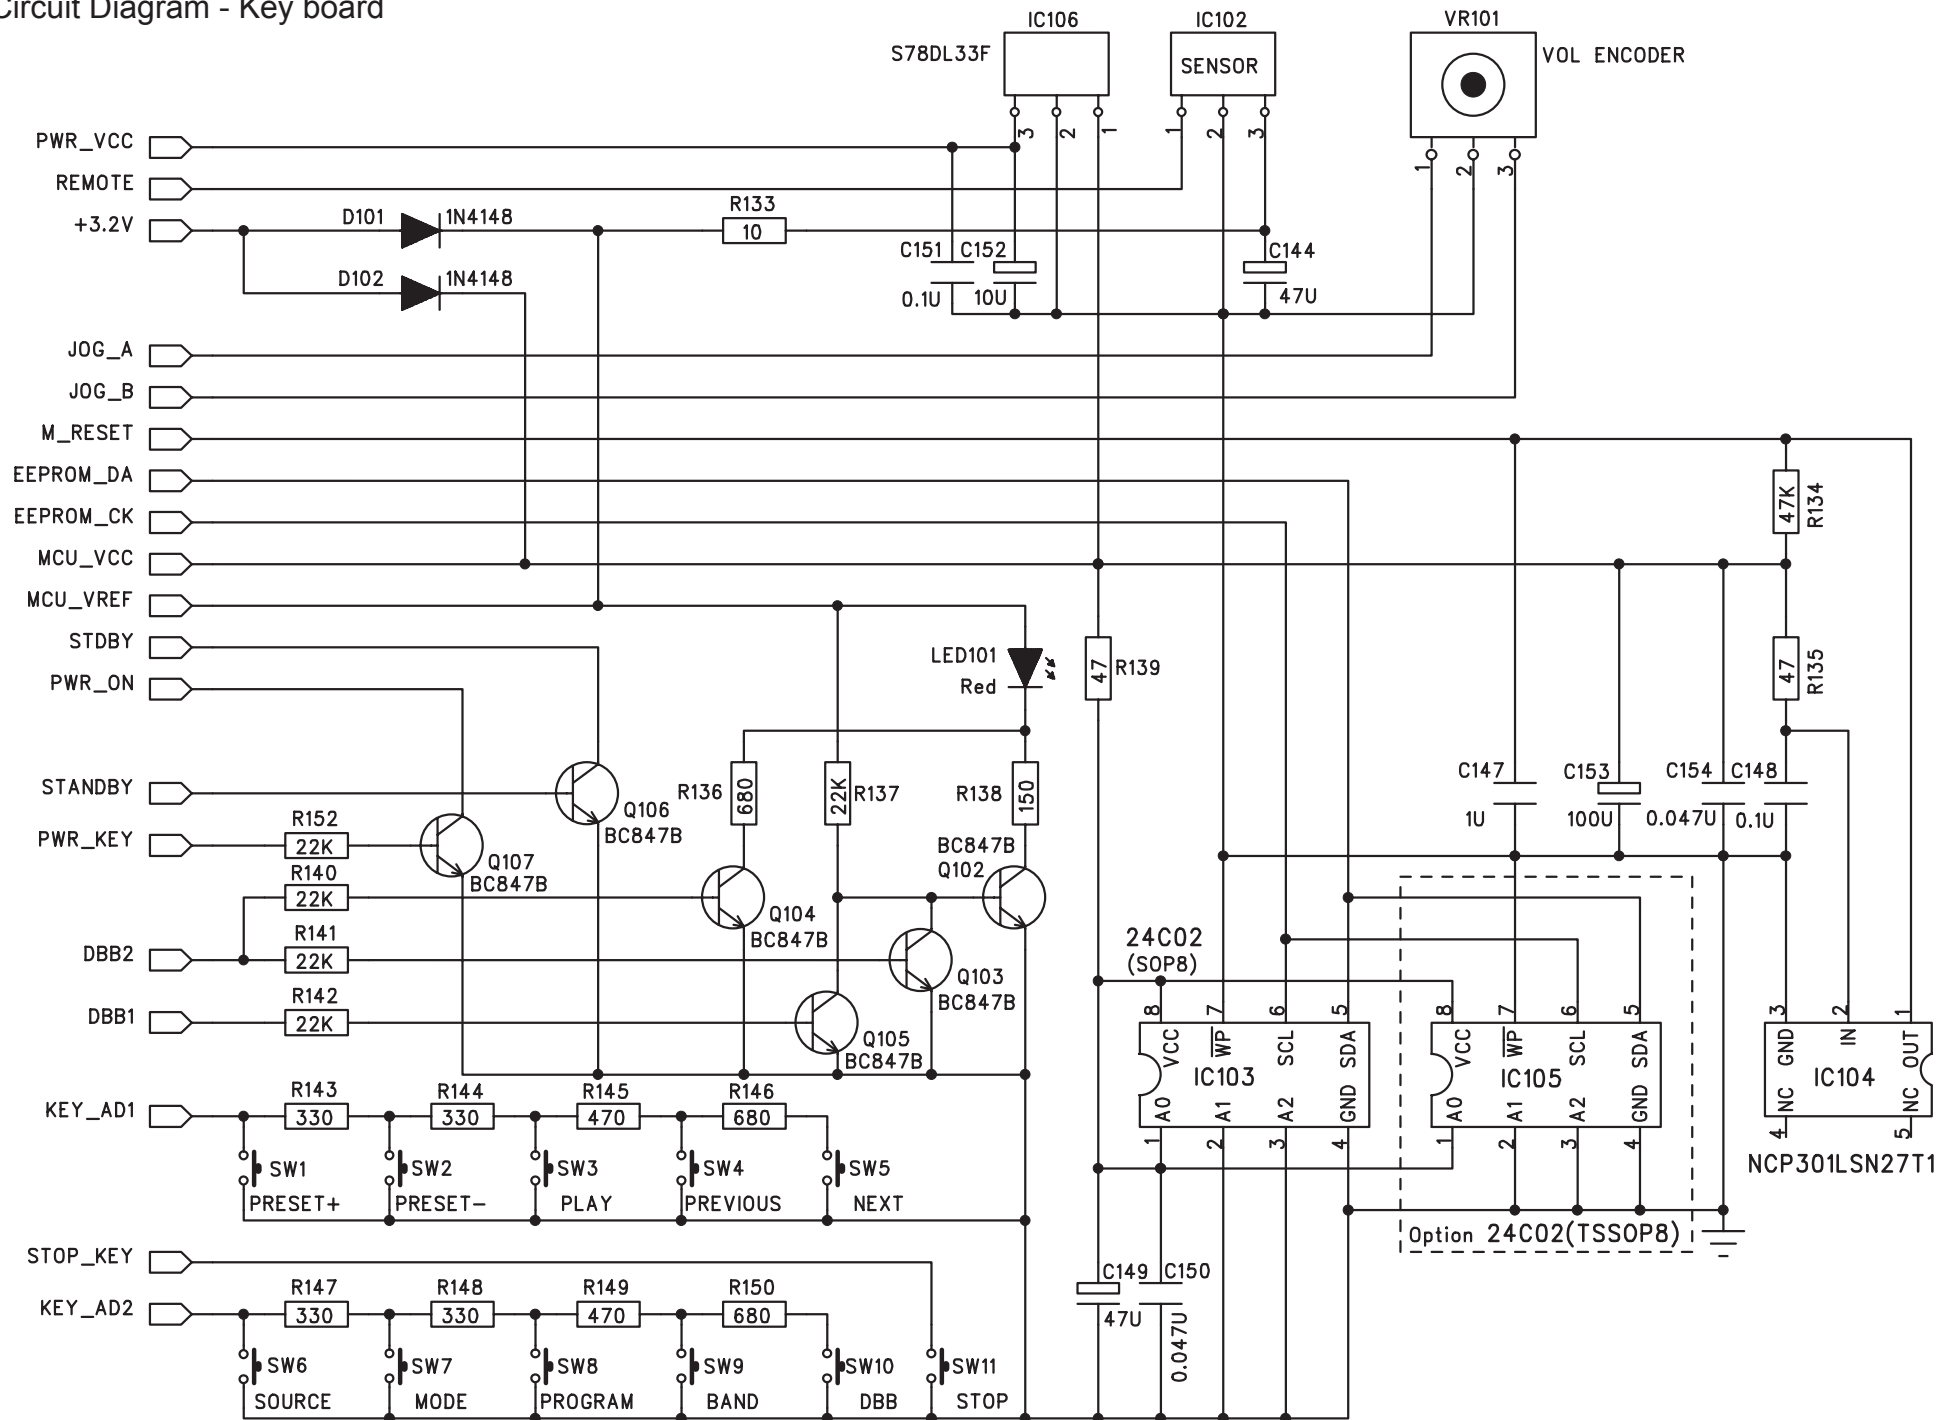


Circuit diagram - MCU Interface

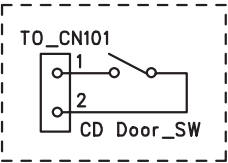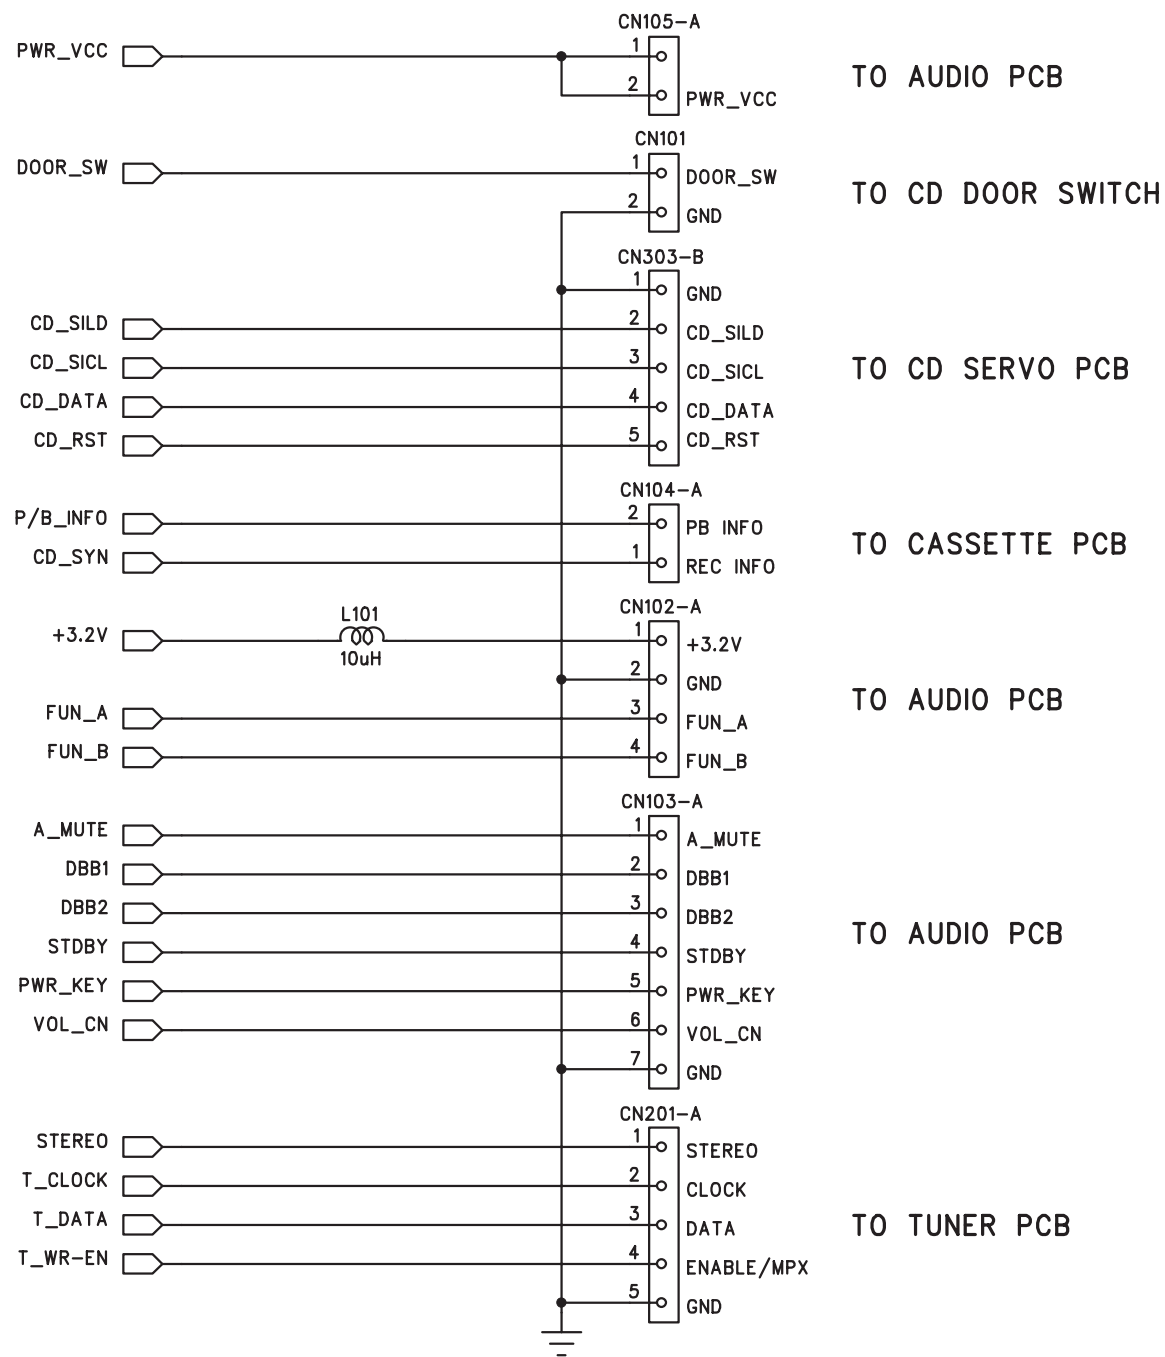


Circuit Ddiagram - Rectifier board

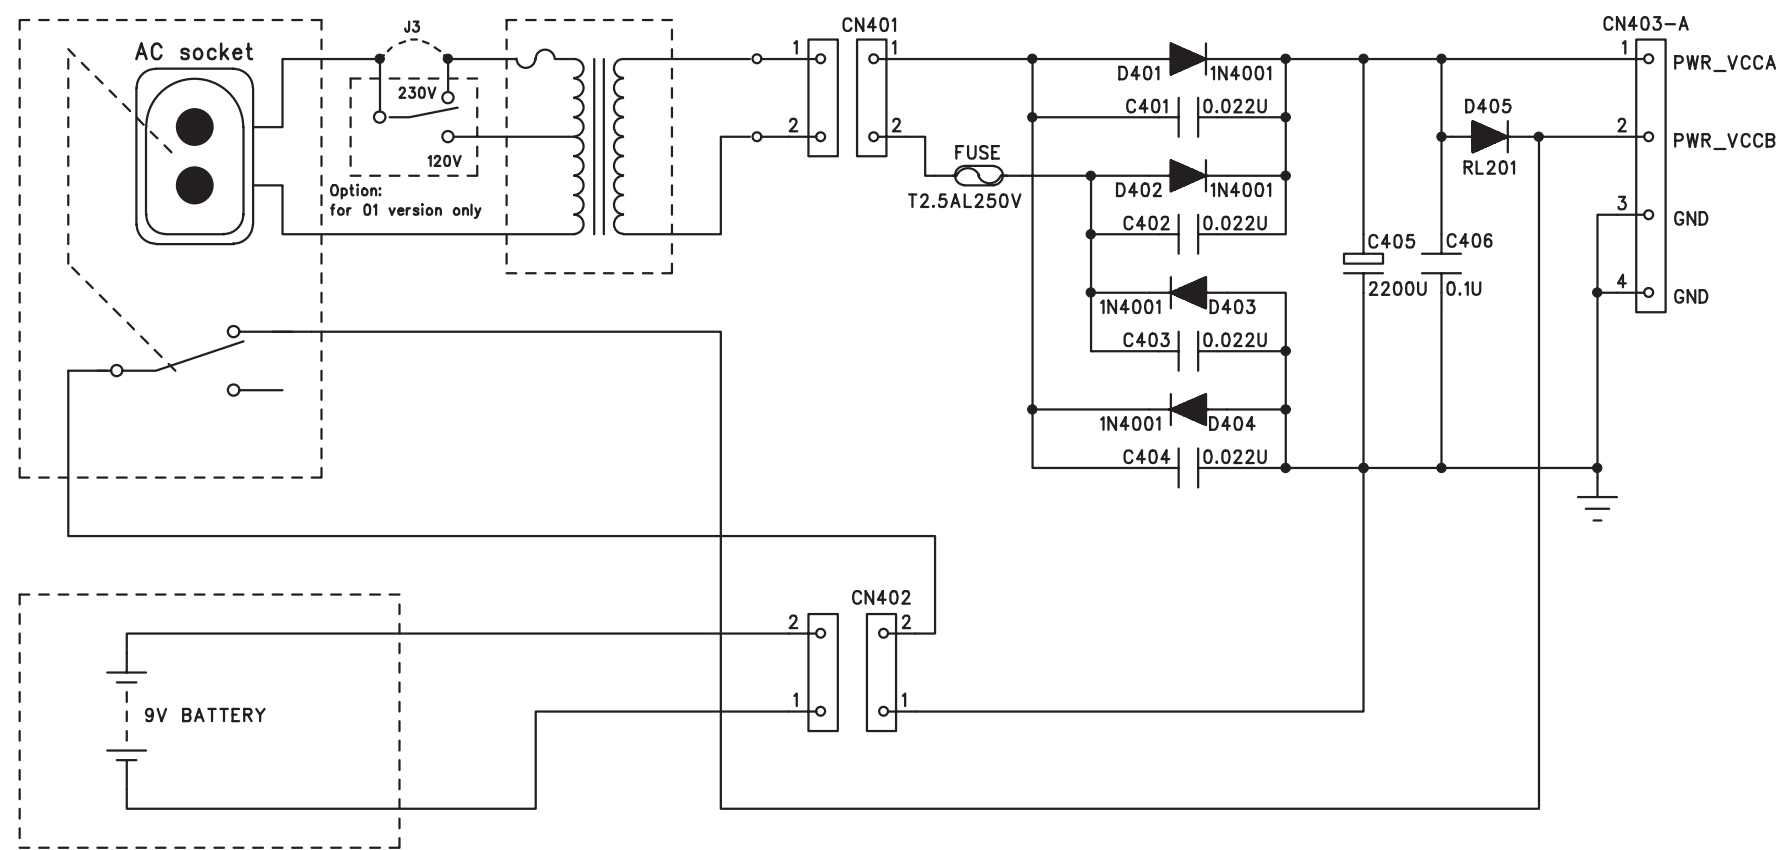



Circuit Diagram - Tape board

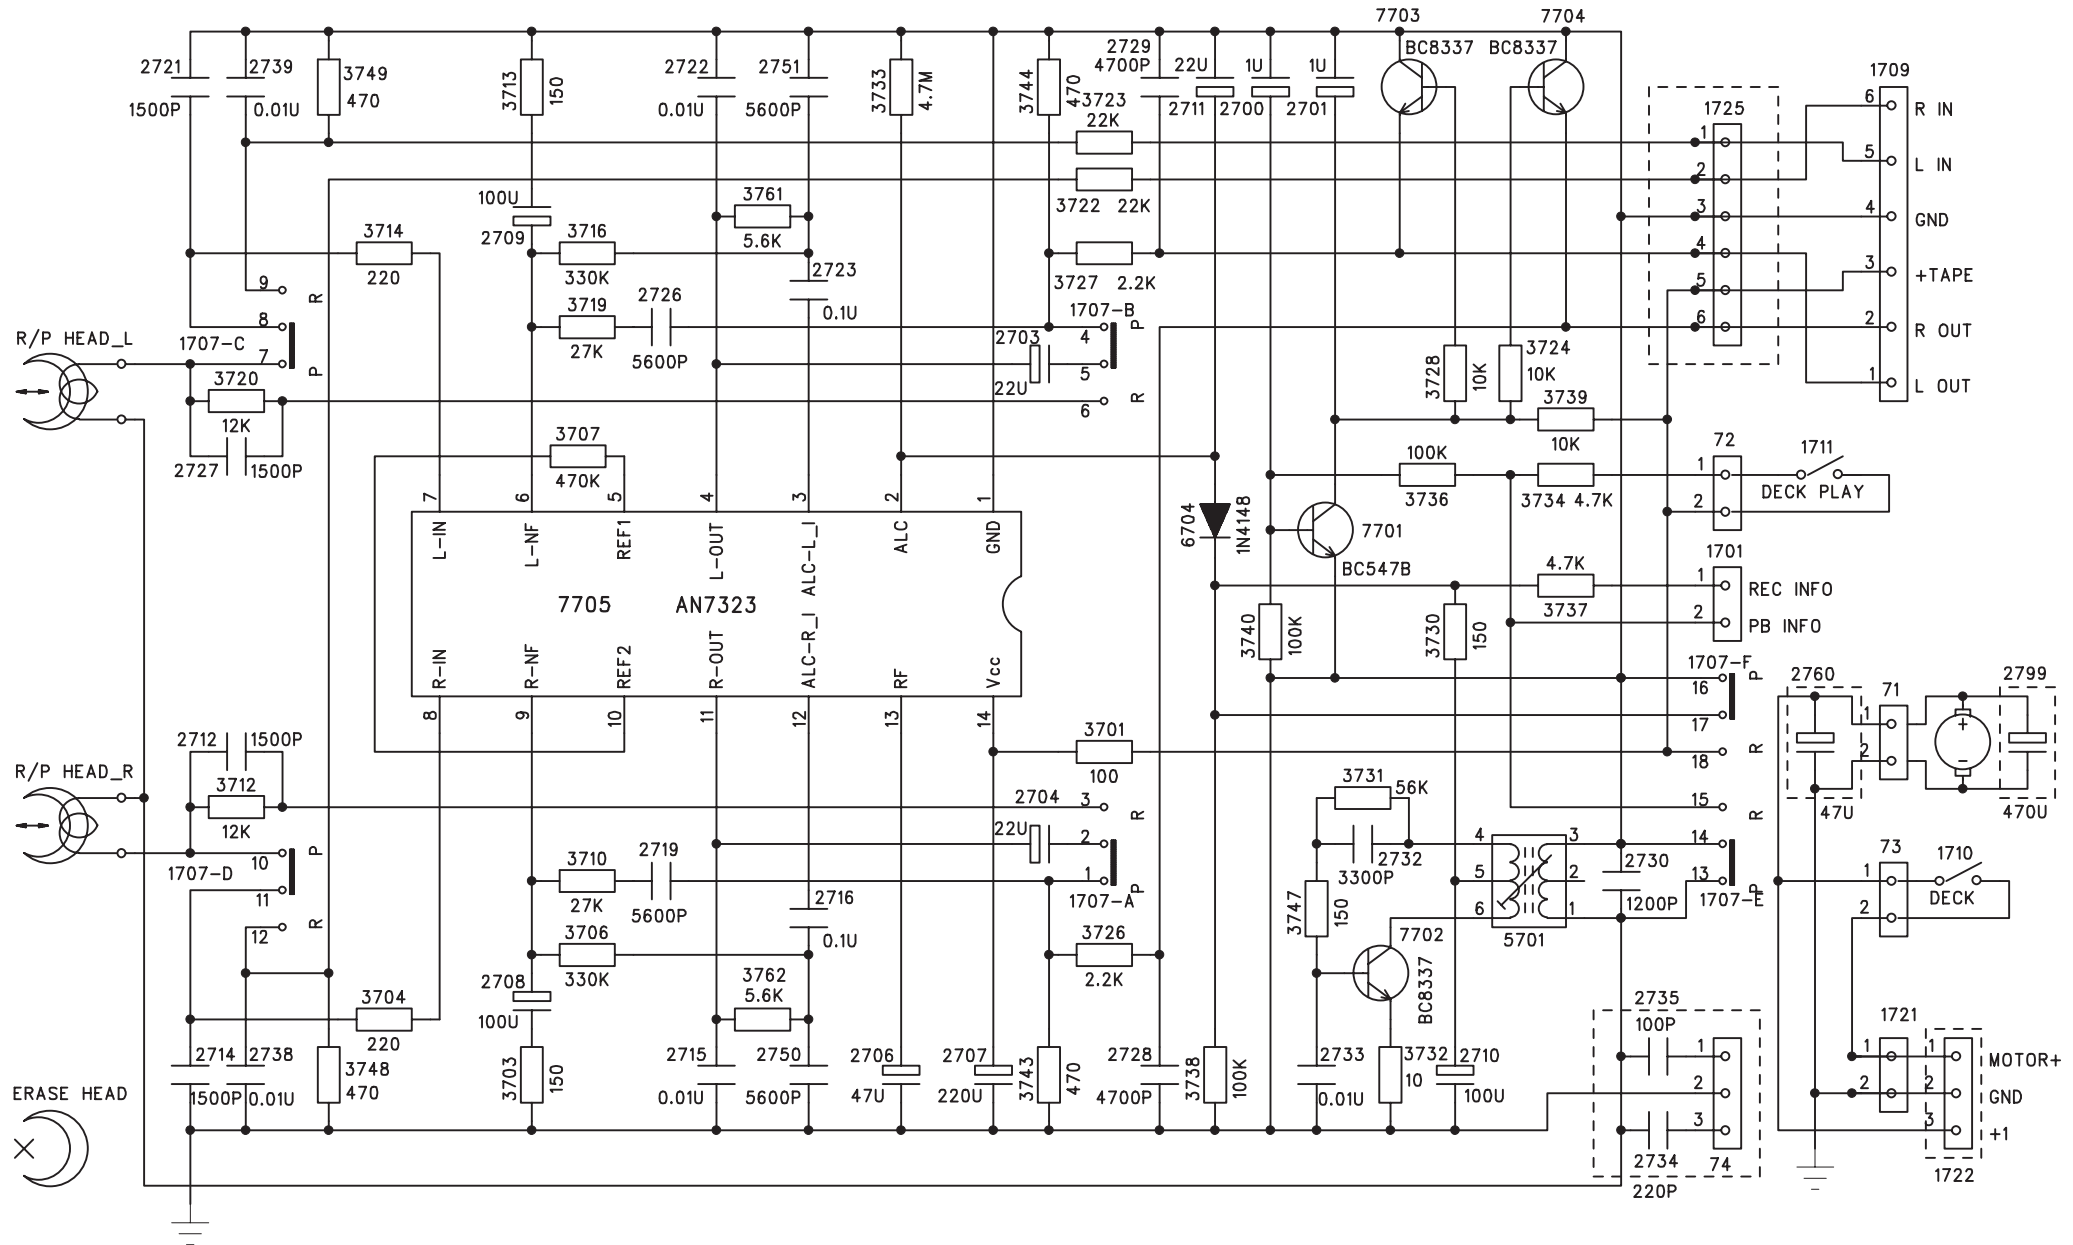



Circuit diagram - Tuner

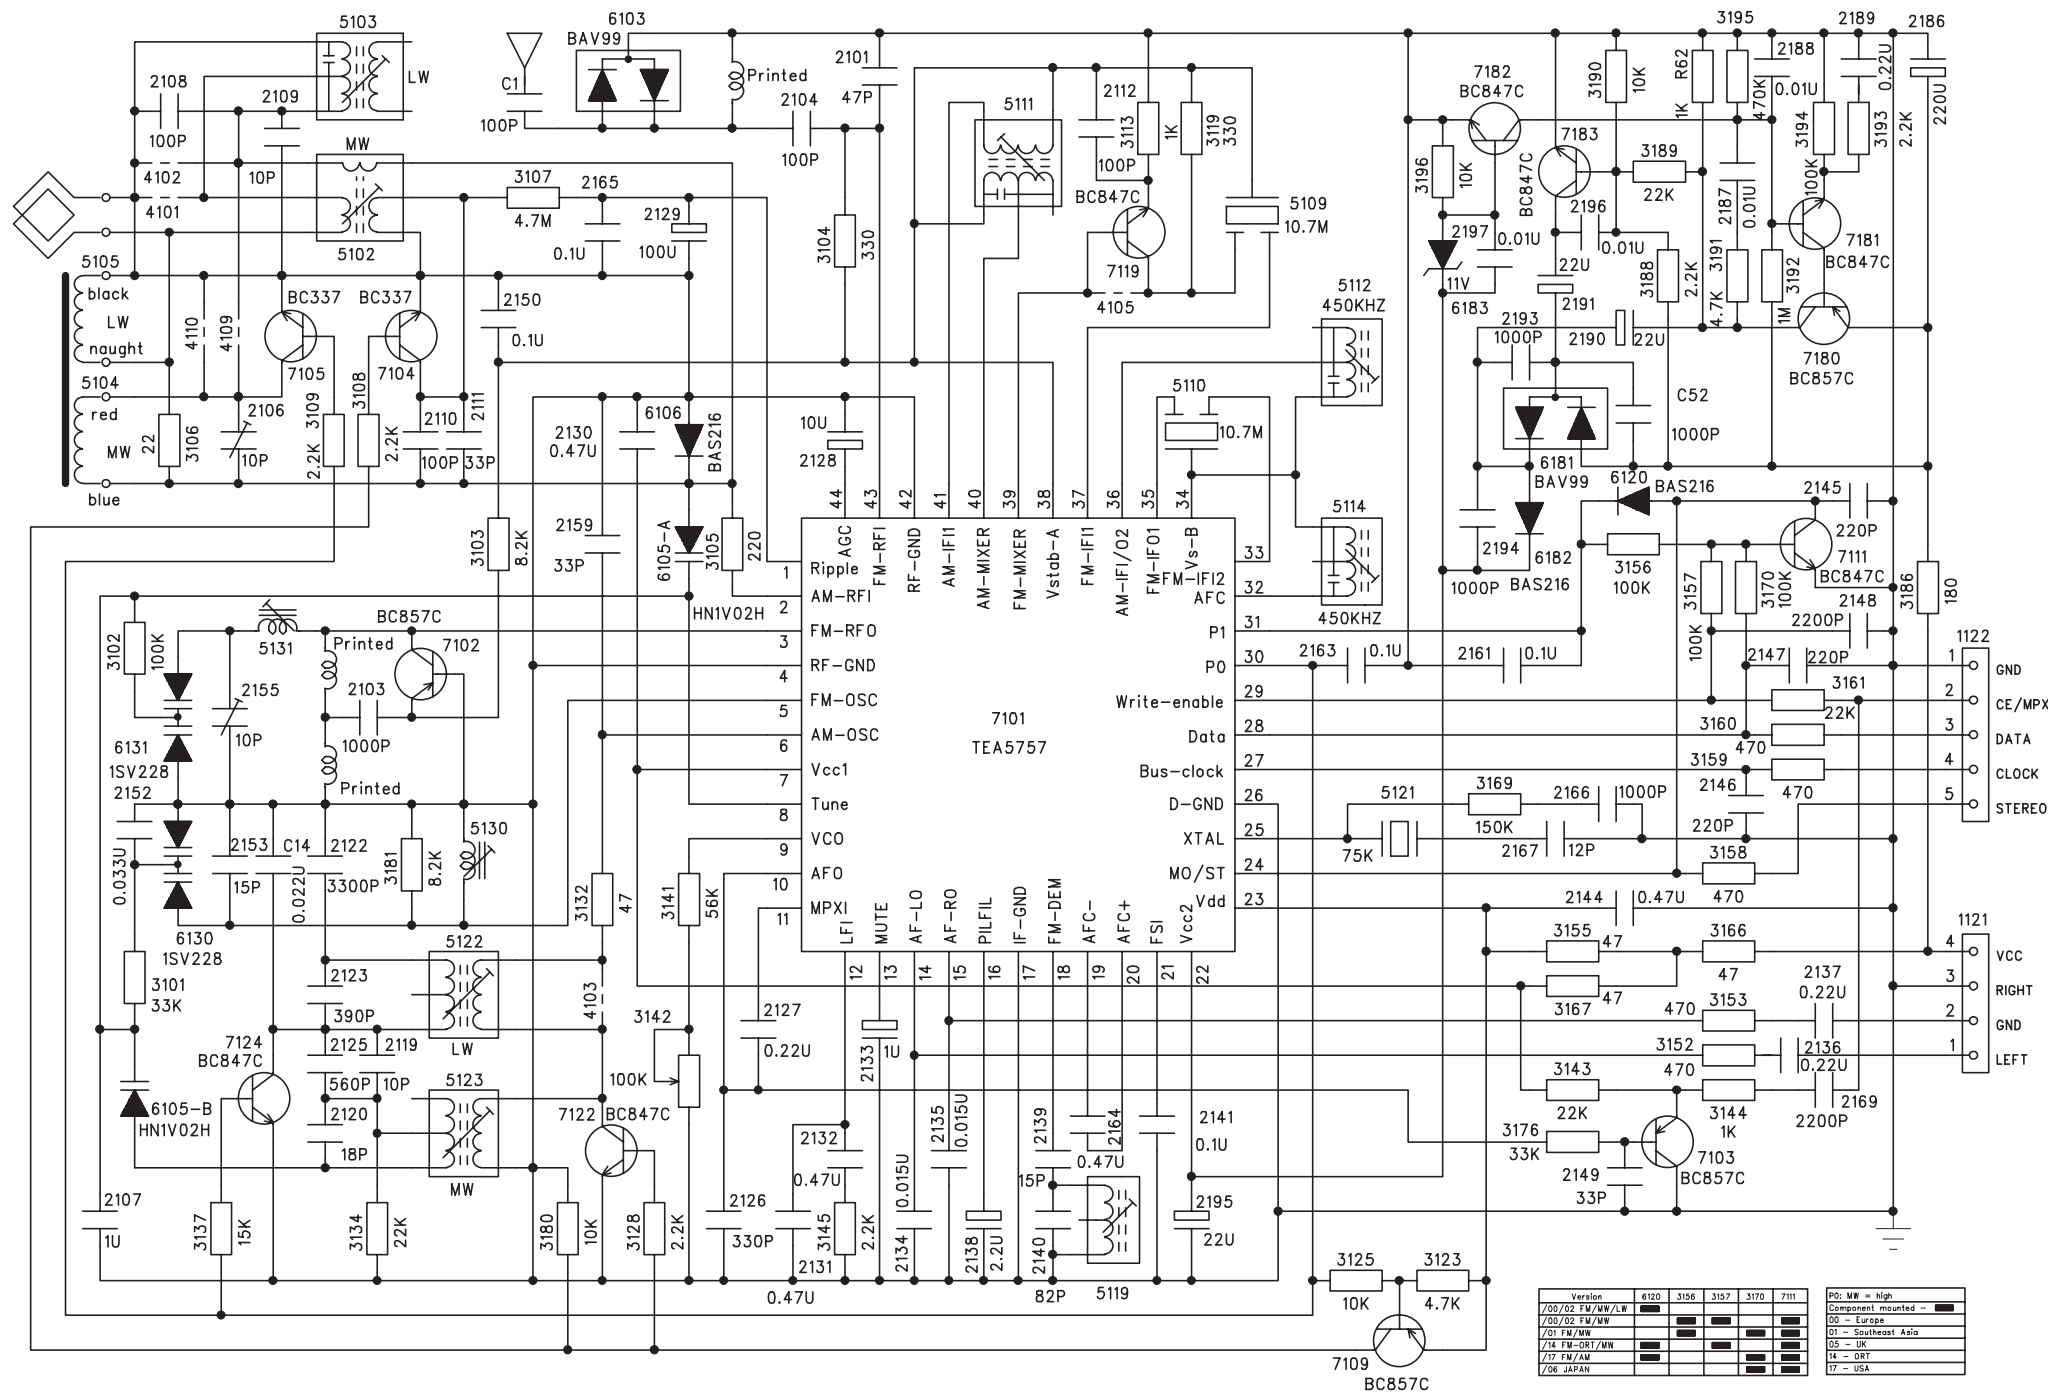

Layout Diagram - Audio board

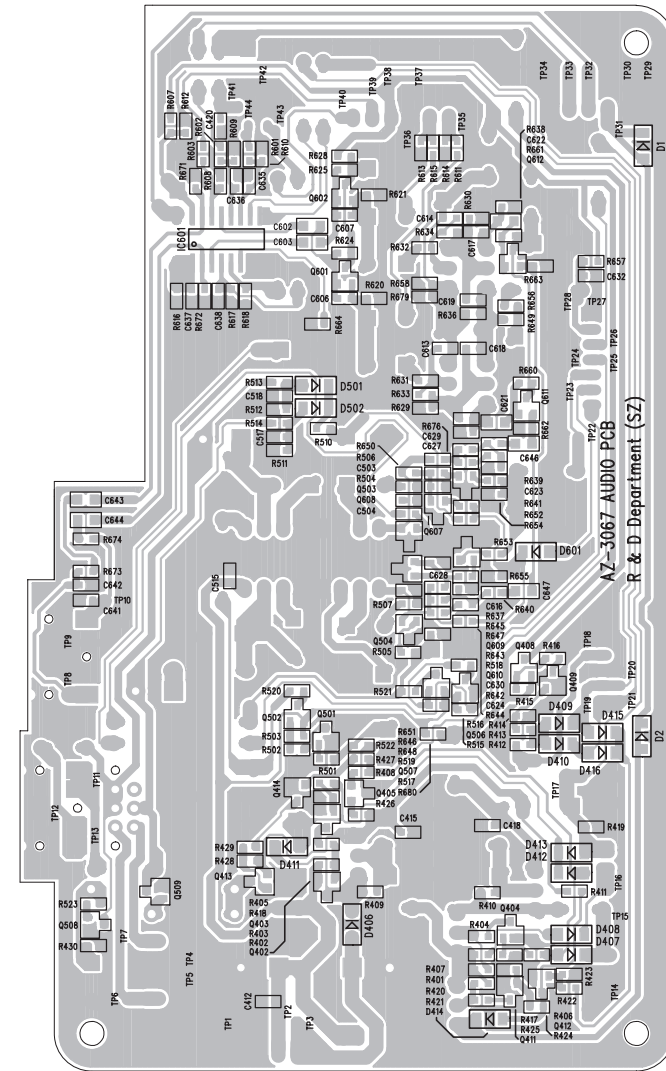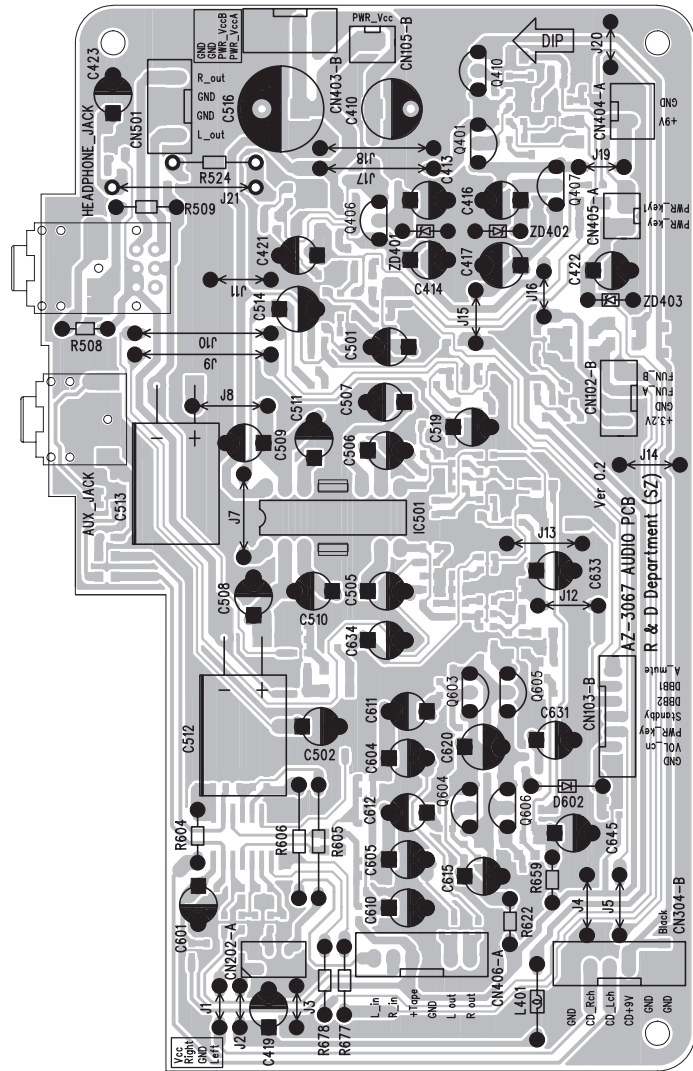

Layout Diagram - CD Servo board

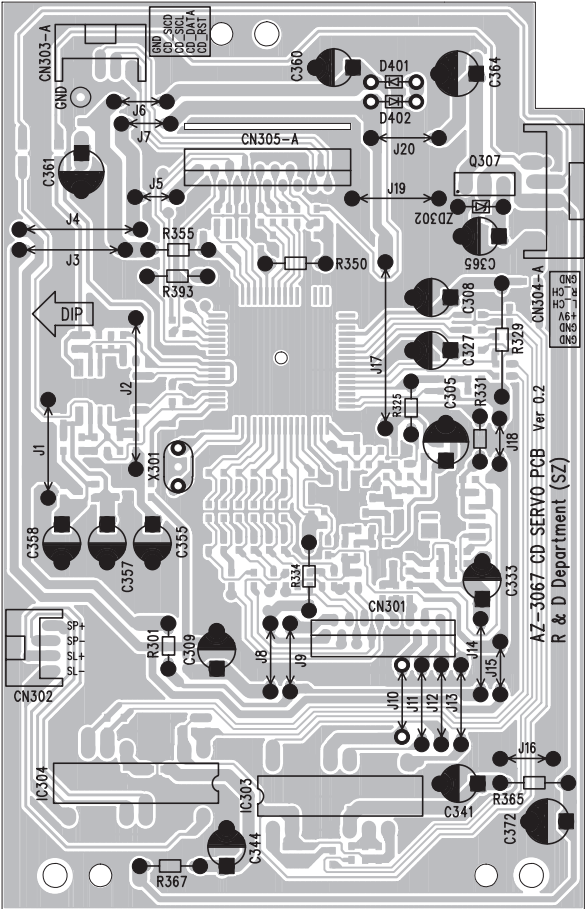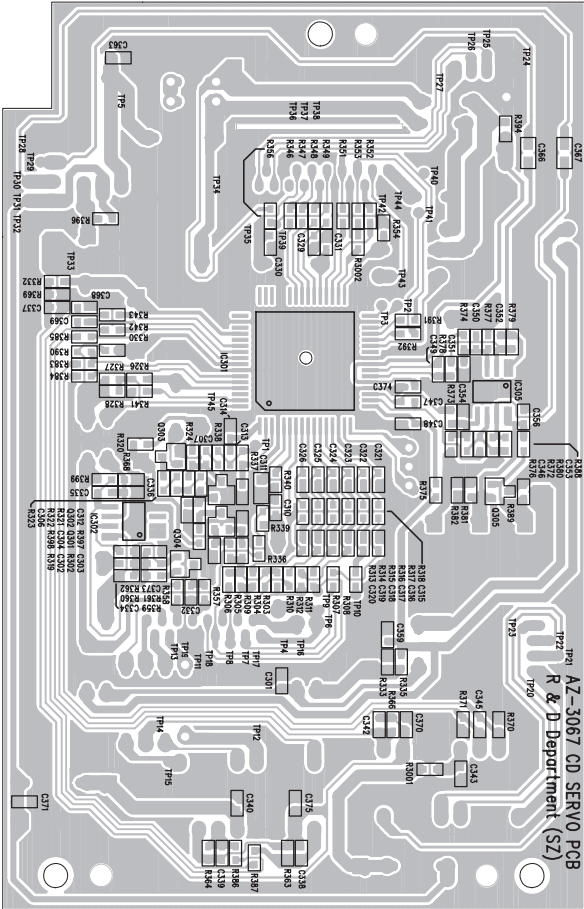

Layout diagram - MCU & Key board

